 


AWA

MODEL DTV-10CB01S

10" (25cm) LCD with DVD Player

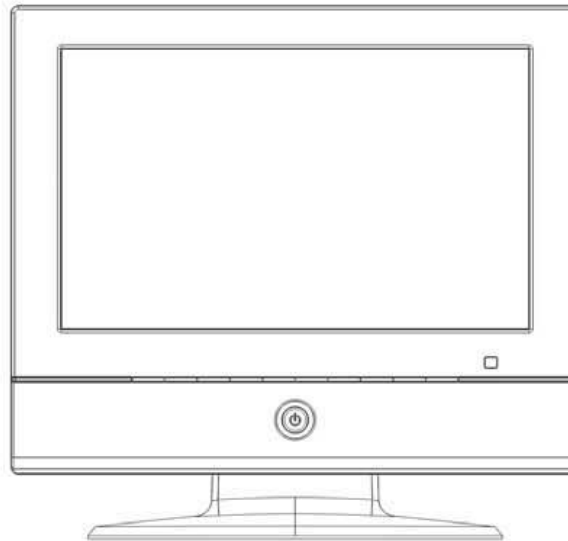

OWNER'S MANUAL

Table of Contents

Contents

Table of Contents.....	1
Safety Precautions.....	2
Before Use.....	3
Identification of Controls.....	4
Remote control unit.....	5-6
Inserting the remote control battery.....	7
System Connections.....	7-9
Power Supply Preparation.....	9-10
Internal Rechargeable Battery.....	10-11
Turning On the Unit.....	10
TV/DVD OPERATION.....	11
Analog TV setup menu.....	12
SETUP Menu Introduction.....	13-15
Playing DVDs or Video CDs.....	16-17
MP3/WMA files.....	17-18
Playing a JPEG Disc.....	18
Memory card and USB device operation.....	19

Information on disc compatibility.....	20
Troubleshooting tips.....	20-21
Technical specification.....	22

Safety Precautions

Warning: To reduce the risk of electric shock, do not remove the cover or back of this product. There are no user-serviceable parts inside. Refer servicing to qualified service personnel.

Warning: To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing water, rain, or moisture. Do not place objects filled with water such as vases on the product.

Warning: This digital video disc player employs a laser system. Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

Warning: To prevent direct exposure to laser beam, do not open the enclosure. Visible laser radiation when open.

Warning: Never stare directly into the laser beam.

Warning: Rear panel mounting screws (M4 x 4) must not penetrate further than 10mm into the case of this device. Longer screws will cause severe damage and void the warranty.

Caution: Do not install this product in a confined space such as a book case or similar.

Warning: When the unit using by child, parents must make sure to let the child understand all contents in Instruction book how battery using to guarantee using battery correctly all the time.

Warning: When find battery overheat, swell or dour, please stop using battery and contact service centre for getting replacement.

Warning: Do not charging battery on the place of insufficient ventilation such as: mattress, sofa, cushion , soft mat.....

Warning: We will not take any responsibility if user incorrectly use battery, not following our warning instruction label on the battery case.

Warning: More than 250mm USB extension cord is prohibited to use for USB port.

Notes on Copyrights:

It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyrighted material without permission.

“This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited”.



SERIAL NUMBER:

You can find the serial number on the back of the unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase.

Model No. _____

Serial No. _____

Date of Purchase _____

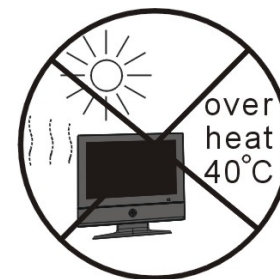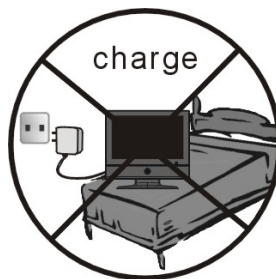

Before Use

Introduction

To ensure proper use of this product, please read this owner's manual carefully and retain for future reference.

This manual provides information on the operation and maintenance of your DVD player. Should the unit require service, contact an authorized service centre.

Symbols Used in this Manual

The lightning flash symbol alerts you to the presence of dangerous voltage within the product enclosure that may constitute a risk of electric shock.

The exclamation point alerts you to the presence of important operating and maintenance/servicing instructions.

Indicates hazards likely to cause harm to the unit itself or other material damage.

Indicates special notes and operating features.

DVD	DVD and finalized DVD±R/RW
VCD	Video CDs
CD	Audio CDs
MP3	MP3 Discs
WMA	WMA Discs
JPEG	JPEG Discs
MPEG4	MPEG4 Discs

About the Symbol Display

may appear on your TV display during operation of pushbuttons. This indicates that function is either temporarily unavailable, or not available at all on that specific video disc.

Notes on Discs

Handling Discs

Do not touch the playback (plain reflective) side of the disc. Always hold the disc by the edges to avoid fingerprints. Never stick paper labels or tape on the disc.




Storing Discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

Cleaning Discs

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a soft, clean cloth.

Wipe the disc from the centre out.

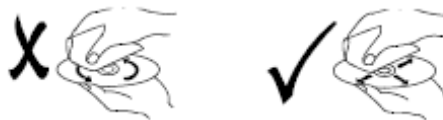


Identification of Control

Main Unit

1. ATV/VGA/AV: When AV in-out switch (14 below) is set to "AV OUT", selects Analog TV. When AV in-out switch (14 below) is set to "AV IN", cycles between VGA and AV inputs.
2. DVD/DTV: selects between DVD menu and Digital TV.
3. DVD/USB/CARD brings up Disc/CARD/USB selection menu (after "DVD" is selected in "2" above).
Use CH+/ Ch - buttons to select disc or card type, then "Enter" ("8" below) to confirm.
4. VOL- Volume Down
5. VOL+ Volume Up
6. CH- Channel Down
7. CH+ Channel Up
8. ENTER: Confirm Selection
9. PLAY/PAUSE Start/Pause playback
- 10.EJECT: Eject Disc.
11. Remote control sensor.
12. "Standby/On" Switch with built-in LED indicator. Red = standby, Blue = on.
- 13.ANT: Antenna input.
- 14."IN AV OUT": AV in/out select switch (see no. 1 above)
- 15.VIDEO: Video input/output sockets
- 16.USB: Socket for USB flash drives.
- 17.AUDIO: Audio input/output sockets
- 18.SD/MMC/MS: card slot for flash memory cards.
- 19.VGA: VGA input for use as a PC monitor (when AV in/out set to "IN").
- 20.Headphone jack.
- 21.POWER: Main DC power switch.
- 22.DC IN 9V: DC input from AC adaptor or car adaptor..


23.CHARGE: Charge/power indicator, Red is charging, Green is full.

24. Disc Loading Slot. (Loads with disc label towards user)

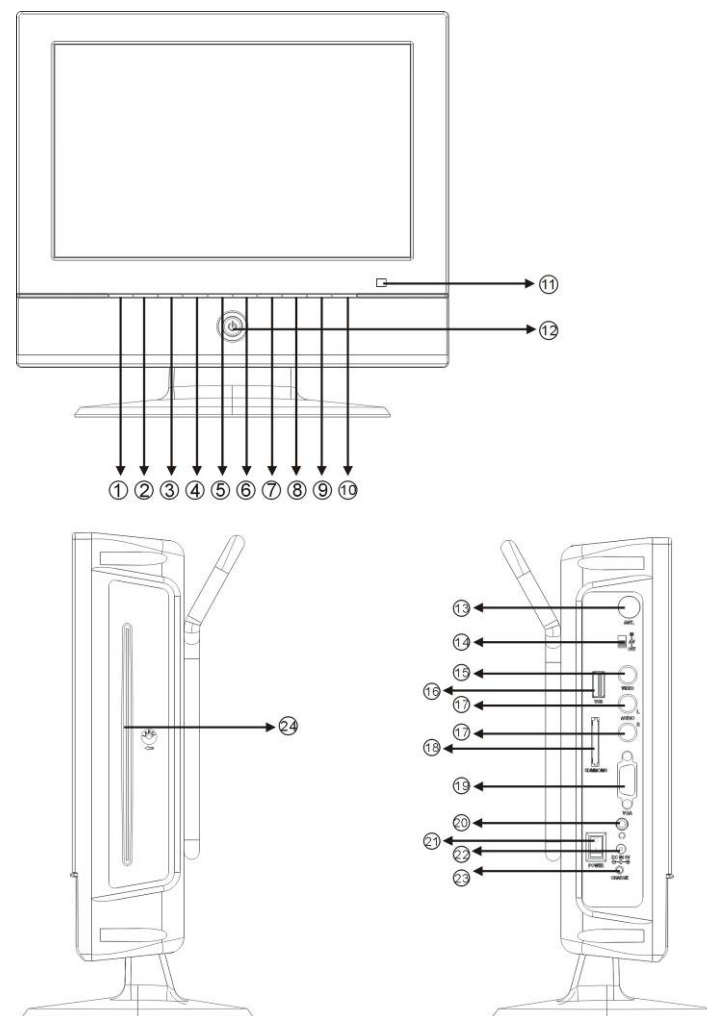

Remote control unit

1. POWER key
ON/OFF (standby)
2. MUTE key
Disable/enable audio output.
3. Eject key: Eject/Load disc.
4. ATV/VGA/AV key
Switch player to Analog TV, VGA , AV mode.
5. DVD/USB/CARD key
Selects USB or card media. Note: remove USB and card media before playing disc.
6. DVD/DTV key
Switch between DVD or DTV mode. (DVD/DTV)
Note: Must be in DVD mode to control USB/CARD key (5)
7. 0/1/2/3/4/5/6/7/8/9/10+ key
Direct number inputs. (DVD/DTV/ATV)
8. Display key
Displays picture status information. (DVD/DTV/ATV)
9. SETUP key
Enter or exit setup menu. (DVD/DTV)
10. TITLE key
Go to DVD title menu. (DVD)
11. MENU key Go to DVD root menu. (DVD)
Display DTV channel list. (DTV)
12. ▲▼◀▶ Key
▲▼Direction keys. (DVD/DTV)
◀▶NEXT/PREV channel. (DTV/ATV)
Switch DTV channel class (Favorite, Movie, News, Show). (DTV)

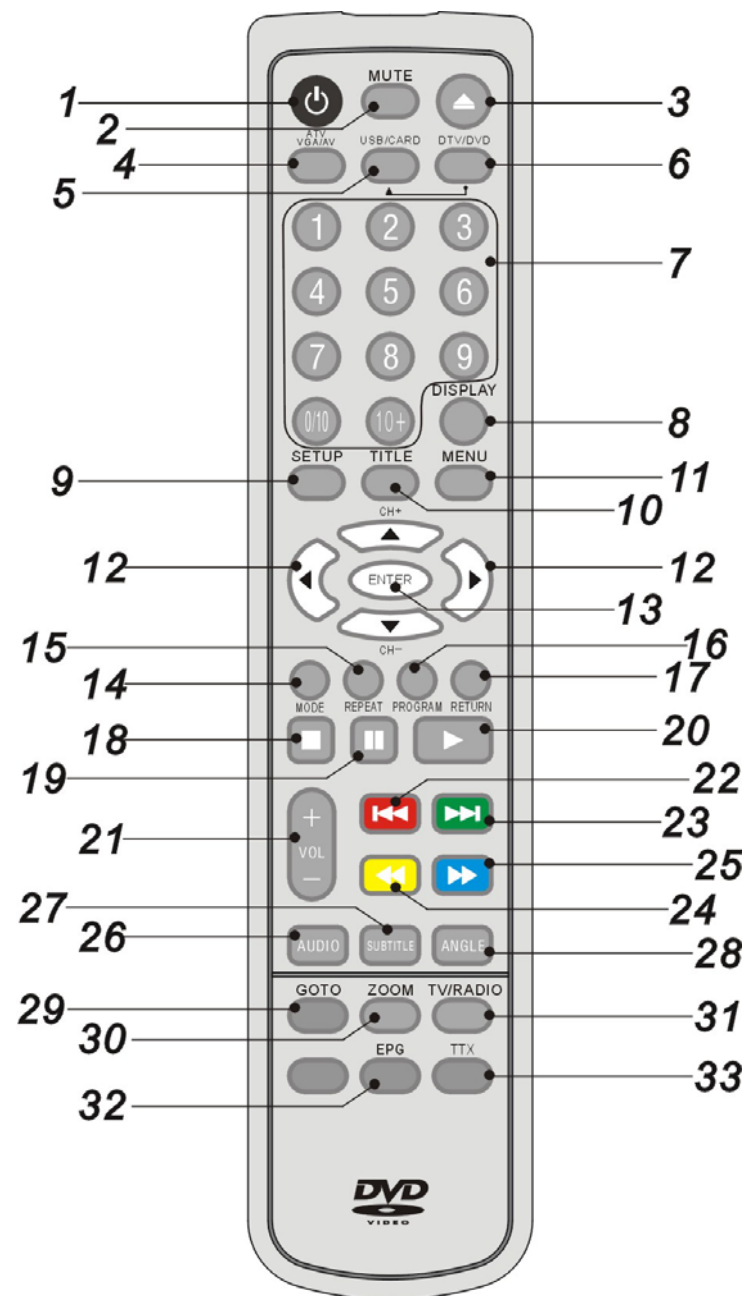

Remote control unit

13. ENTER key

Confirms menu selection. (DVD/DTV)

14. MODE key

Display MODE MENU to adjust video, audio, TV,system settings. DVD/DTV/ATV/AV)

15. REPEAT key

Repeat track, chapter, title. (DVD)

16. PROGRAM Key

Place a track on the program list. (DVD)

17. RETURN Key

Return to upper menu or close menu. (DVD/DTV)

18. ■ Key:

Stop playback. (DVD)

19. ■■ Key

PAUSE/STEP playback. (DVD/DTV)

20. ► Key

Starts playback. (DVD/DTV)

21. VOL +/- key

Adjust volume. (DVD/DTV/ATV/AV)

22. ⏮ key

Go to previous track or chapter. (DVD)

Red color key in Teletext. (DTV)

23. ⏭ Key

Got to next track or chapter. (DVD)

Green color key in Teletext. (DTV)

24. ⏪ Key

Fast backward. (DVD)

Yellow key in Teletext. (DTV)

25. ⏩ Key

Fast forward. (DVD)

Blue color key in Teletext. (DTV)

26. AUDIO key

Selects an audio language. (DVD/DTV)

27. SUBTITLE key

Selects a subtitle language. (DVD/DTV)

28. ANGLE key

Selects DVD camera angles if available. (DVD)

29. GOTO key

Go to the assign track, chapter, title or time point. (DVD)

30 .ZOOM key Zoom video display. (DVD/DTV)

31. TV/RADIO key

Switch TV or radio program. (DTV)

32. EPG key EPG function. (DTV)

33. TTX key Teletext function. (DTV)

Inserting the remote control battery

1. Open the battery door. 2. Insert two AAA size batteries, following the polarity marked inside the compartment.

For the best results, operate remote no more than 5 metres from the TV.

Under normal use the batteries will last for one year.

Remove the batteries if you will not using the DVD player for a long time.

Precautions when using batteries

1. Use only the size and type of batteries specified.
2. Do not mix different types of batteries together, or old batteries with fresh ones.
3. Replace exhausted batteries promptly to prevent leakage



System Connections

Before you begin:


Do not connect the power cord until all other connections to this player have been made.

Ensure that you observe the colour coding of cables when connecting audio and video devices.

Connecting to an indoor or outdoor TV aerial (not supplied):

Insert the aerial plug to the aerial input jack on the left side of the player.

Note: For best results use a fixed outdoor antenna. If you have to use an indoor antenna, if possible, temporarily connect to an outdoor antenna for the initial channel tuning (see page 10).

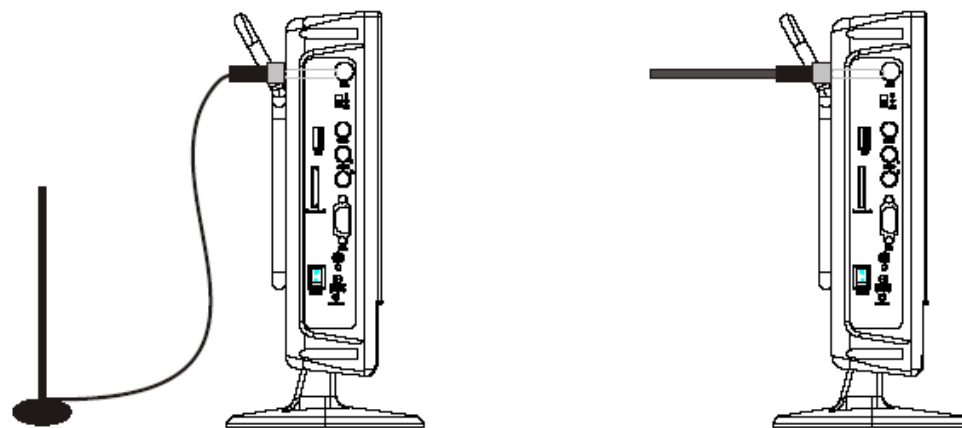


Connecting to headphones

Connect the headphones to the headphone jack on the left side of the player, as shown below: When headphones are plugged in the speakers will be switched off automatically.


CAUTION : Prolonged use of headphones at full volume may damage your hearing.

System Connections

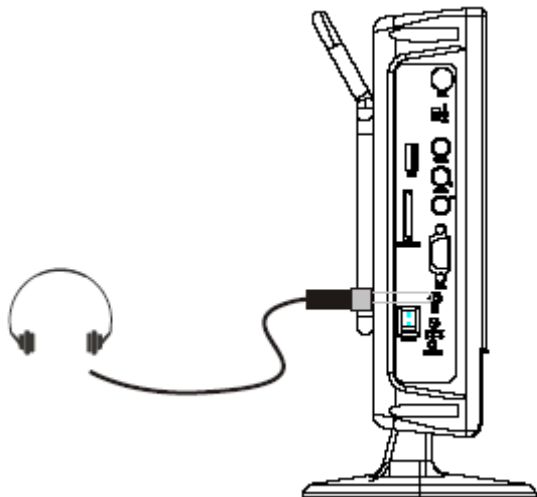


Connecting AV out to an external TV or monitor

Use a standard Red/Yellow/White AV cable to connect an external TV set to the AV input/output jacks on the left side of the unit, as shown below: In DVD mode, set the AV IN/OUT switch to OUT to output the AV signal to the external TV.

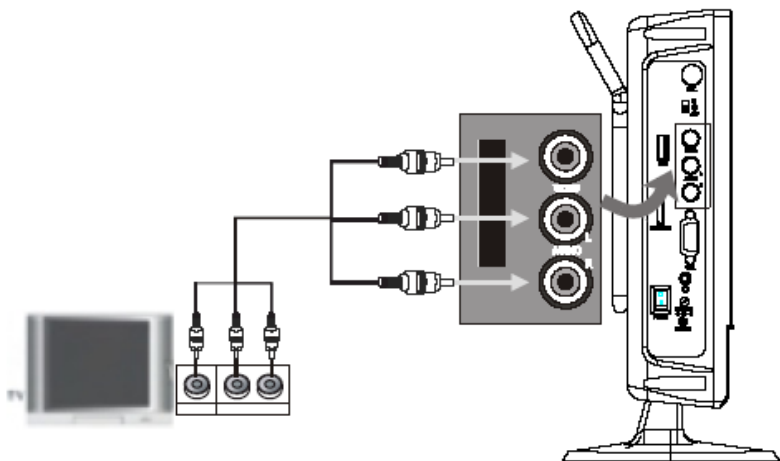

Connecting External A/V Sources to the appliance


Refer to your audio equipment's manual before connection. Use the AV cables to connect the external A/V sources to the AV input jacks on the left side panel of the unit, as shown below, set the AV in-out switch to "in" and then press the "ATV/VGA/AV" button to select AV.

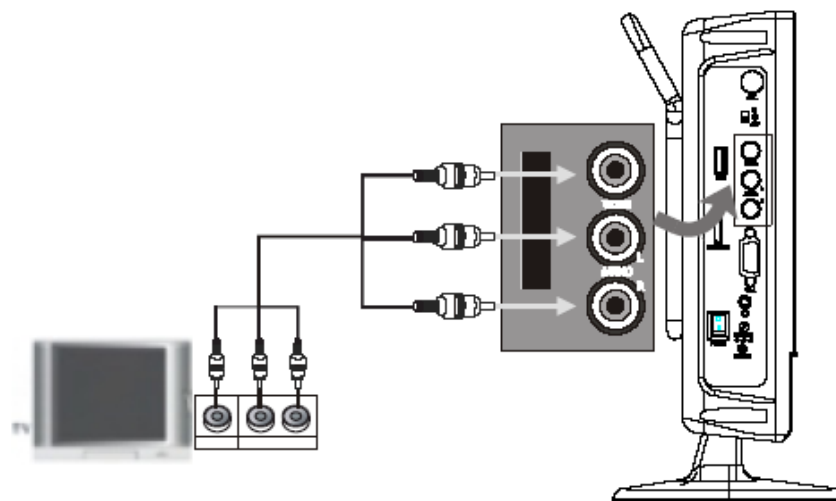

Connecting to a PC

as shown below:

System Connections

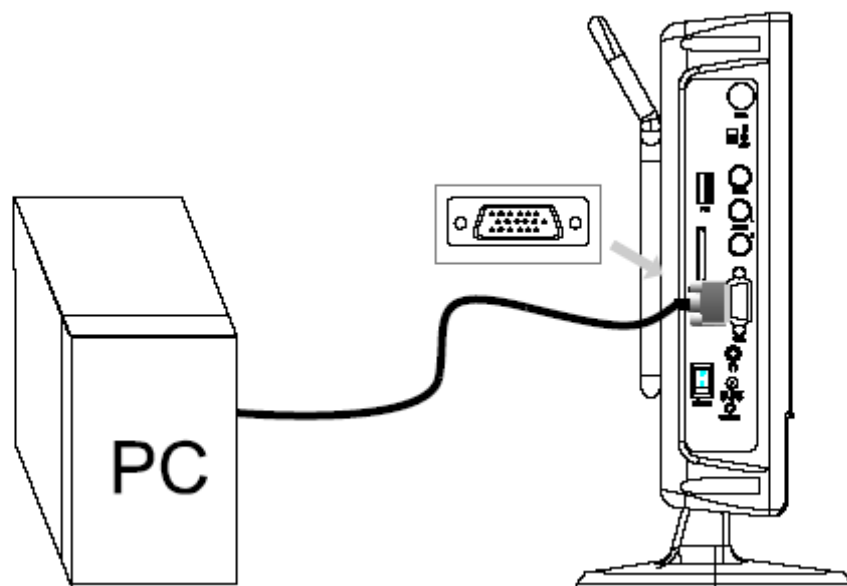

Use a Mini D-Sub 15 pin cable (not supplied) to connect your PC to the VGA input jack on the left side of the unit, set the AV IN/OUT switch to IN and then press the “ATV/VGA/AV” button to select VGA


Power Supply Preparation

Using the AC Adapter

The player is supplied with an AC adapter for powering the unit and charging the battery.

1. Connect the AC adapter output to the left side of the unit in the jack marked DC 9V IN as shown below.
2. Plug the power cord into a 100~240 V AC wall outlet. The CHARGE indicator on the side of the unit should light up red. It will turn green when the internal battery is completely charged.

When the POWER switch in the “I” position, the front mounted LED indicator will also light up: Red when the unit is in standby, and Blue when it is on.

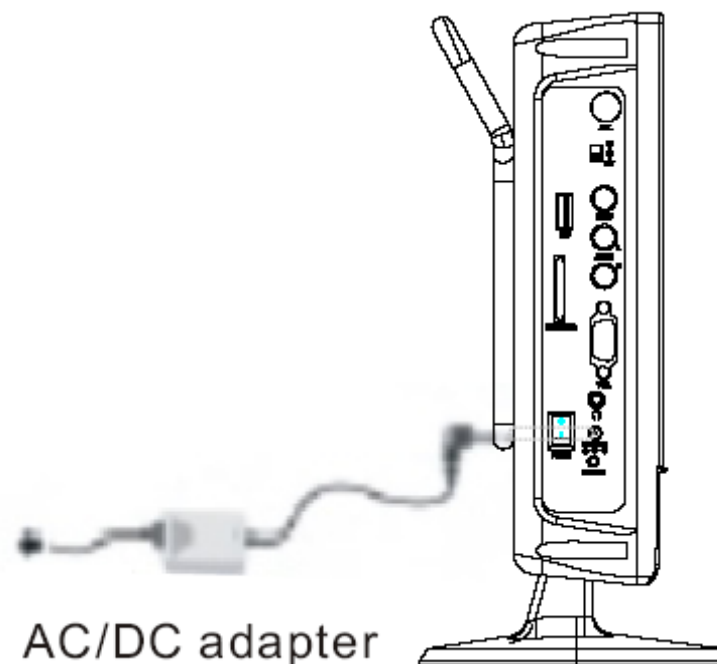


Note:

1. Turn unit's power off before unplugging the power cord.
2. When an adaptor is used, the LCD screen is brighter than when using the internal battery.

Power Supply Preparation

Using the Car Adapter

The unit is supplied with a car adapter for powering the unit and charging the battery in a vehicle. Connect the car adapter power plug to the unit's DC IN 9V jack and the other end to the vehicle cigarette lighter socket as shown below. Operation is then identical to using the AC adaptor (see page 7).

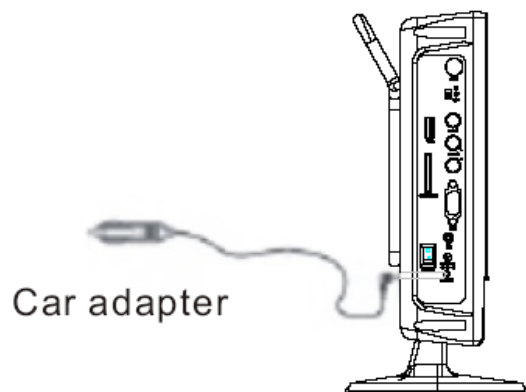

Attention

Do not operate the unit or view video while driving a vehicle.

Place the unit in a proper position for viewing.

Replacing the fuse of the car adapter. Make sure the amperage matches the specified value when replacing the fuse. If the fuse is blown, check the power connection and replace with a new one. If the fuse blows again, there must be a malfunction. In such cases, please consult the nearest repair centre.

Warning:

Never use the fuse with a rated amperage over the one specified, otherwise you may damage the unit.

Internal Rechargeable Battery

•About the rechargeable battery pack

The unit includes a built-in rechargeable lithium battery.

Charge the battery fully before initial use. Charging time is normally about 5 hours. A fully charged battery delivers about 2.5 hours operation but playing time varies according to use. If the player is not be used for a long period of time, charge the battery up to 30%~60% of its capacity before storage.

Working conditions and precautions for the rechargeable battery

- The battery should be fully charged before initial use.
- The battery should only be used and charged when temperature is between 0°C and 38°C.
- Never throw the battery in fire or water.
- Do not expose the battery to high temperatures or store it in a hot, sunny place.
- Maintain well-ventilated conditions around the product to avoid overheating. Don't put the product on a bed, sofa or anything that may block ventilation to the product.
- When the battery is almost flat, a “low power” indicator will appear on the LCD screen. The player will turn off automatically several minutes later.
- The battery is not a user-serviceable device. Replacement and disposal must only be carried out by qualified persons.




Charging the Battery

Note: Charging happens automatically whenever power is applied, regardless of the setting of the power switch. However charging takes longer if the TV/DVD unit is being operated.

1. Plug one end of the supplied AC adapter or Car adaptor into the unit's power jack marked "DC 9V In", located on the left side of the player.
2. Plug the other end of the AC adapter cord into an AC wall outlet (or the Car adaptor into a cigarette lighter socket. Note, car must be running) The "charge" LED should glow red and it will switch to green when charging is complete. The battery is automatically disconnected from the charger when charging is complete.

Operation

SWITCHING ON

1. Important: Connect the aerial cable or input source to the aerial input socket at the left side of the set **before** applying power
2. After connecting the power supply, set the power switch to "I" and press the  button on the unit (or on the remote control) to switch the TV on. The indicator should change to from red to blue and a few seconds later the LCD screen should light up.
3. To switch the set back to standby mode, press the  button again. The  LED indicator will turn red again.

NOTE: If the unit has switched to standby because the battery has run low, it will not respond to any controls until external power is applied.

4. To turn off the TV/DVD unit completely, switch the power switch to "0"
5. If you are not going to use the set for a long time, switch the power off completely by unplugging the AC/DC adapter.

TV/DVD OPERATION

IMPORTANT: FOR THESE FUNCTIONS AV IN-OUT SWITCH MUST BE IN "OUT" POSITION.


Function	Required Action	Notes
Analog TV	Press "ATV/VGA/AV"	
Digital TV, DVD	Press "DVD/DTV"	Alternates between DVD and Digital TV
USB, CARD (NB: Must be in "DVD" mode first)	First Select "DVD" mode as above, then: 1. Press "DVD/USB/CARD" 2. Select "USB" or "Card" using CH- and Ch+ buttons 3. Confirm with "Enter" button	To exit, press "DVD/DTV" again.

IMPORTANT:FOR THESE FUNCTIONS AV IN-OUT SWITCH MUST BE IN THE "IN" POSITION

Function	Press	Notes
VGA in, AV in	"TV/VGA/AV"	Alternates between VGA and AV

Analog TV setup menu (only if switched to ATV mode)

SYSTEM MENU: Press “Mode” button 4 times

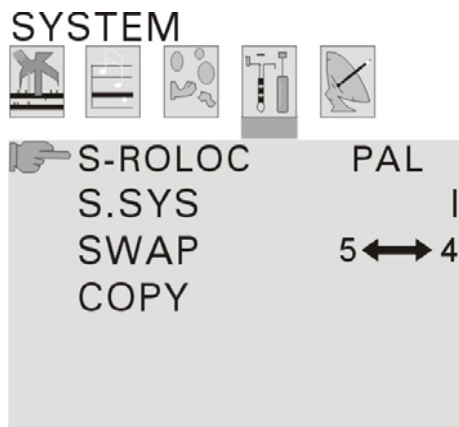

S-ROLOC: select your colour system: PAL for Australia/NZ, (should be already set)

S.SYS: select your analog TV sound system: BG for Australia/NZ, (should be already set)

SWAP: Allows sorting of channels into a logical order. (After presetting channels, see below)

 
Note, always start with the highest channel first. For example suppose Network 10 appears on Ch3 and you want it to appear as Ch 10. First, select position 3 (network 10) with the normal channel buttons. Then press “mode” 4 times)

Use the ▼▲ buttons to highlight “SWAP”. The current Channel.“3” will appear on the right. Then, use the ◀▶ buttons to select the channel you want to swap 3 to (in this case, 10)

Press the ▼ button, then the ◀ button. Network 10 now appears on Ch 10. Note: you might have to switch off the skip function on Ch10

COPY: similar to “SWAP” except original channel (3) is copied to 10 instead of swapping them.

PRESET MENU: Press “Mode” button 5 times, use ▼▲ buttons to select function.

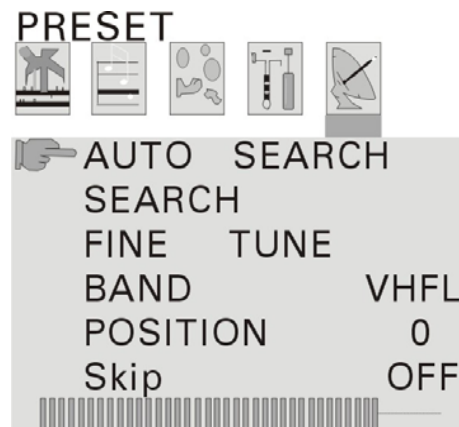

AUTO SEARCH: Press the ▶ button and then the unit will automatically search for available TV Channels from channel 0. When it finds a station, it will automatically store it in the first available location and move on to the next.

During autosearch, you can press the ▶ button to stop. When autosearch is complete, the unit will display the first station found.

SEARCH: Manual search: Briefly press the ◀ or ▶ button and the unit will search for a single station then stop.

FINE TUNE: Use the ◀▶ buttons to search forward and backward to improve reception if necessary.

BAND: Select the frequency band: VHFL, VHFH, UHF

POSITION: Select a channel without exiting preset menu.

SKIP: When you turn on the skip function, the current channel will be skipped when you select the channels using the CH ▼▲ buttons. You can still access skipped channels by using the number buttons.

SETUP Menu Introduction

Digital TV setup Menu (only if switched to DTV mode)

Press “setup” then ◀ ▶ to select sub-menus, ▼ ▲ to select items on submenus

Channel Guide (use ◀ ▶, then ▼ ▲ to select)



 
TV Channels: In TV channels list, press DISPLAY key to sort programs.

Radio Channels: In radio channels list, press DISPLAY key to sort programs.

Channels Class: Set channels class: Favorite, Movie, News, Show.

Channels Edit: Edit channels: rename, move, delete.

System Config (use ◀ ▶, then ▼ ▲ to select)

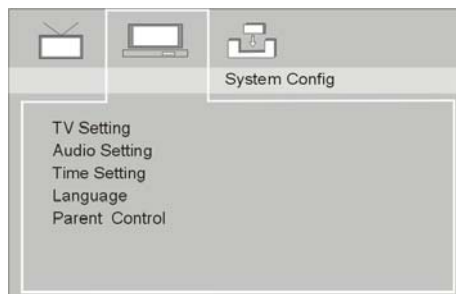

TV Setting: Selects TV system and TV type (Only affects AV out).

Audio Setting: Selects coaxial digital out mode: OFF, RAW, PCM.


Time Setting: Set time zone.

Language: Selects OSD language.

Parental Control: Change password and set channel lock.

Default password is 0000

Installation (use ◀ ▶, then ▼ ▲ to select)

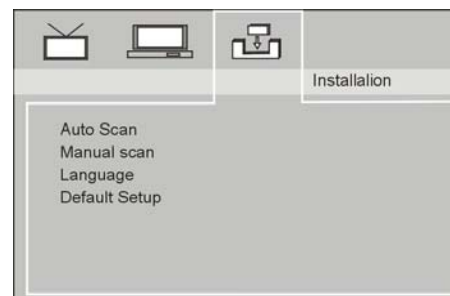

Auto Scan : Automatically search for all available Digital channels. When finished, displays first channel found.

Note: This TV tunes all digital channels, including High Definition ones. However in most cases it will only show a blank screen with an HD transmission. In many cases channel 001 is One HD, so you may only see a blank screen after automatically tuning in the digital channels. You can delete all the HD and duplicated SD channels using the “Channels Edit” function in the Channel Guide Menu

 
Manual Scan : Manually tune channels (Requires technical knowledge, recommend technician adjustment only).

Default setup :Reset factory settings (DTV settings only)


TV Setup menu

General operation


- 1. Press the MODE button repeatedly to display the menu in the following order: PICTURE->VOLUME->OPTION-> SYSTEM
- 2. To select a menu item, press the ▼▲ buttons to scroll up and down the list.
- 3. When a menu item is highlighted, use the ◀▶ buttons to adjust the setting.

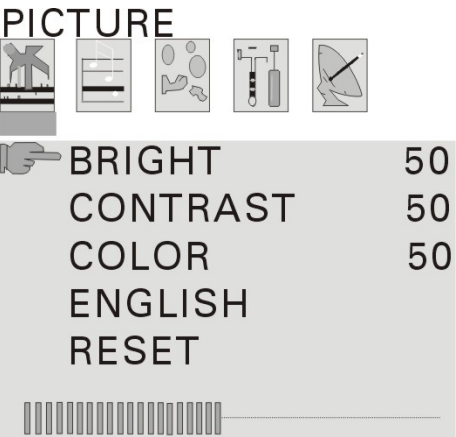

- BRIGHT:**
Adjusts the brightness of the picture
- CONTRAST:**
Adjusts the contrast of the picture
- COLOR:**
Adjusts the colour of the picture
- ENGLISH:**
On-Screen-Display language (not adjustable in this model)
- RESET:**
Reset to the factory default settings.

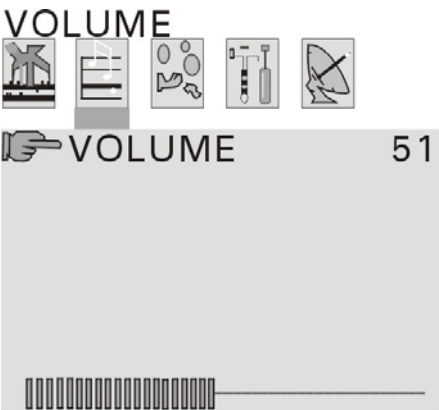

 VOLUME: Adjusts the VOLUME of the sound.

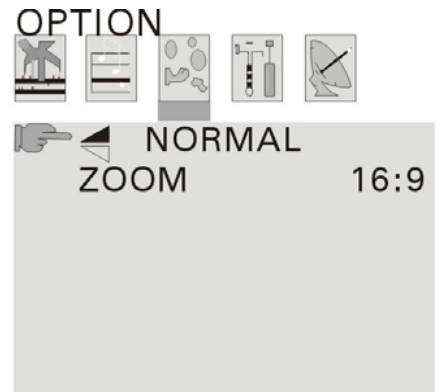

- NORMAL:** Inverts picture (for ceiling mount operation)
- ZOOM:** select the aspect ratio: 16:9 or 4:3.

- VGA and AV IN input**
- VGA:** supports 800 x 600 x 60Hz
- AV IN:** Supports PAL and NTSC input.

SETUP Menu Introduction

DVD setup menu:

First, select DVD mode using DVD/DTV button.

Press “setup,” then ◀ ▶ to select sub-menus, ▼ ▲ to select items on submenus

SYSTEM SETUP



TV SYSTEM : Set TV system NTSC, PAL, AUTO (Only affects AV out)

SCREEN SAVER: Set screen saver on or off.

TV TYPE: Set TV type 4:3PS, 4:3LB, 16:9 (Only affects AV out)

PASSWORD: Input password. Default password is 0000

RATING: Change DVD parental control level.

• In order to change rating, must input PASSWORD first.

DEFAULT: Resets DVD section to factory setting.

LANGUAGE SETUP



OSD LANGUAGE: Select DVD On Screen Display language.

AUDIO LANG: Select DVD default audio language.

SUBTITLE LANG: Select DVD default subtitle language.

MENU LANG: Select DVD default menu language.

MPEG4 LANG: Selects mpeg4 movies default subtitle language.

NOTE: Some DVDs do not allow you to change **AUDIO LANG**, **SUBTITLE LANG** and **MENU LANG** settings.

AUDIO SETUP



DOWNMIX: Selects DVD downmix mode: Left Channel, Right Channel, Stereo

DYNAMIC RANGE: Selects dynamic range: FULL, 6/8, 4/8, 2/8, OFF.

Playing DVDs or Video CDs

IMPORTANT: REMOVE ANY USB OR MEMORY CARDS BEFORE INSERTING DISC.

Press DVD/DTV to select DVD mode.

Insert disc into the disc slot with the printed side facing towards you.

The disc should be pulled into the slot and loaded automatically.

Use the ◀ ▶ and ▼ ▲ buttons to select the desired title/chapter, then press ENTER or PLAY to start playback. (Some discs will play automatically). Press MENU to return to the main menu.

Notes:

1. If the parental control is set and the disc does not match the rating setting, you must input the password before the disc can be played. (See "PARENTAL").
2. Unless stated otherwise, all operations described require the remote control. Only PLAY/ PAUSE and EJECT are available on the player itself.

Skip to another CHAPTER/TRACK DVD VCD

When a title on a disc has more than one chapter or a disc has more than one track, you can skip to another chapter/track as follows:

1. Press ⏮ or ⏭ during playback to select the next (or previous) chapter/track or to return to the beginning of the current chapter/track.
2. Press ⏮ briefly to skip back to the previous chapter/track.
3. To go directly to any chapter during DVD playback, enter the chapter/track number using the numeric keypad.

Change audio channel VCD

Press AUDIO repeatedly during playback to select a different audio channel (Stereo, Left Mono, Right Mono or MIX-Mono).

Repeat DVD VCD

You can make a title/chapter(track)/all on a disc play repeatedly.

Press REPEAT during playback to select a desired repeat mode.

DVD Discs :

Chapter: repeat the current chapter.

Title: repeat the current title.

All : repeat all on a disc.

Off : no repeat play.

VCD discs :

REP : repeat the current track

All : repeat all the tracks on a disc.

Off : no repeat play.

Note: On a Video CD with MENU, you must set MENU to Off to enable the repeat function.

Zoom DVD VCD



Use zoom to enlarge or reduce the video image:

1. Press ZOOM during playback or still playback to activate the Zoom function.
2. Press ZOOM button repeatedly to changes the zoom factor in the following sequence:
3. Use the ▲▼◀▶ buttons to move the zoomed picture.
4. To resume normal playback, press ZOOM button repeatedly until the picture size returns to normal.

Note: the zoom function may not work on some DVDs.

Playing DVDs or Video CDs

Special DVD Features:

Menu DVDs may offer menu that allow you to access special features. To use the disc menu, press MENU. Input the corresponding number or use the   buttons to highlight your selection. Then press ENTER to confirm your selection.

MENU

1. Press MENU. If the current title has a menu, it appears on the screen, otherwise, the disc may not have a menu.
2. The MENU offers features such as camera angles, spoken language and subtitle options, and chapters for the title.
3. Press MENU again to exit.

Camera Angle DVD

If the disc contains scenes recorded at different camera angles, you can change to a different camera angle during playback. Press ANGLE repeatedly during playback to select a desired angle. Note that the number of the current angle appears on screen.

Note:

An angle indicator will appear on the TV screen during scenes recorded at different angles.

Change the Audio Language (DVD only)

Press AUDIO repeatedly during playback to select a different audio language or audio track.


Subtitles DVD (DVD only)

Press SUBTITLE repeatedly during playback to select the different subtitle languages.

NOTE:

With some DVDs you may need to enter the on-screen disc menu to change the audio language or subtitle language.

TITLE button DVD (only)






Press TITLE button to display the DVD menu or titles available on the disc. Then you can use " " and ENTER button to select programs.

Audio CD

Most Audio CDs will play automatically. Press the DISPLAY button to display playback information about the disc such as track elapsed time, remaining time etc

MP3/WMA files:

Playing MP3/WMA files

1. Press   buttons to select MUSIC folders, and press ENTER to enter the folder contents.
2. Press   buttons to select a track then press  or ENTER to confirm. Playback starts.

MP3 / WMA disc compatibility with this player is limited as follows:

1. Sampling frequency: within 8 - 48 kHz (MP3), within 32 - 48kHz (WMA)
2. Bit rate: within 8 - 320kbps (MP3), 32 - 192kbps (WMA).

The player cannot read an MP3 / WMA file that has a file extension other than MP3 OR WMA.

CD-R discs should be in ISO9660 format.

File names should have a maximum of 8 letters and must incorporate an ".mp3" or ".wma" extension.

They should not contain special letters such as "/? * : < > | "etc.

The total number of files on a disc should be less than 650.

This DVD player requires discs and recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 or WMA files) and these require certain pre-existing conditions (see above) to ensure compatible playback. Playability of any particular disc is not guaranteed

MP3/WMA files:

Customers should note that permission is required in order to download MP3 / WMA files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.

Skip to another Track CD MP3 WMA

1. Press ◀▶ or ▶▶ during playback to go to the next (or previous) track or to return to the beginning of the current track.
2. Press ◀◀ to go back to the previous track.
3. You can play any track by directly entering its number with the numeric keypad..

Repeat Track/Folder/All/Off CD MP3 WMA

You can repeat a single track, folder or the entire disc.

1. Press REPEAT when playing a disc. The repeat icon appears.
2. Press REPEAT more times to select the desired repeat mode.

For audio CD:

Track: repeat the current track.

All: repeats all the tracks on a disc.

Off (No display) : normal playback.

For Mp3 and WMA,

REP. 1: repeat the current track.

REP. DIR: play the current folder only.

REP. All: repeats all the tracks on a disc.

Playing a JPEG Disc

Viewing a disc containing JPEG files

Using this DVD Player you can view PICTURE CDs and disc with JPEG files.

1. Insert a disc . The file menu appears on the TV screen.

2. Press the ◀▶ buttons to select PICTURE, and press ENTER to view the content of the selected folder..

3. If you want to play a particular file, press then ▲/▼ buttons to highlight the file and press ENTER or ▶| .

NOTE:

Press ▶▶ " to move to the next page , " ◀◀ " to return to previous folder , and " MENU return to menu.

ZOOM JPEG

Press 'ZOOM' repeatedly to enlarge/shrink the picture

To rotate picture

Press the ◀▶ buttons or during showing a picture to rotate the picture clockwise or counter clockwise.

JPEG disc compatibility with this player is limited as follows:

1. Depending upon the size and number of JPEG files, it could take a long time for the DVD player to read the disc contents. If no picture appears after several minutes, some of the files may be too large. If so you will need to reduce the size of the JPEG files to less than 2 megabytes each (800 x 600 pixels recommended) using a photo-edit program, and burn them onto another disc.
2. The total number of files and folders on the disc should be less than 650. Some discs may be incompatible due to a different recording format or the condition of disc. Ensure that all the selected files have ". jpg" extensions when copying into the CD. If the files have ".jpeg" extensions, they must be renamed as ".jpg" files. File names without ".jpg" extension cannot be read by this DVD player, even though the files are shown as JPEG image files in Windows Explorer.

Playing a DVD-VR Discs

(Formats that have been finalized using a DVD writer).

1. Insert a disc .The DVD-VR menu appears on the TV screen.
2. Press ▲/▼ to select a track then press ►| or ENTER and playback starts.

Play a disc containing MPEG4 files

- 1.Insert a disc. The folder menu appears on the TV screen.
2. Press the ▲/▼ buttons to select a folder, and press ENTER. A list of files in the folder appears.
3. If you want to play a particular file, press the ▲/▼ buttons to highlight the file and press ENTER or ►| .
4. Press the ■ button to exit.
- 5.Press NEXT ►| to move to the next page.

Compatible MPEG4 files

".avi ", ".mpg ", ".mpeg".

Compatible Audio format

"AC3 ", "MP3 ", "WMA ".Sampling frequency:

within 8 - 48 kHz (MP3),within 32 - 48kHz (WMA) Bit rate:


within 8 - 320kbps (MP3), 32 - 192kbps (WMA)

Memory card and USB device operation

You can read the content of memory cards (MMC/SD/MS) and USB Devices.

To select USB/SD/MMC/MS reader

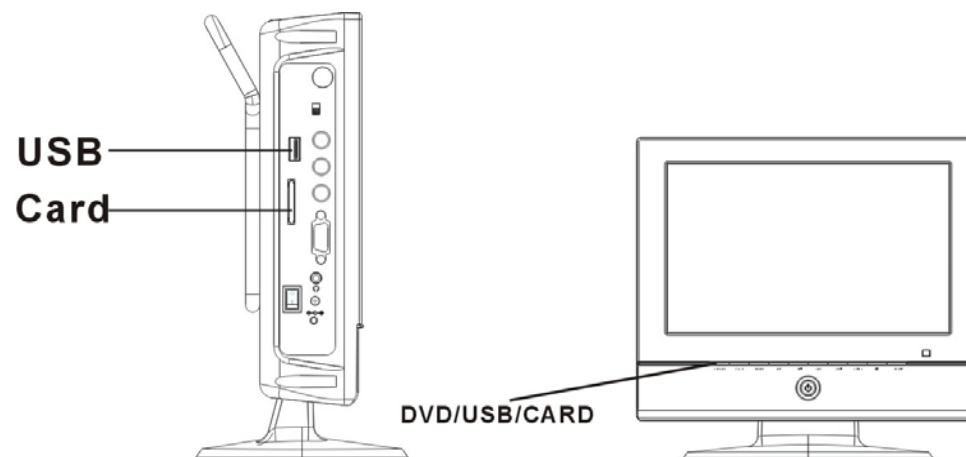

- 1.Turn the unit on.
2. Insert either a USB device or a SD/MMC/MS card into the USB port or the card slot located on the left hand side of the appliance.



3. Press the "DVD/USB /CARD" button in DVD mode to select card menu.
4. Use ▲/▼ button followed by ENTER to select usb or card.

Information on disc compatibility

Disc formats supported by this DVD player:

	DISC LOGO	CONTENTS	SIZE	MAXIMUM TIME
DVD DVD-R DVD+R DVD-RW DVD+RW		Audio+Video	12cm	133min(SS-SL)
				242min(SS-DL)
				266min(DS-SL)
CD		Audio		484min(DS-DL)
			12cm	74min
Picture	Kodak picture CD	Images (high resolution despite compression)	12cm	

The operating characteristics of some DVD discs are specified by the software maker. Please refer to the instruction manual supplied with the disc for further instructions.

This DVD Player will play most recordable (CD-R) OR re-writable (CD-RW) CDs, and most recordable (DVD-R, DVD+R) or re-writable (DVD-RW, DVD+RW) DVDs. In some cases, discs created by a computer must be finalised in order to enable playback.

Discs created by some computers and/or software programs may not be compatible. This will affect playback but is not a defect of this device.

Troubleshooting tips

Before calling for service, please check the following items .

GENERAL OPERATION

No operation at all

Check AC/DC adaptor or car adaptor connection is secure.

Try another AC outlet

Check car adaptor. If fuse is blown, replace with a new one of the correct size and rating.

Check power switch and standby switch

Check IN-AV-OUT switch

Condensation may have formed: wait about 1 to 2 hours to allow the player to dry out.

Condensation may occur when

- you move the player from a cold area to a warm area.,
- you use the unit when cold air from an air conditioner directly hits the player
- you use the player in a very humid area.

Unit will not switch out of standby (Switch glows RED)

When the battery has run too low it switches into standby mode, and will not respond to button presses or remote control. External power supply is required to recharge.

No remote control

Check the batteries are installed with the correct polarities +&-).

The batteries are depleted, replace them with new ones.

Make sure the remote control is aimed at the remote control sensor.

Remove any obstacles between the remote control unit and the remote control sensor.

Do not try to operate the remote control unit more than 5 meters from the remote control sensor.

TV

No picture, no sound

Check source button is set to ATV or DTV mode

Check AC/DC adaptor or car adaptor plug is powered and properly connected

Check main power switch to ensure it is in ON position

Check standby switch is glowing blue.

Try another channel. Problem may be with the broadcast

Poor reception

Station experiencing problems, try another station

Station signal is weak due to your location.

Snowy picture, checkered picture, noisy sound

Multiple image but normal sound

Ensure you are using a good antenna system. Antenna location, direction and

Connections are all important.

Try another station

Interference and noisy sound

Can be caused by other electrical appliances, cars, motorcycles, fluorescent lamps etc.

Normal picture, no sound

Check volume and whether mute function has been activated on remote control

Ensure correct sound system has been selected (ATV only, see Analog TV Setup

Menu S.SYS page 10)

Ensure that the input settings for the TV and stereo system are correct

No or poor color

Adjust color in menu option

DVD

Cannot insert disc

Turn off the player. Remove USB/card from slots first. Turn on again.

No playback

Check IN-AV-OUT switch to ensure it is set to OUT position.

Ensure that the disc is inserted with the label facing toward you.

The disc may be dirty and require cleaning.

Check disc is supported format. This player cannot play discs other than DVD, MPEG4, MP3 and CD.

Confirm the parental "Rating" settings.

No sound from speaker

Check if headphones are plugged in. This mutes the speakers.

Audio soundtrack and/or subtitle language is not the one selected at the initial settings:

Check sound track and subtitle setting. Disc may not allow this selection.

No subtitles:

Press subtitle key. If nothing found, disc has no such function

Angle cannot be changed:

Not all discs have this feature.

USB & CARD

Cannot read USB or CARD

Check input source button in DVD mode and ensure USB/CARD is selected


Card or contents may not be supported format.

Card reader can only support SD/MMC/MS. Make sure you insert correct card type.

USB can only play MP3, MPEG4, JPG, WMA

Technical specification

Item	
Dimensions (Approx.)	270(L)X120.6(W)X254MM
Weight (Approx.)	2.15 kg
Operating humidity	5 % to 90 %
Power repuirements	AC 100-240V,50/60 Hz DC 9.5V/2A
Power consumption	<18W
Audio output power(RMS)	3WX2
Headphone	3.5mm headphone, (32 Ω)
Video/audio out	CVBS output

 Note: due to continuing improvements, specifications subject to change without notice.

AWA