


AWA

PCD-792

MP3/CD/Radio Audio System

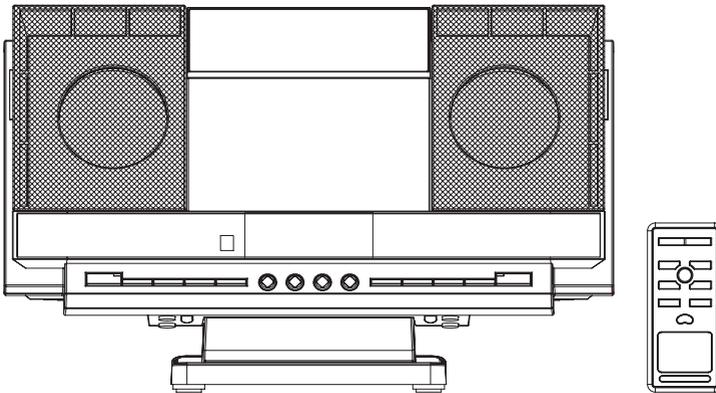

INSTRUCTION MANUAL

Before use, please read the manual carefully.

WARNING


1. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
2. WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
3. WARNING: Excessive sound pressure from earphones and headphones can cause hearing loss.
4. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
5. Do not install this equipment in a confined space such as a book case or similar unit. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.



6. Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam of laser.
7. No naked flame sources, such as lighted candles, should be placed on the apparatus.
8. Attention should be drawn to environmental aspects of battery disposal.
9. Use of the apparatus in moderate climates.

WARNING

TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

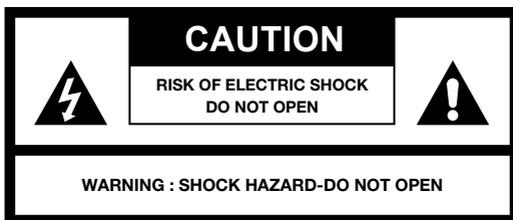

LIGHTNING FLASH WITH ARROWHEAD SYMBOL -
within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



EXCLAMATION POINT - within an equilateral triangle, is used to indicate that a specific component shall be replaced only by the component specified in that documentation for safety reason.

The following label has been affixed to the unit, listing the proper procedure for working with the laser beam:



CLASS 1 LASER PRODUCT LABEL -

This label is attached to the place as illustrated to inform that the apparatus contains a laser component.



WARNING LABEL INFORMING OF RADIATION -

This label is placed inside the unit. As shown in the illustration. To warn against further measures on the unit. The equipment contains a laser radiating laser rays according to the limit of laser product of class 1.

SAFETY INSTRUCTIONS

1. **READ INSTRUCTIONS** - All the safety and operating instructions should be read before the appliance is operated.
2. **RETAIN INSTRUCTIONS** - The safety and operating instruction should be retained for future reference.
3. **HEED WARNINGS** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS** - All operating instructions should be followed.
5. **WATER AND MOISTURE** - The appliance should not be used near water, for example, near a bathtub, washbowl, kitchen sink, laundrytub, swimming pool or in a wet basement.
6. **VENTILATION** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. Do not place on bed, sofa, rug or similar surface that may block the ventilation openings, in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. **HEAT** - The appliance should be situated away from heat sources such as radiators, stoves, or other appliances (including amplifiers) that produce heat.
8. **POWER SOURCE** - The appliance should be connected to power supply only of the type described in the operating instructions or as marked on the appliance.
9. **GROUNDING** - Precautions should be taken to ensure that the grounding means of an appliance is not defeated.
10. **POWER CORD PROTECTION** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
11. **POWER LINES** - An outdoor antenna should be located away from power lines.
12. **OBJECT and LIQUID ENTRY** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
13. **ESD WARNING** - The display does not function properly or no reaction to operation of any the control may due to the electrostatic discharge. Switch off and unplug the set. Reconnect after a few seconds.
14. **DAMAGE REQUIRING SERVICE** - The appliance should be serviced by qualified service personnel when:
 - a. The power-supply cord or plug has been damaged.
 - b. Objects have fallen into, or liquid has been spilled into the appliance enclosure.
 - c. The appliance has been exposed to rain.
 - d. The appliance has been dropped, or the enclosure damaged.
 - e. The appliance does not appear to operate normally.
15. **SERVICING** - The user should not attempt to service the appliance beyond that described in the user operating instructions. All other servicing should be referred to qualified service personnel.

Notes:

- a. Dirty or scratched CD may cause a skipping problem. Clean or replace the CD.
- b. If an error display or malfunction occurs, disconnect the AC cord and remove all the batteries. Then turn the power back on.

BEFORE OPERATION


Notes: CONCERNING COMPACT DISCS.

Since dirty, damaged or warped discs may damage the appliance, care should be taken of the followings items:

- a. Usable compact discs. Use only compact disc with the mark shown below.
- b. CD compact disc only with digital audio signals.



LOCATION OF CONTROL

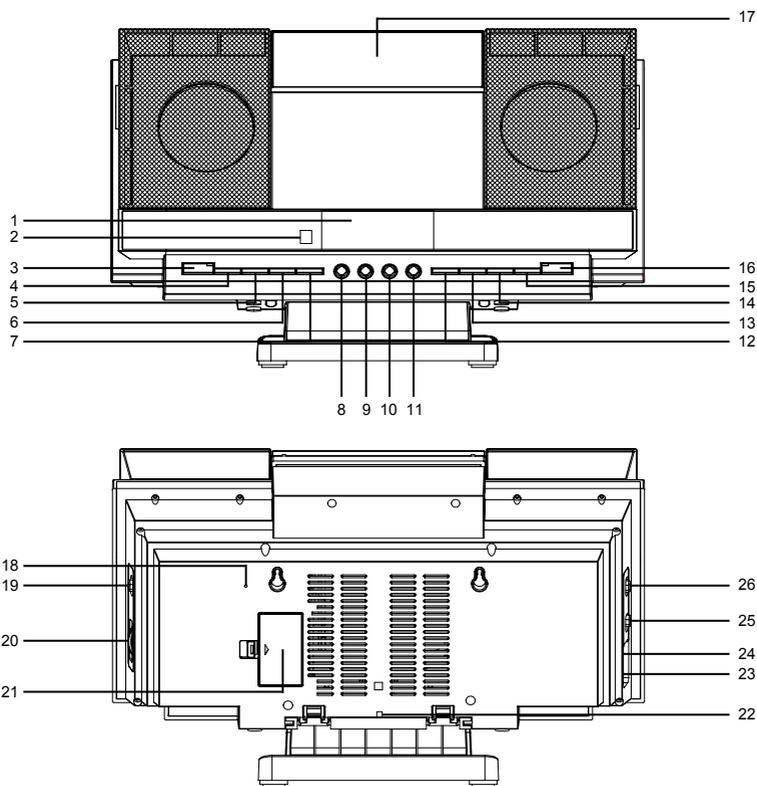

- | | | |
|------------------|--------------------|-----------------------|
| 1. LCD DISPLAY | 11. PLAY / PAUSE | 21. BATTERY BACKUP |
| 2. REMOTE SENSOR | 12. VOLUME + | 22. AC CORD |
| 3. STANDBY | 13. MODE | 23. PHONES JACK |
| 4. TIME | 14. PROGRAM | 24. AUX IN |
| 5. HOUR | 15. ALBUM + | 25. BASS SELECTOR |
| 6. MINUTE | 16. EJECT | 26. FUNCTION SELECTOR |
| 7. VOLUME - | 17. CD DOOR | |
| 8. SKIP - | 18. FM ANTENNA | |
| 9. SKIP + | 19. BAND SELECTOR | |
| 10. STOP | 20. TUNING CONTROL | |


POWER SOURCE

AC POWER

You can power your appliance by plugging the AC power cord at the back of the appliance into a wall AC power outlet. Check that the rated voltage of your appliance matches your local voltage.

REMOTE CONTROL

1. STANDBY
2. VOLUME -
3. PLAY / PAUSE
4. SKIP -
5. MODE
6. STOP
7. OPEN / CLOSE
8. VOLUME +
9. SKIP +
10. ALBUM +

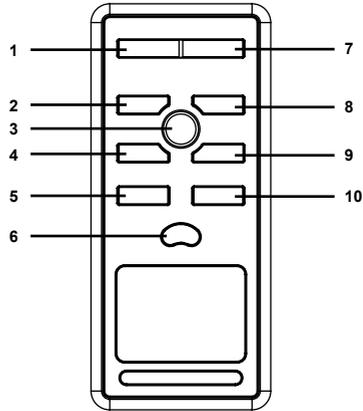

BATTERY INSTALLATION

Insert 2 x “AAA” size batteries into the battery compartment. Be sure that the batteries are inserted correctly to avoid damage to the remote control. Always remove the batteries when the remote control will not be used for a long period of time, as this will cause leakage to the batteries and subsequently damage to your set.

Notes:

- Use batteries of the same type. Never use different types of batteries together.
- If the distance required between the remote control and the appliance decreases, the batteries are exhausted. In this case replace the batteries with new one.

SENSOR WINDOW OF THE RECEIVER

- Even if the remote control is operated within the effective range, its operation may be impossible if there are any obstacles between the appliance and the remote control.
- If the remote control is operated near other appliances which generate infrared rays, or if other remote control devices using infrared rays are used near the appliance, it may operate incorrectly.

RADIO OPERATION

GENERAL OPERATION

1. Set the "FUNCTION" selector to "RADIO" mode.
2. Select desired band by using the "BAND" selector.
3. Adjust radio frequency to your desired station by using the "TUNING" control.
4. Adjust the "VOLUME" control to the desired level.

FM / FM-STEREO RECEPTION

- Set the "BAND" selector to FM mode for MONO reception.
- Set the "BAND" selector to FM ST. mode for FM STEREO reception. The Stereo indicator light up to show FM ST. mode.

FOR BETTER RECEPTION

FM - This appliance has a FM antenna located at the rear cabinet. This wire is completely unraveled and extended for better reception.

AM - This appliance is equipped with a built - in directional ferrite AM antenna. Rotate the appliance to get better reception.

CD / MP3 OPERATION

GENERAL OPERATION

- PLAY / PAUSE ►|| Press to start playing CD / MP3 disc.
Press again to stop playing CD / MP3 operation temporarily.
Press again to resume playback.
- SKIP + ►► &
SKIP - ◀◀ Press to go to the next track or back to the previous track.
Press and hold while playing until you find the point of the sound.
- STOP ■ Press to stop all CD / MP3 operation.
- EJECT ▲ Press to open / close the CD door.

PLAYBACK

1. Set the "FUNCTION" selector to "CD" mode.
2. Open the CD door and place a CD / MP3 disc with the label up in the CD compartment.
3. Close the CD door.
4. Focus search is performed if disc is inside. Total number of tracks is read and appears on the display.
5. Playback will start automatically from the first track.
6. Adjust the "VOLUME" control to the desired level.
7. Press the "PLAY / PAUSE" button again when you want to stop temporarily.
8. Press the "STOP" button when finished.

CD / MP3 OPERATION

PROGRAM


Be sure to press the "STOP" button before use.

1. Press the "PROGRAM" button, the display will show "P01" and flash.
2. Select desired track by using the "SKIP +" or "SKIP -" button. (You may select a desired album by pressing "ALBUM +" button.)
3. Press the "PROGRAM" button again to confirm desired track into the program memory.
4. Repeat step 2 and 3 to enter additional tracks into the program memory.
5. When all the desired tracks have been programmed, press the "PLAY / PAUSE" button to play the disc in the order you have programmed.
6. Press the "STOP" button twice to terminate programmed playback.

MODE

Press the "MODE" button during playing CD / MP3 disc, each press switches the mode function as follows:

- 1 - REPEAT 1
- 2 - REPEAT ALBUM (*MP3 ONLY)
- 3 - REPEAT ALL
- 4 - RANDOM
- 5 - NORMAL PLAYBACK

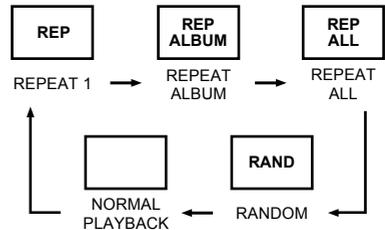

OTHER FEATURES

CLOCK SETTING

To adjust clock setting, make sure not in radio mode.

1. Press the "TIME SET" button. (Do not release "TIME SET" button during time setting)
2. Press the "HOUR" button to set hour.
3. Press the "MIN" button to set minute.
4. Release all button to confirm setting. Confirmed setting will on the display.

CARE AND MAINTENANCE

COMPACT DISCS

- ❖ Treat compact discs carefully. Handle them only by their edges. Never allow your fingers to touch the shiny, unlabelled side of the disc.
- ❖ Do not put adhesive tape, stickers etc. on either side of a disc.
- ❖ Clean discs periodically with soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean discs. If necessary, use a CD cleaning kit.
- ❖ If a disc skips or gets stuck during playback it is probably dirty or damaged (scratched).
- ❖ When cleaning a disc, wipe in straight lines from the centre of the disc to its edge. Never wipe in circular motions.
- ❖ When removing a disc from its storage case, press down on the centre of the case and lift the disc out, holding it carefully by its edges.
- ❖ Fingerprints and dust should be carefully wiped off the disc's recorded side with a soft cloth. Unlike conventional records, compact discs have no grooves to collect dust, so gently wiping with a piece of soft cloth should remove most particles.



CLEANING THE UNIT

- ❖ To prevent fire or electric shock hazard, ensure that the unit is unplugged from the AC power supply when cleaning it.
- ❖ If the unit's casing gets dusty, wipe it clean with a soft, dry dust cloth. Do not use any wax or polish sprays on the unit.
- ❖ If the unit's casing gets dirty or smudged with fingerprints it can be cleaned with a soft cloth, slightly damp with a mild soap and water. Never use abrasive cloths or polishes as these can damage the casing.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

TROUBLESHOOTING GUIDE

If you have a problem, please check the following chart to see if you can fix it before consulting a servicing professional.

Symptom	Possible Cause	Solution
Radio		
Noise or sound is distorted on AM or FM broadcasts	Channel is not tuned properly for AM or FM	Fine tune the AM or FM broadcast station
	FM: The FM antenna wire is not extended	Extend the FM wire antenna fully
	AM: The built-in ferrite bar antenna is not positioned correctly	Reposition/rotate the unit until the best reception is obtained
FM STEREO indicator does not light up	Band in mono mode	Press ST/MO button to enter STEREO mode
	You have tuned to a mono station	Retune to another FM station
	The station signal is too weak	Retune to another FM station
No sound in AM or FM	The unit is not in TUNER mode	Press TUNER / BAND button to enter TUNER mode
	Volume is at the minimum position	Adjust the volume level
CD Player		
CD player does not play	The unit is not in CD mode	Press "CD" button to enter CD mode
	CD is not placed or placed incorrectly	Load disc with unlabelled side facing downwards
CD skips while playing	Disc is dirty or scratched	Clean disc with cloth or use another disc

RESETTING THE UNIT

If the system does not respond, you may have experienced a severe electric shock or a power surge that triggered the internal computer to automatically shut down. If this occurs, disconnect the unit from the AC power outlet and reconnect it again after a few seconds.

SPECIFICATIONS

GENERAL

Power source -----	AC ~240V 50Hz
Remote control-----	DC 3V(1.5V x 2 "AAA" SIZE) not included
Power Consumption -----	21 W
Dimension -----	Main Unit: 400(W) x 254(H) x 121(D) mm

TUNER

Frequency range -----	FM: 88 – 108 MHz
	AM: 540 – 1620 KHz

AUDIO

Power Output -----	2 Watts x 2
Speaker impedance -----	4 ohms
Headphone impedance -----	32 ohms
AUX input level -----	350 mV ~ 500mV

ACCESSORIES

Instruction Manual -----	1 pc
Remote Control-----	1 pc