 


AWA

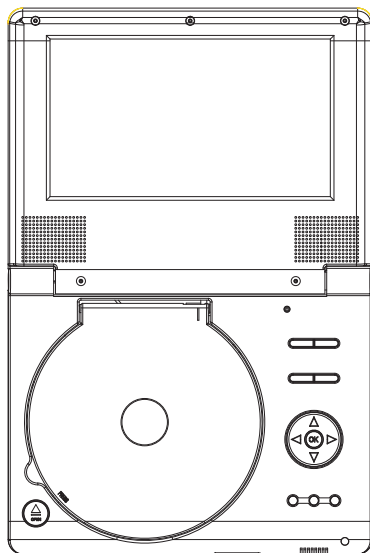

**USER'S MANUAL
PDVD-196P**

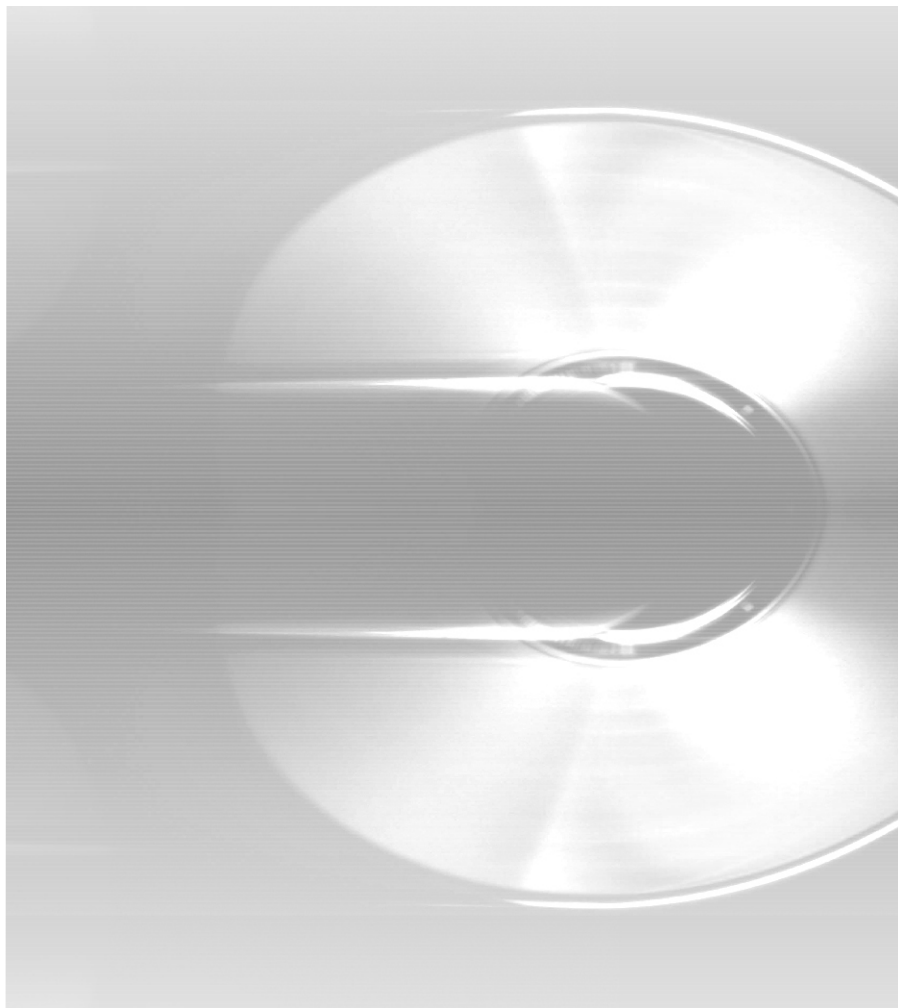 


Table of Contents

Contents

Table of Contents	P1
--------------------------	----

Safety Precautions	P2
---------------------------	----

Identification of Controls	P3-P5
-----------------------------------	-------

<i>Main Unit</i>	P3
------------------	----

<i>Remote control unit</i>	P4-P5
----------------------------	-------

Mp3 Repeat/program Operation	P6
-------------------------------------	----

SETUP Menu Setting	P7-P8
---------------------------	-------

<i>Language Setup Page</i>	P7
----------------------------	----

<i>Video Setup Page</i>	P7
-------------------------	----

<i>Audio Setup Page</i>	P7
-------------------------	----

<i>Rating Setup Page</i>	P8
--------------------------	----

<i>Misc Setup Page</i>	P8
------------------------	----


Battery Parameters	P9
---------------------------	----


Parameters and specifications	P9
--------------------------------------	----


Safety Precautions


WARNING


RISK OF ELECTRIC SHOCK
DO NOT OPEN


 Warning: To reduce the risk of electric shock, do not remove the cover or back of this product. There are no user-serviceable parts inside. Refer servicing to qualified service personnel.


 Warning: To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing water, rain, or moisture. Do not place objects filled with water such as vases, on the Product.


 Warning: This digital video disc player employs a laser system. Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation Exposure.


 Warning: To prevent direct exposure to laser beam, do not open the enclosure. Visible laser radiation when open.


 Warning: Never stare directly into the laser beam.

 Caution: Do not install this product in a confined space such as a book case or similar unit.

 Warning: when the unit using by child, parents must make sure to let the child understand all contents in Instruction book how battery using to guarantee using battery correctly all the time.

 Warning: when find battery overheat, swell or dour, please stop using battery and contact service centre for getting replacement.

 Warning: do not charging battery on the place of insufficient ventilation such as: mattress, sofa, cushion , soft mat.....

 Warning: we will not take any responsibility if user incorrectly use battery, not following our warning instruction label on the battery case.

 Warning: more than 250mm USB extension cord is prohibited to use for USB port

Notes on Copyrights:

- It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyrighted material without permission.
- This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. When recording and playing the pictures of these discs picture noise will appear. This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by macrovision Corporation. Reverse engineering or disassembly is prohibited.

 
 
SERIAL NUMBER:

You can find the serial number on the back of the unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase.

Model No. _____


Serial No. _____

Date of Purchase _____

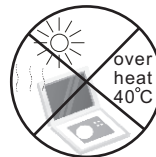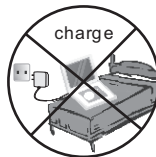

Identification of Controls

 
Main Unit

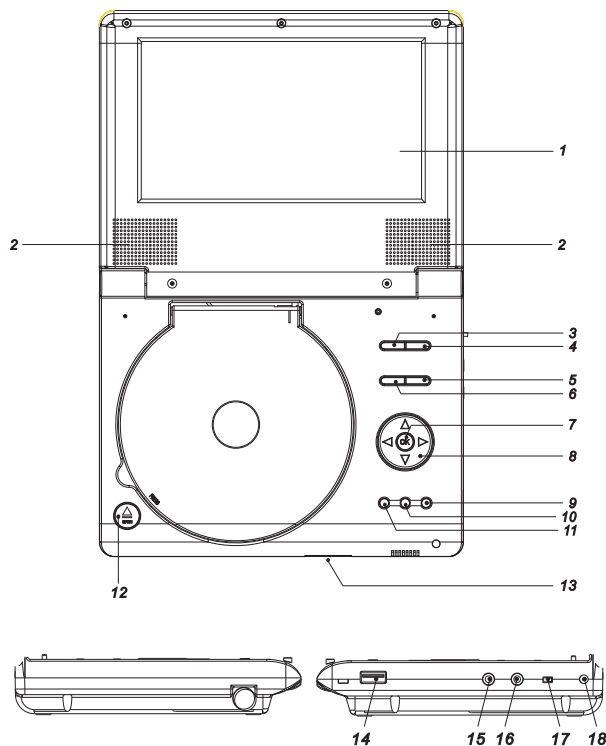

1. TFT screen
2. Speakers
3. MENU(DVD),PBC(VCD)
4. SOURCE
Select input source,
DVD, card,usb.
5. VOL+
6. VOL-
Adjust volume
7. OK(ENTER)
Confirms menu selection.
8. ▲▼◀▶ (Left/right/up/down)
Select an item in the menu.OK key
confirms menu selection.
When playing ,VCD,DVD,if available:
Up:Fast forward
Down:Fast reverse
Left:Previous track
Right:Next track
9. SETUP
10. STOP (■)
Stops playback.
11. ▶||
Play/pause.
12. Open
13. CARD
14. USB
15. Headphone out jacks
16. AV OUT
17. Power ON/OFF switch
18. DC IN 9-12V


Insert the battery

 1. Open the battery door.
2. Insert two AAA size batteries.

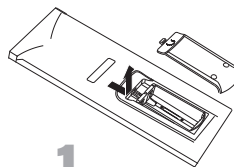


1
NOTES:

 Remove battery during storage or when you are not using the DVD player for a long time.

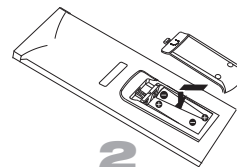

Identification of Controls

 Remote control unit

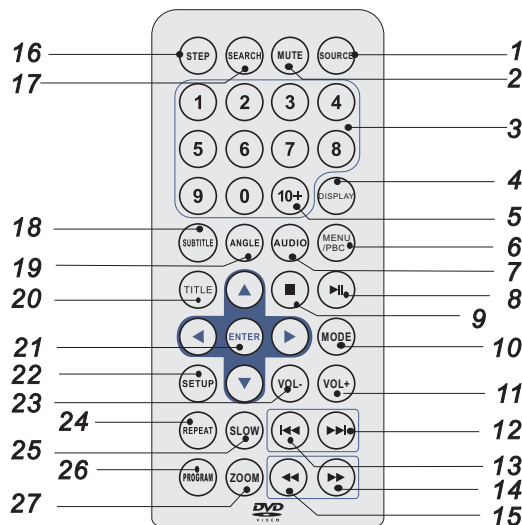

1. SOURCE

DVD/CARD/USB.

2. MUTE

Disable Audio output.

3.0-9 NUMBER BUTTON

Selects numbered items in a menu.

4.DISPLAY

To display the playtime and status information.

5.10+ BUTTON

In order to select a track 10 or greater, first press 10+, For example; select track 12, first press 10+, and then press number 2 button.

6. MENU/PBC

Return to DVD root menu(DVD).

PBC on/off switch (VCD) .

7.AUDIO

DVD Press AUDIO repeatedly during playback to hear a different audio language or audio track, if available.

MP3 CD VCD Press AUDIO repeatedly during playback to hear a different audio channel (Left,Right,Mix,Stereo).

8.PLAY/PAUSE

Press PLAY/PAUSE once to pause playback, pressing PLAY/ PAUSE second time will resume the playback.

9.STOP

When this button is pressed once, the unit records the stopped point,from where playback will resume if PLAY (▶▶)is pressed afterwards. But if STOP button is pressed again instead of PLAY (▶▶) button, there will be no resume function.

10.MODE

Set LCD parameter(adjust bightness, contrast,and saturation).

11.VOL+

23.VOL-

Adjust volume

12.Forward Skip

Go to next chapter/ track.

13.Reverse Skip

Go to previous chapter/ track to the beginning.

14. ▶▶ BUTTON

Press ▶▶ BUTTON allow skipping ahead at 4-level speed(X2->X4-> X8->X16->PLAY), press PLAY button return to normal playback.

Identification of Controls

Remote control unit

15. ⏮️ BUTTON

Press ⏮️ BUTTON allow skipping back at 4-level speed(X2->X4->X8->X16->PLAY), press PLAY button return to normal playback.

16. STEP

Play the motion picture frame by frame.

17. SEARCH

Goto time point , title or chapter you want in DVD Mode.

18. SUBTITLE

Press SUBTITLE repeatedly during playback to hear a different subtitle languages.

19. ANGLE

DVD :Press ANGLE will change the view angle, on DVDs that support this feature.

JPEG :You can press ANGLE repeatedly to select the slide show type.

20. TITLE

Return to DVD title menu

21. ENTER

Confirms menu selection..

22. SETUP

Accesses or removes setup menu.

24. REPEAT

Press REPEAT during playback to select a desired repeat mode.

DVD : you can play select repeat chapter/title/off.

VCD : you can select repeat single/all/off.

CD **MP3** **WMA** : you can select repeat single/folder/off.

25. SLOW

Press Slow button repeatedly to enter slow playback, and cycle between different speeds. The speeds are 1/2, 1/4, 1/6, 1/8, and normal.

26. PROGRAM

DVD **VCD** :The program function enables you to store your favourite tracks from the disc. Press PROGRAM button ,then PROGRAM MENU will appear on screen, now you can use the number key to direct input the titles, chapters or tracks number and select PLAY option. TO resume normal playback, press PROGRAM and select clear program option on the program menu, press PROGRAM again to exit program menu.

 
27. ZOOM

DVD **VCD** **JPEG**

2X size → 3X size → 4X size → normal size



Mp3 Repeat/program Operation

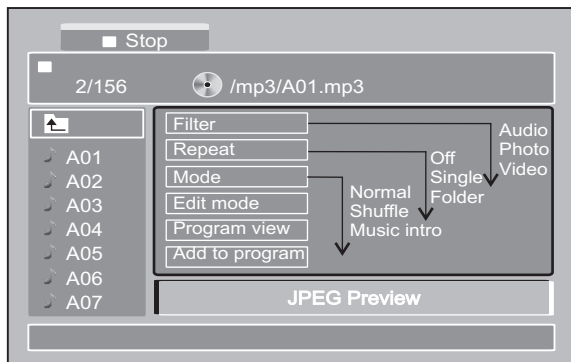

● Filter

1. Use RIGHT key move to "Filter" item.
2. Press ENTER key to select files filters (Audio, Photo and Video) to show audio files, photo files and video files.

● Repeat mode

1. Move to "Repeat" item.
2. Press ENTER key to switch repeat mode: off, single or folder.

● Play mode

1. Move to "Mode" item.
2. Press ENTER key to switch play mode: Normal, Shuffle, or Music intro.
3. When playing in "Music intro" mode, each music files will be play for 10 seconds.

● Add files to program list

1. Move to "Edit mode" and press ENTER key to start edit mode first.
2. Use LEFT key move to files list and press ENTER key to select the files that want to add. Each selected files will be marked with a tick.
3. After tick all the files that want to be add, use RIGHT key move to "Add to program" item and press ENTER key.
4. Move to "Edit mode" and press ENTER key, exit edit mode.
5. Then you can see the selected files and start playback in "Browser view" mode.

● "Program view" and "Browser view" mode

 
1. Move to "Program view" item.
2. Press ENTER key can switch to "Browser view" mode if the program files list is not empty. In "Browser view" mode, you can see the files that has been added and start playback.
3. If you press ENTER key again, you can back to "Program view" mode.

● Remove files from program list

1. Stop playback first, move to "Edit mode" and press ENTER key to start edit mode.
2. Use LEFT key move to files list and press ENTER key to select the files that want to remove. Each selected files will be marked with a tick.
3. After tick all the files that want to be remove, use RIGHT key move to "Clear program" item and press ENTER key.
4. Move to "Edit mode" and press ENTER key, exit edit mode.

SETUP Menu Setting

Language Setup Page

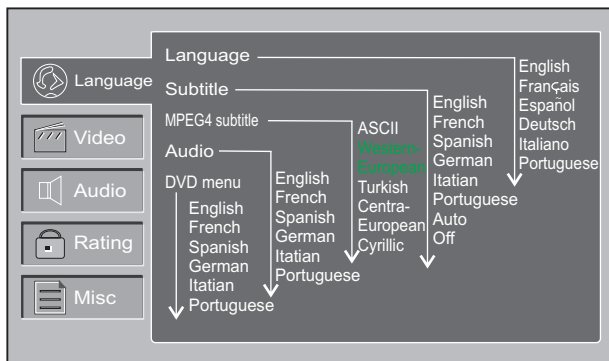


● Language

- Language: Selects OSD language.
- Subtitle: Selects a subtitle language for DVD discs (if available).
- MPEG4 subtitle: Selects a kind of MPEG4 subtitles type.
- Audio: Selects an audio language for DVD discs (if available).
- DVD menu: Selects a language for DVD menu (if available).


Video Setup Page

● Video

 - Aspect Ratio: Selects video 4:3 or 16:9.
- View mode: Selects view screen mode.
- TV System: Selects TV system, (NTSC or PAL).

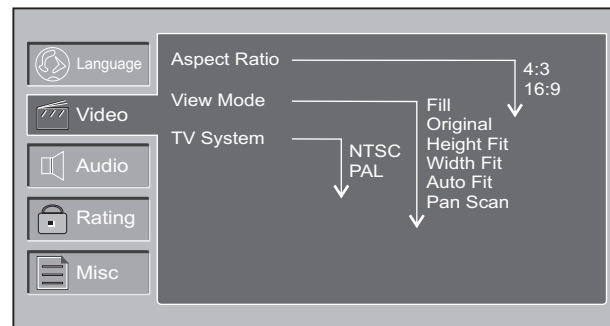

Audio Setup Page

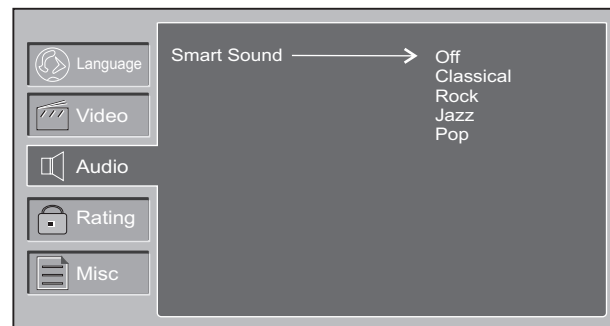 


● Audio

- Smart Sound: Selects smart sound type (off, classical rock, jazz, pop).

SETUP Menu Setting

 
Rating Setup Page

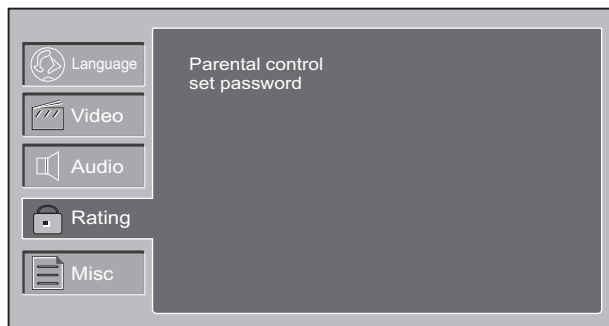

● Rating

- Parental control: Selects a parental level. You need to input password first. Input 4 digits numbers and press ENTER key to confirm. The default password is 1369.
- Set Password: You can assign a new password.
 1. Move to "Set Password" and press ENTER key, you will be ask to input your old password.
 2. Input 4 digits numbers and press ENTER key to confirm.
 3. If the password is correct, press ENTER key again, you will be ask to input your new password and confirm input again.

 Misc Setup Page

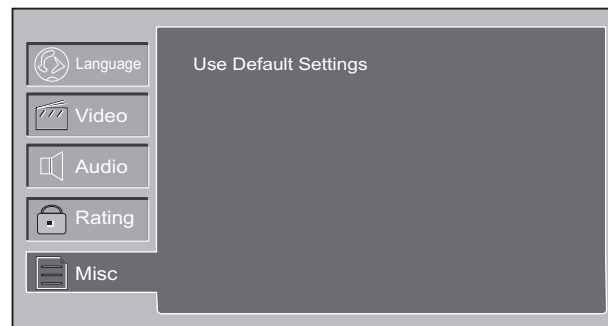

● Misc

- Use Default Settings: Restore the factory settings.


Parameters and specifications

Electronical parameters

Item		Standard requirement
Power requirements		: AC 100-240 V , 50/60 Hz
Dimensions (Approx.)		: 200(L)X157(W)X40.3(H)MM
Power consumption		: <10W
Weight (Approx.)		: 0.73 kg
Operating humidity		: 5 % to 90 %
Output	VIDEO OUT	: 1 Vp-p (75Ω)
	AUDIO OUT	: 1.4 Vrms (1 KHz, 0 dB)
	Audio	: Speaker:1WX2,Headphones output

System

Laser	: Semiconductor laser, wavelength 650 nm
Signal system	: NTSC / PAL
Frequency response	: 20Hz to 20 kHz(1dB)
Signal-to-noise ratio	: More than 80 dB (ANALOG OUT connectors only)
Dynamic range	: More than 85 dB (DVD/CD)
Accessories	: Video/Audio cable, Remote control, Stereo headphone, Rechargeable battery, Car cigarette Adapter, car Bag

 Note: Design and specifications are subject to change without notice.

Battery Parameters

Battery Parameters

Battery Specifications:

Output: 7.4V

Charge / Discharge Time:

Standard charge time: 3h ~ 4h

Storage and work circumstances:

1. Storage circumstances	Temperature	Humidity
6 months	-20℃ ~ +45℃	65±20%
1 week	-20℃ ~ +65℃	65±20%
2. Work circumstances	Temperature	Humidity
Standard charge	0℃ ~ +45℃	65±20%
Standard discharge	-20℃ ~ +65℃	65±20%

Product Warranty



Subject to the warranty repair conditions below, in addition to any applicable statutory warranties this product is warranted for 12 months from the original date of purchase covering both parts and labour.

The benefits conferred by this warranty are in addition to and not in derogation of all rights and remedies in respect of this product which the consumer has under the Trade Practices Act and other State and Territory laws.

Warranty Repair Conditions

- A. This Product Warranty only applies provided the product:-
- Has been purchased in Australia and sold by Authorised Distributors or Dealers and only where the products are used and serviced within Australia
 - Is taken for service when required to an Authorised Service Agent, together with written instructions indicating specific problem or function requiring investigation.
 - Has valid proof of purchase and presented when warranty service is requested.
 - Has only been used in a domestic application.
 - Has been installed and operated in accordance as noted in the operating instructions under normal use and reasonable care (in the opinion of the Service Centre).
 - Has not been damaged by the use of accessories which in the opinion of the Service Centre are defective or incompatible with the product.
 - Has not been tampered with or repaired (including unauthorised alterations) by anyone other than the AWA Service Centre or an Authorised Service Centre.
- B. This Product Warranty does not cover:-
- Damage, malfunction or failure resulting from use of incorrect voltages, incorrect installation, accidental damage, misuse, neglect, build-up of dirt or dust abuse, wear and tear, maladjustment of customer controls, mains supply problems, thunderstorm activity or Acts of God, pixel error, infestation by insects or vermin, exposure to abnormally corrosive conditions or any foreign object or matter having entered the product.
 - Mileage or travelling time in respect of service outside the authorised AWA Service Centre nor pick up and delivery cost incurred.
 - Service calls arising from failure to correctly operate the product or to observe noted instructions, or repair which reveals the product is in normal working order.
 - Cabinet parts, user replacement batteries or leads unless the defective items are reported at the time of purchase.
- C. Service calls only apply to Television display devices (CRT, LCD, Plasma) with screen sizes greater than 68cm in the major metropolitan areas of Australia or the normal operating areas of the nearest Authorised Service Centers.
- D. Requested service visits to the customer premises will be made during normal working hours of the customary working week upon request by the customer. Where such a visit is made on a day arranged by the customer and the service technician is unable to obtain access to the product, the Service Centre will be entitled to make a separate charge for service call fee, time and distance travelled.
- E. The AWA Service Centre and its Authorised Service Centres may charge for work done where the product is found to be in good working order. Example, charges may be made where the problem is found to be due to incorrect setting of customer controls, use of poor associated equipment (e.g. poor antenna systems) or the inability of the product to operate with faulty or incompatible equipment.
- F. If the product is sent to an Authorised Service Centre, the owner is responsible for the cost of transport to and from the Service Centre. In addition, the product is at the owners risk while in transit to and from the authorised Service Centre.
- G. No person is authorised to make or give any assertions, statements or undertakings, whether expressed or implied about the product other than or additional to the terms of this warranty.

Please read instruction manual carefully
Should you encounter any problems?

Please contact Telefix for Warranty Support
1300 366 144

Email: warrantyhelp@awa.com.au

The original proof of purchase must be kept and produced for service requirements under this Product Warranty.

AWA