 


AWA



USER'S MANUAL PDVD-13609LC

9" (22cm) portable DVD Player with USB and Card Slot

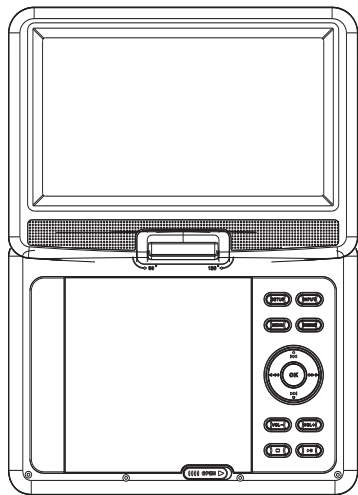

Before connecting, operating or adjusting this product,
please read this user's manual carefully and completely.

Table of Contents

Contents

Table of Contents	P1
-------------------	----

Safety Precautions	P2
--------------------	----

Identification of Controls	P3-P5
----------------------------	-------

Main Unit	P3
-----------	----

Remote control unit	P4-P5
---------------------	-------

Types of Playable Discs	P5
-------------------------	----

SETUP Menu Setting	P6-P8
--------------------	-------

General Setup Page	P6
--------------------	----

Audio Setup Page	P6-P7
------------------	-------

Video Setup Page	P7
------------------	----

Preference Page	P7-P8
-----------------	-------

Password Setup Page	P8
---------------------	----











Battery Parameters	P9
--------------------	----

Parameters and specifications	P9
-------------------------------	----

Safety Precautions

WARNING

 
 
RISK OF ELECTRIC SHOCK
DO NOT OPEN

-  Warning: To reduce the risk of electric shock, do not remove the cover or back of this product. There are no user-serviceable parts inside. Refer servicing to qualified service personnel.
-  Warning: To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing water, rain, or moisture. Do not place objects filled with water such as vases, on the Product.
-  Warning: This digital video disc player employs a laser system. Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation Exposure.
-  Warning: To prevent direct exposure to laser beam, do not open the enclosure. Visible laser radiation when open.
-  Warning: Never stare directly into the laser beam.
-  Caution: Do not install this product in a confined space such as a book case or similar unit.
-  Warning: when the unit is used by child, parents must make sure to let the child understand all contents in Instruction book how battery using to guarantee using battery correctly all the time.
-  Warning: when find battery overheat, swell or dour, please stop using battery and contact service centre for getting replacement.
-  Warning: do not charge battery on the place of insufficient ventilation such as: mattress, sofa, cushion, soft mat.....
-  Warning: we will not take any responsibility if user incorrectly use battery, not following our warning instruction label on the battery case.

Notes on Copyrights:


- It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyrighted material without permission.
- This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.
- **SERIAL NUMBER:**
You can find the serial number on the back of the unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase.

Model No. _____
Serial No. _____
Date of Purchase _____

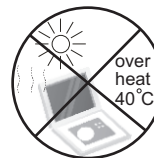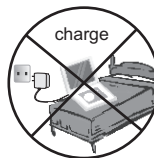

Identification of Controls

 
Main Unit

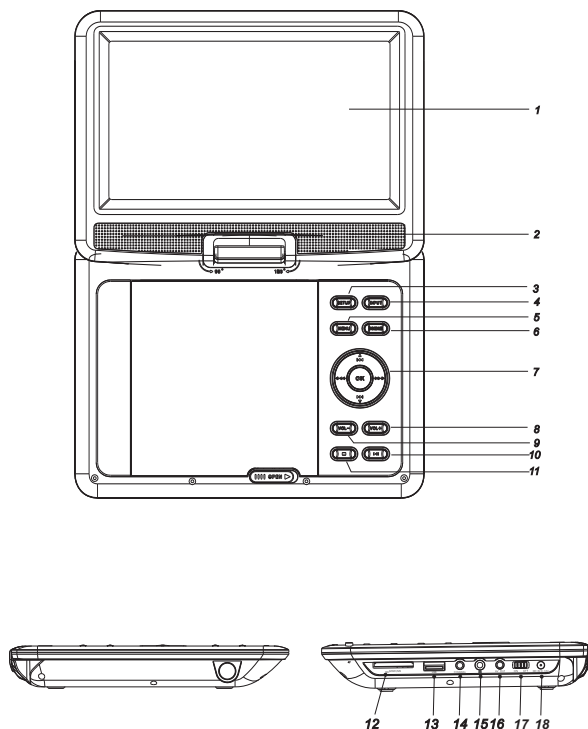


- | | |
|--------------------------------------|------------------------|
| 1.TFT screen | 8.VOL+ |
| 2.Speakers | 9.VOL- |
| 3.SETUP | 10. PLAY/PAUSE |
| 4.MODE | 11. STOP |
| 5.MENU | 12.SD/MMC/MS |
| 6.DVD/SD/USB | 13.USB |
| Select input source,DVD/Card/USB | 14.COAXIAL |
| 7.UP/DOWN/LEFT/RIGHT | 15.Headphone out jacks |
| select an item in the menu. | 16.AV OUT |
| when playing CD,VCD,DVD,If available | 17.Power ON/OFF switch |
| UP:previous track | 18.DC IN 9-12V |
| Down:Next track | |
| Left:Fast reverse | |
| Right:Fast forward | |

Insert the battery

 - 1.Open the battery door.
- 2.Insert two AAA size batteries.

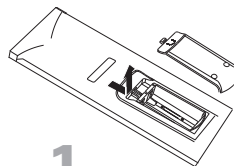

1

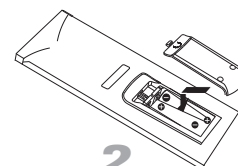 


2

NOTES:

Remove battery during storage or when you are not using the DVD player for a long time.

Identification of Controls

 Remote control unit

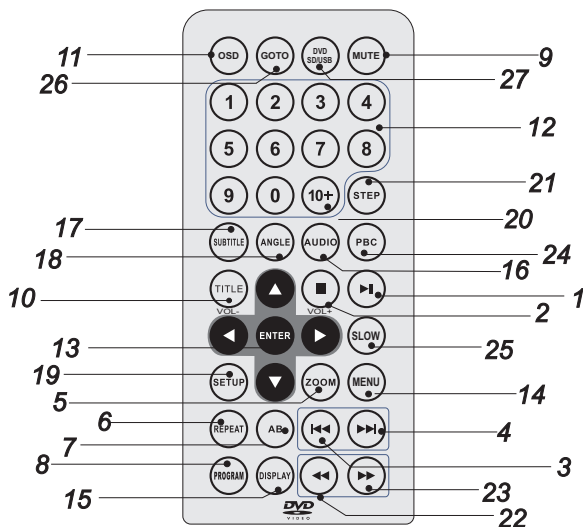

1.PLAY/PAUSE

Press PLAY/PAUSE once to pause playback, pressing PLAY/PAUSE second time will resume the playback.

2.STOP

When this button is pressed once, the unit records the stopped point, from where playback will resume if ENTER is pressed after wards. But if STOP button is pressed again instead of ENTER button, there will be no resume function.

3.Reverse Skip

Go to previous chapter/ track to the beginning.

4.Forward Skip

Go to next chapter/ track.

5.ZOOM

DVD VCD : Use ZOOM to enlarge or shrink the video image.

1.Press ZOOM during playback or still playback to activate the Zoom function. The square frame appears briefly in the right bottom of the picture.

2. Each press of the ZOOM button changes the TV screen in the following sequence:

2X size → 3X size → 4X size → 1/2 size → 1/3 size → 1/4size → normal size

JPEG : Use ZOOM to enlarge or shrink the picture.

1.Press 'ZOOM'.

2,Used "▶▶" to enlarge, or "◀◀" to shorten the picture.

Use the ▲▼◀▶ button to move through the zoomed picture.

6.REPEAT

Press REPEAT during playback to select a desired repeat mode.

DVD : you can play a chapter/title/all on a disc.

VCD CD : you can play a track/all on a disc.

Mp3 WMA : you can select shuffle/ random/ single/ Repeat one/

Repeat folder/ folder play mode on a disc.

7.A B

To repeat a segment: press AB once to set the starting point for repeat segment, press it again to set an end point, and the player will repeat the segment from the start to the end point.

8.PROGRAM

DVD VCD CD :The program function enables you to store your favourite tracks from the disc. Press PROGRAM button ,then PROGRAM MENU will appear on screen, now you can use the number key to direct input the titles, chapters or tracks number and select START option. TO resume normal playback, press PROGRAM and select STOP option on the program menu.

Identification of Controls

Remote control unit

JPEG :You can press PROGRAM repeatedly to select the slide show mode, there are 16 types of slide show.

9. MUTE

Disable Audio output.

10. TITLE

Return to DVD title menu.

11. OSD

Switches the OSD language.

12. 0-9 NUMBER BUTTON

Selects numbered items in a menu.

13. ENTER

Confirms menu selection.

14. MENU

Accesses menu on a DVD disc.

15. DISPLAY

To display the playtime and status information.

16. AUDIO

DVD Press AUDIO repeatedly during playback to hear a different audio language or audio track, if available.

CD VCD Press AUDIO repeatedly during playback to hear a different audio channel (Stereo, Left, or Right).

17. SUBTITLE

Press SUBTITLE repeatedly during playback to hear a different subtitle language.

18. ANGLE

Press ANGLE will change the view angle, on DVDs that support this feature.

19. SETUP

Accesses or removes setup menu.

20. 10+ BUTTON

In order to select a track 10 or greater, first press 10+, For example; select track 12, first press 10+, and then press number 2 button.

21. STEP

Press STEP once to pause playback, From this position, press STEP to advance one video frame.

22. ◀◀ BUTTON

Press ◀◀ BUTTON allow skipping back at 5-level speed(X2->X4->X8->X16->X32), press ENTER button return to normal playback.

23. ▶▶ BUTTON

Press ▶▶ BUTTON allow skipping ahead at 5-level speed(X2->X4->X8->X16->X32), press ENTER button return to normal playback.

24. PBC

PBC on/off switch. Only for VCD, For other discs, the function is invalid.

25. SLOW

Press Slow button repeatedly to enter slow playback, and cycle between different speeds. The speeds are 1/2, 1/4, 1/8, 1/16, and normal.




26. GOTO

Goto time point, title or chapter you want in DVD Mode.

27. DVD/SD/USB

DVD/CARD/USB.

Types of Playable Discs

	DVD (8 cm / 12 cm disc)
	Video CD (VCD) (8 cm / 12 cm disc)
	Audio CD (8 cm / 12 cm disc)

In addition, this unit plays, DVD -R, DVD +R, DVD -RW, DVD +RW, Kodak Picture CDs, SVCD, and CD-R / CD-RW that contains audio titles, MP3, WMA, JPEG and DivX files.

5



Turn off the power and keep AC cord pulled out from the outlet when connecting the system.

SETUP Menu Setting

General Setup Page

Press SETUP button to get the setup menu. Use direction buttons ▲▼◀▶ to select the preferred item. After finishing settings, press SETUP again to normal display.

The following menu items can be changed:

GENERAL: selects the GENERAL PAGE menu.

 
AUDIO: selects the AUDIO PAGE menu.

VIDEO: selects the VIDEO PAGE menu.

PREFERENCE : selects the PREFERENCE PAGE menu.

PASSWORD: selects the PASSWORD PAGE menu.

● General Setup Page

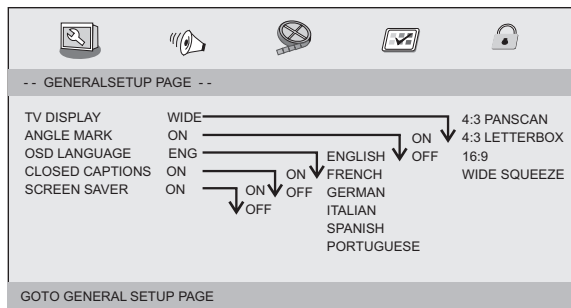

● TV DISPLAY: selects the aspect ratio of the playback picture.

4:3 PANSCAN: if you have a normal TV and want both sides of the picture to be trimmed or formatted to fit your TV screen.

4:3 LETTERBOX: if you have a normal TV. In this case, a wide picture with black bands on the upper and lower portions of the TV screen will be displayed.

16:9: wide screen display.

Wide Squeeze: Set screen mode to 4:3.

● Angle Mark

Displays current angle setting information on the right hand corner of the TFT screen if available on the disc.

● OSD Language

You can select your own preferred language settings.

● Closed Captions

 
Closed captions are data that are hidden in the video signal of some discs. Before you select this function, please ensure that the disc contains closed captions information and your TV set also has this function.

● Screen Saver

This function is used to turn the screen saver On or Off.

Audio Setup Page

● Audio Setup Page

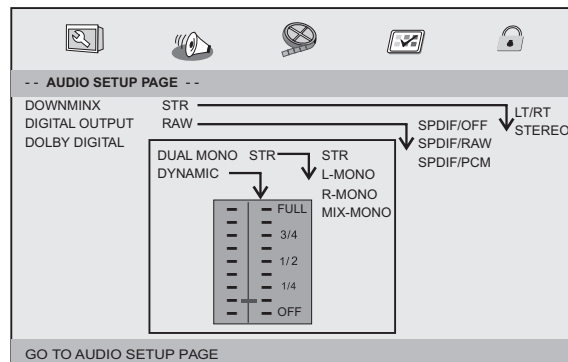

SETUP Menu Setting

Audio Setup Page

● Downmix

This options allows you to set the stereo analog output of your DVD Player.

→ **LT/RT**: Select this option if your DVD Player is connected to a Dolby Pro Logic decoder.

→ **Stereo**: Select this option when output delivers sound from only the two front speakers.

● Digital Output

The function is used to select the SPDIF Output: SPDIF Off, SPDIF /RAW, SPDIF/PCM.

→ **SPDIF Off**: Turns off the SPDIF output.

→ **SPDIF/RAW**: If you have connected your DIGITAL AUDIO OUT to a multi-channel decoder/receiver.

→ **SPDIF/PCM**: Only if your receiver is not capable of decoding multi-channel audio.

● Dolby digital

The options included in Dolby Digital Setup are: 'Dual Mono' and 'Dynamic'.

● Dual Mono

→ **Stereo**: Left mono sound will send output signals to Left speaker and Right mono sound will send output signals to Right speaker.

→ **L-Mono**: Left mono sound will send output signals to Left speaker and Right speaker.

→ **R-Mono**: Right mono sound will send output signals to Left speaker and Right speaker.

 
→ **Mix-Mono**: Left and Right mixed mono sound will send output signals to Left and Right speakers.

● Dynamic

Dynamic range compression.

Video Setup Page

● Video Setup Page

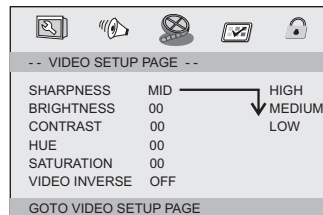


Sharpness, Brightness, Contrast, Hue, Saturation: setting the video quality.

Video Inverse: setting TFT screen display inverse on or off.

Preference Page

 ● Preference Page

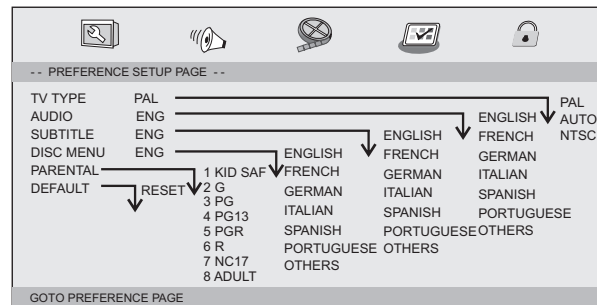

● TV Type

Selecting the colour system that corresponds to your TV when AV outputs. This DVD Player is compatible with both NTSC and PAL.

SETUP Menu Setting

Preference Page

PAL - Select this if the connected TV is PAL system. It will change the video signal of a NTSC disc and output in PAL format.

NTSC - Select this if the connected TV is NTSC system. It will change the video signal of a PAL disc and output in NTSC format.

Auto - Change the video signal output automatic according to the playing disk format.

 
- **Audio**: Selects a language for audio (if available).
- **Subtitle**: Selects a language for subtitle (if available).
- **Disc Menu**: Selects a language for disc menu (if available).
- **Parental**

Some DVDs may have a parental level assigned to the complete disc or to certain scenes on the disc. This feature lets you set a playback limitation level. The rating levels are from 1 to 8 and are country dependent. You can prohibit the playing of certain discs that are not suitable for your children or have certain discs played with alternative scenes.

- **Default**: Back to the factory setting.

Password Setup Page


- **Password Setup Page**

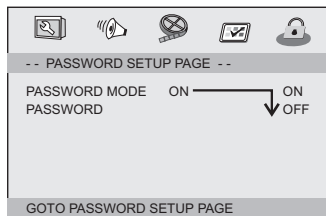

- **Password mode**: Set password mode on/off. If set to off, change parental level will not check password.

Password Setup Page

 - **Password**: select the menu password change page.

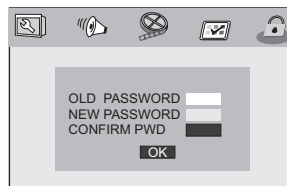

OLD PASSWORD: Enter the OLD password, (Factory setting is 1369), and the cursor will jump automatically to NEW PASSWORD.

NEW PASSWORD: Enter the NEW password. Enter 4 digits from the remote control unit numeric buttons, and the cursor will automatically jump to CONFIRM PASSWORD.

 
CONFIRM PASSWORD: Confirm the NEW password by entering it again. If the confirmation is incorrect, the cursor will stay in this column. After entering, the correct new password again, the cursor will jump automatically to OK.

OK: When cursor is on this button, press ENTER key to confirm setting.

N Note: If the password has been changed, the parental and disc lock code will also be changed. The default password (1369) is always active even the password has been changed.

Parameters and specifications

Electronical parameters

Item		Standard requirement
Power requirements		: 9-12V  1.5A
Dimensions (Approx.)		: 260(L)X182(W)X37.5(H)MM
Power consumption		: <10W
Weight (Approx.)		: 0.9KG
Operating humidity		: 5 % to 90 %
Output	VIDEO OUT	: 1 Vp-p (75Ω)
	AUDIO OUT	: 1.4 Vrms (1 KHz, 0 dB)
	Audio	: Speaker:1WX2,Headphones output, Coaxial output

System

Laser	:Semiconductor laser, wavelength 650 nm
Signal system	: NTSC / PAL
Frequency response	: 20Hz to 20 kHz(1dB)
Signal-to-noise ratio	:More than 80 dB (ANALOG OUT connectors only)
Dynamic range	:More than 85 dB (DVD/CD)
Accessories	:Video/Audio cable,Remote control, Stereo headphone,Rechargeable battery, Car cigarette Adapter,car Bag

 Note: Design and specifications are subject to change prior notice.

Battery Parameters

Battery Parameters

Battery Specifications:

Output: DC 7.4V

Charge / Discharge Time:

Standard charge time: 3h ~ 4h

Storage and work circumstances:

1. Storage circumstances	Temperature	Humidity
6 months	-20 ℃ ~ +45 ℃	65±20%
1 week	-20 ℃ ~ +65 ℃	65±20%
2.Work circumstances	Temperature	Humidity
Standard charge	0℃ ~ +45 ℃	65±20%
Standard discharge	-20 ℃ ~ +65 ℃	65±20%

Product Warranty



Subject to the warranty repair conditions below, in addition to any applicable statutory warranties this product is warranted for 12 months from the original date of purchase covering both parts and labour.

The benefits conferred by this warranty are in addition to and not in derogation of all rights and remedies in respect of this product which the consumer has under the Trade Practices Act and other State and Territory laws.

Warranty Repair Conditions

- A. This Product Warranty only applies provided the product:-
- Has been purchased in Australia and sold by Authorised Distributors or Dealers and only where the products are used and serviced within Australia
 - Is taken for service when required to an Authorised Service Agent, together with written instructions indicating specific problem or function requiring investigation.
 - Has valid proof of purchase and presented when warranty service is requested.
 - Has only been used in a domestic application.
 - Has been installed and operated in accordance as noted in the operating instructions under normal use and reasonable care (in the opinion of the Service Centre).
 - Has not been damaged by the use of accessories which in the opinion of the Service Centre are defective or incompatible with the product.
 - Has not been tampered with or repaired (including unauthorised alterations) by anyone other than the AWA Service Centre or an Authorised Service Centre.
- B. This Product Warranty does not cover:-
- Damage, malfunction or failure resulting from use of incorrect voltages, incorrect installation, accidental damage, misuse, neglect, build-up of dirt or dust abuse, wear and tear, maladjustment of customer controls, mains supply problems, thunderstorm activity or Acts of God, pixel error, infestation by insects or vermin, exposure to abnormally corrosive conditions or any foreign object or matter having entered the product.
 - Mileage or travelling time in respect of service outside the authorised AWA Service Centre nor pick up and delivery cost incurred.
 - Service calls arising from failure to correctly operate the product or to observe noted instructions, or repair which reveals the product is in normal working order.
 - Cabinet parts, user replacement batteries or leads unless the defective items are reported at the time of purchase.
- C. Service calls only apply to Television display devices (CRT, LCD, Plasma) with screen sizes greater than 68cm in the major metropolitan areas of Australia or the normal operating areas of the nearest Authorised Service Centers.
- D. Requested service visits to the customer premises will be made during normal working hours of the customary working week upon request by the customer. Where such a visit is made on a day arranged by the customer and the service technician is unable to obtain access to the product, the Service Centre will be entitled to make a separate charge for service call fee, time and distance travelled.
- E. The AWA Service Centre and its Authorised Service Centres may charge for work done where the product is found to be in good working order. Example, charges may be made where the problem is found to be due to incorrect setting of customer controls, use of poor associated equipment (e.g. poor antenna systems) or the inability of the product to operate with faulty or incompatible equipment.
- F. If the product is sent to an Authorised Service Centre, the owner is responsible for the cost of transport to and from the Service Centre. In addition, the product is at the owners risk while in transit to and from the authorised Service Centre.
- G. No person is authorised to make or give any assertions, statements or undertakings, whether expressed or implied about the product other than or additional to the terms of this warranty.

Please read instruction manual carefully
Should you encounter any problems?

Please contact Telefix for Warranty Support
1300 366 144

Email: warrantyhelp@awa.com.au

The original proof of purchase must be kept and produced for service requirements under this Product Warranty.

AWA