 


AWA

TF-DVD1021D



10" (25cm) Portable DVD Player with
Swivel Screen and USB Slot / SD Card Reader

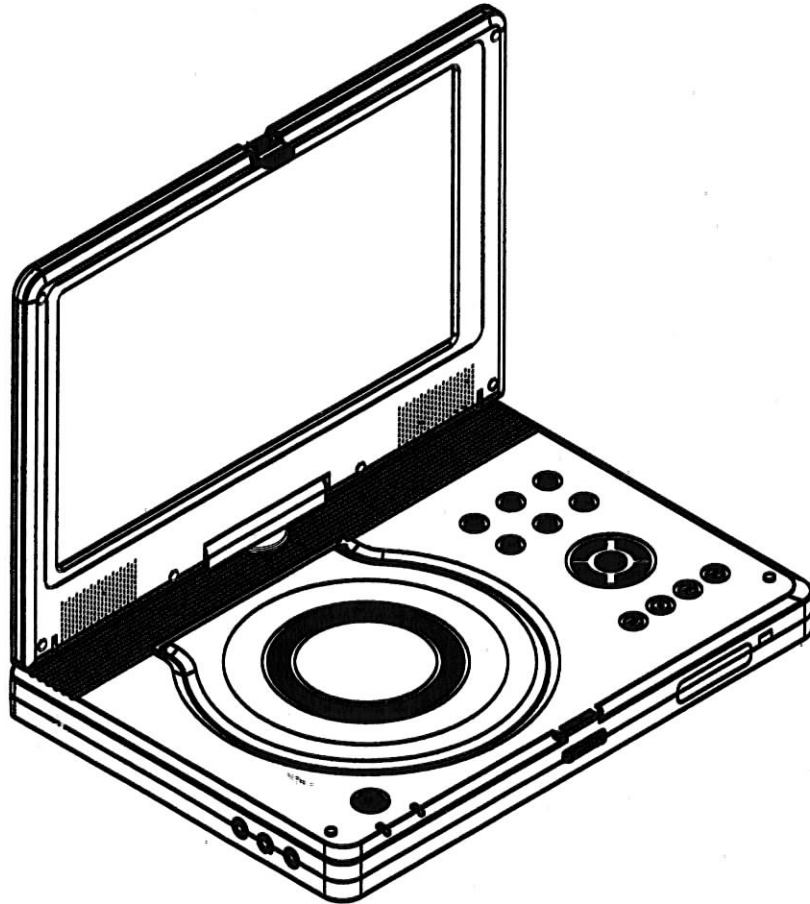

Instruction Manual

Please read this manual carefully before operation.

PRECAUTIONS

	CAUTION WARNING: SHOCK HAZARD. DO NOT OPEN. AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR	
CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		

For Customer Use:

Enter below the serial number that is located on the bottom of the unit. Retain this information for future reference.

Model No. _____

Serial No. _____



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

WARNING:

To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

 
CAUTION:

This Digital Video Disc player employs a laser system. To prevent direct exposure to the laser beam, do not try to open the enclosure or defeat the safety interlocks. When open and the interlocks are defeated, visible laser radiation is present.

Use of controls, adjustments, or performance of procedures other than those specified herein may result in hazardous radiation exposure. **DO NOT STARE INTO THE BEAM.**

NOTICE:

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

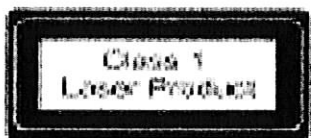

This product contains a low-power laser emitter.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works.
© 1992-1997 Dolby Laboratories. All rights reserved.



This player has built-in copyright protection technology that prevents copying from a DVD disc to any media.

If a video recorder is connected to the player, the video output image will be distorted during recording.

IMPORTANT SAFETY INSTRUCTIONS

1. **Read Instructions:** All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions:** The safety and operating instructions should be retained for future reference.
3. **Heed Warnings:** All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions:** All operating and usage instructions should be followed.
5. **Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments:** Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. **Water and Moisture:** Do not use this product near water (e.g., near a bath tub, wash-bowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. **Accessories:** Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. **Ventilation:** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
11. **Power Sources:** This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
12. **Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.



IMPORTANT SAFETY INSTRUCTIONS

13. **Lightning:** For added protection for this product, unplug it from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
14. **Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.
15. **Overloading:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
16. **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
17. **Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. **Damage Requiring Service:** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
19. **Replacement Parts:** When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
20. **Safety Check:** Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
21. **Wall or Ceiling Mounting:** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
22. **Heat:** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Read these instructions carefully. Keep these instructions for future reference.

Note:


The rating label is located on the rear panel of the device.

TABLE OF CONTENTS


SAFETY INFORMATION	Page
IMPORTANT SAFETY INSTRUCTIONS	
TABLE OF CONTENTS	
UNPACKING.....	6
NOTE ON DISC.....	7
LOCATION OF CONTROLS.....	8-10
CONNECTIONS.....	11-13
GETTING STARTED.....	14
BASIC OPERATION	15-16
PLAYER FUNCTIONS.....	17-20
SETUP MENU.....	21-22
USB/SD CONNECTIONS.....	23
CASSETTE ADAPTER FUNCTIONS.....	24
TROUBLE SHOOTING.....	25
SPECIFICATIONS.....	26

UNPACKING

 
Please make sure the following items are included with your DVD player. If any items are missing, contact your dealer.

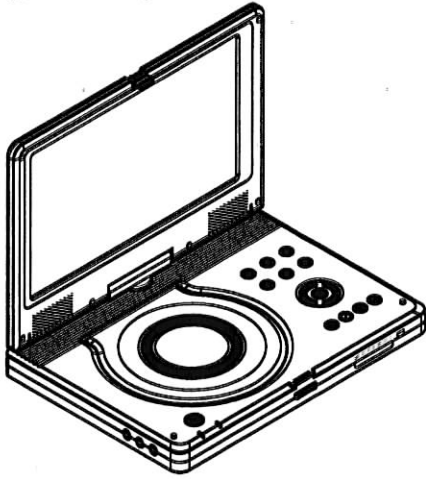


DVD Player

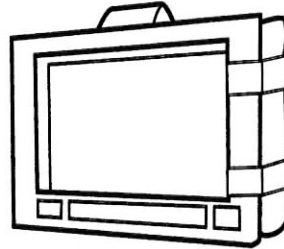 


Handrest
Mounting Bag

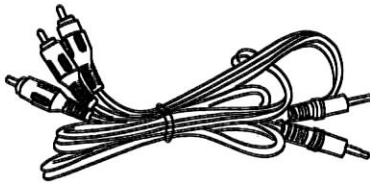 


AV Cable

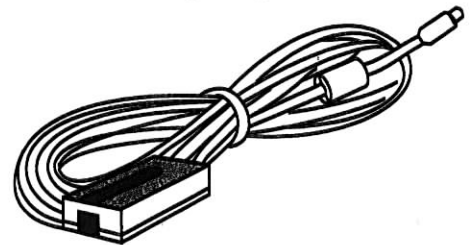 


AC/DC Adapter

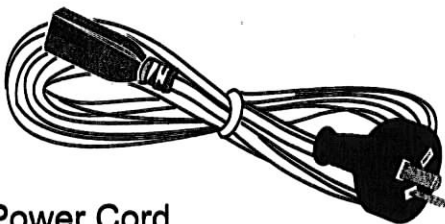 


Power Cord

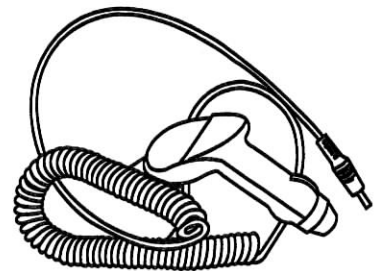 


DC Car Cord

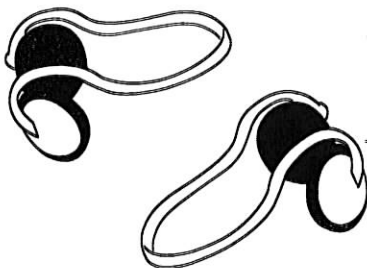 

Headphones

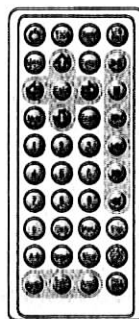 

Remote Control

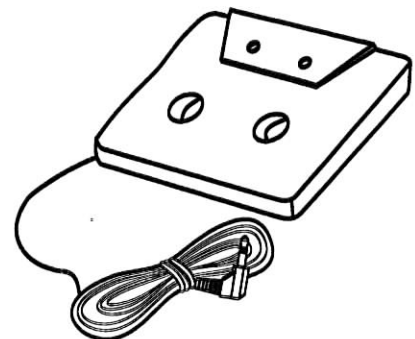 





Cassette Adapter

ABOUT OPTICAL DISCS

Disc Requirements

This DVD player supports playback of the following discs.

	Disc mark	Contents	Disc size	Maximum playback time
DVD video discs		Audio+Video (moving picture)	12cm	133 min (SS-SL)
				242 min (SS-DL)
				266 min (DS-SL)
				484 min (DS-DL)
CD		Audio	12cm/8cm	74min/20min
MP3		Audio	12cm	600min
JPEG		Still high resolution		600min
VCD		Audio+Video	12cm/8cm	74min/20min

This unit can play back CD-R and CD-RW discs that contain audio titles or JPEG picture files. Discs not listed above are not supported by this unit (e.g., PC CD-ROM, CD-Extra, CD-G, CD-I, etc.)

Disc Care and Maintenance

Optical discs (DVDs, CDs) contain high-density compressed data and need proper handling.

Handling a Disc

- Hold a DVD/CD by its edges. Avoid touching the recorded side of the disc. To remove a DVD/CD from its storage case, press down on the center retention mechanism of the case and lift the disc out.
- Do not subject discs to prolonged exposure to direct sunlight, high humidity, or high temperatures.
- Do not bend or press discs.
- To reduce the risk of scratches, always put discs back in their case after use. Store discs vertically in a cabinet.
- Do not place stickers or labels on either side of a disc.



 
Cleaning a Disc

Use a dry, soft cloth to wipe off any fingerprints and dusts from the playing surface of the disc. Wipe in a straight line radially from the center to the outside edge of the disc. Small dust particles and light stains will not affect playback quality.



Never use chemicals such as record sprays, anti-static sprays, benzene, or thinners to clean a disc. Doing so will damage the surface of the disc permanently.

LOCATION OF CONTROLS

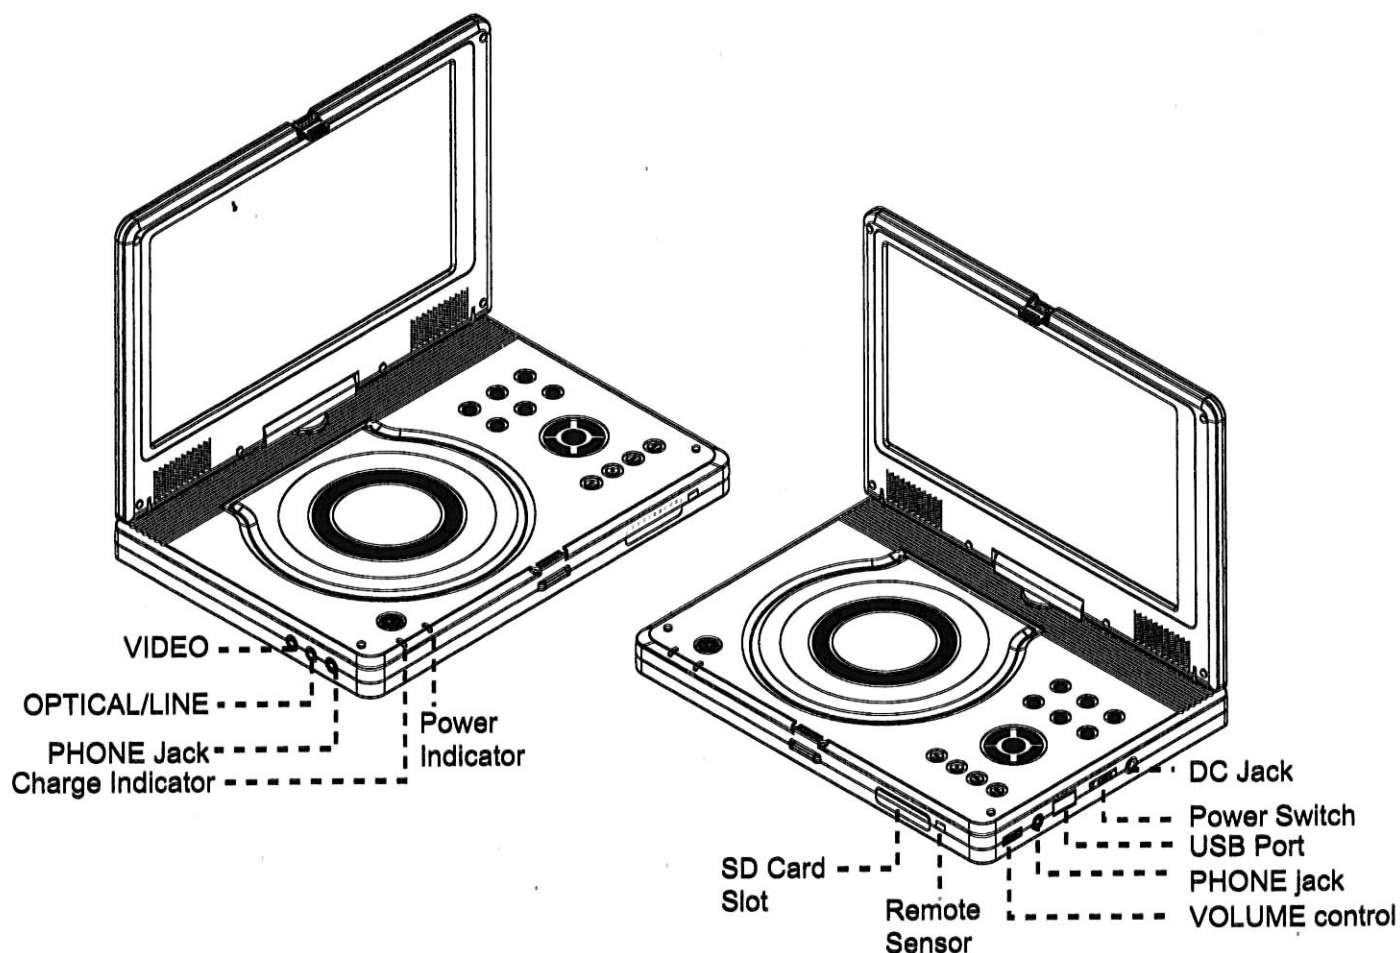

Power Switch

Turns the power on/off

DC 12V IN

Connects to the supplied AC or DC adaptor for external power.

Remote Sensor

Receives the remote control signals

Power ON Indicator

Lights green during normal operation
Lights red on standby

 
Video Out -- Connects to external TV screen with the supplied RCA cables.

Optical/Line Out -- Connect to the external audio system by the supplied RCA cables

Headphone Jack -- Sockets for the supplied headphones (2 sets included)
(Speakers are disconnected with headphones plugged in).

Volume Control -- Adjust the volume output level.

LOCATION OF CONTROLS

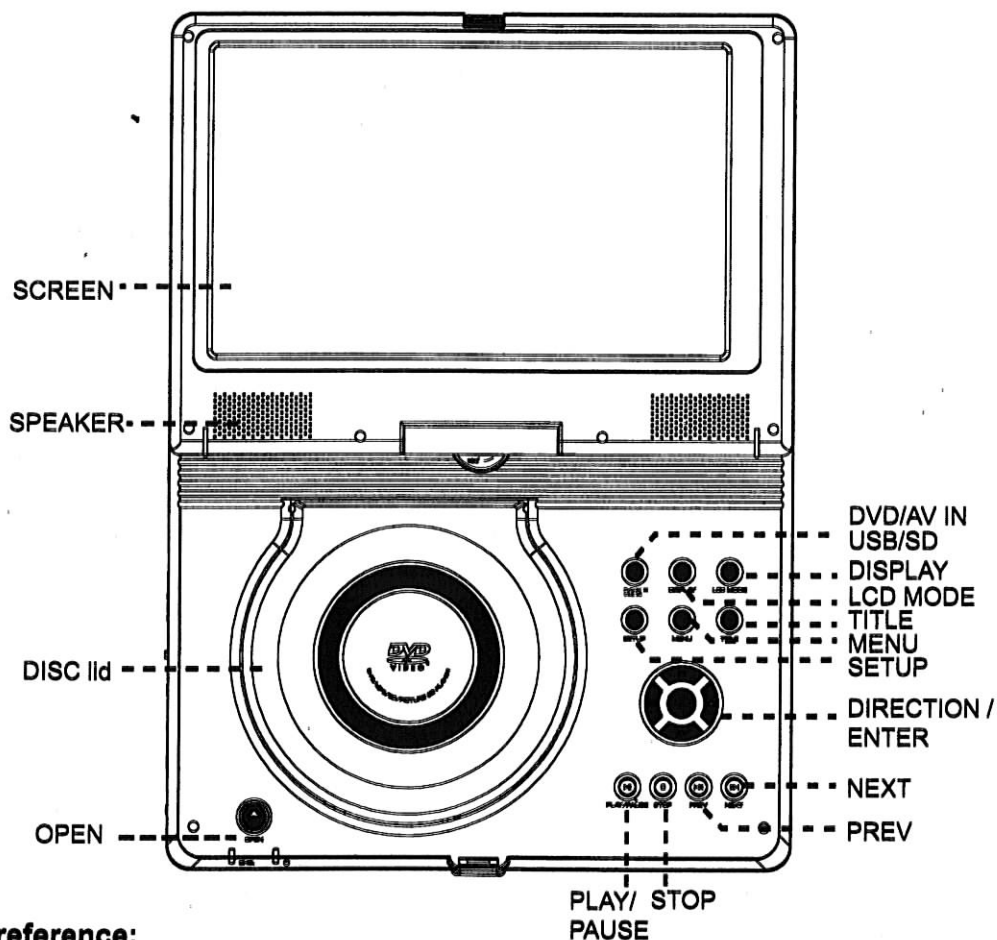


For your reference:

1. Place a disc with the label facing up and push gently on the center of the disc until it clicks into position
2. To start playing, press the PLAY/PAUSE button. (Some discs will start playing automatically).
3. To stop playing, press the STOP button.
4. To Skip Forward/Skip Backward, press the NEXT/PREV button.
5. To Fast Forward/Fast Backward, press/hold the NEXT/PREV button.
6. DVD/AVIN/USB/SD button
 - a. Briefly press the DVD/AVIN/USB/SD button on the main unit to shift between AVIN and DVD.
 - b. Press/hold the DVD/AVIN/USB/SD button on the main unit for a short while to display the mode selective menu(DVD/USB/SD).


Swivel Panel

 Swivel the panel to a suitable viewing angle.

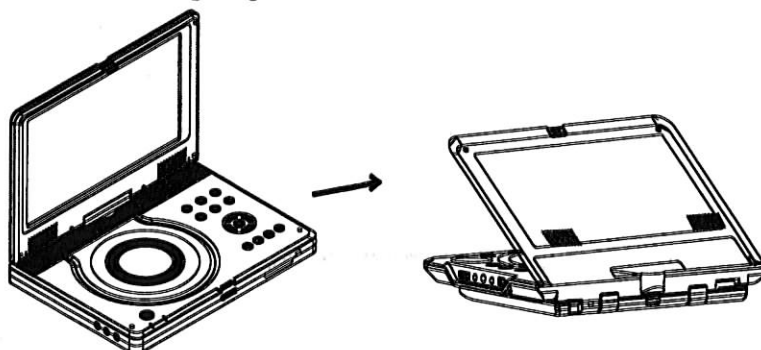

LOCATION OF CONTROLS

 
Remote control surface

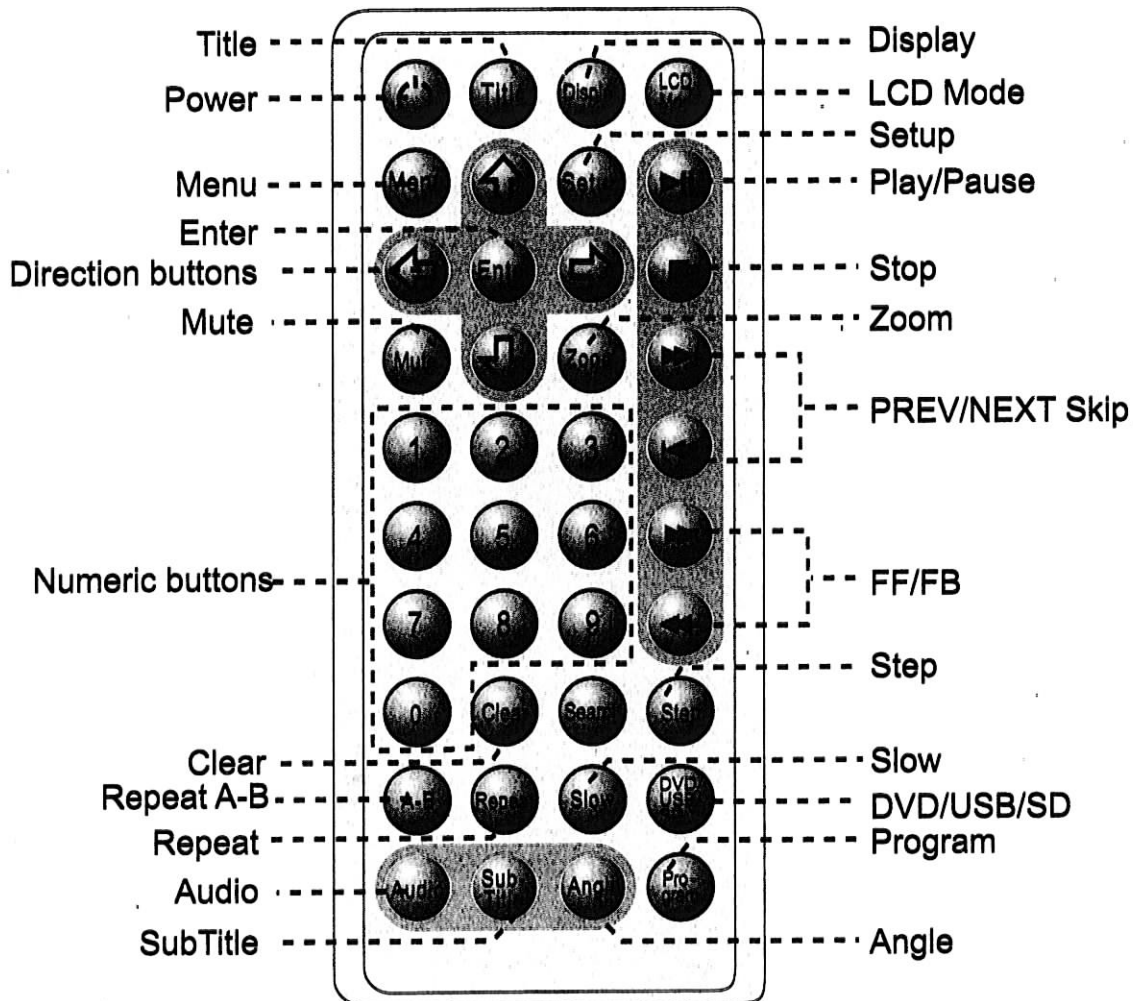

The remote control transmits a directional infrared beam. Be sure to aim the remote control directly at the infrared remote sensor during operation. The sensor may not be able to receive signals properly if the sensor is covered, if there is a large object between the remote control and the sensor, or if it is exposed to direct sunlight or a strong artificial light (e.g., fluorescent or strobe lights). In this case, change the direction of the light or reposition the unit to avoid direct lighting.

CONNECTIONS

 Power Connection

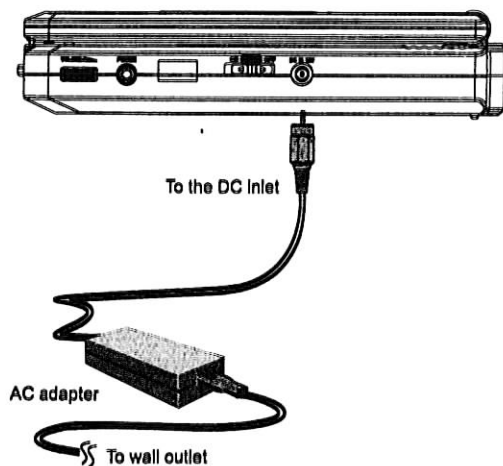

AC adapter:

This AC adapter operates on
100-240V~50/60Hz 1A (Max)

DC OUT: 12V

DC current: 3.0A Max

Power is supplied through the provided power adapter, one end of which is connected to the DC IN jack on the main unit, another to wall outlet with AC100-240V.

 
Note:

- If you have difficulty inserting the plug, check that the pins are not bent.
- If the unit is not to be used for some time, disconnect the plug from the power outlet
- Repeated switching on and off at less than 30 second intervals may damage or shorten the life of the unit.

AV Signal Input/Output Connections

To input the AV signal, press the DVD/AVIN/USB/SD button on the main unit to access the AV IN mode.

1. Refer to the owner's manual of your TV or video source as well.
2. Before connecting the cable, be sure to turn the power off and unplug both units from the wall outlet.

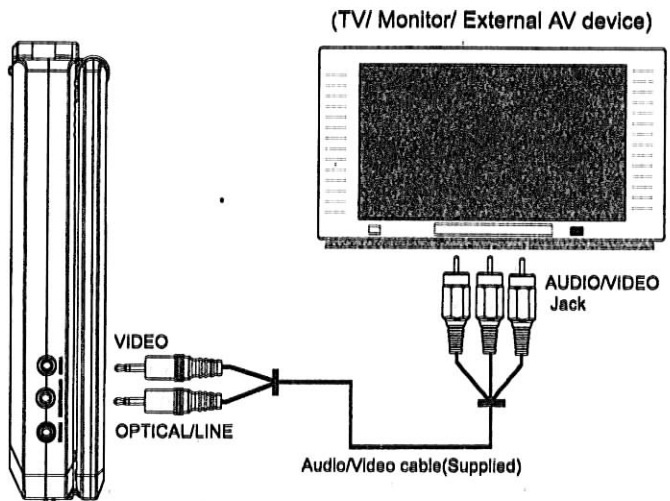


- ① The player is equipped with 3.5mm connections for composite AV input/output (yellow/red/white) on the left-hand side. The supplied lead will allow connection to standard yellow/red/white RCA-type AV inputs.
- ② The player is equipped with 2-channel stereo or 5.1-channel surround sound outputs. For stereo or surround sound, a Stereo TV or Surround AV receiver is necessary. 5.1-channel sound requires an 3.5mm optical cable (not supplied).


- ③ Depending on the brand of your TV, you may need to press a button labeled "Line", "Input", or "Video/TV" in order to set your TV to the correct input line. This will switch the TV from broadcast reception mode to on of the AV input signals. (Some TVs may have more than on AV Input line.

CONNECTIONS

 Amplifier Connections

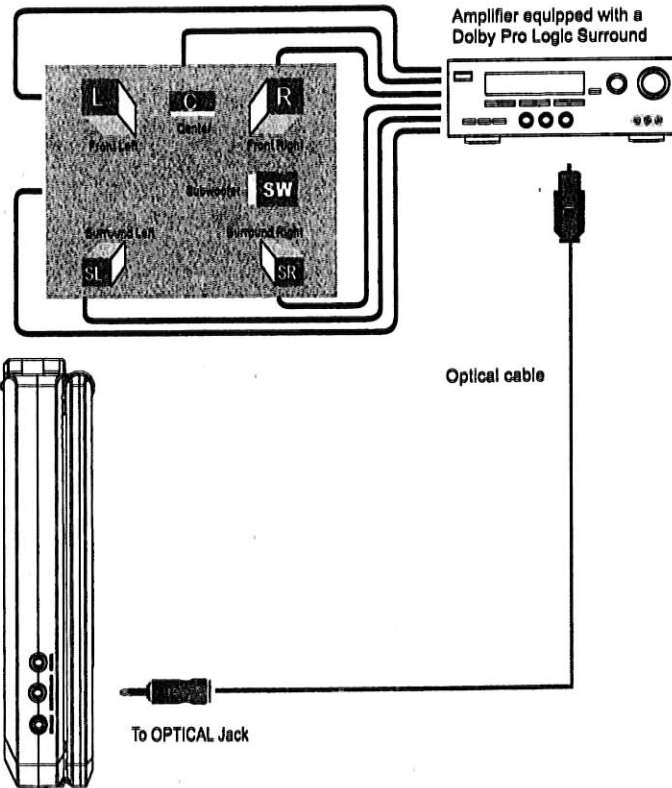

Speaker Connections

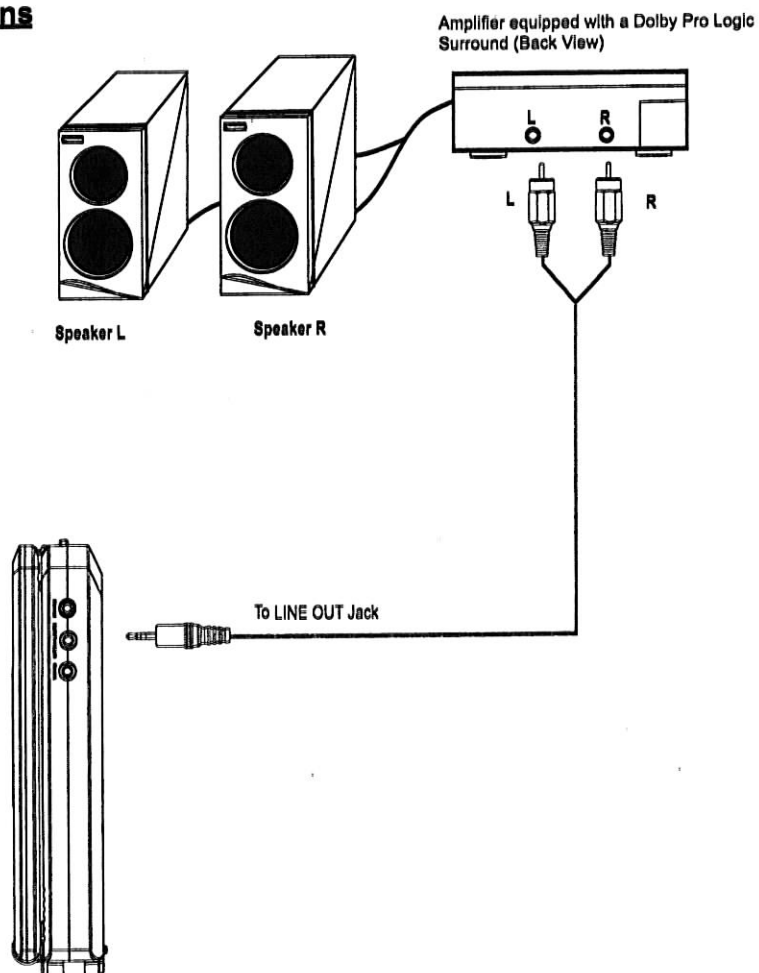 

CONNECTIONS

Rechargeable Battery Pack


The player is designed with a built-in Li-ion 7.4V rechargeable battery pack.

Charging happens automatically whenever external power is applied.

If the battery does not work to your expectation, please consult a service centre.

Do not attempt to replace the battery yourself if you are not a qualified service technician

****For new or exhausted rechargeable battery pack, we recommend it be recharged for 4 hours.**

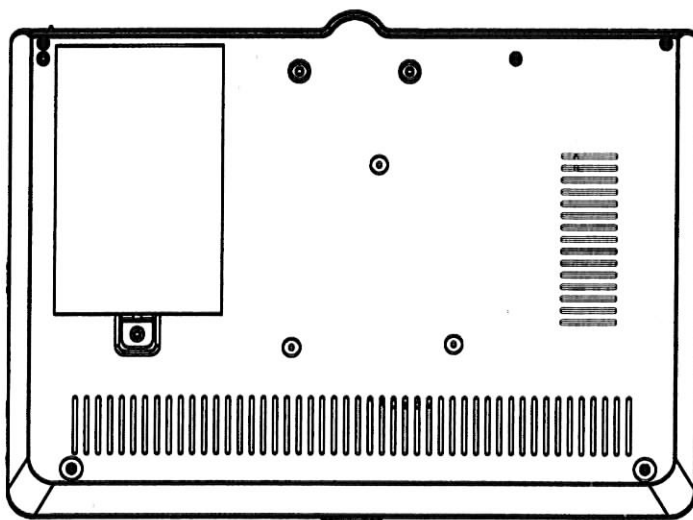 

**** The battery can be recharged about 300 times without obvious performance drop. ****

Note:

 
- a. Only use the supplied AC and DC adaptors for charging the battery.
- b. Never dispose of in fire or heat up.
- c. Do not use in high temperature or near heat sources.
- d. Do not open the cover. Refer servicing only to qualified service personnel.
- e. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Low Battery Detection: The unit will automatically return to standby mode when the battery charge is low.

GETTING STARTED

Remote Control

- Refer to the diagram. Remove the battery compartment cover located on the rear of the remote control. Insert batteries, making sure to match their polarities (+/-) to the markings on the inside of the compartment. Replace the cover.
- To use the remote, point it at the remote sensor of the player. Operate the remote within 15 feet of the sensor and at an angle of +/- 60 degrees.
- Batteries in the remote will last for approximately 1 year. Replace the batteries if the remote control does not work. Do not mix old with new batteries, or different types of batteries.
- Remove the batteries from the remote if it will not be used for a long period of time.

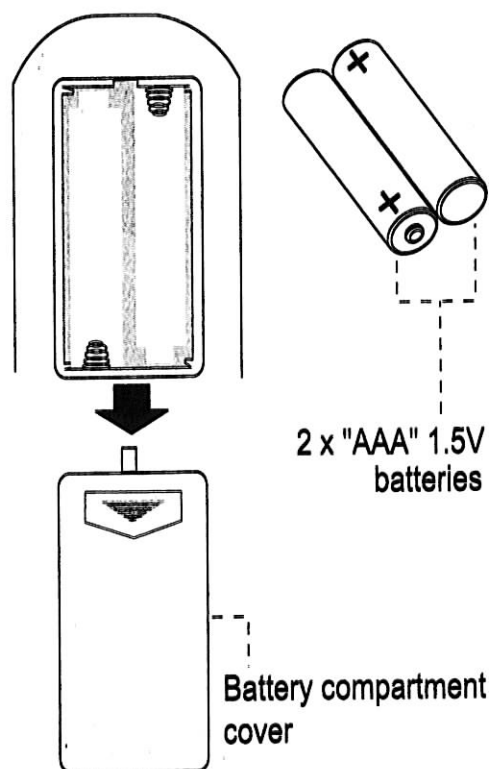

WARNING

- The batteries used in the remote control may present a fire or chemical burn if mistreated. Do not recharge, disassemble, incinerate, or heat the battery.
- Keep batteries away from children.

Power Supply

This unit should be used with 100-240V 50/60Hz AC wall outlets only.

Caution:








- Do not connect the power plug to a power outlet other than that which is indicated here and on the label as this may result in the risk of fire or electric shock.
- Do not handle the power plug with wet hands. Doing so may cause electric shock.

BASIC OPERATIONS



Basic Playback

1. If necessary, prepare the connection leads and power supply
2. Open the disc compartment by pressing the OPEN button, and insert a disc, label side up. Press gently on the centre until the disc clicks into position and close the compartment lid.
 - If a single-sided disc is inserted upside-down, the player will display "NO DISC" or "Invalid Disc".
3. Press PLAY to start playback (some discs may start playing automatically).

Play/Pause/Stop

- Press  to play the disc for the first time.
- Press  during playback to pause. Press  again to resume playback.
- Press  during playback to stop the disc ("Pre-Stop"). Press  to resume playback at the time-point at which the disc was stopped.
- Press  when the disc is "Pre-Stopped" to stop playback completely. (When  is pressed, the disc will start playing from the beginning.)


Previous/Next (Skip)

- Press  to skip to the next track (DVD, CD, etc).
- Press  to return to the previous track (DVD, CD, etc).

Forward/Reverse (Search)


- Repeatedly press the  button to search fast forward through a disc.

Normal → x2 → x4 → x8 → x16 → x32



- Repeatedly press the  button to search fast backward through a disc.

Normal → x2 → x4 → x8 → x16 → x32




Slow

- Press SLOW for slow-motion playback. Each successive press of SLOW will change the rate of slow-motion playback. Press  to resume normal playback.

Play → x1/2 → x1/4 → x1/8 → x1/16 → 1/32



Press STEP frame-by-frame playback. Each successive press of STEP will advance the video one frame. Press  to resume normal playback.


Note:

 
Audio will be muted during fast-forward, fast-reverse, and slow-motion playback.

BASIC OPERATIONS

Menu Navigation


To navigate DVD disc menus or the player's setup menus:

- Press the **DIRECTION** keys (arrows) to select a desired feature or option in the menu.
- Press **ENTER** to confirm a selection in the menu.
 - For some menu options, you may be able to use the numeric keypad to input data.
- Press  to cancel an entry.

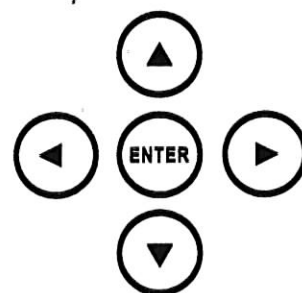

Numeric Keypad

 - Use the numeric keypad to skip directly to a DVD chapter or CD track. (Some discs may not allow direct access function.)
- Use the numeric keypad to input numeric data in menu option fields when possible.

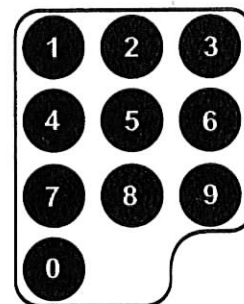

Disc Error Messages

The following messages will be displayed on-screen if there is a problem with the format of the loaded disc.

- **WRONG REGION.** The region code of the disc does not match the player's region code.
- **WRONG PASSWORD.** The parental rating level of the disc is higher than the parental rating level setting of the player. The player will not play the disc.
- **WRONG DISC.** The player is equipped with automatic disc quality detection software. If the player detects a disc that is damaged or has a format problem, it may play the disc at a lower quality or stop play completely, depending on how damaged the disc is.

Note:

DVD disc production quality may vary; some discs may deviate from the industry standard. Some incorrectly-formatted discs may still play, however, the playback and operational quality of the disc may be substandard. Playback of 75cm discs from video camcorders is not guaranteed. This unit is generally compatible with DVD+R/RW, DVD-R/RW, and CD-R/RW discs but playability of any particular disc is not guaranteed.

Power Management

If the player will not be in use for a long period of time, set the Power Switch to the OFF position, unplug the player, and remove the batteries from the remote control.

PLAYER FUNCTIONS

Menu / Title

- Press the MENU key during DVD playback to return to the disc's Main menu.
- Press the TITLE key during DVD playback to return to the disc's Title menu.

Setup

Press the SETUP key to enter the player's setup menu. Enter the Setup menu to adjust the player's internal settings; please see the **SETUP** section for more details.

Display

Repeatedly press the Display key to show the playback information.
To quit the display mode, keep pressing the Display button.

Repeat Mode

Press REPEAT to change the repeat mode of the player. Each successive press of REPEAT will change the mode as follows:

	DVD Mode	CD Mode
REPEAT x1	Repeat All	Repeat All
REPEAT x2	Repeat Title	Repeat Track
REPEAT x3	Repeat Chapter	Repeat Off
REPEAT x4	Repeat Off	

Note:

Some DVD discs do not allow Repeat mode.

PLAYER FUNCTIONS

Repeat A-B Mode

To repeat a specific section of a disc (play on a loop):

1. Press A-B to set the desired start point ("A") of the section to be repeated.
2. Press A-B again to set the desired end point ("B") of the section to be repeated.
3. The section "A-B" will now play repeatedly as a loop. Press A-B again to resume normal playback.

Multi-Angle/Subtitle/Audio (This function is disc-specific).

- During playback of a DVD that has been mastered with multiple angles, press ANGLE to view the available alternate camera angles. (A DVD may have up to 9 selectable angles.)
- During playback of a DVD that has been mastered with subtitles, press SUBTITLE to view the available subtitle tracks. (A DVD may have up to 32 selectable subtitles.)
- During playback of a DVD that has been mastered with alternate language/audio tracks, press AUDIO to hear the alternate tracks. (A DVD may have up to 8 selectable audio tracks.)

Zoom

Press ZOOM to change the magnification level of the picture.

- During DVD playback, each successive press of ZOOM will change the level of magnification

Normal -> 2X -> 3X -> 4X -> 1/2X

- During JPEG CD playback, each successive press of ZOOM will change the level of magnification

Normal -> 2X -> 3X -> 4X -> 1/2X

Note: The picture quality will decrease as the zoom level (magnification) increases.

DVD/USB/SD

Press the DVD/USB/SD button to display the mode selective menu.

Press the up/down direction button to select DVD/USB/Card and press ENTER to access.



PLAYER FUNCTIONS

CLEAR

Press the Clear button to cancel incorrect input.

SEARCH

Go to a desired section through SEARCH function.

Press the Search button to show below picture.

DVD Mode



 
CD Mode



1. Press the direction buttons to move between entries.
2. Press the number buttons to input data. To cancel the incorrect input, press the Clear button.
3. Press ENTER to execute the search.
4. Press the Search button to quit.

LCD Mode

You can adjust the Picture to your own preferences using the LCD Mode function
Press the LCD Mode button once to show this screen:

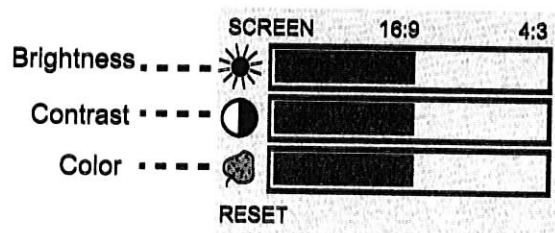

Press the up/down direction button to select the desired item, press the left/right direction button to make adjustment.

 
When SCREEN is selected, press the left/right direction button to change the screen dimension to 16:9 or 4:3.

When RESET is selected, press the ENTER button to confirm, the above three control bars will be reverted to the default setting.

PLAYER FUNCTIONS

Program Function

Press the "Program" button to show the program menu. (eg: DVD mode)

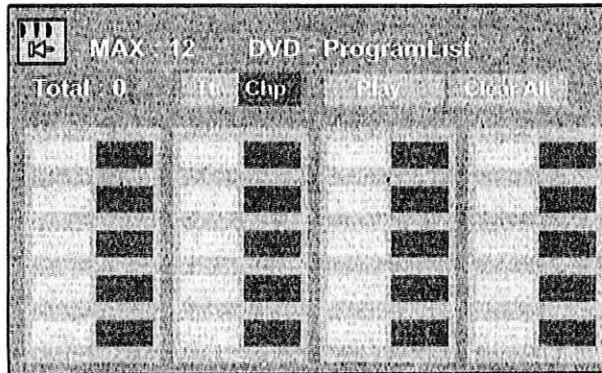


1. Press the DIRECTION buttons to move between entries.
2. Press the number buttons to input data.
3. To delete the incorrect input, press the CLEAR or ENTER button.
To clear all programs, select "Clear All" from the menu and press ENTER.
4. Select "Play" from the menu and press ENTER to start playback.
Or press the Play button to start playback.
5. To cancel programmed playback, press the PROGRAM button twice.

SETUP

Various features can be preset through the SETUP menu.

 1. Press the SETUP button to show the setup menu.
2. Press direction buttons to select the desired item.
3. Press ENTER to confirm.

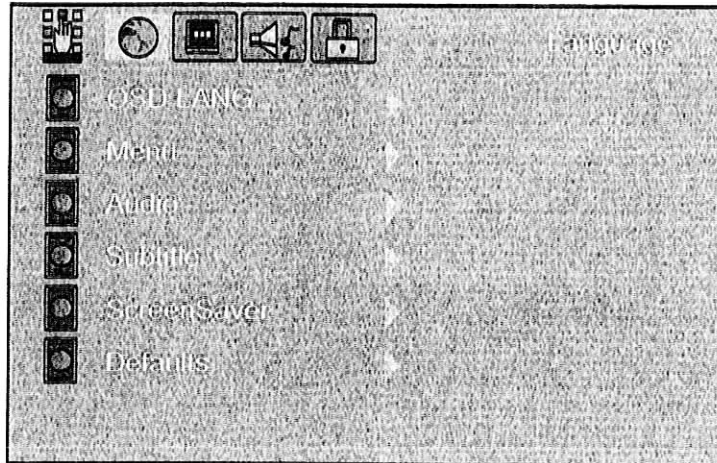

Language Setup

Item	Description	Default Setting
OSD	Sets the language of the player's on-screen display	English
Menu	Sets the menu language	English
Audio	Sets the audio language	English
Subtitle	Sets the subtitle language	English
Screen Saver	The screensaver prevents burn-in damage to the player's screen.	On
Defaults	Resets settings to the factory default.	

Display Setup

Item	Description	Default Setting
TV Type	Sets the aspect ratio of the display. 4:3 is used with standard television displays; 16:9 is used with widescreen television displays.	16:9
TV System	Sets the player's Video Out signal type. Set this to correspond with your TV's Video System type.	AUTO
View Mode	Set the view mode. (Fill, Original, Height Fit, Width Fit, Auto Fit)	Auto Fit

SETUP

Audio Setup

Use the DIRECTION keys to highlight the desired audio selection and press ENTER to confirm.

Item	Description	Options (Default is in Bold)
Spdif Dolby	Set the Dolby audio mode	RAW , PCM, Off
Audio Setup	Set the audio channle mode	LT/RT, Stereo

Parental Setup

Use the DIRECTION keys to highlight the desired audio selection and press ENTER to confirm.

Item	Description	Default Setting
Change	You must input the four-digit password to access the Parental settings. The Initial password is 8888. Enter the old password, the new password, and then the new password again to verify and change the Parental Settings password. Restoring the player's default settings will not reset the password. DO NOT FORGET THE PASSWORD; this password cannot be reset.	
Rating Level	Sets the maturity rating level of the player. The player will not play any discs rated higher than this setting. There are eight rating levels. Level 1 will restrict playback to discs suitable for people of all ages. Level 8 will allow playback of all discs, including those suitable for adults only.	8

USB/SD CONNECTIONS

USB/SD Card Connection

 
Insert the USB or the SD card into the corresponding slot.

1. Press the DVD/USB/SD button on the remote to show the selective menu (DVD/USB/CARD).
Or press/hold the DVD/AVIN/USB/SD button on the main unit to show the selective menu (DVD/USB/CARD).



2. Press the up/down direction buttons to select USB or Card and press ENTER to access.

The screen displays the picture below:

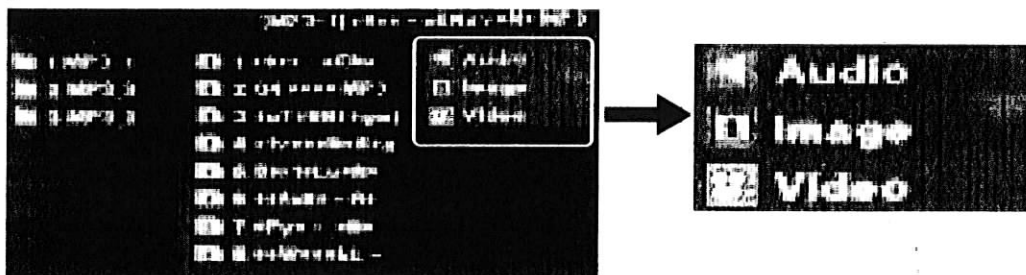

3. To exit USB or Card, select DVD from the menu and press ENTER. Or just unplug the device from the player.

Audio Playback

1. Press the direction buttons to select "Audio" and press ENTER to access the audio menu.
2. Press the direction buttons to select a file, press the ENTER button to start playback.
Please refer to the DVD section for other playback functions.

Video Playback

1. Press the direction buttons to select "Video" and press ENTER to access the video menu.
2. Press the direction buttons to select a file, press the Play button to start playback.
Please refer to DVD section for other playback functions.

Image Playback (JPEG playback)

1. Press the direction buttons to select "Image" and press ENTER to access the image menu.
2. Press the direction buttons to select a file, press the Play button to start slide show.

The screen displays the picture below:



3. Press STOP to get back to the root.



Setup the slide show intervals as 6 seconds, 8 seconds and 10 seconds.



Select the icon and press ENTER to show the album.



Select the icon and repeatedly press ENTER to rotate pictures.



Select the icon and repeatedly press ENTER to zoom pictures.

CASSETTE ADAPTER FUNCTIONS

CA747

Play any portable MP3, CD, PMP or DVD Player through your car's in-dash cassette player.

Usage:

This product enables playback of portable audio devices with a 3.5mm headphone jack over any car's in-dash cassette stereo system.

Instructions for use:

1. Install the detachable cord in one of two positions depending on the configuration of your cassette player (front loading or side loading). To switch positions, simply unplug the cord from one side of the adapter and plug it into the other side.
2. Plug the other 3.5mm plug at the end of the cord into the Headphone or Line Out jack of your portable audio device.
3. Turn the cassette player on and turn its volume level all the way down.
4. Load the adapter into the cassette player.
5. Press Play on the cassette player.
6. If the adapter is connected to the Headphone Out jack of the portable audio device, adjust the volume level of the device to the midpoint.
7. Press Play on the portable audio device.
8. Adjust the volume of the cassette player to the desired level.
9. When finished, eject the adapter from the cassette player.
Do not leave the adapter inside the cassette player when it is not in use.
After use, store the unit in a safe place at normal room temperature.
Do not expose the adapter to excessive heat.

Important:

The adapter may not line up properly with the head of some auto-reverse cassette players if the "reverse" direction is selected. If you experience low or distorted sound, press the auto-reverse button of your cassette player.

TROUBLESHOOTING

There is no power to the device.

- Ensure that the Power Switch on the main unit is physically set to the ON position.
- Ensure that the AC adapter cord is securely connected to the player and the proper wall outlet.

The device will not play the disc.

- Ensure that a supported disc is loaded in the player label-side up.
- Ensure that the disc's rating level does not exceed the player's parental rating level.
- Ensure that the disc is not damaged or too dirty. Clean the disc or try another disc.
- Moisture may have condensed inside the player. Remove the disc and leave the player on for 1-2 hours and then try again.

There is no picture. (When using external TV monitor)

- Ensure that the TV set has been powered on and is set to the correct AV mode.
- Ensure that the connections between the player and the TV are secure and correct.
- Check if the connection cables are damaged.
- Restore the player to its factory-default settings.

The picture is noisy or distorted.

- The disc may be damaged or dirty. Clean the disc or try another one.
- Reset your TV's color system.
- Ensure that the player is connected directly to the TV (and not through a VCR, cable box, satellite receiver, etc.)

The picture is not full-screen.

- Change the aspect ratio setting of your player from the Setup menu.
- Select a different aspect ratio option from the DVD disc menu.

There is no sound or distorted sound. (When using external monitor or sound system)

- Ensure that the TV and amplifier have been turned on and properly set up.
- Ensure that the TV and amplifier connections are secure and correct.
- Try a different Audio track of the DVD by pressing AUDIO.
- Ensure that the MUTE function of the TV, Amplifier, or Player is not engaged.

The remote control doesn't work.

- Ensure that the Power Switch has been physically set to the ON position.
- Ensure that there are no obstacles between the remote and the player.
- Point the remote at the remote sensor on the main unit.
- Ensure that the batteries in the remote retain a charge and have been installed correctly.
- Try replacing the remote's batteries.

The player has malfunctioned.

- Unplug the player. After 30 minutes, plug in and power on the player -- the restore function should reset the player.

SPECIFICATION

Power supply	DC 12V 3A (AC adapter TERMINAL)
Power consumption	≤ 22W
Signal system	NTSC / PAL
Video output	1±0.2V (p-p), 75ohm, negative sync., 3.5 mm mini jack x1
Audio output /input	1.5 Vrms (1 KHz, 0dB), 3.5 mm mini jack x1
Earphone terminal	3.5mm stereo mini jack x2
Signal /Noise ratio(audio)	90dB typical
Dynamic range(audio)	90dB typical
Panel size	10.2 inch (16:9)
Resolution	1440 X 234 pixels
Laser	Wavelength 650 nm
Operating conditions	Temperature: 0 °c to 35 °c. Operation status : Horizontal
Dimensions	263x185x40 mm (main unit)
Weight	1052g (main unit)

Specifications and manual are subject to change without prior notice.

Product Warranty



Subject to the warranty repair conditions below, this product is warranted for 12 months from the original date of purchase covering both parts and labour.

The benefits conferred by this warranty are in addition to and not in derogation of all rights and remedies in respect of this product which the consumer has under the Trade Practices Act and other State and Territory laws.

Warranty Repair Conditions

- A.** This warranty only applies provided the product:-
- Has been purchased in Australia and sold by Authorised Distributors or Dealers and only where the products are used and serviced within Australia
 - Is taken for service when required to an Authorised Service Agent, together with written instructions indicating specific problem or function requiring investigation.
 - Has valid proof of purchase and presented when warranty service is requested.
 - Has only been used in a domestic application.
 - Has been installed and operated in accordance as noted in the operating instructions under normal use and reasonable care (in the opinion of the Service Centre).
 - Has not been damaged by the use of accessories which in the opinion of the Service Centre are defective or incompatible with the product.
 - Has not been tampered with or repaired (including unauthorised alterations) by anyone other than the Telefix or an Authorised Service Centre.
- B.** The warranty does not cover:-
- Damage, malfunction or failure resulting from use of incorrect voltages, incorrect installation, accidental damage, misuse, neglect, build-up of dirt or dust abuse, wear and tear, maladjustment of customer controls, mains supply problems, thunderstorm activity or Acts of God, pixel error, infestation by insects or vermin, exposure to abnormally corrosive conditions or any foreign object or matter having entered the product.
 - Mileage or travelling time in respect of service outside the authorised Telefix Service Centre nor pick up and delivery cost incurred.
 - Service calls arising from failure to correctly operate the product or to observe noted instructions, or repair which reveals the product is in normal working order.
 - Cabinet parts, user replacement batteries or leads unless the defective items are reported at the time of purchase.
- C.** Service calls only apply to Television display devices (CRT, LCD, Plasma) with screen sizes greater than 59cm in the major metropolitan areas of Australia or the normal operating areas of the nearest Authorised Service Centers.
- D.** Requested service visits to the customer premises will be made during normal working hours of the customary working week upon request by the customer. Where such a visit is made on a day arranged by the customer and the service technician is unable to obtain access to the product, the Service Centre will be entitled to make a separate charge for service call fee, time and distance travelled.
- E.** Telefix and its Authorised Service Centres may charge for work done where the product is found to be in good working order. Example, charges may be made where the problem is found to be due to incorrect setting of customer controls, use of poor associated equipment (e.g. poor antenna systems) or the inability of the product to operate with faulty or incompatible equipment.
- F.** If the product is sent to an Authorised Service Centre, the owner is responsible for the cost of transport to and from the Service Centre. In addition, the product is at the owners risk while in transit to and from the authorised Service Centre.
- G.** No person is authorised to make or give any assertions, statements or undertakings, whether expressed or implied about the product other than or additional to the terms of this warranty.

PLEASE READ INSTRUCTION MANUAL CAREFULLY

Should you encounter any problems?

DO NOT RETURN THIS PRODUCT TO THE STORE OF PURCHASE

Please contact Telefix for Warranty Support

1300 366 144

Email: warrantyhelp@awa.com.au

The original proof of purchase must be kept and produced for service requirements.