 


# AWA

## USER MANUAL

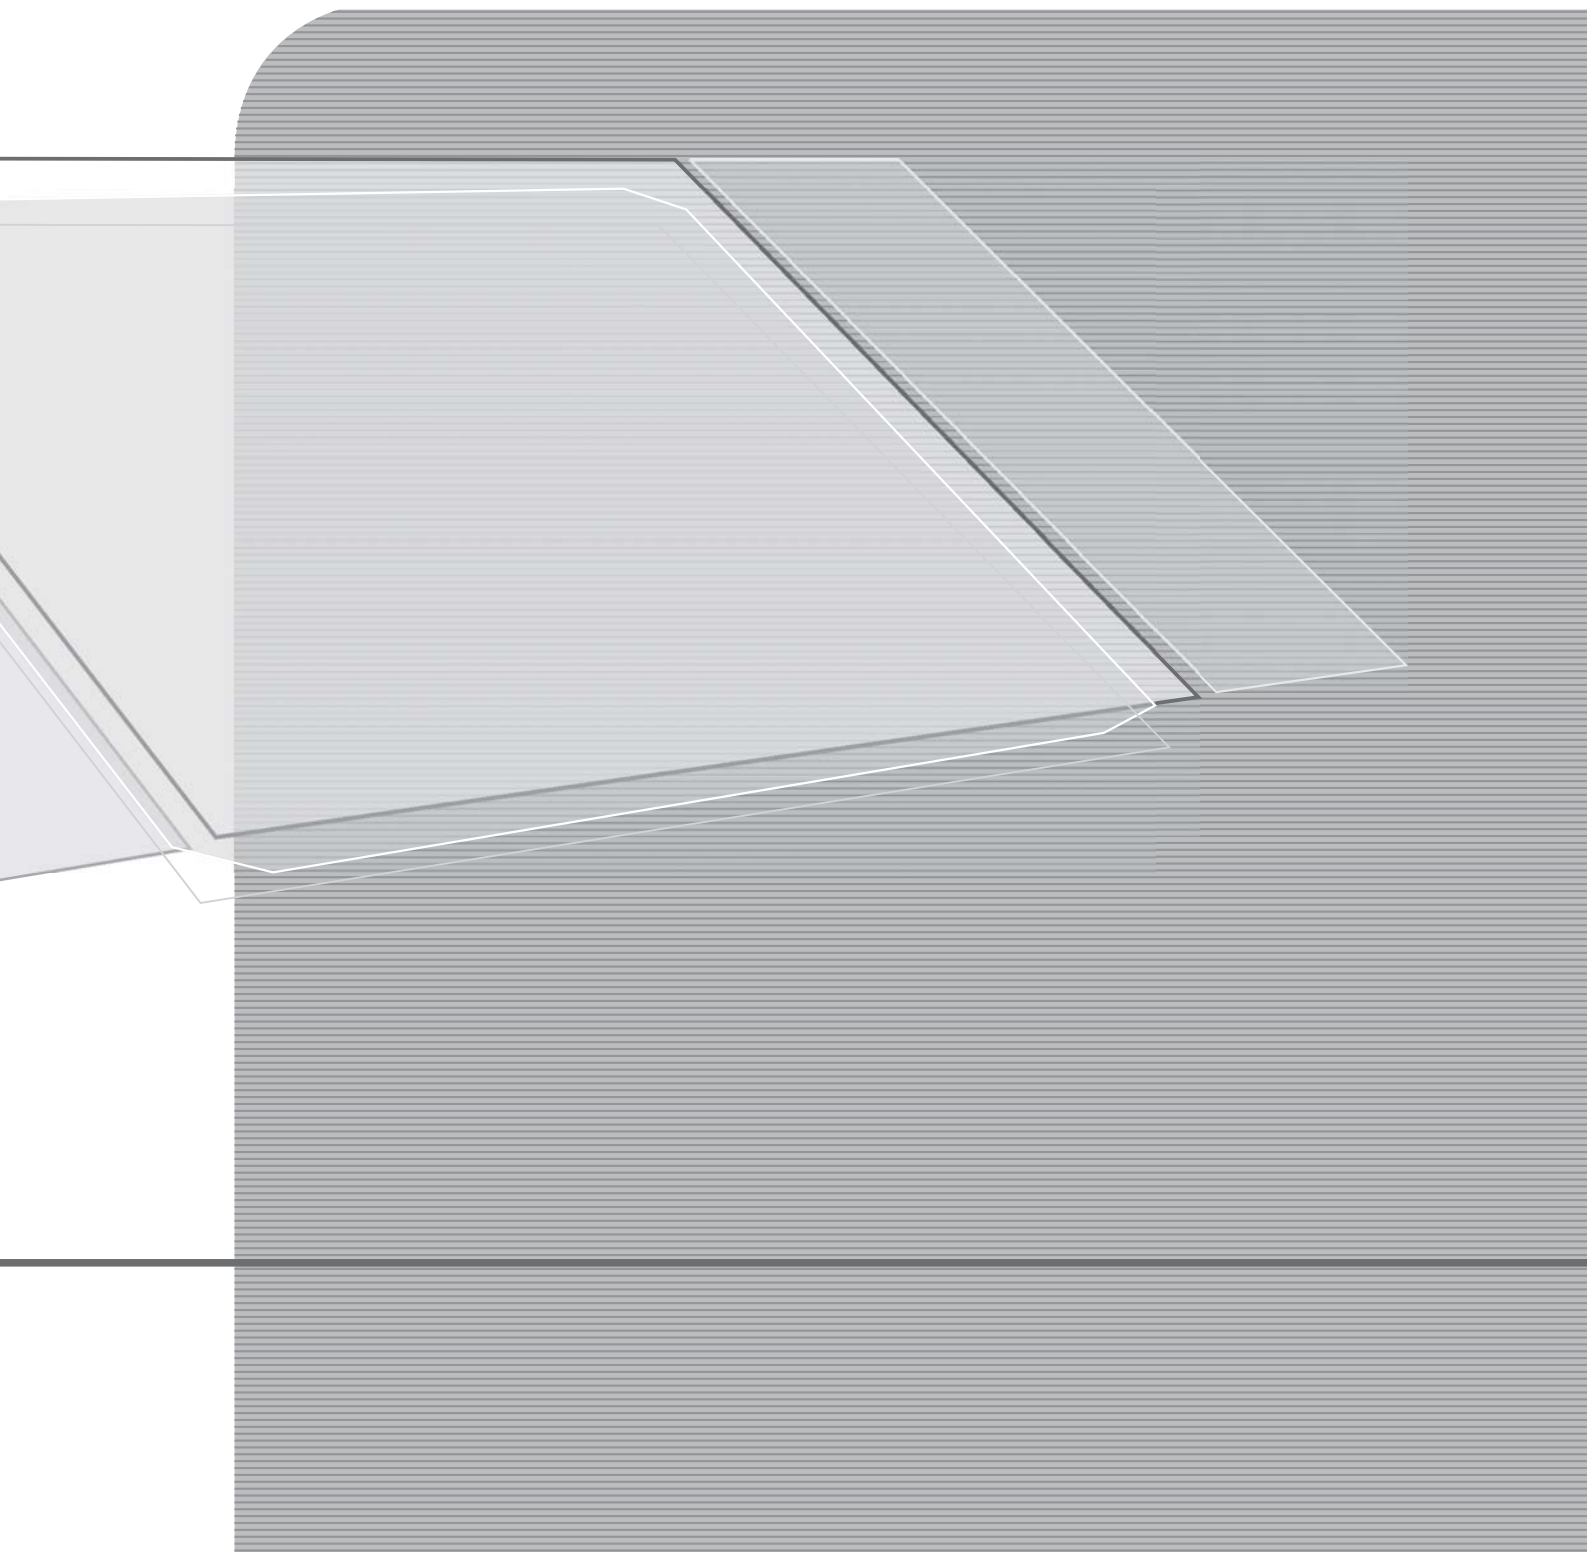

Should you encounter any problems, please contact the help line before you return this product back to the place of purchase.

**Contact our Toll Free Warranty Support Help Line**

**1300 366 144**

Email: [warrantyhelp@awa.com.au](mailto:warrantyhelp@awa.com.au)

Visit our web site for FAQ's or request for service

[www.awa.com.au](http://www.awa.com.au)

## Contents

### ■ TV

 
Safety Warnings.....	3
Do / Don't do.....	4
LCD TV Panel.....	5
LCD TV Panel (continued).....	6
Remote control.....	7
Application instruction of remote control.....	8
Connecting to antenna or radio network.....	9
Connecting to exterior devices.....	10
Menu setup TV .....	11
Channel menu.....	12
Auto tuning.....	12
DTV manual tuning.....	13
ATV manual tuning.....	13
Programme edit.....	14
Picture menu 1.....	14
Picture menu 2.....	15
Sound menu.....	15
Time menu.....	16
Option menu.....	16
Lock menu.....	17
Source menu.....	17

---

### ■ USB Operation

Basic operation.....	19
Supporting USB format.....	19
USB MENU.....	20
Trouble shooting.....	21
Maintenance.....	22
Specifications.....	23

## Safety Warnings

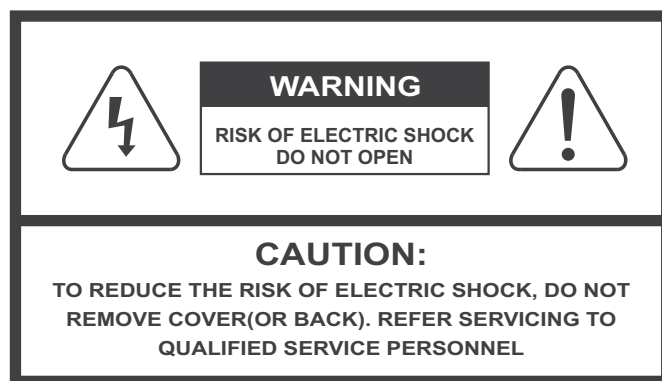

### WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of insinuated “dangerous voltage” within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



- ◆ Before using this product, read and follow all warnings and instructions.
- ◆ This product is not intended for use by young children or infirm persons unless they are adequately supervised by a responsible person to ensure that they use this product safely.
- ◆ Young children should be supervised to ensure that they do not play with this product.
- ◆ This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.
- ◆ This product is intended for household use only and not for commercial or industrial use.

# LCD TV

## DO:

- ◆ Always power this product from an outlet with the same rating (voltage and frequency) as Indicated on the rating label in the back of the product.
- ◆ If this product has been damaged (including cord or plug) take it to an accredited service technician for inspection, and if necessary, repair.
- ◆ Turn off and disconnect the power cable before cleaning or storing this product.
- ◆ Ensure this product does not get wet or splashed.
- ◆ Only use the A/C power adapter supplied with your product, or a replacement recommended by a qualified technician.

## DON'T DO:

- ◆ Do not place naked flames, such as lit candles, on the unit.
- ◆ Do not place objects filled with liquids, such as vases, on the unit.
- ◆ Do not install this product on top of other electrical appliances or on uneven surfaces.
- ◆ Do not use or store this product in a place where it is subject to direct sun, heat, excessive dust or vibration.
- ◆ Do not use this product with wet hands.
- ◆ Do not clean this product with water or other liquids.
- ◆ Do not block or cover the ventilation slots at the back of the cabinet.
- ◆ Do not push foreign objects into cabinet slots or holes.
- ◆ The screen surface is easily scratched. Do not touch the screen with hands or any hard object.
- ◆ Do not pull the power cord when disconnecting power. Turn off the switch on the socket and pull the plug not the cord.
- ◆ Do not attempt to open this product yourself. There are no user serviceable parts inside.

### Note:

This handling description is printed prior to product development.

When a part of the product specification must be changed to improve operability or other functions, priority is given to the product specification itself. In such instances, the instruction manual may not entirely match all the functions of the actual product.

 
Therefore, the actual product and packaging, as well as the name and illustration, may differ from the manual.

The screen shown as an example in this manual may be different from the actual screen display.

The display panel is a very sensitive and high technology product, giving you finely detailed pictures. Occasionally, a few non-active pixels may appear on the screen as a fixed point of black, blue, green or red. Please note that this does not affect the performance of your product. These pixels shall not be regarded as a failure.

# LCD TV


## LCD TV Panel

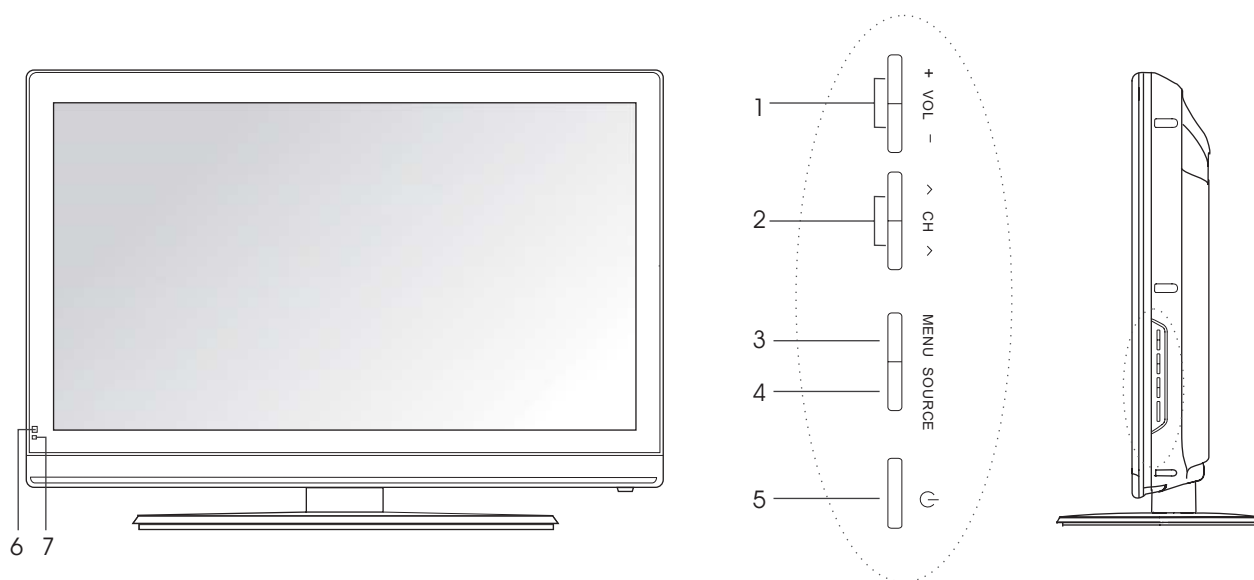

1. Volume adjusting(**+VOL-**)
2. Channel selecting(**^CH v**)
3. Main menu display (**MENU**)
4. Selecting exterior signal input(**SOURCE**)
5. On/off button(⏻)
6. Remote sensor/Power indicator
7. Power indicator

# LCD TV

 
## LCD TV Panel (continued)

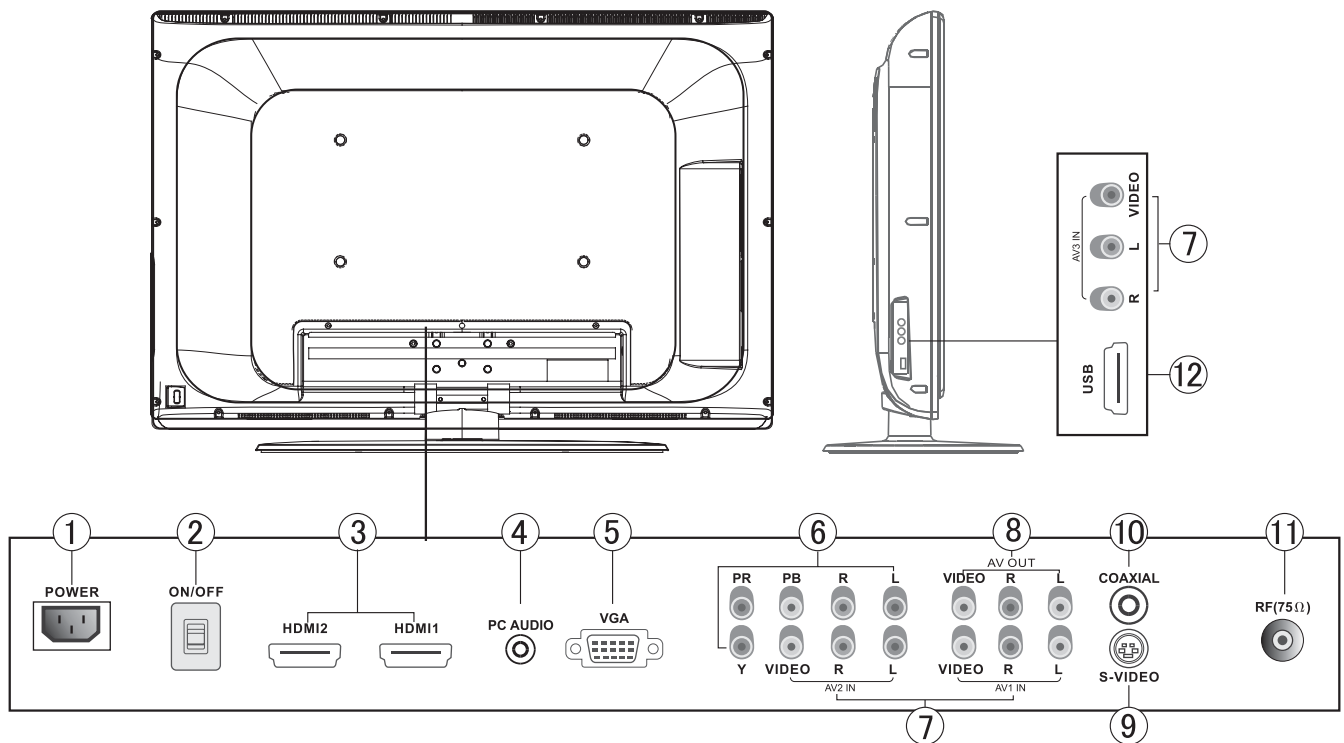

- ① Power  
AC power input terminal
- ② ON/OFF
- ③ HDMI1/HDMI2  
High definition multi media interface
- ④ PC AUDIO and DVI Audio  
Sound input terminal of VGA input and DVI
- ⑤ VGA  
Input terminal of simulation signal of PC
- ⑥ YPBPR L/R  
Difference component input terminal and audio input terminal
- ⑦ AV1 L/R (AV2 L/R AV3 L/R)  
AV input terminal and audio input terminal
- ⑧ AV OUT  
Signal to watch output terminal
- ⑨ S-VIDEO  
Colour and brightness separation input terminal
- ⑩ COAXIAL  
Coaxial audio Signal out terminal
- ⑪ RF(75)  
Antenna/close circuit TV network port(75 Ohm VHF/UHF)
- ⑫ USB  
USB port

# LCD TV
 
## Remote control

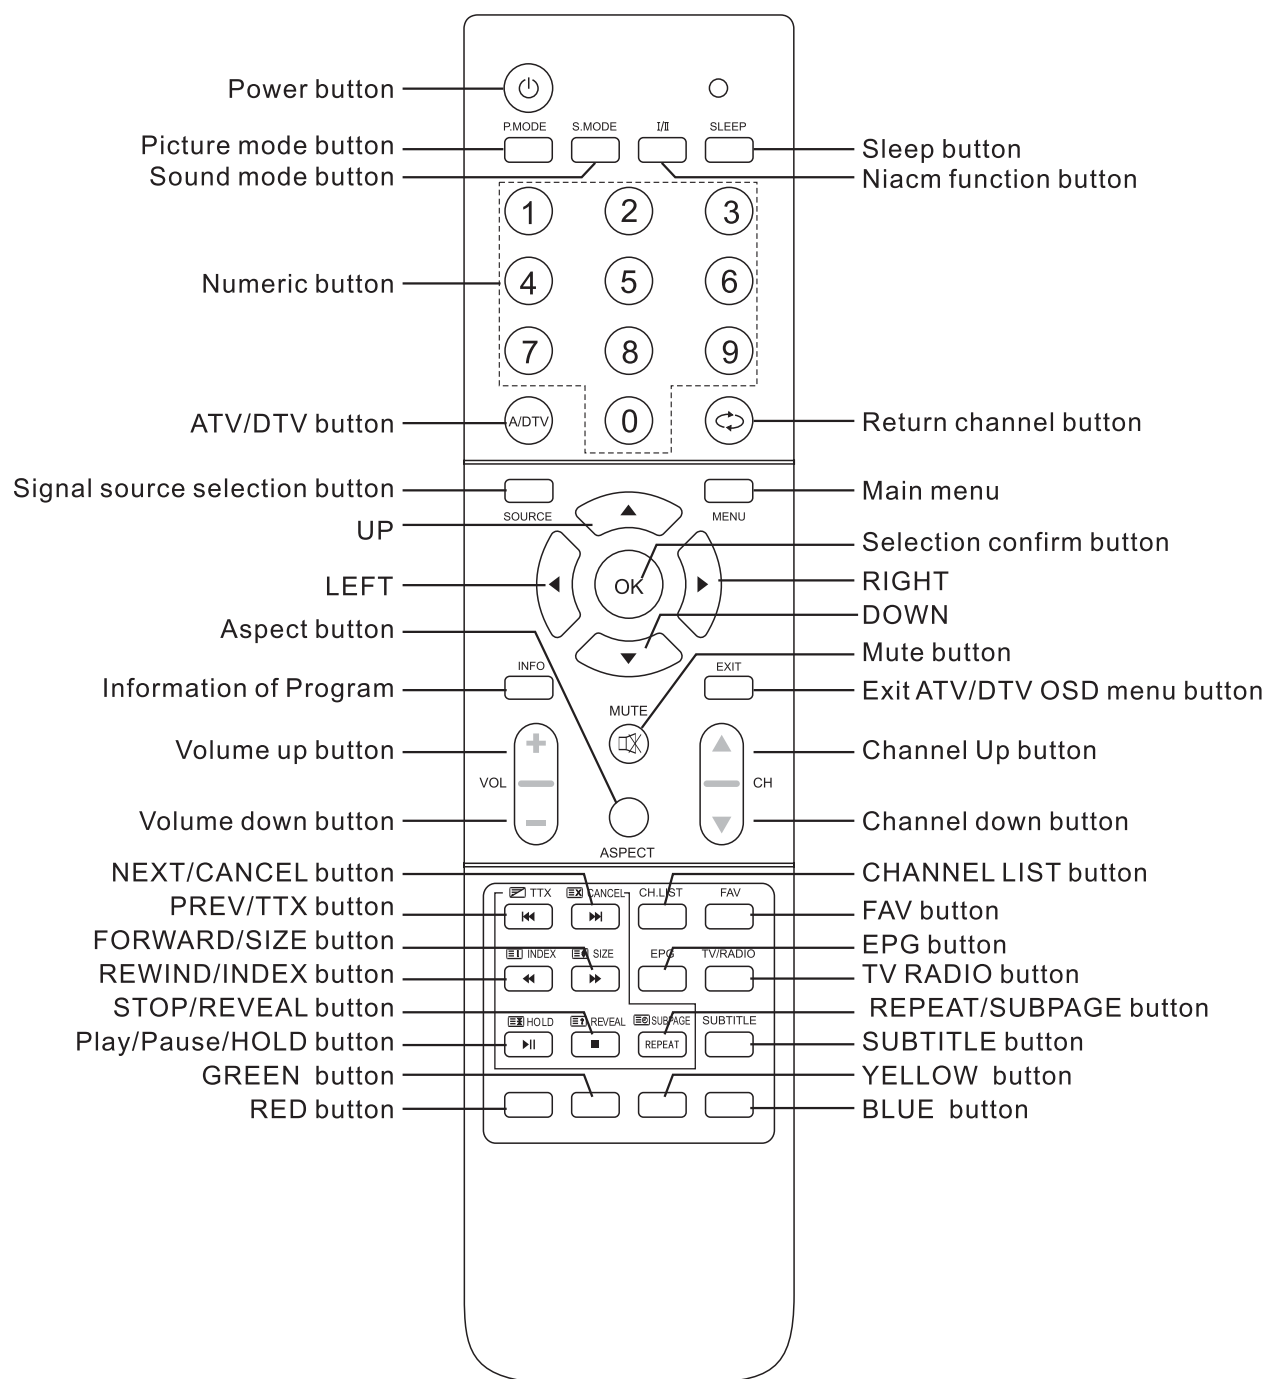

- \* If there is a light around the TV , the remote control may not work properly.
- \* Remove the batteries from the remote control if it is not going to be used for an extended period of time



## Application instruction of remote control

**POWER:** Power on/off button; press once to turn the TV on and press again to turn the TV off.

**I/II:** Press the I/II button to choose a different audio channel.

**SLEEP:** Scheduled power off time button, which allows the customer to set the TV power off time according to the preset times displayed.

**MUTE:** Mute button, press once to disable the speaker and press again to enable the speaker.

**ASPECT:** Picture size scale button, which allows the customer to scale the picture between different sizes.

**P.MODE :** Picture mode button of TV, which allows customer to select different picture modes.

**S.MODE :** Sound mode button of TV, which allows customer to select different sound modes.

**INFO:** Display the information of current source.

**SOURCE:** Signal source selection button, which allows the user to select the signal source input (DTV/ATV/AV1/ AV2 /AV3/S-VIDEO/YPBPR/PC/HDMI1/HDMI2/USB).

**MENU:** Press to display the OSD menu or return up menu.

**EXIT:** To return to the screen.

**Volume (VOL) +/-:** Volume up and down button, which allows the customer to increase or decrease the volume.

**Channel(CH) +/-:** Channel up and down button, which allows the customer to increase or decrease the channel.

**OK:** To confirm the choice with the highlighted menu item. To display the channel list in the no-menu state.

**0,1~9:** TV channel selection button, which allows the customer to select the channel.

**ATV/DTV:** Switch button which allows the user to switch ATV/DTV.

 : Channel revert button of TV, which allows the customer to watch the last TV channel.

**CH.LIST:** Which allows to list all program.

**FAV:** Press the FAV to start the "Favourite List" to select your favourite program.

**EPG:** To show the Electronic Program Guide.

**TV/RADIO:** Switch between the TV service and Radio.

**SUBTITLE:** Press the Subtitle to enable/disable subtitle.

## Teletext operation

**TTX:** Press TTX to enter teletext state and display teletext page.If want to display image and teletext page at the same time, press this button again. If want to exit teletext state, press this button again. When teletext page is displayed on the screen, you can select relevant function by using the remote control.

**SUBPAGE:** Is refer to the subpage of teletext page, i.e. subcode page. When it is pressed, the screen display the requirement of subpage code entry. If there is no subpage, it will not be displayed. In most case, there is no subpage.

**HOLD:** Press it once to keep the display of the page, and press it again to exit hold state.

**CANCEL:** Do not display the content of the page, but only the channel image. Press it again to display the content of the page again. or button on the remote control can be used to display the content of previous or next page.Number buttons on the remote control can be used to get to a certain page. Press the red, green, blue and yellow button on the remote control, the page of relevant color displayed on the lower part of the screen will be displayed.

**SIZE:** Press it once to enlarge the content on the upper part of the page, and press it the second time to enlarge the content on the lower part of the page, and the third time to resume normal display of all the contents on the page.

**REVEAL:** Press it once to display the hide text, press it again to close the display of hide text.

**INDEX:** Press it once to display the index for all the teletext page.

**FAST TEXT (For possible future reference):**The RED, GREEN, YELLOW & BLUE buttons are used for quick access to color coded pages transmitted by FAST TEXT broadcast.

# LCD TV

**Example:** RED selects CITY INFORMATION, BLUE selects TRAVEL INFORMATION, GREEN selects WEATHERINFORMATION, YELLOW selects TV PROGRAMMING.

▶II: Play/Pause the selection. On the PICTURE or MOVIE mode, cut the small window into full-screen playback.

■ : When playing USB, press STOP once, the unit will memorize the previous ending point.

▶▶ : Press the ▶▶ button for quick forward search.

 
◀◀ : Press the ◀◀ button for quick rewind search.

▶▶ : When playing a USB, press NEXT to play the next chapter .

◀◀ : When playing a USB, press PREV to play the previous chapter.

**REPEAT:** When playing a USB, press the REPEAT button continually, the TV screen will show in sequence: repeat1, repeat all, repeat off.

## Connecting to antenna or radio network

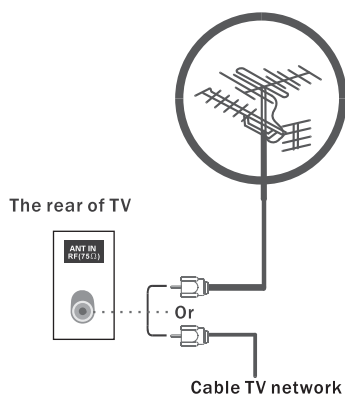

In order to receive TV programmes, a signal needs to be received from one of the following signal sources:

- ◆ Outdoor antenna.
- ◆ Cable TV network.
- ◆ Satellite broadcast network

1. In these three cases, the input cable of antenna or TV network should be plugged in the 75 Ohm coaxial cable jack at the rear side of LCD TV.


2. Indoor antenna is NOT recommended for this TV.

When installing LCD TV, qualified 75 Ohm coaxial Cable must be used. If other coaxial cable is used, there may be noise and image disturbances.

# LCD TV
 
## Connecting to exterior devices

RCA terminal is used to connect the output device of DVD (480I/480p/576I/576p/720P/1080I/1080P)

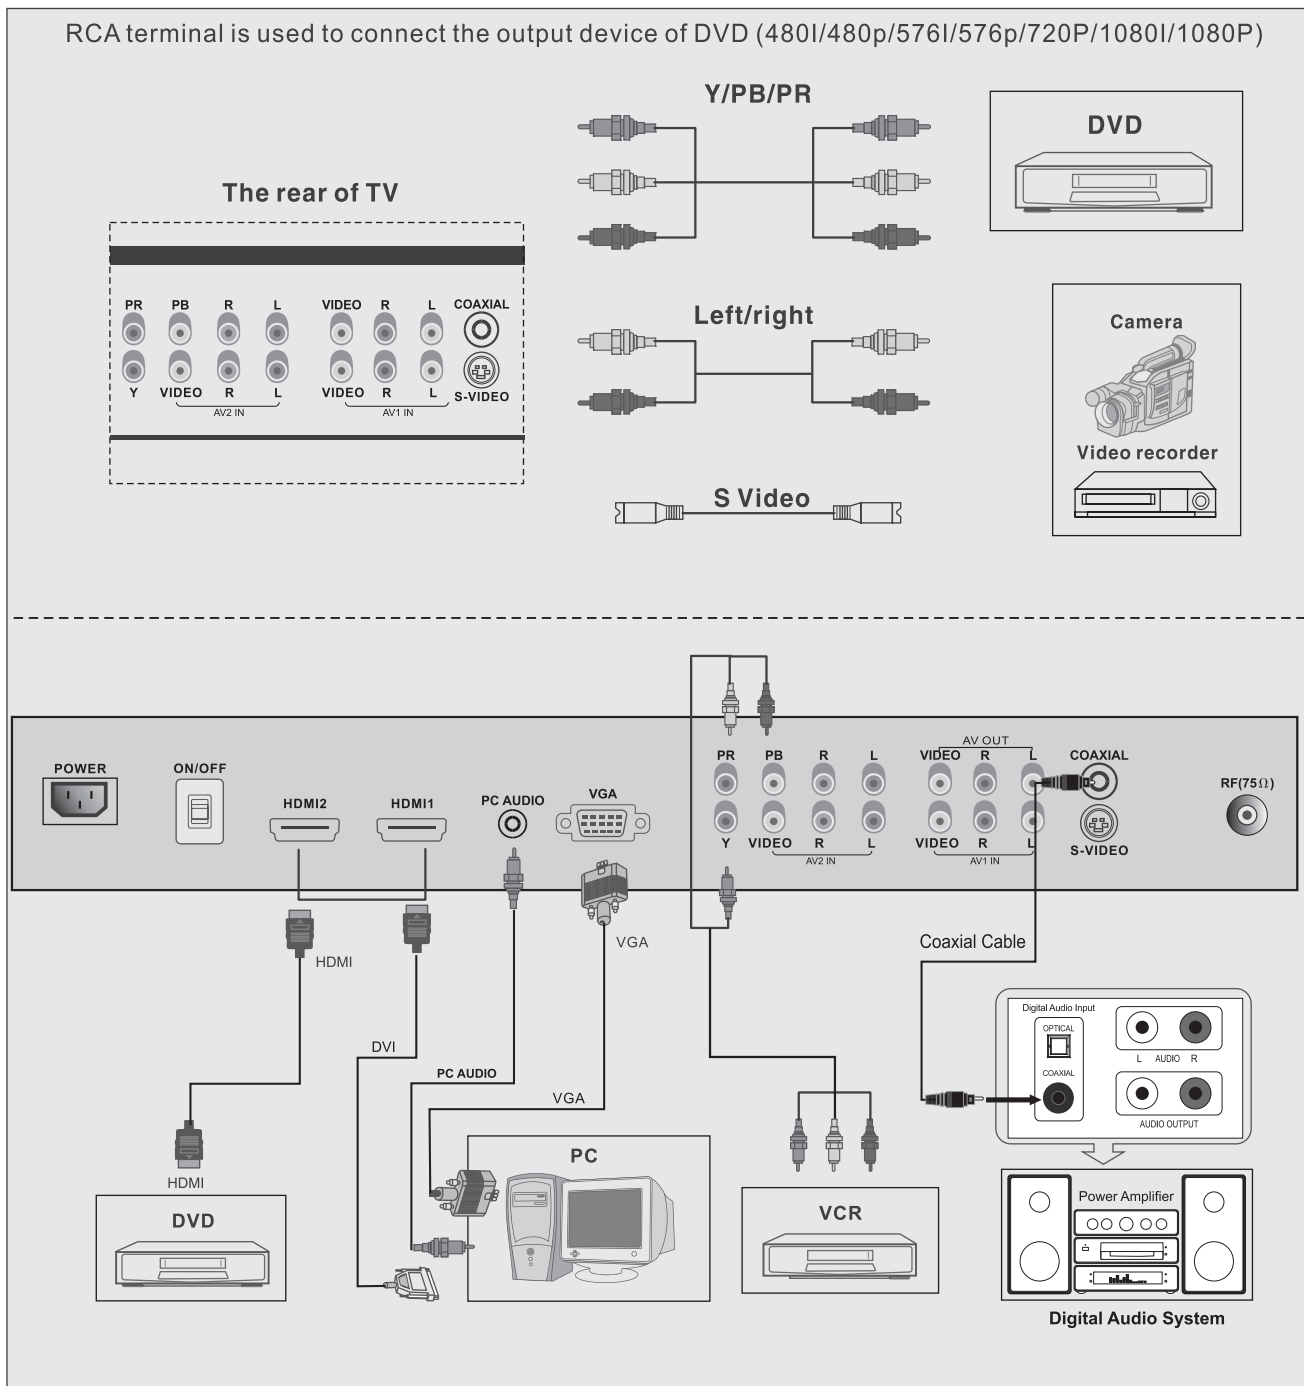

### Notices:

1. AV1/ S-Video use a common Audio (R1, L1).
2. Y-PB-PR of DVD is corresponding to Y-PB-PR of the TV.
3. DVI to HDMI and using the PC audio.
4. PC to VGA also using the PC audio.
5. AV IN and Y-PB-PR signal are from the DVD.
6. Coaxial signal output to Digital Audio System. (Support Coaxial decoder)

# LCD TV

## THE OSD MENUS

### MENU SETUP TV



Please select your language.  
Press◀/▶button to select the OSD language.  
English, Español, Français, Italiano, Deutsch.



# LCD TV

## CHANNEL MENU



Press MENU button to display the OSD menu.  
Press ◀/▶ button to select the channel menu.  
Press ▼ or OK button to enter channel menu.  
Press ▲/▼ button to select the channel selection.  
Press MENU button to return to previous menu.  
Press EXIT button to exit the menu.

## AUTO TUNING



Press ▶ button to auto tuning. When it is auto turning, press MENU button to skip the current tuning(ATV or DTV), or press EXIT button to return to the previous menu.

# LCD TV

## DTV MANUAL TUNING



Press ► button to enter DTV manual tuning menu.  
Press ◀/▶ button to select the channel, then OK to search.

## ATV MANUAL TUNING



Press ► button to enter ATV manual tuning menu.  
Press ▲/▼ button to select the selection.  
Press ◀/▶ button to adjust the option as requirement.  
See details in the following sub options.  
Press SAVE(red) button to save the channel.

### **Storage To**

Press ◀/▶ button to select the channel number you want to save to.

### **System**

Sound system is default BG/DK/I.

### **Current CH**

Press ◀/▶ button to select the current channel.

### **Search**

Press ◀/▶ button to search backward/forward, MENU or EXIT to stop the searching.

### **Fine-Tune**

Press ◀/▶ button to fine tuning when the signal of the current channel is weak.

### **Skip**

Press ◀/▶ button to turn on/off the switch of skip. When the switch is turned on, the current channel will be skipped when you scan channels with CH▲/CH▼ button.

# LCD TV

## PROGRAMME EDIT



Press ► button to enter Programme Edit menu.

### Delete

Press ▲/▼ button to select the channel you want to delete, then press DELETE(RED)button, and the channel will be marked DELETE, press DELETE(RED)button again to delete, Press MENU button to cancel.

### Rename(only ATV)

Press ▲/▼ button to select the channel you want to rename, press RENAME(GREEN)button, the channel will be marked RENAME, then press ▲/▼button to select the position of word, press ◀/▶button to select the letter you want.

### Swap

Press ▲/▼ button to select the channel you want to swap, then press SWAP (YELLOW), and the channel will be swap.

 
### Skip

Press ▲/▼ button to select the channel you want to skip, then press SKIP(BLUE) to mark or disarm the channel. The channel marked SKIP will be skipped when you scan channels with CH+/CH- button.

### Favourite

Press ▲/▼ button to select your favourite channel, then press FAV button to mark or disarm the channel. The channel marked FAV will be storage to the favorite list.

## PICTURE MENU

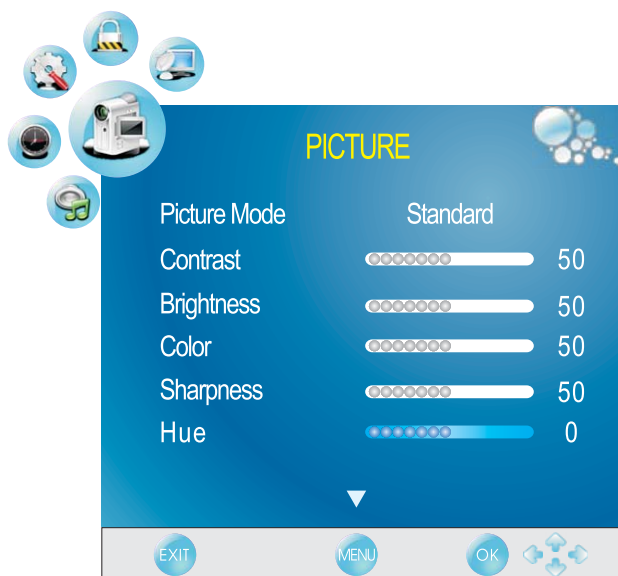

Press MENU button to display the OSD menu.

Press ◀/▶button to select the PICTURE menu.

Press ▼ or OK button to enter the Picture menu.

Press MENU button to return to previous menu.

Press EXIT button to exit the menu.

Press ▲/▼ button to select the picture selection.

### Picture Mode

Press ◀/▶ button to select picture mode. Standard, Dynamic, Mild, User.

### Contrast

Press ◀/▶ button to adjust the contrast.

### Brightness

Press ◀/▶ button to adjust the brightness.

### Color

Press ◀/▶button to adjust the color.

### Sharpness

Press ◀/▶button to adjust the sharpness.

 
### Hue

Press ◀/▶button to adjust the hue(Only NTSC).



# LCD TV

## PICTURE MENU

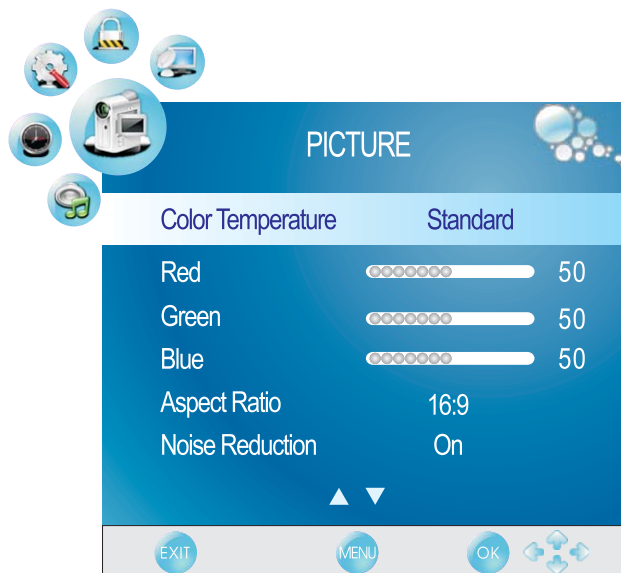

### Color Temperature

Press ◀/▶ button to select Color Temperature. Standard, Warm, User, Cool.

### User Color Temperature adjust

Press ◀/▶ button to select User Color Temperature. Press ▲/▼ button to select Red, Press ◀/▶ button to adjust the Red.

Press ▲/▼ button to select Green, Press ◀/▶ button to adjust the Green.

Press ▲/▼ button to select Blue, Press ◀/▶ button to adjust the Blue.

### Aspect Ratio

Press ◀/▶ button to select Aspect Ratio. 16:9, Zoom1, Zoom2, Auto, 4:3.

### Noise Reduction

Press ◀/▶ button to open or close Noise Reduction.



### PC Setup(When signal source is PC)

Press ▶ button to Enter PC Setup.

## SOUND MENU



Press MENU button to display the OSD menu.

Press ◀/▶ button to select the Sound menu.

Press ▼ or OK button to enter the Sound menu.

Press MENU button to return to previous menu.

Press EXIT button to exit the menu.

Press ▲/▼ button to select the Sound selection.

### Sound Mode

Press ◀/▶ button to select sound mode. Standard, Music, Movie, Sports, User.

### Treble

Press ◀/▶ button to adjust the treble.

### Bass

Press ◀/▶ button to adjust the bass.

### Balance

Press ◀/▶ button to adjust the balance.

### Auto Volume

Press ◀/▶ button to select Auto Volume function off or on.

### Surround Sound.

Press ◀/▶ button to select Surround Sound off or on.



# LCD TV

## TIME MENU



Press MENU button to display the OSD menu.  
Press ◀/▶ button to select the Timer menu.  
Press ▼ or OK button to enter the Timer menu.  
Press MENU button to return to previous menu.  
Press EXIT button to exit the menu.  
Press ▲/▼ button to select the Timer selection.

### Auto Date/Time

Auto synchronize DTV program source, manual adjust is Not allowed.

### Off time

Press ▶ button to enter the setup menu.

Press ▲/▼/◀/▶ button to setup the time you want the TV to be turn off.

### On time

Press ▶ button to enter the setup menu.

Press ▲/▼/◀/▶ button to setup the time you want the TV to be turn on.

### Sleep timer

Press ◀/▶ button to select sleep timer.

### Auto Standby

Press ◀/▶ button to select standby on or off.

### Time Zone

Press ◀/▶ button to select Time Zone.

## OPTION MENU



Press MENU button to display the OSD menu.  
Press ◀/▶ button to select the Option menu.  
Press ▼ or OK button to enter the Option menu.  
Press MENU button to return to previous menu.  
Press EXIT button to exit the menu.  
Press ▲/▼ button to select the Option selection.

### Language

Press ◀/▶ button to select the OSD language.  
English, Español, Français, Italiano, Deutsch.

### Audio Language

Press ◀/▶ button to select the Audio language.

### Subtitle Language

Press ◀/▶ button to select the Subtitle language.

### Restore Setting

Press ▶ button to enter reset setting.

Press ◀/▶ button to select Yes and Press OK button restore setting.

### OSD Transparent

Press ◀/▶ to select OSD Transparent.  
0%, 20%, 40%, 60%, 80%, 100%.

### Menu Duration

Press ◀/▶ to select Menu Duration.  
10S, 15S, 20S, 25S, 30S, 35S, 40S, 45S, 50S, 55S, 60S.

### Blue Screen

Press ◀/▶ button to select the blue Screen On or Off.

# LCD TV

## LOCK MENU



Press MENU button to display the OSD menu.  
Press ◀/▶ button to select the Lock menu.  
Press ▼ or OK button to enter the Lock menu .  
**Note:** The initial password is " 0000".  
Press MENU button to return to previous menu.  
Press EXIT button to exit the menu.  
Press ▲/▼ button to select the Lock selection.

### Lock Channel

Press ◀/▶ button to select off or on.

### Change Password

Press enter display please enter password new password and confirm.

### Block Programme

Select the program you want to lock.

### DTV Parental Guidance

According to the needs of your choice.

## SOURCE MENU



Press SOURCE button to enter the signal source menu.  
Press ▲/▼ button to select signal source.  
Press OK button to confirm.  
Press EXIT button to exit signal source menu.

## USB Operation

## Basic operation

Turn ON and OFF the USB function

Turn on the LCD TV and then press **SOURCE** repeatedly to select USB mode.

## Supporting USB format

This products can play the following format of USB.

MOVIE	MPEG4	AVI	The maximum bit rate:6Mbps The maximum display resolution is 720*576p
		MP4	
	MPEG1/2	MPG	The maximum bit rate:9.8Mbps
		MPE	
		VOB	
		DAT	
		TRP	
		TS	
PHOTO	BMP	BMP	Supported mono color、16color、 256color、 16bit、 24bit、 32bit、 The maximum display resolution is 3000*3000, the minimum is 100*100
	JPG	JPG	The maximum display resolution is 3000*3000, the Minimum is 100*100
		JPE	The maximum display resolution is 3000*3000, the Minimum is 100*100
	PNG	PNG	The maximum display resolution is 1000*1000, the Minimum is 100*100
MUSIC	MP3	MP3	Sample rate: 8K-48K, Bit rate: 32K-320K
	WMA	WMA	Sample rate: 8K-48K, Bit rate: 32K-320K (Need to pay for the patent. Open or close it according to customer's demand )
		ASF	
	AAC	M4A	Sample rate: 16K-48K, Bit rate: 32K-192K
		AAC	

### Special Note:

- 1) Support hard disk, the maximum storage capacity is 400G
- 2) Folder in support of the greatest depth is 30
- 3) Each folder in support of the largest number of documents is a 5000
- 4) Only support single audio channel audio format and dual-audio channel audio format

### Operation Instructions

Note: USB only support PHOTO, MUSIC and MOVIE. The system automatically classified files, only show the supported files. For example, it only shows JPG, BMP and PNG files on the PHOTO mode.

# LCD TV

## USB MENU



### PHOTO

1) Press OK button to the submenu.  
Press ▲/▼ button to select the file.  
Press ◀/▶ button to the last or next menu.

2) Press OK button to play the selection in the small window, then press ▶|| button to cut into full-screen.

3) In the full-screen playback state, press ▶|| button to play or pause picture, press MENU button don't show TV\_MENU. Press EXIT button to quit full-screen.



### MUSIC

1) Press OK button to the submenu.  
Press ▲/▼ button to select the file.  
Press ◀/▶ button to the last or next menu.

2) Press OK or ▶|| button to play the selection.  
Press ■ or EXIT button to quit playing state.

3) Press ◀◀/▶▶/◀◀/▶▶ button to achieve the corresponding functions.



### MOVIE

1) Press OK button to the submenu.  
Press ▲/▼ button to select the file.  
Press ◀/▶ button to the last or next menu.

2) Press OK button to play the selection in the small window, then press ▶|| button to cut into full-screen. In this mode, ◀◀/▶▶/◀◀/▶▶ button don't work.

3) In the full-screen playback state, Press ◀◀/▶▶ button to achieve the corresponding functions. ◀◀/▶▶ button don't work. Press EXIT button to quit full-screen.

## Trouble shooting

Before contacting the service technician, perform the following simple checks. If any problem still persists, unplug the LCD TV and call for assistance.

PROBLEM	POSSIBLE SOLUTION
No sound and picture	<ul style="list-style-type: none"> <li>- Check that the main plug has been connected to a wall let.</li> <li>- Check that you have pressed the POWER button on the front of TV set.</li> <li>- Check the picture contrast and brightness settings.</li> </ul>
Normal picture but no sound	<ul style="list-style-type: none"> <li>- Check the volume.</li> <li>- Sound muted? Press the MUTE button.</li> <li>- Try another channel the problem may be with the broadcast.</li> <li>- Are the audio cables installed properly.</li> </ul>
The remote control does not work	<ul style="list-style-type: none"> <li>- Check to see if there any object between the product and remote control Causing obstruction.</li> <li>- Are batteries installed with correct polarity(+ to +,- to -).</li> <li>- Correct remote operating mode set: TV, VCR etc.?</li> <li>- Install new batteries</li> </ul>
Power is suddenly turned off	<ul style="list-style-type: none"> <li>- Is the sleep timer set.</li> <li>- Check the power control settings. Power interrupted.</li> <li>- No broadcast on station tuned with auto activated.</li> </ul>
Picture appears slowly after switching on	<ul style="list-style-type: none"> <li>- This is normal, the image is muted during the product startup process. Please contact your service center, if the picture has not appeared after five minutes.</li> </ul>
No or poor color or poor picture	<ul style="list-style-type: none"> <li>- Adjust the color in menu option.</li> <li>- Keep a sufficient distance between the product and the VCR.</li> <li>- Try another channel, the problem may be with the broadcast.</li> <li>- Are the VIDEO cables installed properly?</li> <li>- Activate the any function to restore the brightness of the picture.</li> </ul>
Horizontal/vertical bars or picture shaking	<ul style="list-style-type: none"> <li>- Check for local interference such as an electrical appliance or power tool.</li> </ul>
Poor reception on some channels	<ul style="list-style-type: none"> <li>- Station or cable product experiencing problems. Tune to another station.</li> <li>- Station signal is weak, reorient antenna to receive weaker station.</li> <li>- Check for sources of possible interference.</li> </ul>
Lines or streaks in pictures	<ul style="list-style-type: none"> <li>- Check the antenna(Change the direction of the antenna).</li> </ul>
No output from one of the speakes	<ul style="list-style-type: none"> <li>- Adjust balance in menu option.</li> </ul>

# LCD TV

**NOTE:** There is a problem in VGA mode.(Only VGA mode applied)

PROBLEM	POSSIBLE SOLUTION
The signal is out of range.	<ul style="list-style-type: none"><li>- Adjust resolution, horizontal frequency, or vertical frequency.</li><li>- Check it whether the signal cable is connected or loose.</li><li>- Check the input source.</li></ul>
Vertical bar or stripe on back ground&Horizontal Noise&Incorrect position.	<ul style="list-style-type: none"><li>- Work the auto configure or adjust clock, phase, or H/V position.</li></ul>
Screen color is unstable or single color.	<ul style="list-style-type: none"><li>- Check the signal cable.</li><li>- Reinstall the PC video card.</li></ul>

## Maintenance

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

### Cleaning the screen

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then used it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

### Cleaning the cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

### Extended Absence



If you expect to leave your TV dormant for a long time(such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

## Specifications

Panel Features	
Screen Size	46 inch
Active Area	1018.08mm(H) X 572.67mm(V)
Aspect Ratio	16:9
Panel Resolution	1920 X 1080
Brightness	430 cd/m <sup>2</sup>
Contrast Ratio	5000:1
Viewing Angle	178°(H) X 178° (V)
Dot Pitch	0.46125mm(H) X 0.15375mm(V)
Maximum Colour	16.7M
Response Time Black-White (R&D)	8ms
OSD Languages	
English, French, Spanish, German, Italian	
TV Function	
Broadcast System	PAL
Receiving Channel	B/G,D/K,I
Video Standards Supported	
Composite Video input	NTSC / PAL
S-Video Input	NTSC / PAL
Audio Output	
Maximum Audio Output	2 (8W, 8 Ohm)
Input Connections	
TV Input (Digital tuner)	1 (RF - 75 Ohm)
YPBPR Input	1 Component(3pin)
S-VIDEO	1 (4 pin DIN)
VGA Input	1 (15 pin D-Sub)
AV Input	3 Composite(Yellow RCA)
PC Audio in	Stereo Mini Phono Jack Input (3.5mm)
HDMI Input	2 (19 pin )
USB	1 (4 pin )
VGA Resolutions Supported	
640x480 @ 60Hz	
800x600 @ 60Hz	
1024x768 @ 60Hz	
1920x1080 @ 60Hz	
Power	
Power	AC 100V - 240V~ 50 / 60Hz
Power Consumption	< 280W
Output Connections	
AV output(Video)	Composite(RCA)
SPDIT Output	Coaxial





## Product Warranty

**Subject to the warranty repair conditions below, in addition to any applicable statutory warranties this product is warranted for 3 years from the original date of purchase covering both parts and labour.**

The benefits conferred by this warranty are in addition to and not in derogation of all rights and remedies in respect of this product which the consumer has under the Trade Practices Act and other State and Territory laws.

### Warranty Repair Conditions

- A.** This Product Warranty only applies provided the product:-
- Has been purchased in Australia and sold by Authorised Distributors or Dealers and only where the products are used and serviced within Australia
  - Is taken for service when required to an Authorised Service Agent, together with written instructions indicating specific problem or function requiring investigation.
  - Has valid proof of purchase and presented when warranty service is requested.
  - Has only been used in a domestic application.
  - Has been installed and operated in accordance as noted in the operating instructions under normal use and reasonable care (in the opinion of the Service Centre).
  - Has not been damaged by the use of accessories which in the opinion of the Service Centre are defective or incompatible with the product.
  - Has not been tampered with or repaired (including unauthorised alterations) by anyone other than the AWA Service Centre or an Authorised Service Centre.
- B.** This Product Warranty does not cover:-
- Damage, malfunction or failure resulting from use of incorrect voltages, incorrect installation, accidental damage, misuse, neglect, build-up of dirt or dust abuse, wear and tear, maladjustment of customer controls, mains supply problems, thunderstorm activity or Acts of God, pixel error, infestation by insects or vermin, exposure to abnormally corrosive conditions or any foreign object or matter having entered the product.
  - Mileage or travelling time in respect of service outside the authorised AWA Service Centre nor pick up and delivery cost incurred.
  - Service calls arising from failure to correctly operate the product or to observe noted instructions, or repair which reveals the product is in normal working order.
  - Cabinet parts, user replacement batteries or leads unless the defective items are reported at the time of purchase.
- C.** Service calls only apply to Television display devices (CRT, LCD, Plasma) with screen sizes greater than 59cm in the major metropolitan areas of Australia or the normal operating areas of the nearest Authorised Service Centers.
- D.** Requested service visits to the customer premises will be made during normal working hours of the customary working week upon request by the customer. Where such a visit is made on a day arranged by the customer and the service technician is unable to obtain access to the product, the Service Centre will be entitled to make a separate charge for service call fee, time and distance travelled.
- E.** The AWA Service Centre and its Authorised Service Centres may charge for work done where the product is found to be in good working order. Example, charges may be made where the problem is found to be due to incorrect setting of customer controls, use of poor associated equipment (e.g. poor antenna systems) or the inability of the product to operate with faulty or incompatible equipment.
- F.** If the product is sent to an Authorised Service Centre, the owner is responsible for the cost of transport to and from the Service Centre. In addition, the product is at the owners risk while in transit to and from the authorised Service Centre.
- G.** No person is authorised to make or give any assertions, statements or undertakings, whether expressed or implied about the product other than or additional to the terms of this warranty.

**Please read instruction manual carefully**  
Should you encounter any problems?

**Please contact Telefix for Warranty Support**  
**1300 366 144**

Email: [warrantyhelp@awa.com.au](mailto:warrantyhelp@awa.com.au)

The original proof of purchase must be kept and produced for service requirements under this Product Warranty.

