 


PVR Menu Function Details


PVR function is only available in DTV, and includes Record, Timeshift and Playback Function. There are two types of recording: In-time record and preserve record.

PVR File System (DTV Mode)

1. Press the **MENU** button to display the main menu and then use the **◀▶** buttons to select SETUP in the main menu and then press the **OK** button.
2. Press the **▲▼** buttons to select PVR File System and then press the **▶** button or the **OK** button to enter sub-menu .
3. Press the **▲▼** buttons to select the following settings.

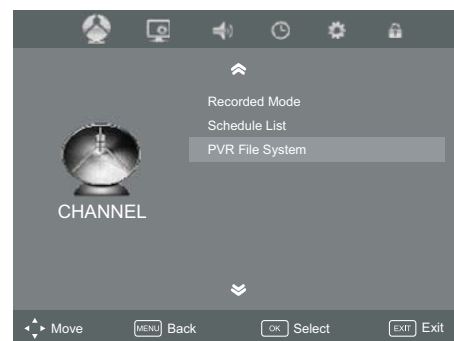



Item	Notes
Select Disk	Choose the disk to store the contents to be recorded, default is C.
Check PVR File System	This is to scan and verify there is no issue with the storage device.
	Select OK or the ▶ button to scan the USB drive, the system will show "Checking".
	If no USB has been inserted or scan has failed, it will display "FAIL".
	If the scan no partitions, "No Partition found " will be displayed.
USB Disk	If no problems found, then it will display "SUCCESS".
	If USB has been inserted, it will display "Pass".
Format	If no USB has been inserted, it will display "Not found any USB Device".
	You can format the USB Device, press the OK or ▶ button to enter format menu. After entering format mode, the USB can complete PVR functions, if the function works well it shows Pass.
Time Shift Size	After running the "Check PVR File System", the USB can be used at Timeshift space, the size is chosen when formatting the USB.
Speed	After running the "Check PVR File System", this displays the USB available speed and reminds users to operate within this available speed.

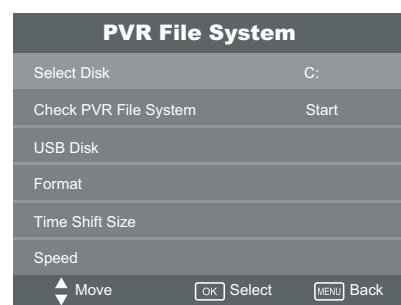

Format

Format

1. In the PVR File System menu, press the ▲▼ buttons to select Format and then press the **OK** or ► button to enter sub-menu as follows, and then press the **OK** button.
2. Press the ◀ button to format disk, it will remove all the contents of the USB Device.

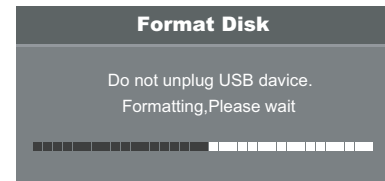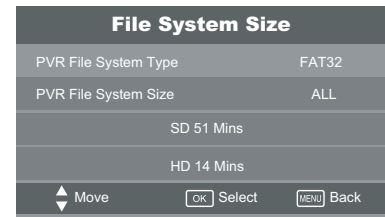

After formatting, the system will establish a PVR File System according to the previously confirmed PVR File System size.

Record Start

1. Press the **MENU** button to display the main menu and then use the ◀▶ buttons to select CHANNEL in the main menu and then press the **OK** button.
2. Press the ▲▼ buttons to select Record Start and then press the ► button or the **OK** button to start record.
3. You can press the ● button to start record directly.



Recorded Mode

1. Press the **MENU** button to display the main menu and then use the ◀▶ buttons to select CHANNEL in the main menu and then press the **OK** button.
2. Press the ▲▼ buttons to select Recorded Mode and then press the ► button or the **OK** button to set recorded mode.
3. Press the ▲▼◀▶ buttons to select channel and recorded mode.
4. Press the ▲▼◀▶ buttons to set start time and end time and then press the **OK** button to save.



Play Recorded Programme

You can play recorded program from the recorded program list or from a USB Storage Device.

Method 1

1. In DTV mode, press the **INDEX** button to enter the Recorded List.
2. Press the ◀▶▲▼ buttons to select the recorded programme you want to play and then press the **OK** button to play.

Method 2

1. Press the **SOURCE** button to display the input source list and then press the ▲▼ buttons to select the USB and then press **OK** button.
2. Press the ◀▶ buttons to select Movie and then press the **OK** button.
3. Press the ◀▶▲▼ buttons to select folder (PVR folder). Select the recorded programme that you want to play and then press the **OK** button to play.

Time Shift Function

At Time Shift playing condition, the system records DTV and can play it at the same time.



- Time Shift Mode and Recording functions may not work if the signal strength is weak.

Press the **TIME SHIFT** button to enter Time Shift Mode.

At Timeshift playing condition, the system record DTV and play it at the same time.

Pause Time Shift Mode

During normal TV viewing, you may press the **TIMESHIFT** button to pause the live viewing broadcast if you need to take a break for a while (e.g. Toilet or kitchen). When you return, press the ▶|| button to play the missed broadcast section. The PVR Time Shift progress bar will be displayed on the screen.



Using The Remote Control

You can shift playback to any point within the recorded programme.

◀◀ or ▶▶	<p>When playing,</p> <ul style="list-style-type: none"> • press the ◀◀ button repeatedly to speed up ◀◀ x 2 / x 4 / x 8 / x 16 • press the ▶▶ button repeatedly to speed up ▶▶ x 2 / x 4 / x 8 / x 16 • During fast forward / fast backward state, press the ▶ button to return to normal playback.
◀◀◀ or ▶▶▶	<ul style="list-style-type: none"> • Press the ▶▶▶ button to jump about 10% forward. • Press the ◀◀◀ button to jump about 10% back.
▶	<ul style="list-style-type: none"> • During playback, press the ▶ button to display a still screen and then press the ▶ button again to resume playback. • During fast forward / fast rewind state, press the ▶ button to return to normal playback.
■	<p>If you want to exit the PVR Time Shift progress bar and return to the current live broadcast, press the ■ button.</p>

