

How to Update software

MSD306 F/W upgrade with USB SOP

Step 1: Ready for F/W Upgrade

1.1 Prepare a USB memory

1.2 Copy the software file(merg.bin)from your computer to the USB memory, and remove it from computer's USB port!

Step 2: F/W Upgrade

2.1 AC ON



2.2 then input USB, press "MENU" and choose "update software", and then press "OK"



2.3 Now you should choose "YES", TV begin to update. You should reset TV after update.



Note: When Upgrade on the process, please don't Power-Off!