


# SANYO

## INSTRUCTION MANUAL

# C21PM10 C21PM15

## Colour Television

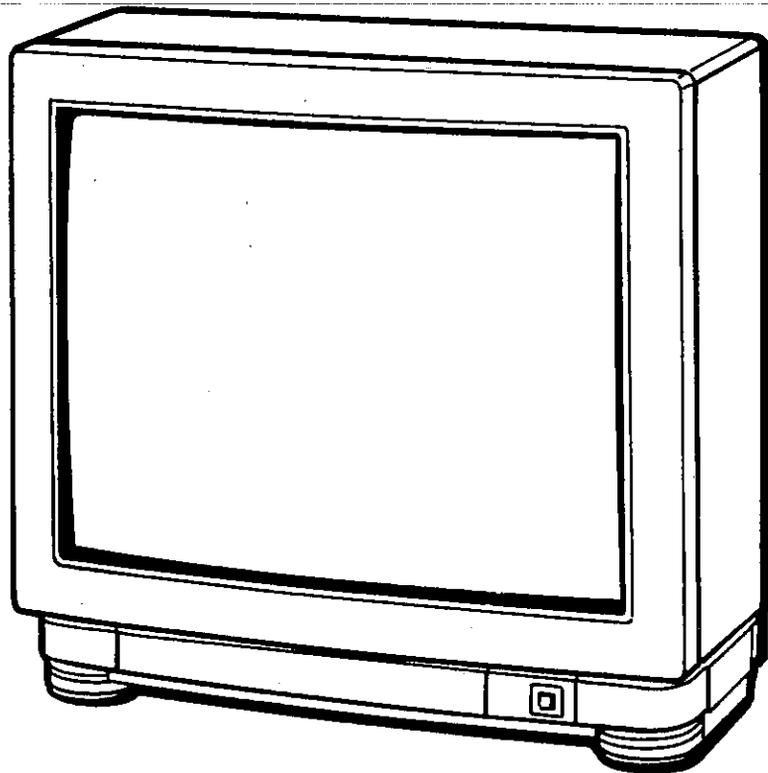

***Remote Control  
Special Function  
AV Input and Output Terminals***

Model C21PM15 – Equipped with the Teletext Decoder.

# Contents

Warning.....	2
Precautions.....	2
Aerial Connection .....	2
Battery installation (Remote Control Transmitter).....	2
Controls .....	3
General Operation.....	4
Special Functions.....	8
Tuning of the Channels.....	11
Teletext Usu(Model C21PM15 only).....	13
Connecting other Equipment.....	18
Specifications.....	20

## Electric Mains

The receiver is designed to operate on an A.C. mains supply of 220-240Volts 50Hz.

## Warning


To prevent fire or shock hazard, do not expose the unit to rain or moisture.

High voltages are used in the operation of this TV set. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

## Precautions

When the TV receiver is not to be used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

### Aerial Connection

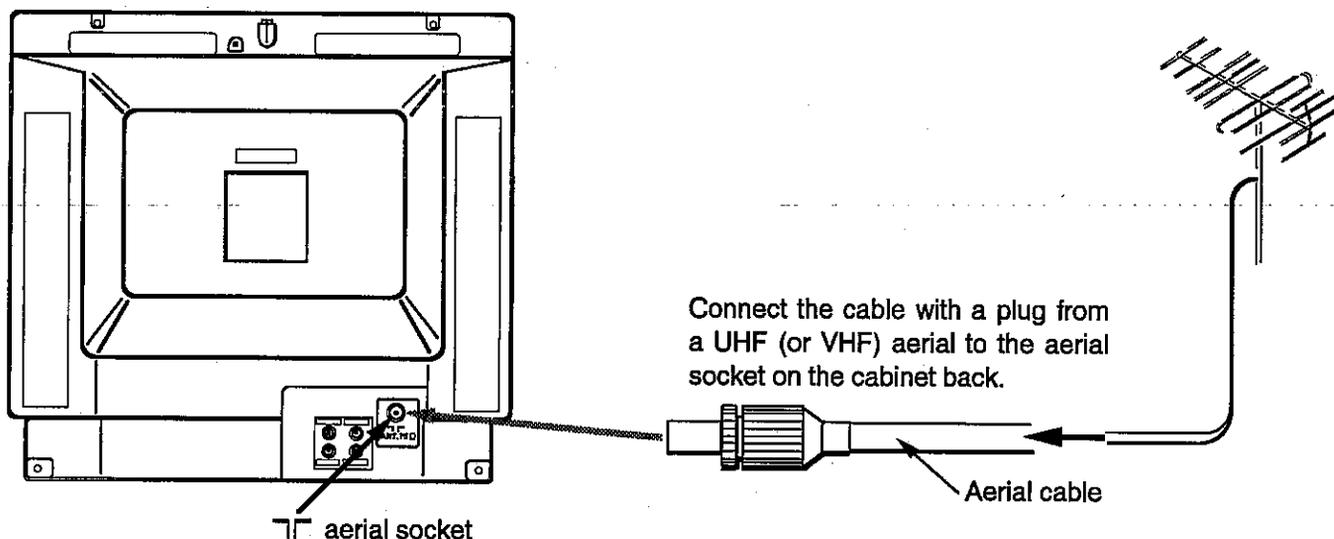

For all aerial circuit problems please consult your local dealer.

### Battery installation of the Remote Control Transmitter

- 1 Remove the battery cover by sliding.
- 2 Install two "AA" 1.5 volt batteries so that the "+" and "-" marks on the batteries match the "+" and "-" marks inside the unit.
- 3 Close the battery cover.



Note: Replace the batteries when the TV set is showing the following symptoms:

Operation is unsteady or erratic, sometimes the TV set does not work with transmitter.


Discharged batteries may leak and damage the unit.

The normal life of batteries should be from nine to ten months.


# Controls

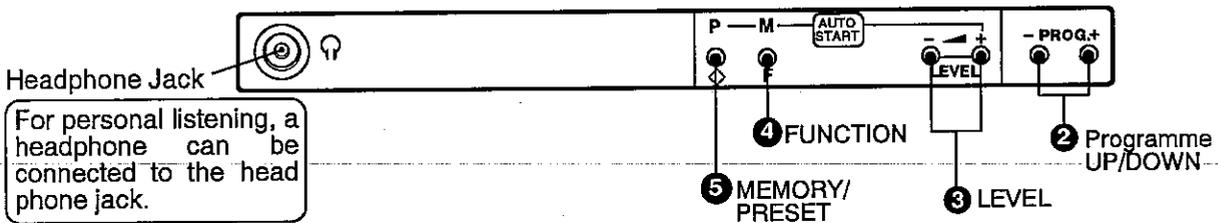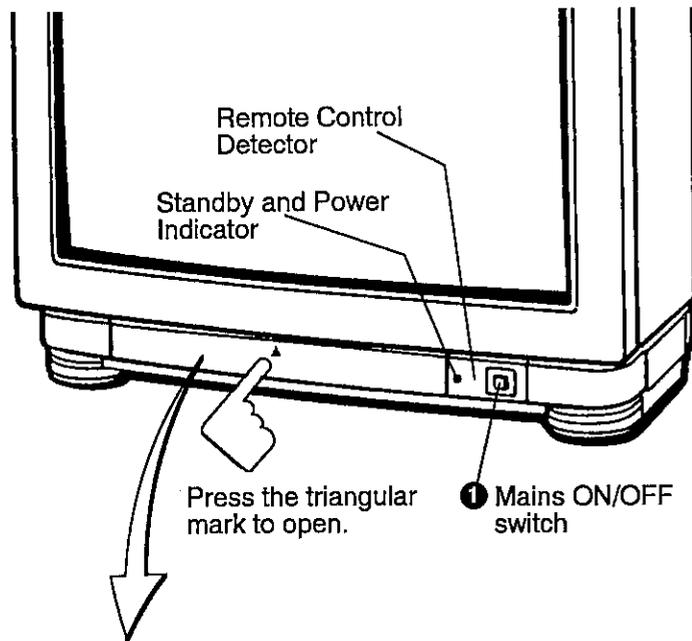

# Remote Control Transmitter

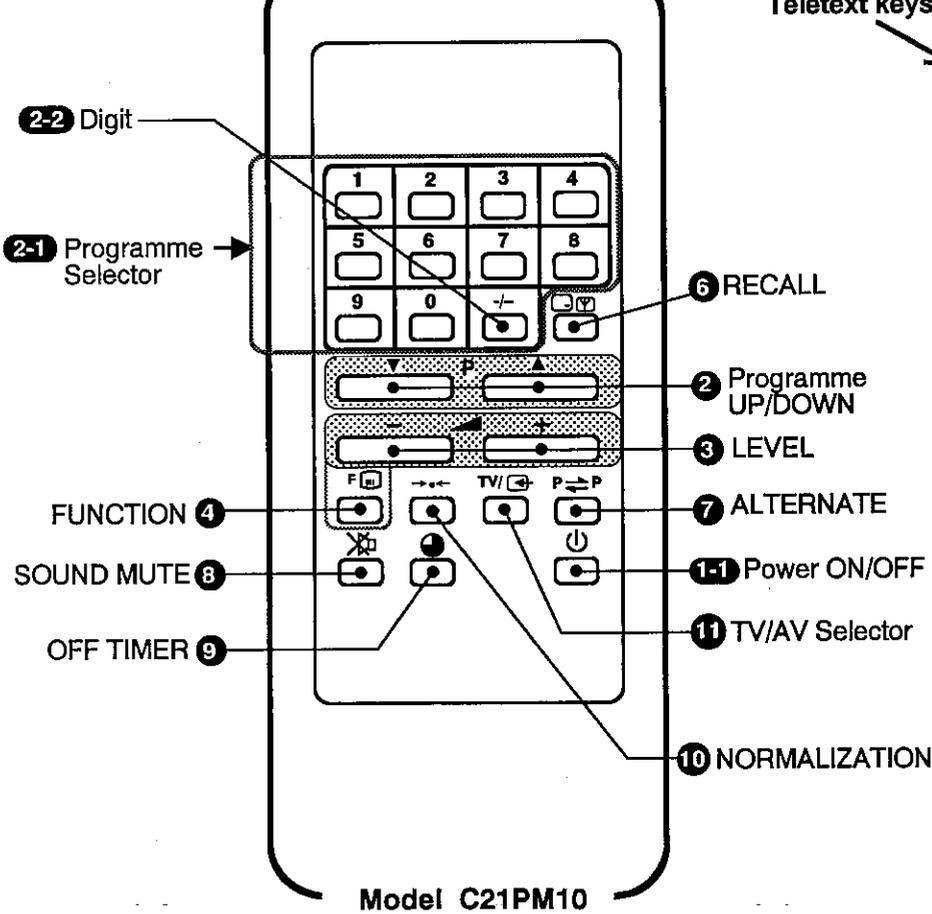


## Teletext keys

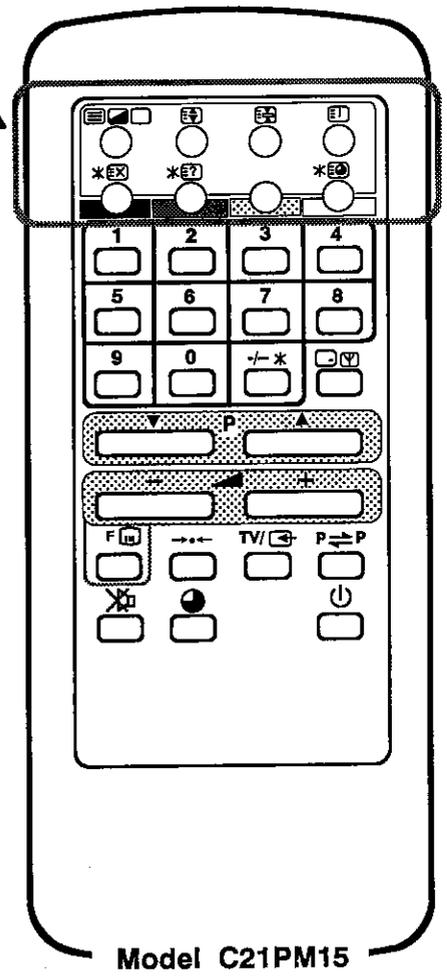


# General Operation

## POWER ON/OFF


To switch on or off the TV;

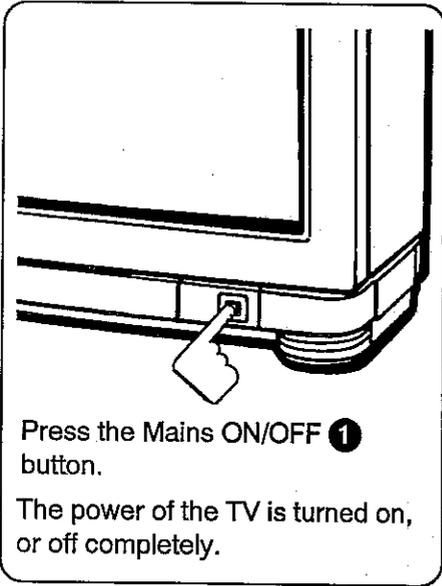

To set the TV to standby mode;

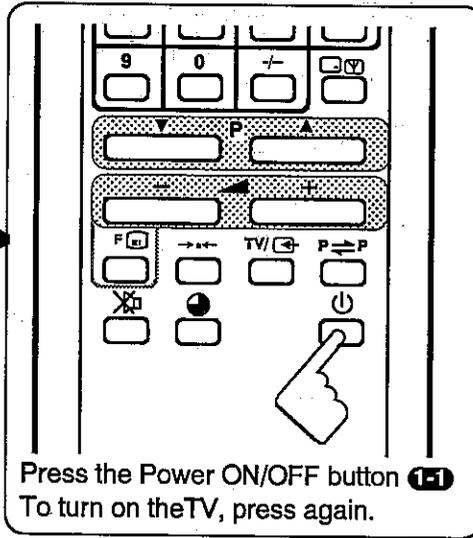

To turn on the TV from standby mode;

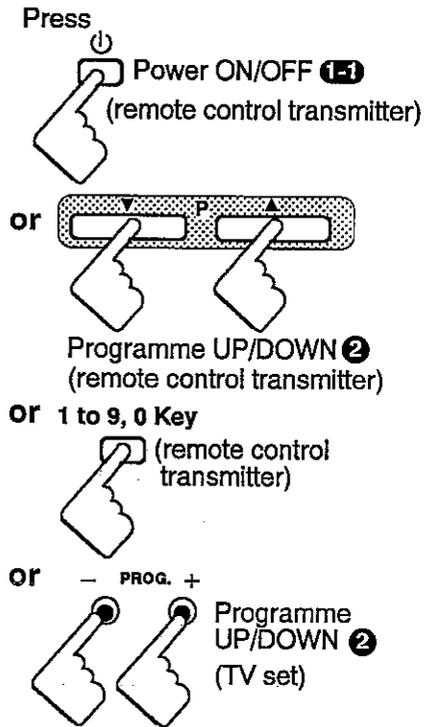


### Important !

Be sure to set the Mains ON/OFF switch ① to the off position, if the power failure occurs while viewing.

## AUTO SHUT OFF


This TV set incorporates the AUTO SHUT OFF function. Even if the TV is left on after you have gone to sleep, the TV set changes to the standby mode within 10 minutes after all broadcasts have ended.

Remaining time

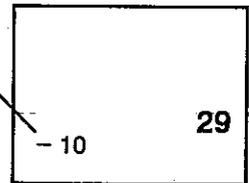


## PROGRAMME SELECTION (Direct Selection)

To select a programme directly

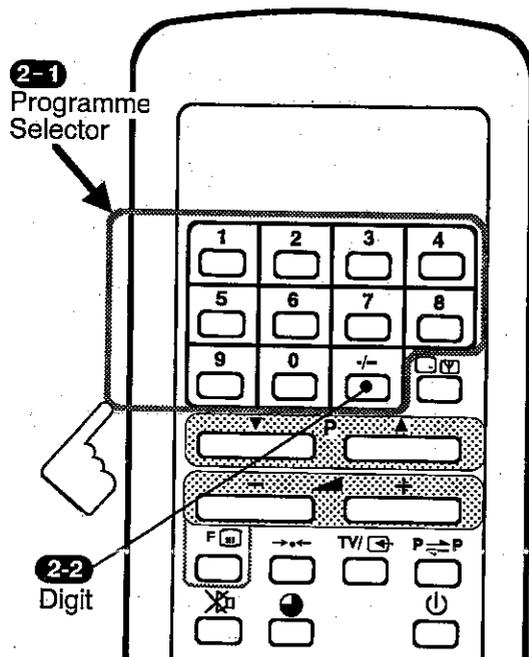


For example;


To select a programme 8

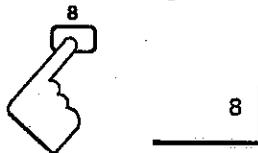

To select a programme 10

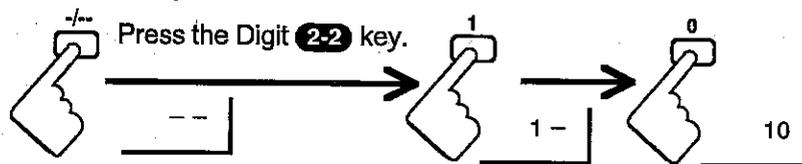


To select a programme 27

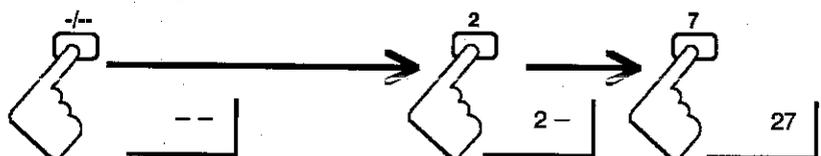


# General Operation

## Programme Selection (Programme UP and Down)

To select a channel

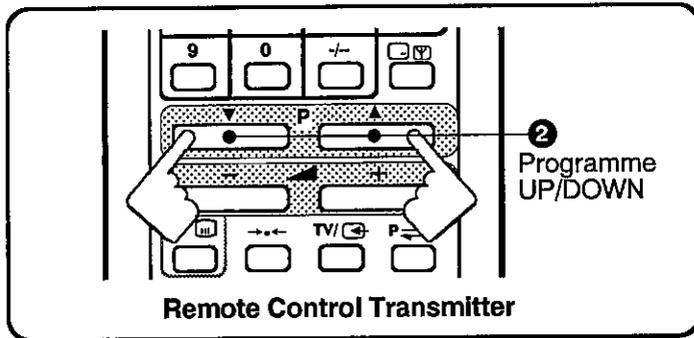


or


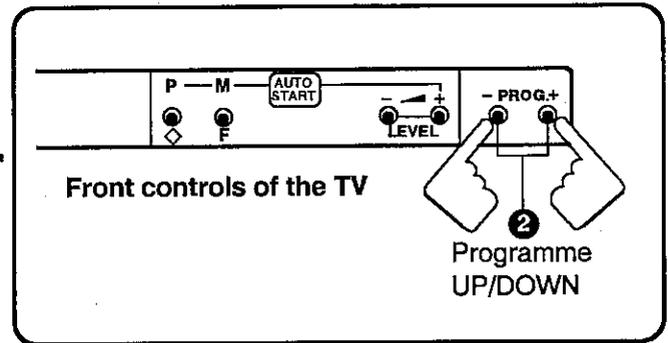


## Volume Control

To adjust the sound volume


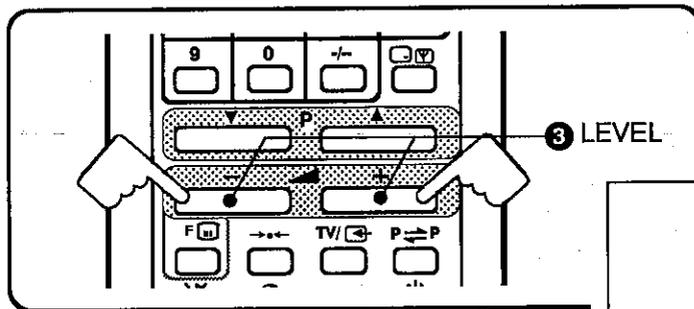


or

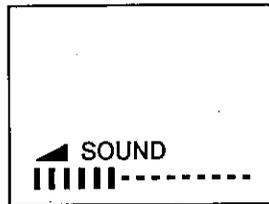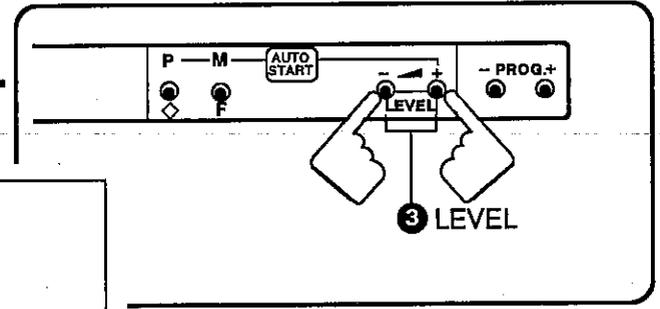

## RECALL



To display the on screen indications, press the RECALL key.

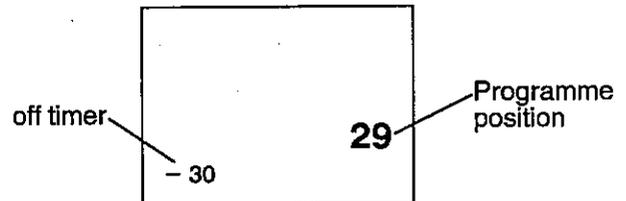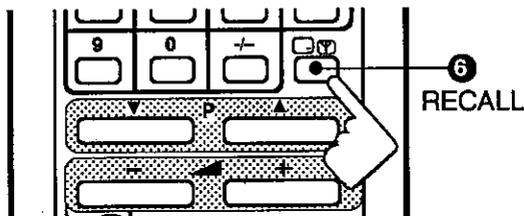

Screen display disappears after about 5 seconds.

## ALTERNATE

Press the ALTERNATE **7** key, and the programme position will alternately select the previous position and the present position.

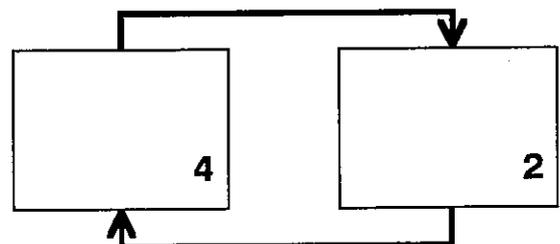
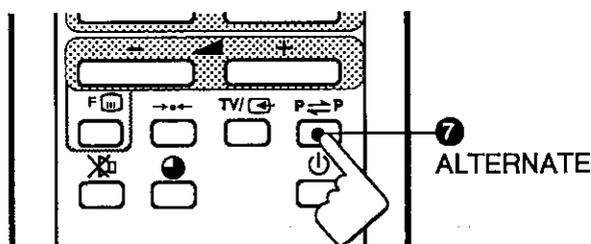


For example, now you are watching programme position "4" but you watched programme position "2" previously. If you press the ALTERNATE key, programme position "2" immediately appears.

# General Operation

## SOUND MUTE

Should you wish to mute the sound (e.g. While talking on the telephone), press the SOUND MUTE **8** key.

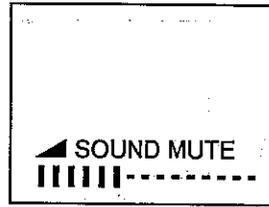
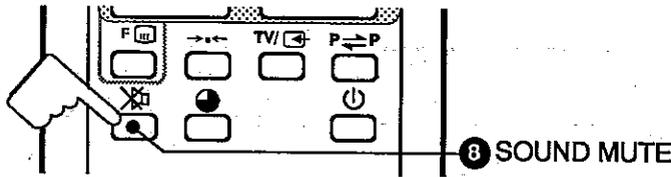


To switch the sound back on, press SOUND MUTE key again.


## OFF TIMER

The TV set will be turned off after about 30, 60, 90 or 120 minutes.

Press the OFF TIMER **9** key.

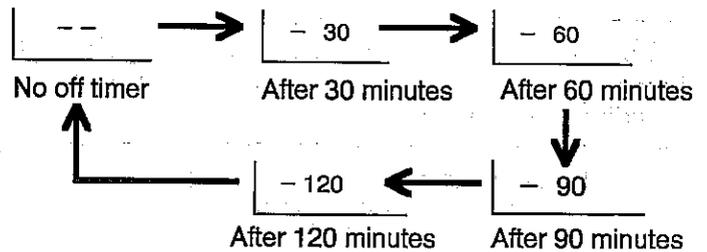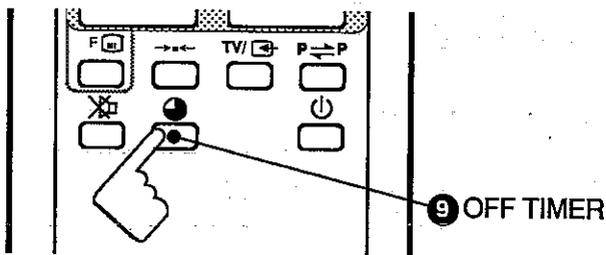

 Just one minute before switching off the TV, " - 01" and channel number will be displayed on the screen.




### To cancel the OFF TIMER


Press the OFF TIMER key until " - - " appears.

## MEMORY

This function lets you store the settings (for colour, brightness, contrast, sharpness, sound volume) in memory for both picture and the sound, and these setting levels can be recalled by pressing the NORMALIZATION **10** key of the remote control transmitter.


### To store the picture and sound settings

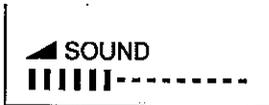- (1) Set the picture and sound to the desired levels. →  etc.
- (2) Press the MEMORY/PRESET **5** button while the control function display is still visible on the screen.

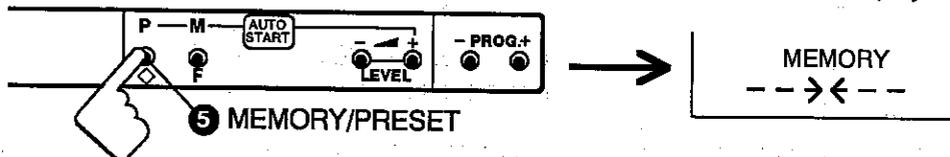


NOTE: The control settings will not be saved if the MEMORY button is pressed after the control function display has left the screen.

## NORMALIZATION

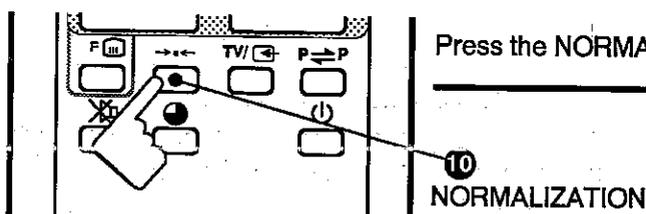

Press the NORMALIZATION **10** key.

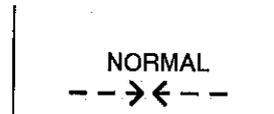



The colour, brightness, contrast, sharpness and sound volume settings which you stored using the MEMORY button are recalled.

# General Operation


## PICTURE ADJUSTMENTS

(1) Select the adjustment item using the **FUNCTION** **4** key.

(2) Adjust using the **LEVEL** **3** + and - key.

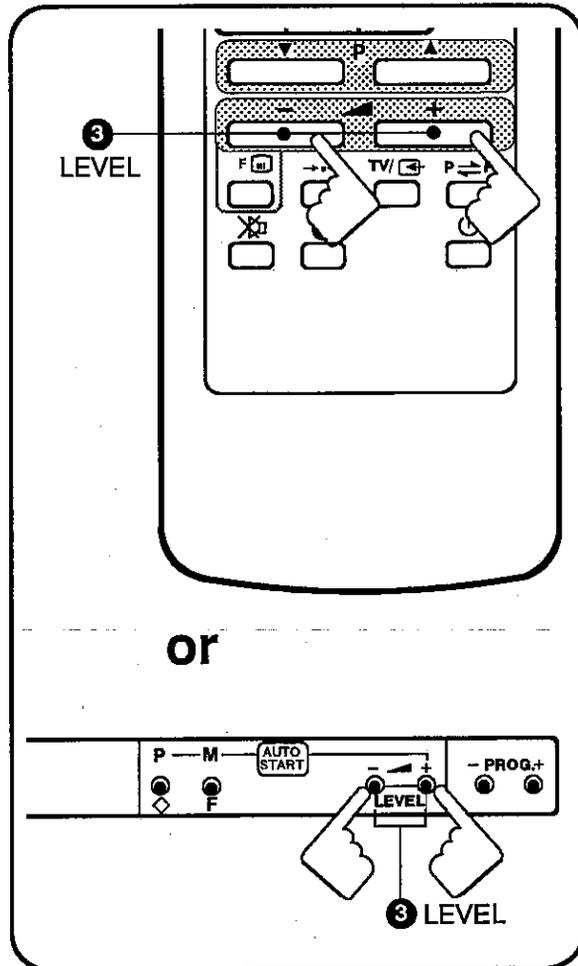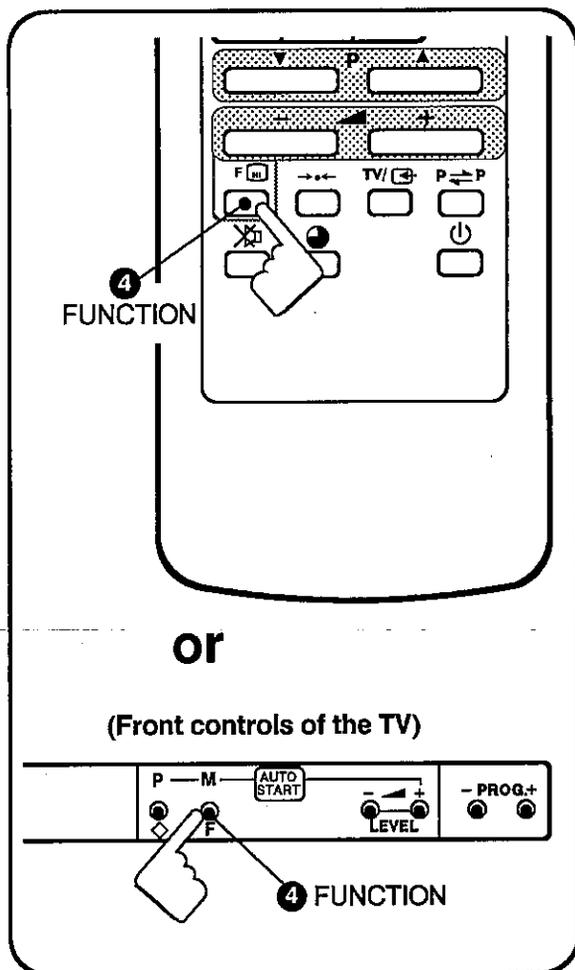

Each time the **FUNCTION** **4** key is pressed, function choice will change as follows;

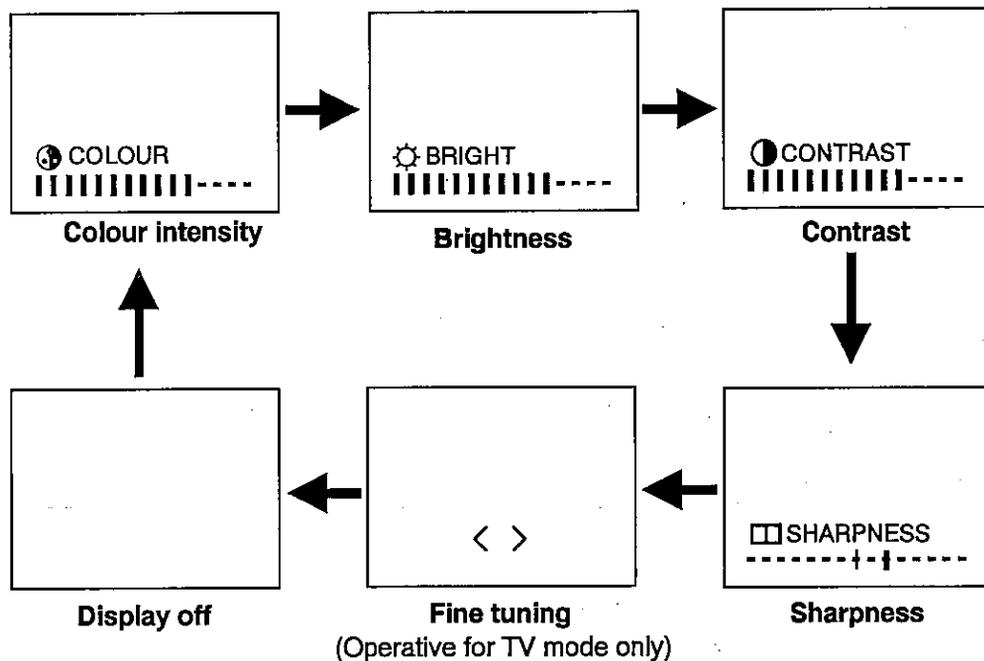

# Special Functions


You can set the special functions by inputting the special codes using the **RECALL** **6** key and the Programme Selector **2-1** of the remote control transmitter.

Special codes and special functions are as follows

Special code	Special functions
SP 00	Reset all special functions (The start condition for the TV power is changed to the standby start).
SP 01	Reset all special functions.
SP 30	Cancellation special code "31".
SP 31	Maximum volume level setting and prohibition of channel tuning function.
SP 40	Setting of the start up condition for the TV programme. (Always switched on in previous programme position)
SP 41	Setting of the start up condition for the TV programme. (Always switched on in programme position "1" )
SP 42	Setting of the start up condition for the TV programme. (Always switched on in programme position "2" )
SP 43	Setting of the start up condition for the TV programme. (Always switched on in programme position "3" )
SP 44	Setting of the start up condition for the TV programme. (Always switched on in programme position "4" )
SP 45	Setting of the start up condition for the TV programme. (Always switched on in programme position "5" )
SP 46	Setting of the start up condition for the TV programme. (Always switched on in programme position "6" )
SP 47	Setting of the start up condition for the TV programme. (Always switched on in programme position "7" )
SP 48	Setting of the start up condition for the TV programme. (Always switched on in programme position "8" )
SP 49	Setting of the start up condition for the TV programme. (Always switched on in AV mode)
SP 50	Change of the start condition for the TV power (Setting to the standby start).
SP 51	Change of the start condition for the TV power (Setting to the normal start).
SP 60	Cancellation special function 61.
SP 61	Suppression of the auto shut off function.

Note: Special functions are not cancelled when the power is turned off or when the AC power plug is disconnected from the mains.

**Example: To input special code "49"** (The input method is the same for all the special codes.)

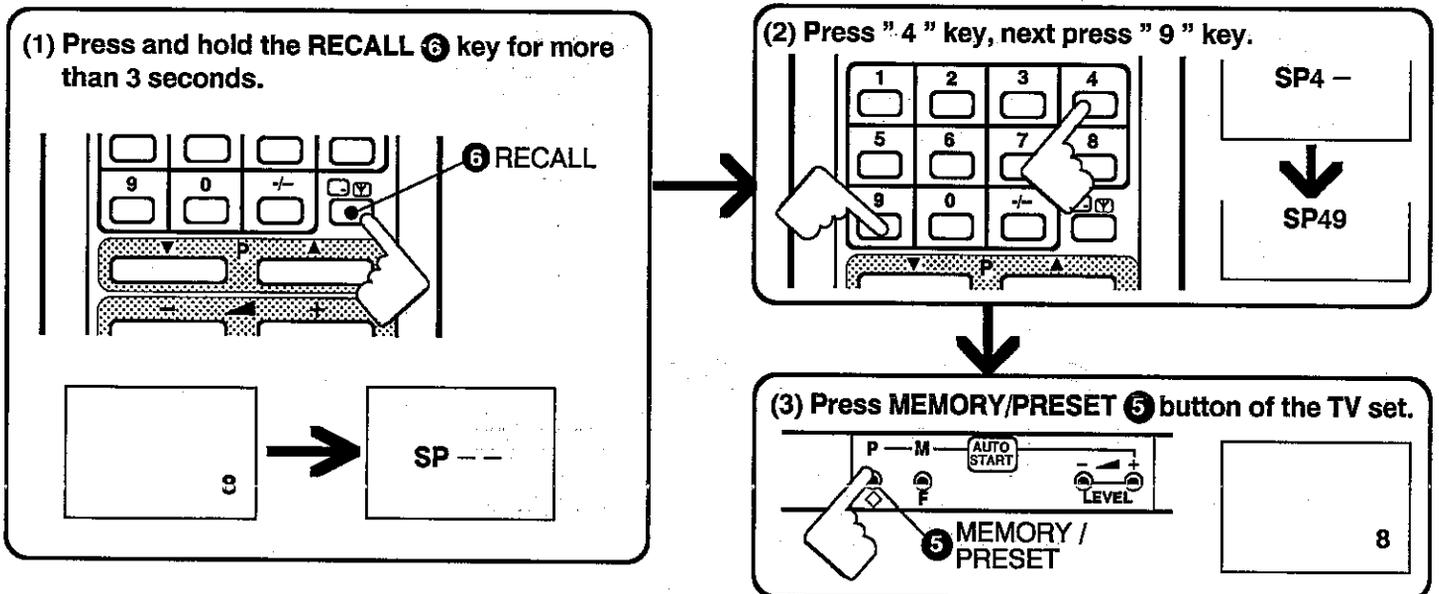

# Special Functions

## SP00 and SP01 (Reset all special functions)

■ When "SP01" is input, all special functions are reset.


■ When "SP00" is input, all special functions are cancelled, and the start condition for TV power is changed to the standby start condition, meaning that the picture will not appear even when the mains ON/OFF switch ❶ is set at the on position. To turn on the TV set from the standby mode, press the Power ON/OFF ❶-❶, Programme UP/DOWN ❷ or Programme Selector ❷-❶ key.

## SP 31 (Maximum volume level setting and suppression of channel tuning function)


"SP31" is used to set a limit for the maximum volume level while keeping the current preset programme position in memory.

When "SP31" is entered, the volume output at the time of entering the code is placed in the memory as the maximum volume level. In other words, with this code it is possible to set the maximum volume at your preference. Entering this code automatically suppresses the preset function, so that even if the preset button is pressed, the preset mode will remain inactive.

(1) Set the desirable volume level using the LEVEL ❸ key.

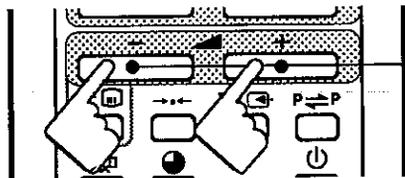

❸ LEVEL

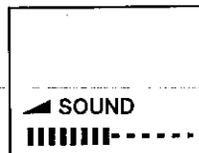

The volume level set in this procedure will be memorized as the maximum volume level.

(2) Input "SP31".

To cancell "SP 31", Input "SP 30".

## SP50 and 51 (Change of the start condition for the TV power)


When "SP 50" is entered, the start condition of the TV power is set to the standby start condition, meaning that the picture will not appear even when the Mains ON/OFF switch ❶ is set at the on position(The TV set remains in standby mode).

To return the TV's power start condition to its original condition(normal start condition), input "SP51".

## SP60 and SP61 (Suppression of the auto shut off function)

When "SP 61" is entered, the auto shut off function is suppressed.

AUTO SHUT OFF  
(Refer to page 4)

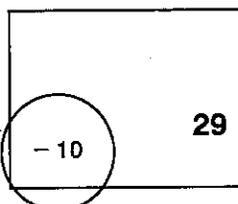


To cancell "SP61", Input "SP60".

# Special Functions

## SP40 —SP49 (Start condition for TV programme)

These functions can be used to change the start up condition of the TV set as follows;


When "SP40" is input

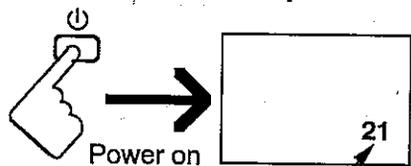

Previous programme position


The previously viewed programme position is always selected.

When "SP41" is input

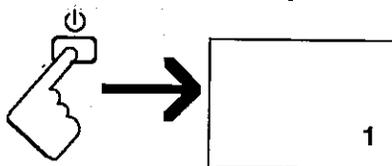


The TV will always switch on in programme position 1.

When "SP42" is input

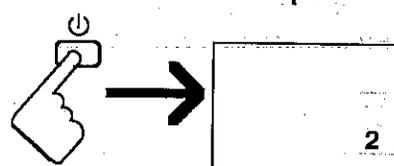


The TV will always switch on in programme position 2.


"SP43"

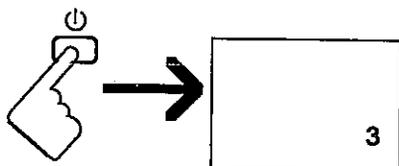


"SP44"

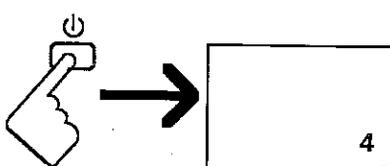


"SP45"

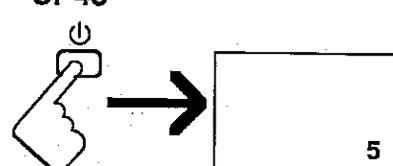


"SP46"

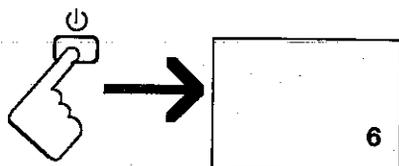


"SP47"

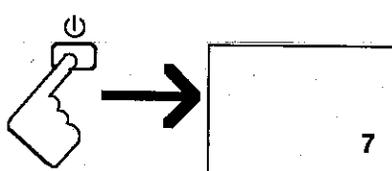

"SP48"

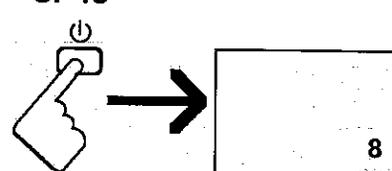

"SP49"

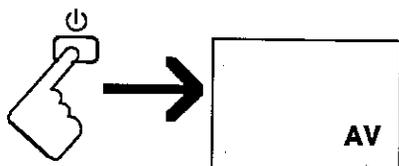

The TV will always switch on in AV mode.

# Tuning of the Channels

Up to 30 broadcast stations in your reception area can be stored in the electronic memory.

There are three ways of tuning as follows;

## Automatic Tuning (the basic way)

All receivable channels are automatically tuned in and memorized in consecutive programme position.

## Search Tuning



Use to preset a receivable channel in any desired programme position, e.g. the position with the same number as the channel.

## Manual Tuning



Manually tune a channel if it cannot be automatically tuned, such as when the signal is poor.

### Automatic Tuning

(1) Press the MEMORY/PRESET button **5**.

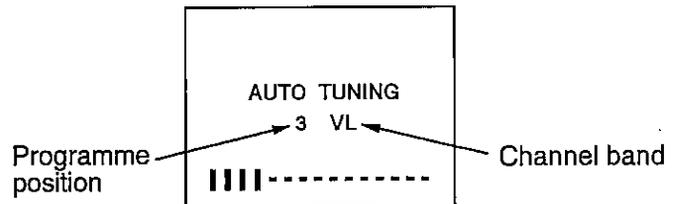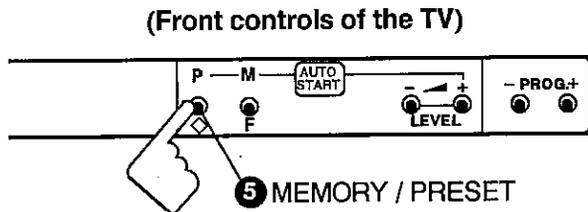


(2) Press the LEVEL(+) **3** button.

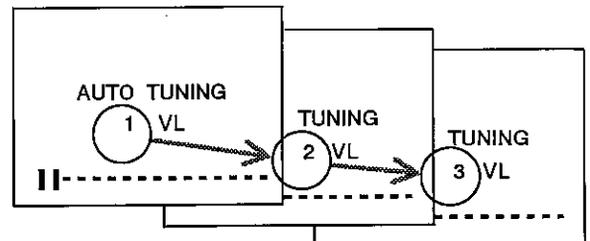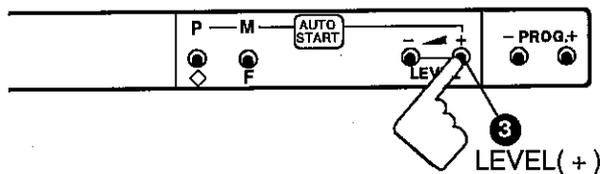

The channels are preset in consecutive positions beginning from the programme position "1".

After all available channels have been preset, the unit returns to the position "1".


Note: To cancel automatic tuning midway, press the MEMORY/PRESET **5** or Power ON/OFF **1-1** button.

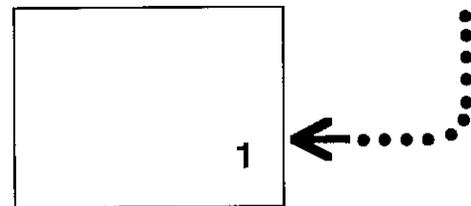


### Channel Copy

**Example: To copy the TV channel in the programme position 2 into the programme position 6**


(1) Select programme position 2 using Programme selector **2-1**.

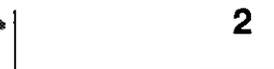


(2) Press the MEMORY/PRESET button **5** 3 times.

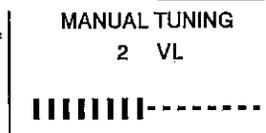

(3) Select the programme position 6 using Programme UP/DOWN **2** button of the TV set.

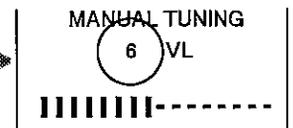

(4) Press FUNCTION button **4**.

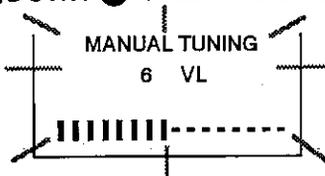


(5) Press the MEMORY/PRESET button **5**.




# Tuning of the Channels

## Search Tuning & Manual Tuning

Example: To preset a channel in programme position 6

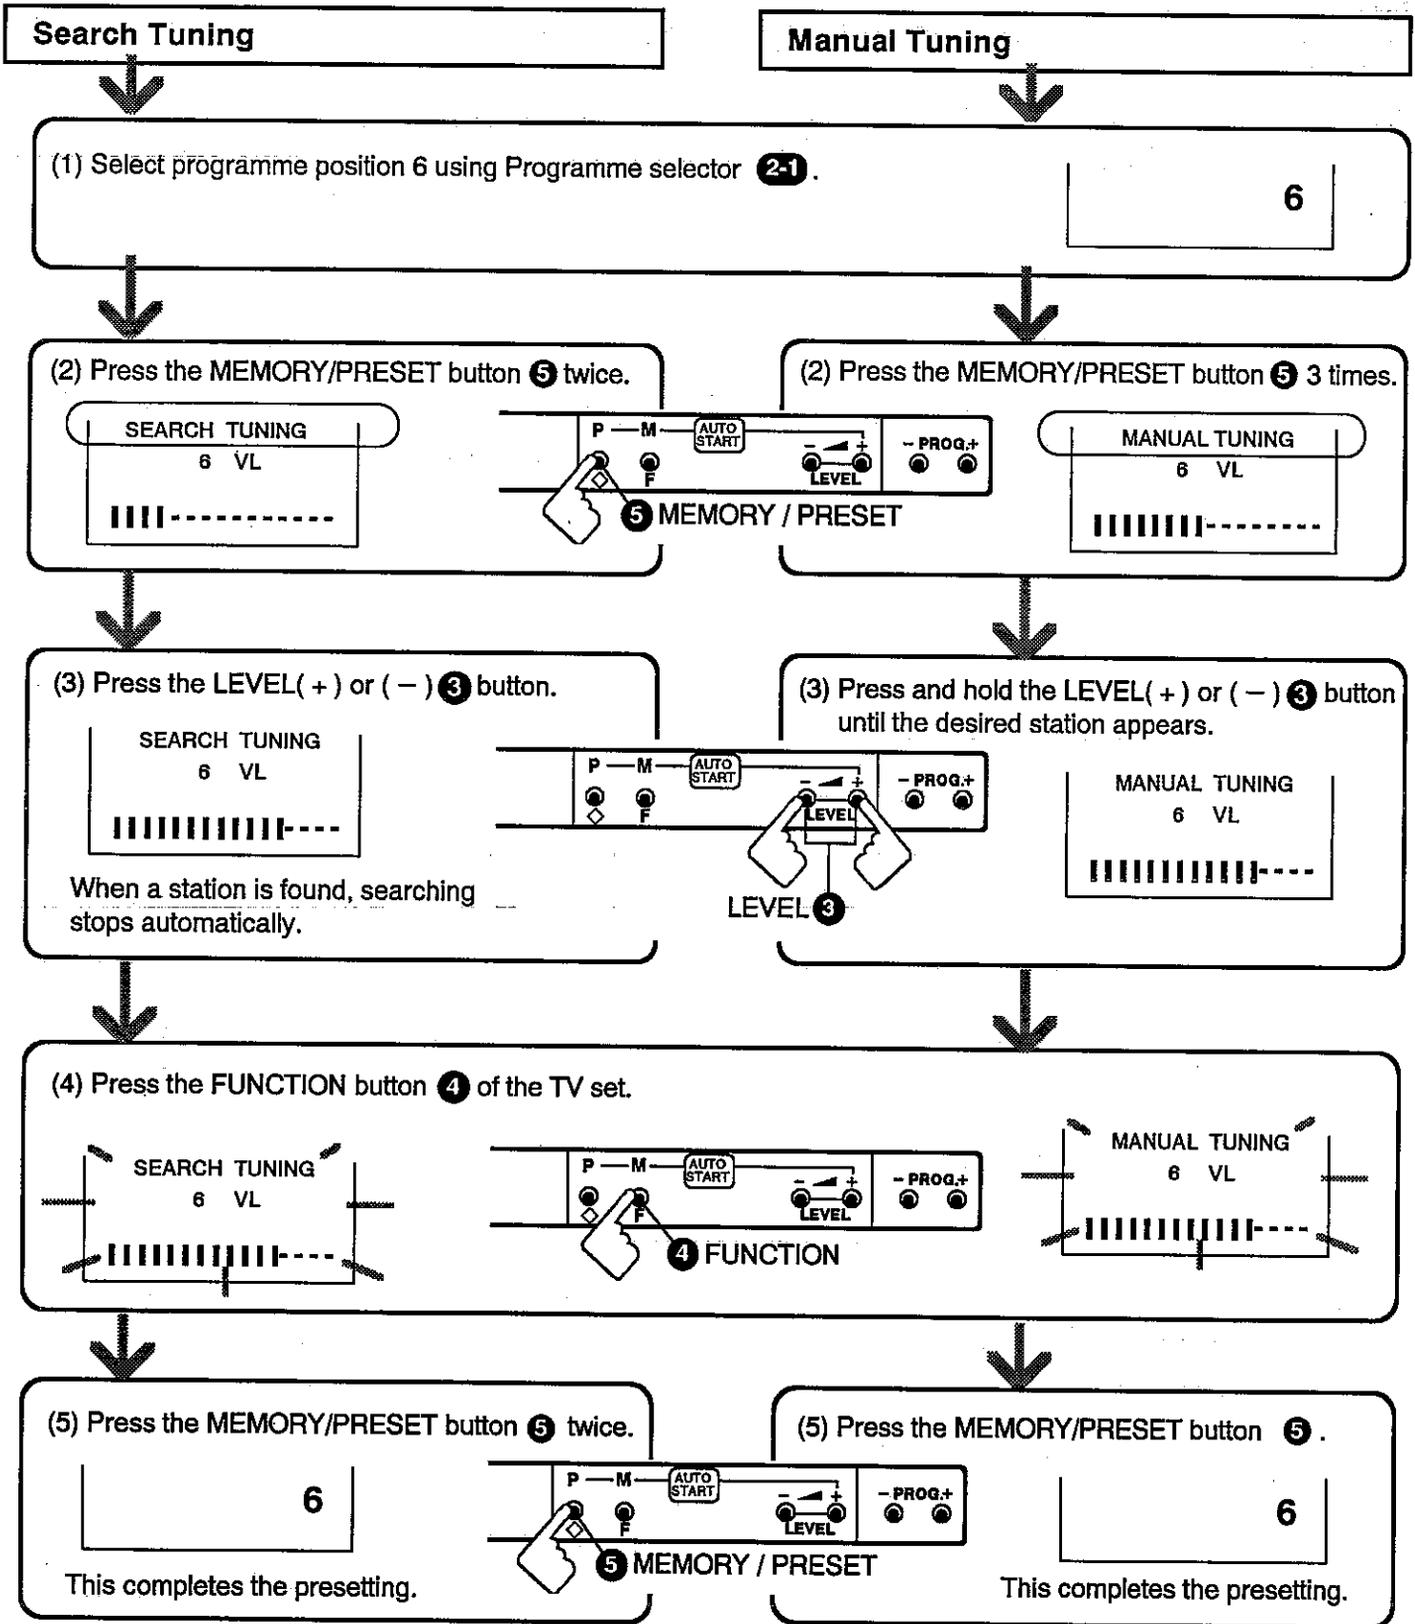


Repeat steps 1 to 5 for other desired channels.

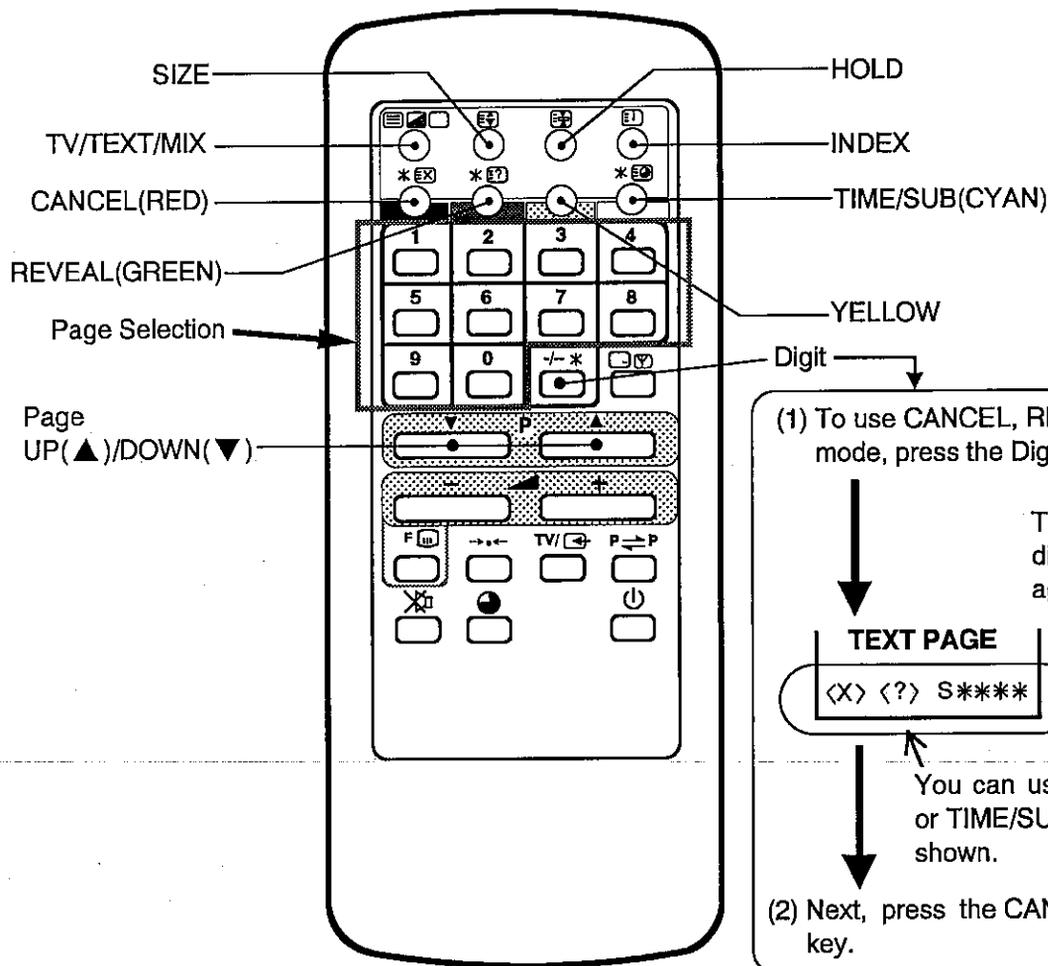

## Switching to the Teletext mode


Press the TV/TEXT/MIX button, and the screen changes as follows:

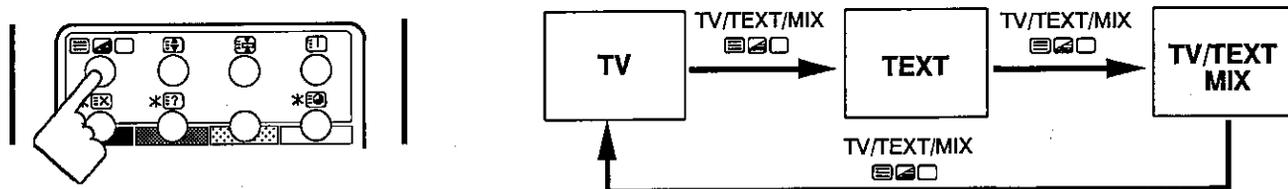


## Page Selection

### Direct Page Access

A Teletext page can be selected with the "0" to "9" buttons.

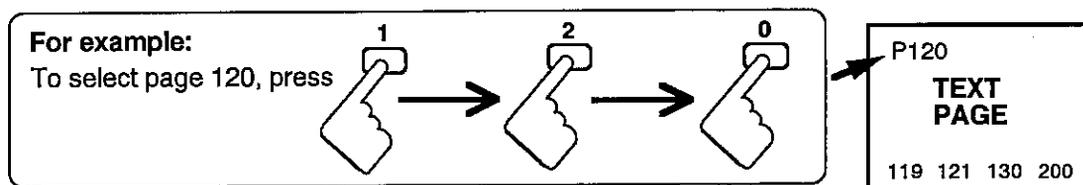


### UP-DOWN Page Access

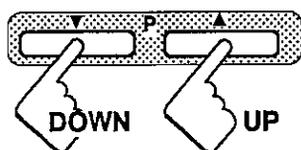

Press the Page UP (▲) button to step up to the next higher Teletext page.  
Press the Page DOWN (▼) button to step down to the next lower Teletext page.

## To display the Index Page

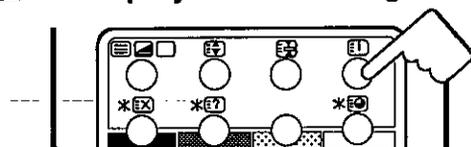


To return to the index page, press the INDEX button


## Sub-Coded Page Access

When a Teletext information page exceeds more than one screen of information, it may take some time for the automatic changing of the sub-pages to reach the sub-page you require. It is possible to enter your required sub-page and continue watching the normal programme until the correct sub-page is found.

- (1) Select a text page which has sub pages.
- (2) Press the Digit button.

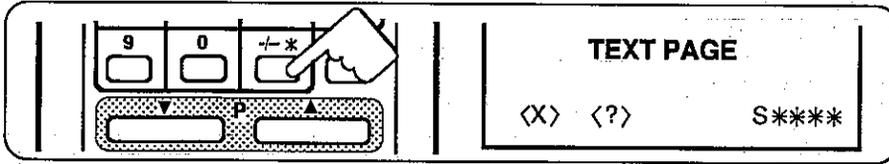


- (3) Press the TIME/SUB button.

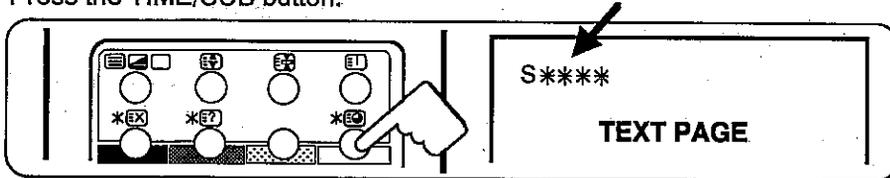


To go back to normal Teletext page entry mode, press the Digit button again.

- (4) Enter the desired sub-page.

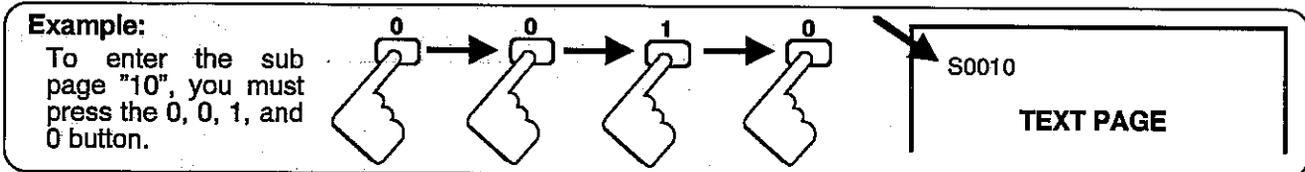


- (5) Press the CANCEL button.

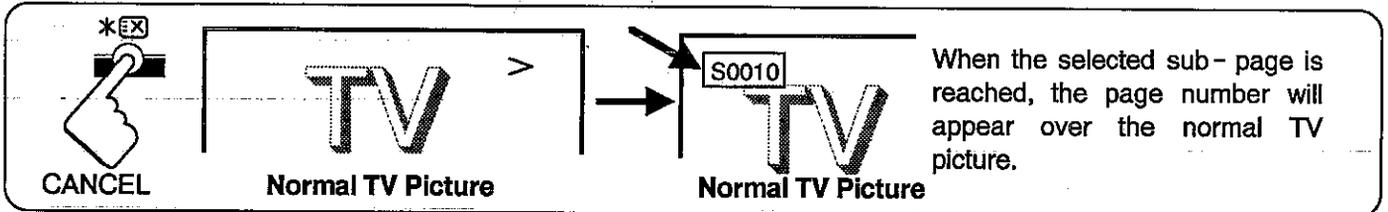

When the selected sub-page is reached, the page number will appear over the normal TV picture.

- (6) Press the TV/TEXT/MIX button to display the received sub-page.

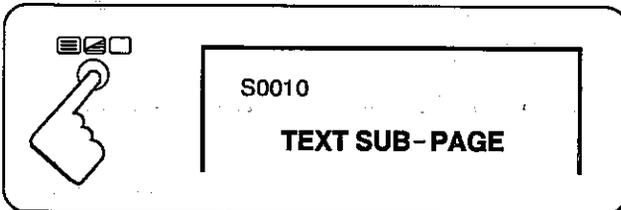


**Note:**

To clear the sub-coded page, enter a new page number.

It is not possible to select another television station during a sub-page access operation.

## Viewing TV while searching for a page


In some cases it can take some time to look for a page. In the interval you can view the TV by pressing the Digit and CANCEL button.

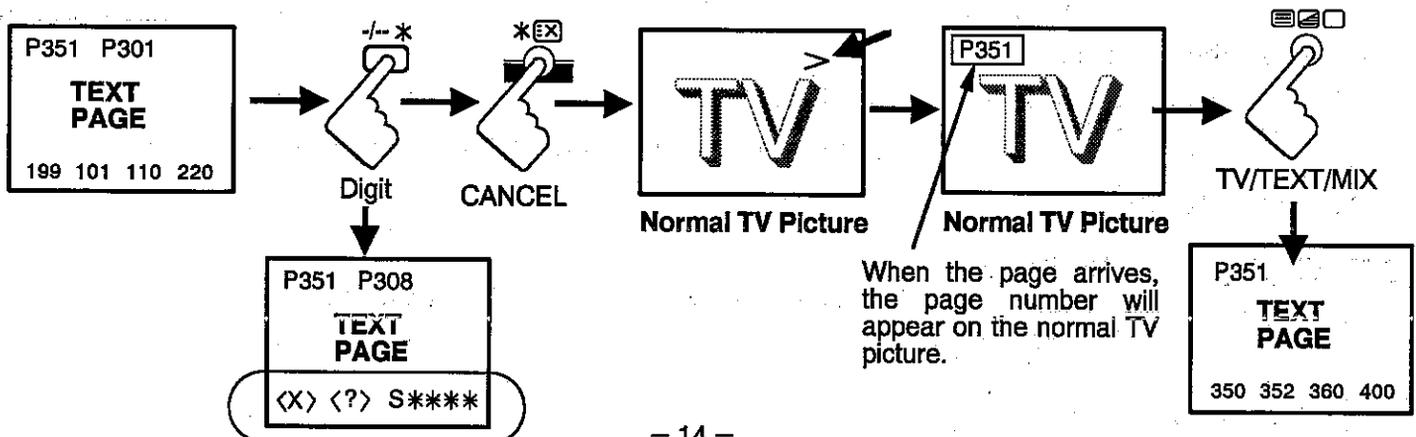

# Teletext Use


## ■ HOLD

When a text page has sub-pages, you can prevent the sub page being automatically changed by pressing the HOLD button. Press the HOLD button again to resume page change or enter a new page number.

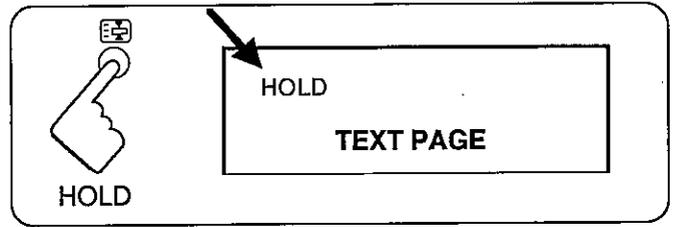


## ■ Double letter height

Either the top or bottom half of the display can be expanded by pressing the SIZE button.

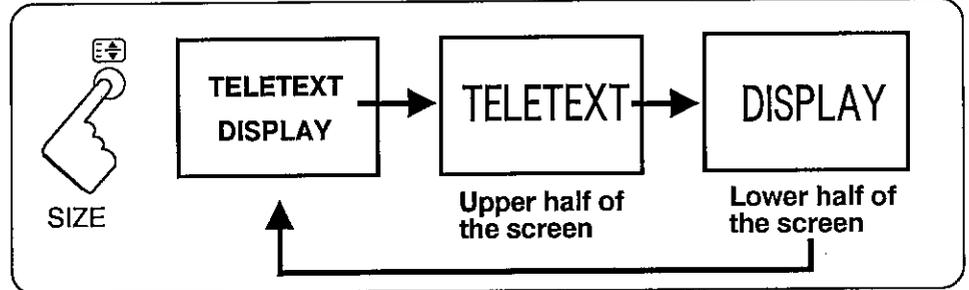


## ■ Displaying concealed information


Some of the text pages are in the form of a quiz or puzzle. The answer to these can be revealed by pressing the Digit and REVEAL button.

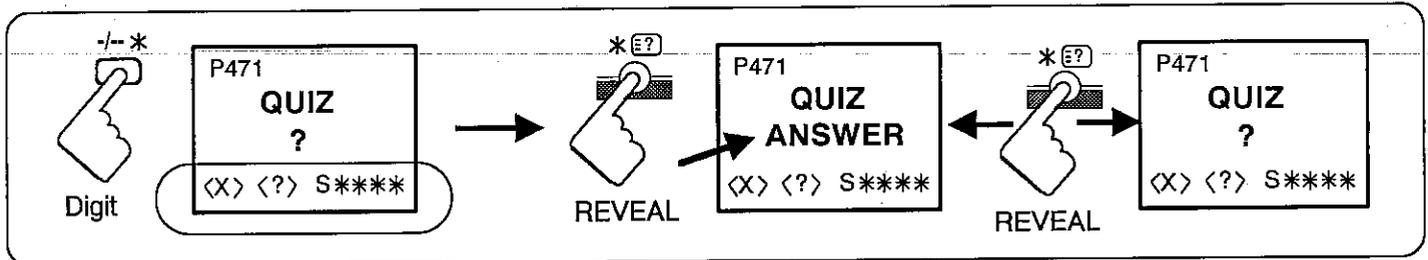

## ■ News flash

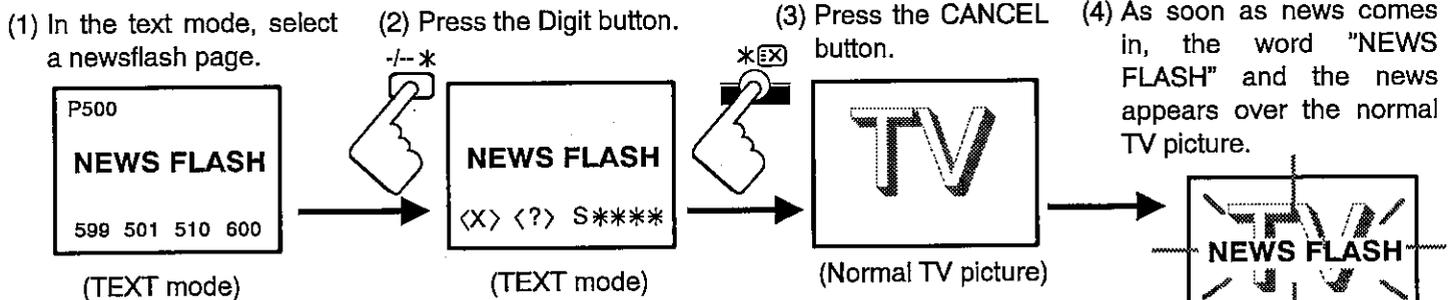

Note: It is not possible to select another TV station during a NEWS FLASH. You should first switch back to TV reception by pressing the TV/TEXT/MIX button.

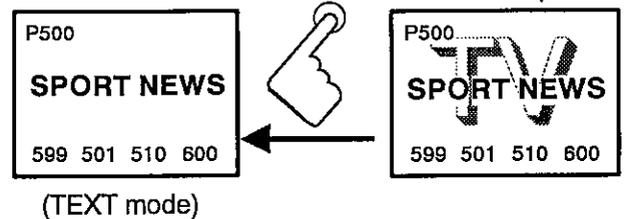


# Teletext Use

## ■ Updated Page

There are pages which are updated as events progress, such as sports results, news reports and traffic information.


If you have selected one of the above pages from the list of contents and you want to view television but still be kept informed about the other events;

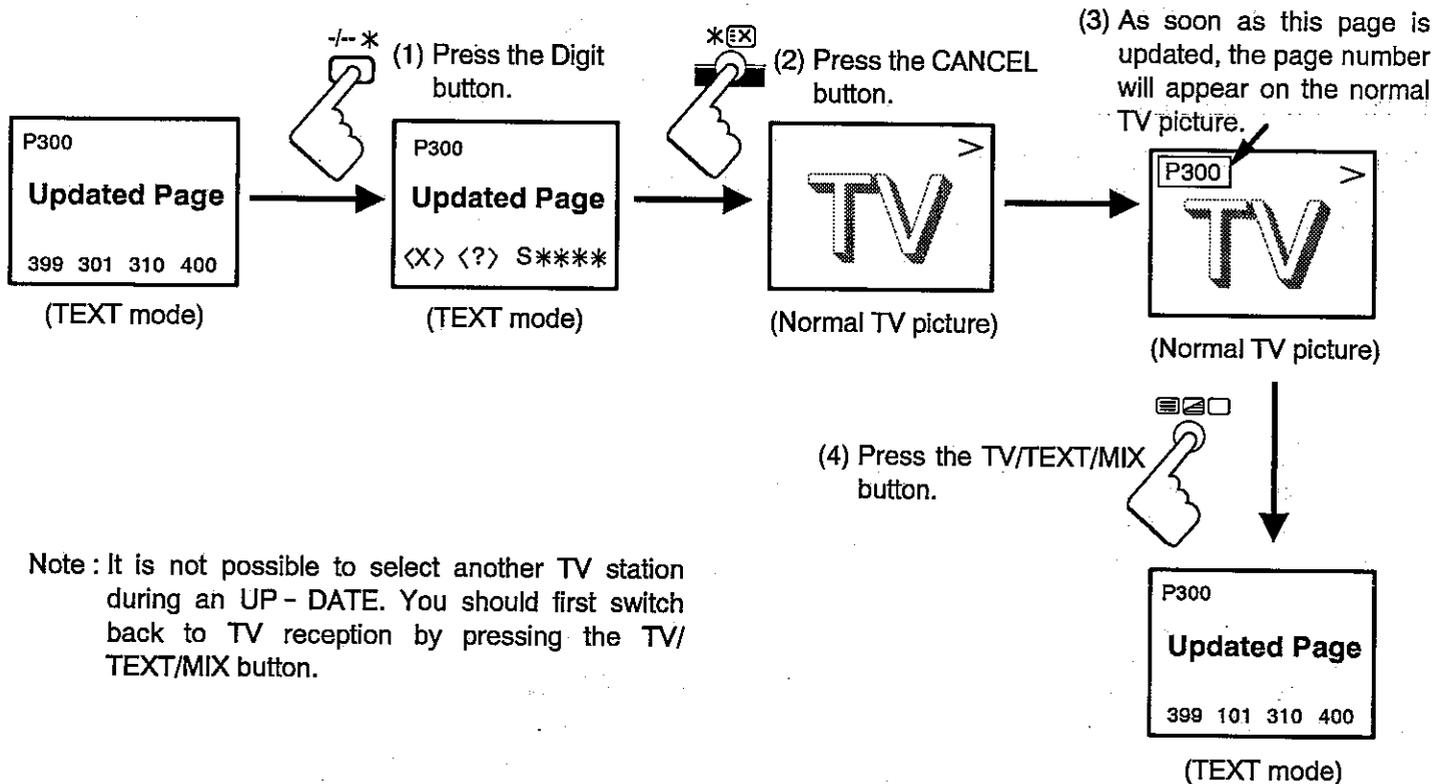

## ■ TIME \*E⓪

If the time is required while a programme is being viewed, press the TIME/SUB \*E⓪ button.

Providing that the channel being viewed is also transmitting teletext, the time will appear at the top righthand of the screen for five seconds. The digits displayed represent hours/minutes/seconds.

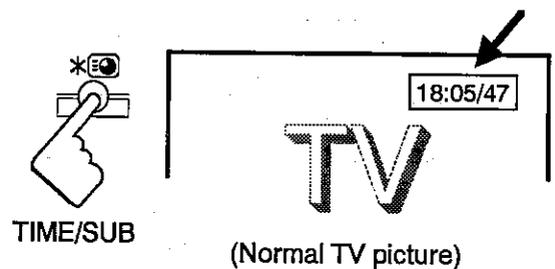

# Teletext Use


## ■ FLOF (FLOF: Full -level -one feature)

When a broadcasting station provides FLOF service, you can access the text pages you desire quickly and easily.

In the FLOF mode, four Fasttext topics are displayed at the bottom of the screen. These can be selected by pressing the corresponding coloured button (Red, Green, Yellow, Cyan) on the remote control transmitter. For example, when the Red button is pressed, the topic written in red is selected.

To get back to the initial index page, press the INDEX button.

(FLOF mode)

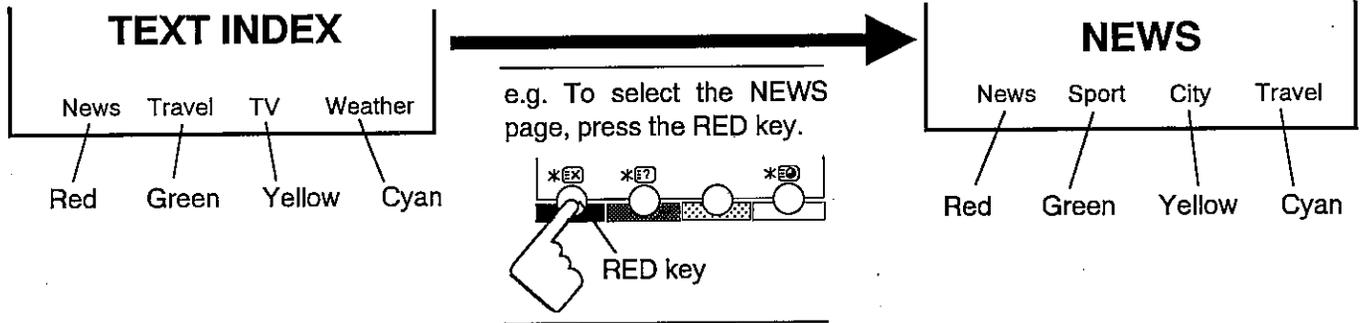


## ■ Non-FLOF Service

When the station does not have FLOF service, the INDEX page (P100) is automatically displayed.

At the bottom of the screen, the four page numbers 199, 101, 110, 200 are also displayed. Then, when you select a random page number out of the displayed four pages by pressing a colour button, the text of that page is displayed.

Of course at any time you can select new pages by inputting new numbers.

(Non FLOF mode)

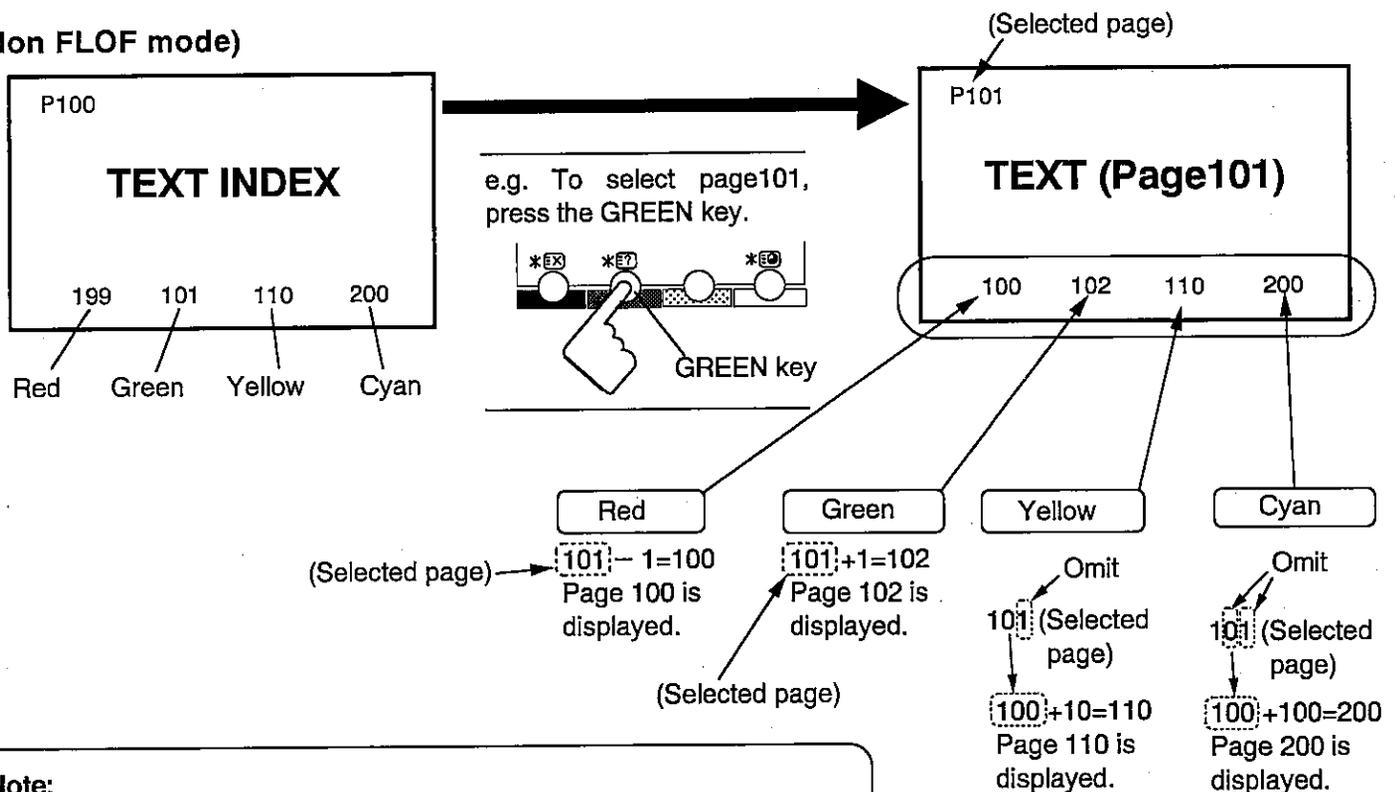


### Note:

If your aerial signal is poor, the teletext reception may be poor.

# Connecting other Equipment

## Connecting to the AV input jacks

(A/V Terminal)

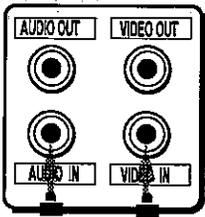

Rear of the Set

Connect the video and audio outputs of a VCR, video disc player, etc. to the input jacks of this TV set. Tapes and discs can be played back.

VIDEO/AUDIO Input level

	Level	Impedance
VIDEO INPUT	1.0Vp-p	75 Ω
AUDIO INPUT	436mVrms	More than 40K Ω

PLAYBACK

to Video Output ⇒


VCR



to Audio Output ⇒

To watch the video input picture

(1) Press the TV/AV Selector **11**.

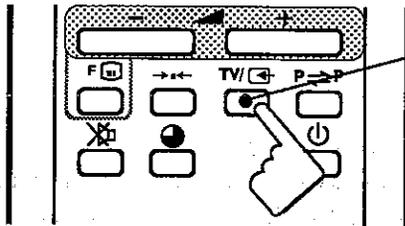

**11** TV/AV Selector

28

AV


(2) Set the VCR to playback mode.

To return to the TV mode;

Press the TV/AV Selector again.

## Connecting to the AV output jacks

(A/V Terminal)

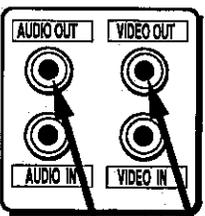

Rear of the Set

The AV output terminal provides audio and video output for TV broadcasts being received. They are used to record TV broadcasts.

To record TV broadcasts, Select the TV mode using TV/AV Selector **11**

to video input ⇒

VCR for recording



to audio input ⇒


Recording TV broadcasts

VIDEO/AUDIO output level

	Level	Impedance
VIDEO OUTPUT	1.0Vp-p	75 Ω
AUDIO OUTPUT	436mVrms	Less than 600 Ω


# Connecting other Equipment

## To record a TV broadcast while watching the playback from a VCR

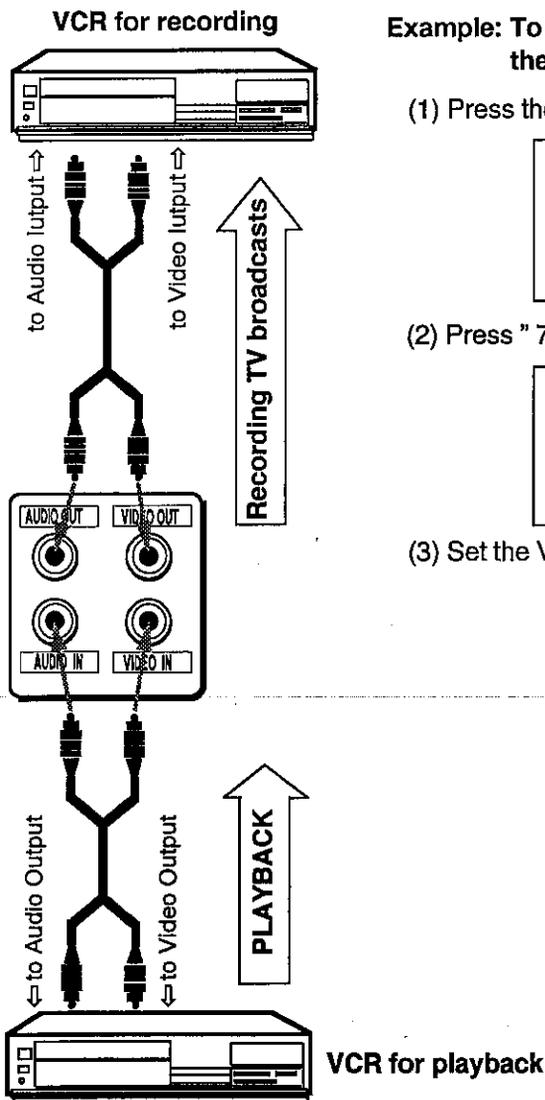


Example: To record a TV broadcast of programme position " 7 " while watching the playback from a VCR,

(1) Press the TV/AV Selector **1** , and set the VCR to playback mode.

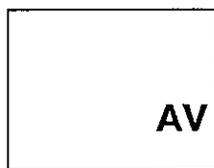

(2) Press " 7 " key of the Programme Selector **2-1** .

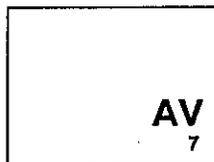

(3) Set the VCR for recording to the recording mode.

## AV connection to the aerial socket



The AV apparatus can also be connected to the aerial socket of your TV receiver.

### Presetting to watch the video input

- (1) Play back the VCR.
- (2) Tune a channel in programme position 0 (See Search tuning & Manual tuning on page 13).

### Watching the video input

Select programme position 0.

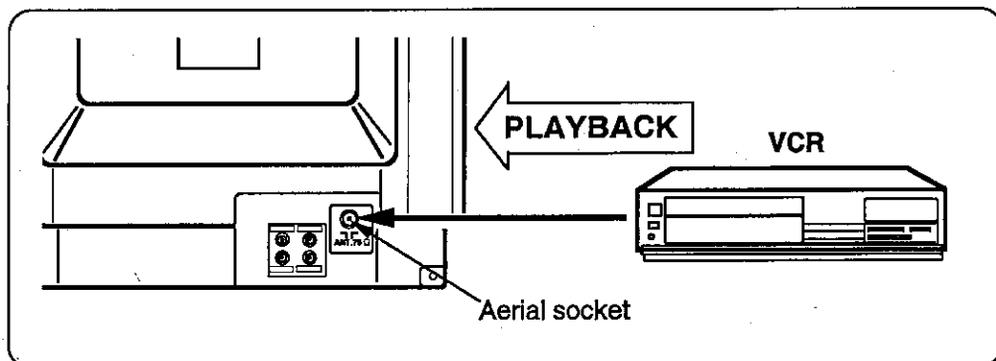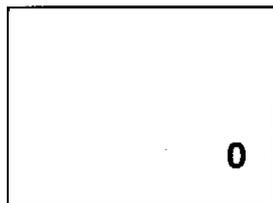

For further details concerning this connection and adjustment, refer to the operating instructions for the AV equipment.

# Specifications

---

Power source AC 220-240 Volts, 50Hz.

Receiving system PAL-B/G

Channel coverage VHF: 0-11, 5A  
UHF: 28-69

Aerial input impedance 75  $\Omega$

Audio output 3.5W

Ext. terminals AV Inputs:  
Video input(Phono jack) x 1  
Audio input(Phono jack) x 1  
AV Outputs:  
Video output(Phono jack) x 1  
Audio output(Phono jack) x 1  
Headphone jack(Mini jack) x 1

Dimensions 506(W) x 469(H) x 483(D)mm

Weight approx. 20 Kg

*Specifications subject to change without notice.*

The SANYO logo consists of the word "SANYO" in a bold, sans-serif font. The letter "A" is stylized with three vertical lines passing through it.

---

SANYO ELECTRIC Co., Ltd