


# SANYO

**INSTRUCTION MANUAL**

**C28WK1N  
C28WK1S**

**Colour Television**

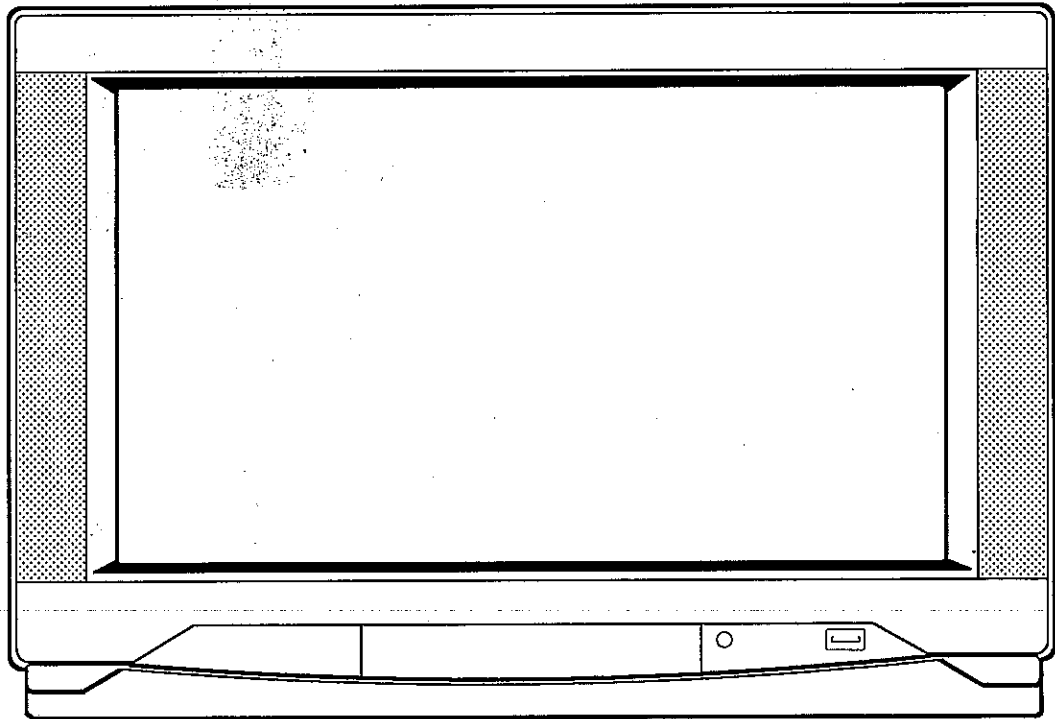

**STEREO** ( Equipped with NICAM Digital Stereo Decoder and West Germany Stereo Decoder)

**SURROUND**

**TELETEXT (FLOF)**

**S-TERMINAL**


**FUZZY LOGIC PICTURE CONTROL**

# Contents

Aerial Connection.....	2
Warnings and Cautions.....	3
Controls.....	4
Operation of the TV set	
Switching ON/OFF, Auto Shut OFF.....	4
Programme Selection.....	4
Sound Volume Adjustment, Picture and Audio Adjustment, Memory, Headphone Jack.....	5
Colour System Selector, TV System Selector.....	6
Remote Control Operation	
Switching ON/OFF, Programme Selection.....	7
Sound Volume Adjustment, Audio Adjustment....	7
Picture Adjustment, Fuzzy ON/OFF.....	8
AV Selector, Recall, Selecting Language of the Screen Display.....	8
ALT(Alternate), Sound Mute, Normalization.....	9
Off Timer, Surround ON/OFF.....	9
Stereo/Mono Selection, Bilingual A/B Selection...	9
Picture Size Selector.....	10
VCR Use, Battery Installation.....	11
Pre-Setting of Stations.....	12
Inserting Channels and Deleting Channels.....	14
Teletext Use .....	15
Connecting other Equipment.....	19
Specifications.....	23

(Model C28WK1N only)

Either English or Chinese can be selected as the language of the screen display. Refer to page 8.

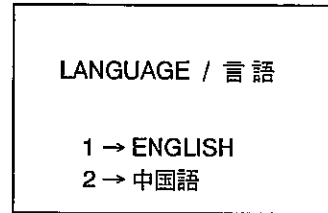

Language selection mode

## Electric Mains

### Model C28WK1N :


AC 110/127/220/240 volts 50Hz/60Hz.  
(Range of operation: 80V min. – 290V max.)

### Model C28WK1S :

AC 220 – 240 volts 50/60Hz.


## Aerial Connection

Connect the cable with a plug from a UHF (or VHF) aerial to the aerial socket on the cabinet back.

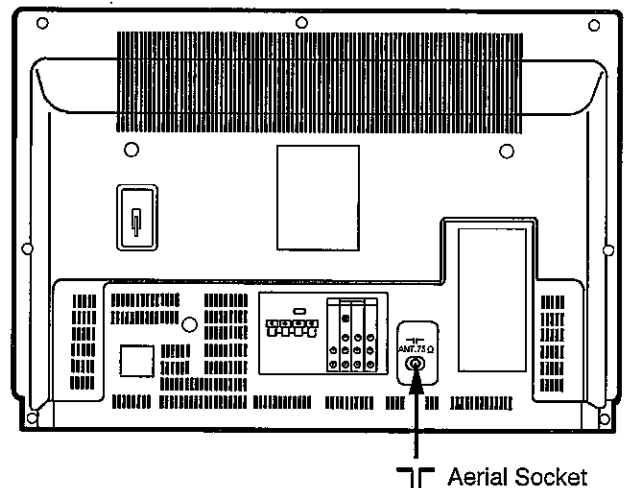


For all aerial circuit problems please consult your local dealer.

# Warnings and Cautions

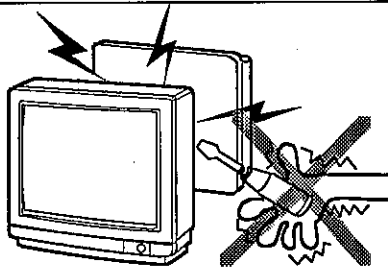


## Warning

High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

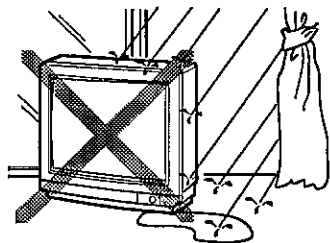


## Warning

To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

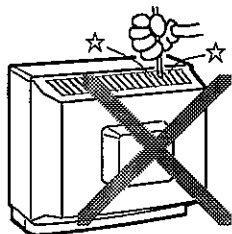


## Warning

Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

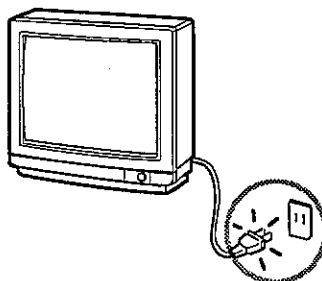


## Caution

When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

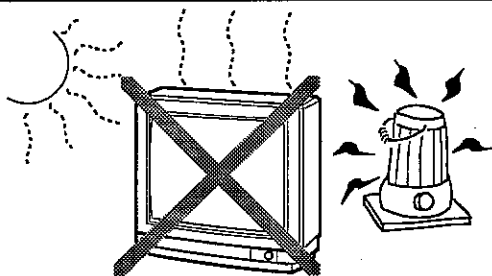


## Caution

Avoid exposing the television receiver to direct sunlight and other source of heat. Do not stand the television receiver directly on other products which give off heat. E.g. video cassette players, audio amplifiers.

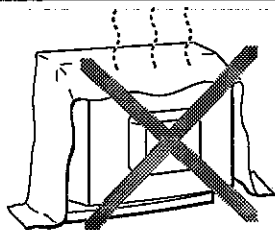

## Caution


Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

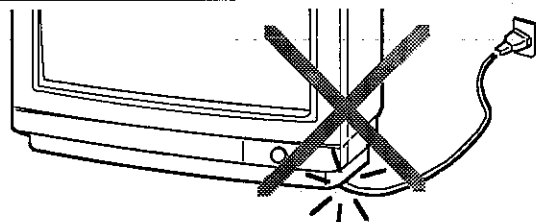

## Caution

Do not squash power supply cord under the television receiver.

## Controls

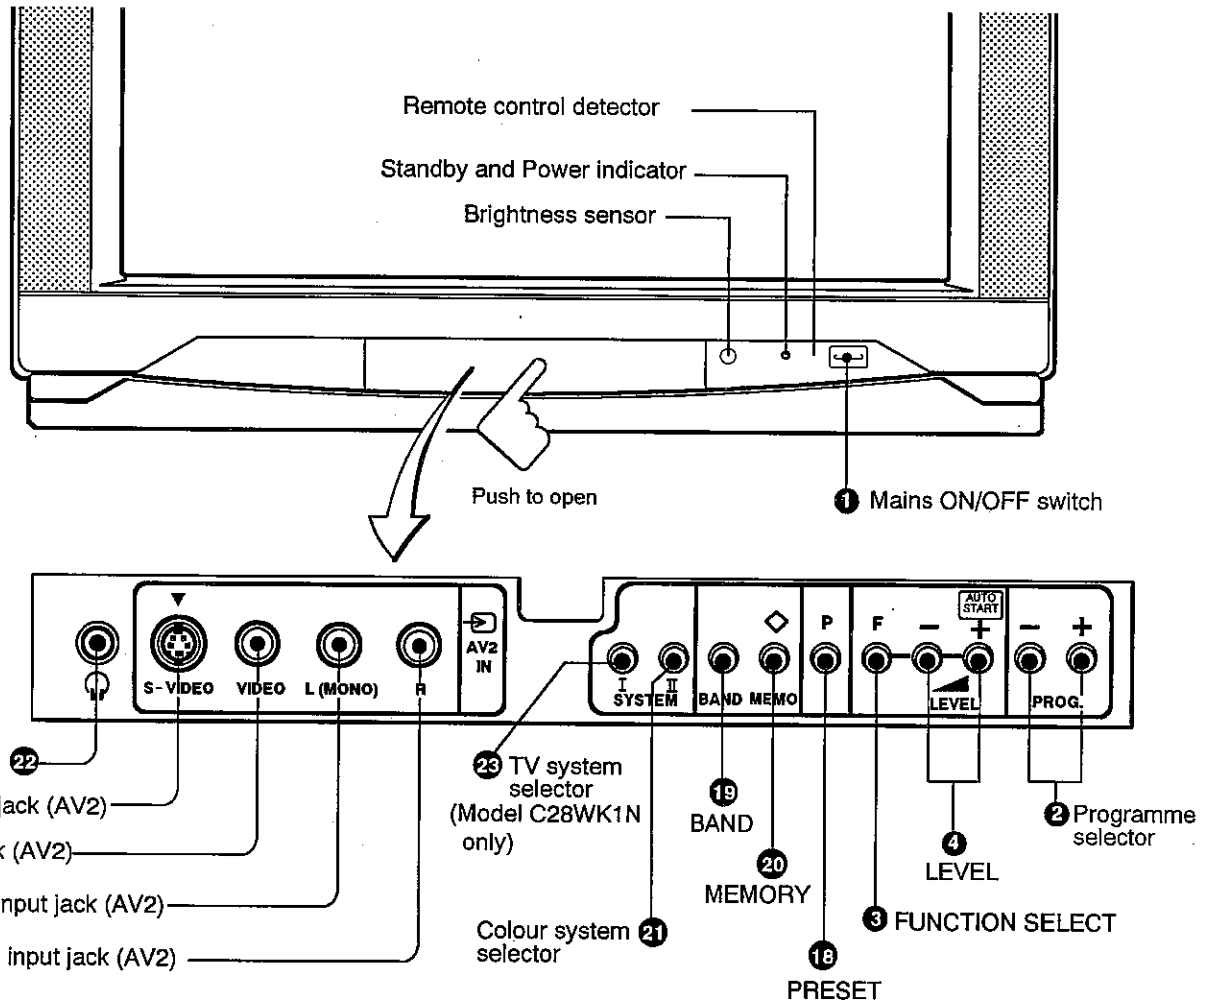

### SWITCHING ON/OFF

#### To turn on the TV :

Press Main ON/OFF switch **1** .

#### To turn off the TV:

Press the Power ON/OFF button **1-1** on the remote control transmitter, and the TV changes to the standby mode. During the standby mode, the standby and power indicator illuminates more brightly than during the power-ON mode.

Press this button **1-1** to turn off the unit for short periods of the time.

#### To turn on the TV from the standby mode:

Press one of these button.

- Power ON/OFF **1-1** of the remote control transmitter.
- Programme Selector **2** or **2-1**.
- Programme UP/DOWN **2-2** of the remote control transmitter.

#### To cut off the mains power completely:


Press the Main ON/OFF switch **1** .

**Important !** Be sure to set the Main ON/OFF switch **1** to the off position, if the power failure occurs while viewing.

### AUTO SHUT OFF

This TV set incorporates the AUTO SHUT OFF function. Even if the TV is left on after you have gone to sleep, the TV set changes to the standby mode within 10 minutes after all broadcasts have ended.

Note : AUTO SHUT OFF also functions for the AV mode even when there is no signal being transmitted. The remaining time for AUTO SHUT OFF is displayed on the screen.

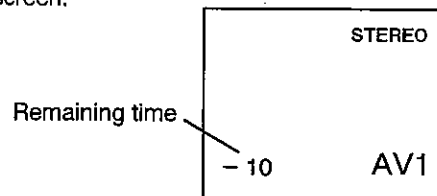

### PROGRAMME SELECTION


Press the right side (+) of the programme selector **2** of the TV set, and the TV set will step up to the next station, i.e ; 1, 2, 3 ...59, VCR, 1, 2, 3 .....

Press the left side (-), and the TV set will step down to the previous station.


# Operation of the TV set

## SOUND VOLUME ADJUSTMENT

To adjust the sound volume, press + or - LEVEL 4 button.

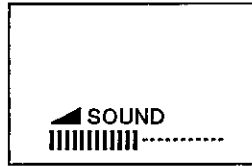


## PICTURE AND AUDIO ADJUSTMENT

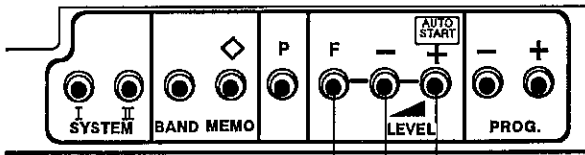

FUNCTION SELECT 3      4 LEVEL

- 1 Press FUNCTION SELECT 3 button to select a control function.  
Each time FUNCTION SELECT button is pressed, the control function changes as follows.

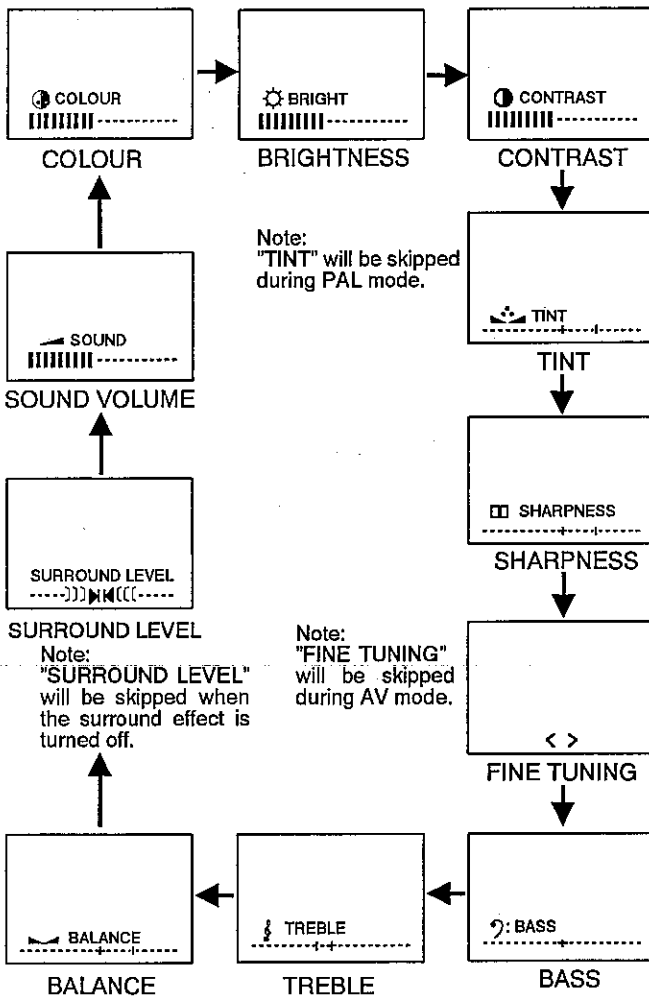


- 2 Press LEVEL (+ or -) 4 button to adjust each control level.

## 20 .... Memory ◇


This function lets you store the settings (for colour, brightness, contrast, video tone, tint, sound volume, bass, treble, balance and surround effect) in memory for both picture and the sound, and these setting levels can be recalled by pressing Normalization →← 15 button of the Remote Control Transmitter.

To store the picture and sound settings;

1. Set the picture and sound to the desired levels.

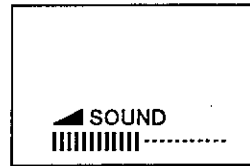

2. Press the MEMORY ◇ 20 button while the Control Function display is still visible on the screen.

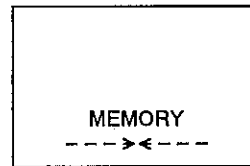

When the Memory button is pressed, "MEMORY" is displayed on the screen.


Note: The control settings will not be saved if the Memory button is pressed after the Control Function display has left the screen.

## 22 .... Headphone Jack 🎧

Insert the headphones plug into this jack to listen to either stereo or monaural sound via a headphones set.

Note: No sound will be heard from the speakers when the headphones plug is connected to this jack.

# Operation of the TV set

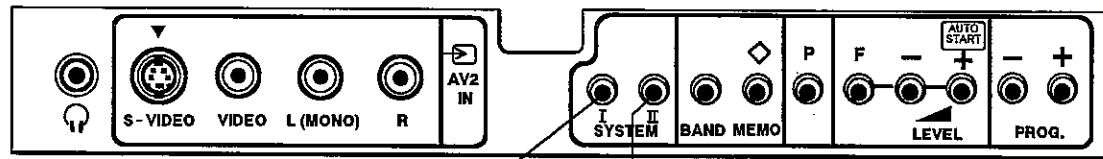

TV system selector 23  
(Model C28WK1N only)


21 Colour system selector

## 21 ....Colour System Selector

### Model C28WK1N :

Normally, set the colour system to the "AUTO" position. If the clear picture cannot be obtained even when the broadcasting or AV signal is received, press the Colour System Selector 21 repeatedly until the optimum image can be produced.

Each time the Colour System Selector 21 is pressed, the colour system changes as follows:

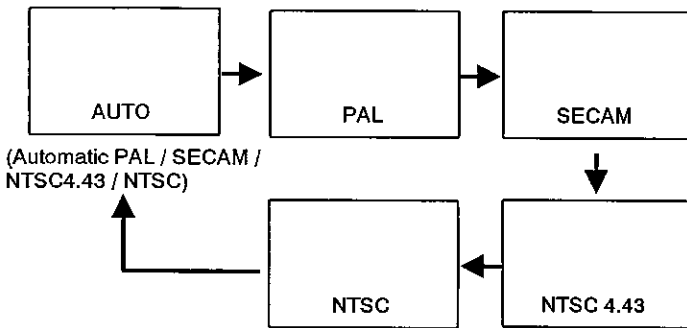

Note: A colour system entry to the memory cannot be made during the TV mode, make it during the manual preset mode. (Refer to the page 12 - 13)

### Model C28WK1S :


Colour System Selector is used in the AV mode only (See page 19).

## 23 ....TV System Selector (Model C28WK1N only)

(This button is used TV mode only)

When the sound is not clear or no sound is produced on a programme number position, press the TV System Selector 23 repeatedly until the optimum sound is obtained.


Each time the TV System Selector 23 is pressed, the TV system changes as follows:

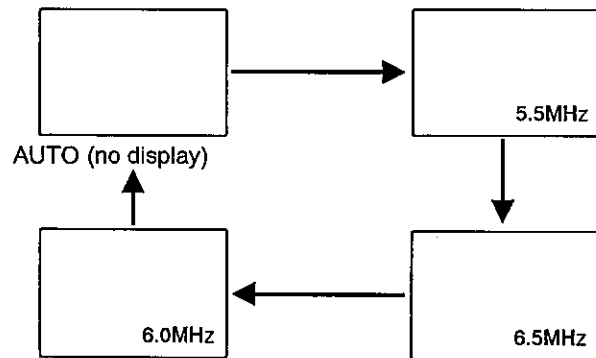

Note:1. When an NTSC system broadcast is received with the Colour System in AUTO or NTSC mode, the TV System Selector becomes inactive.

2. A TV system entry to the memory cannot be made during the TV mode, make it during the manual preset mode. (Refer to the page 12 - 13)

# Remote Control Operation

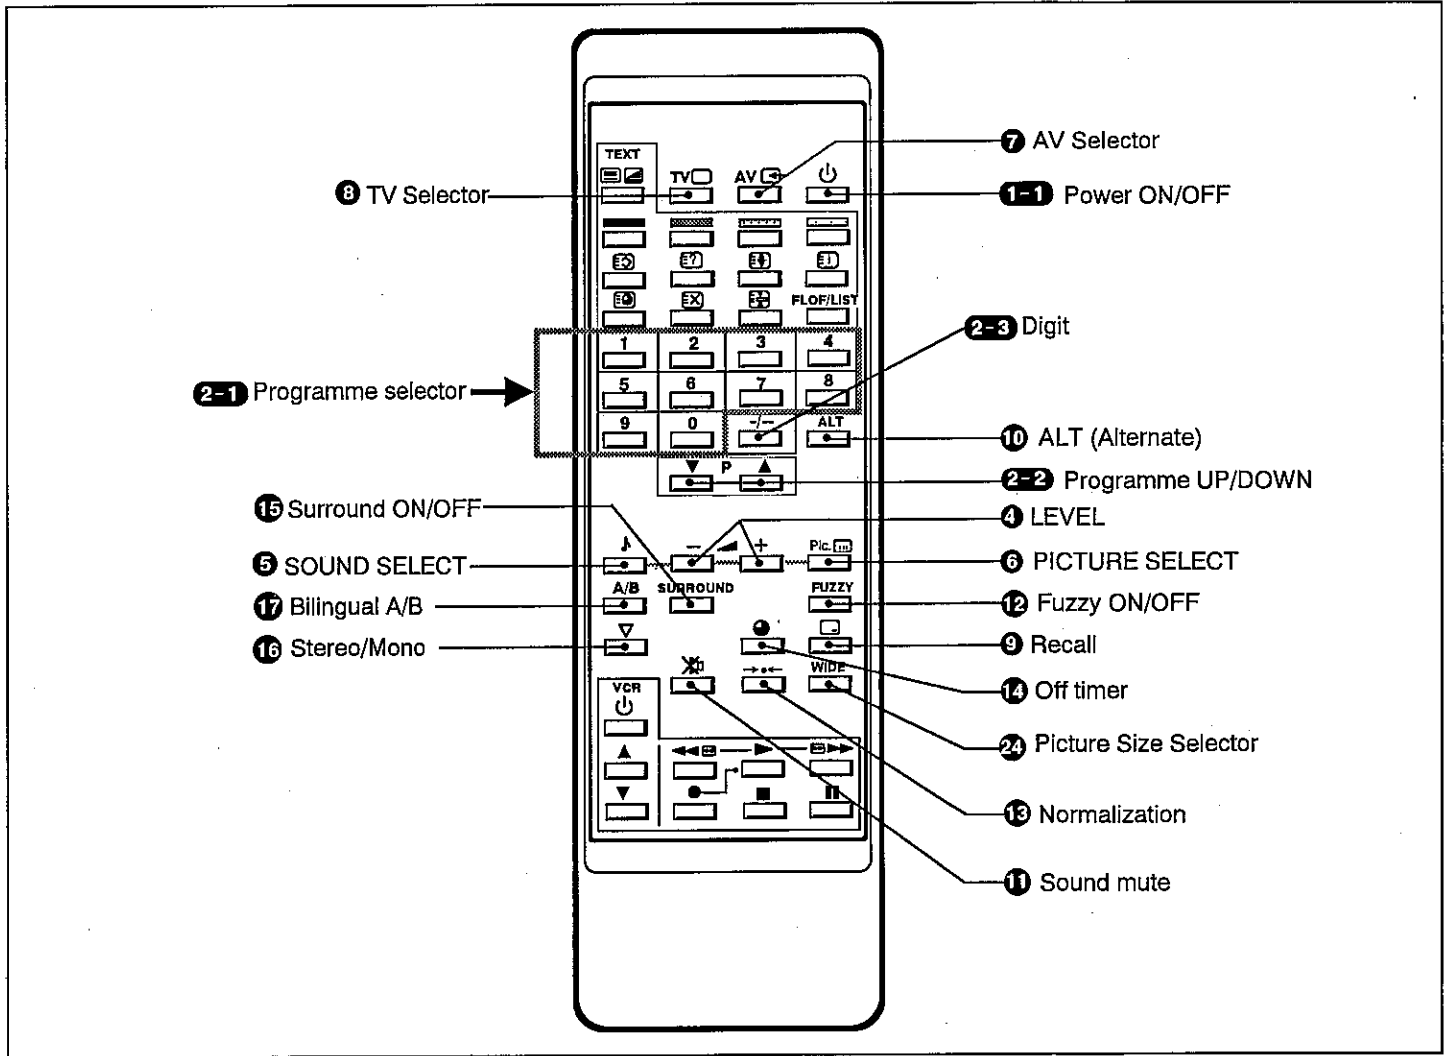

Main ON/OFF switch of the TV set must be in "ON" position before remote control operation is possible. Point transmitter towards the TV set, then press the appropriate function button for the following controls.

## SWITCHING ON/OFF

### 1-1 .... Power ON/OFF

Press this button to turn on the TV set.  
To turn off the TV set, press this button again.

## PROGRAMME SELECTION

e.g. To select programme 17, press Digit **2-3** button and "1" then "7" button of the Programme selector **2-1**.

### 2-2 ..... Programme UP/DOWN

 
To scan the programmes, press Programme UP/DOWN **2-2** button.

■ You can select programme number "1" to "9" and VCR position (0 key of the Programme selector **2-1**) directly from the standby mode.

e.g. To directly select programme "2" from the standby mode, press the "2" button. The set is then switched on, and the picture of programme 2 appears.


## SOUND VOLUME ADJUSTMENT

To adjust the sound volume, press + or - LEVEL **4** button.

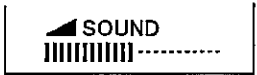

## AUDIO ADJUSTMENTS

1 Press SOUND SELECT **5** button to select a sound control function.  
Each time SOUND SELECT button is pressed, the control function changes as follows.

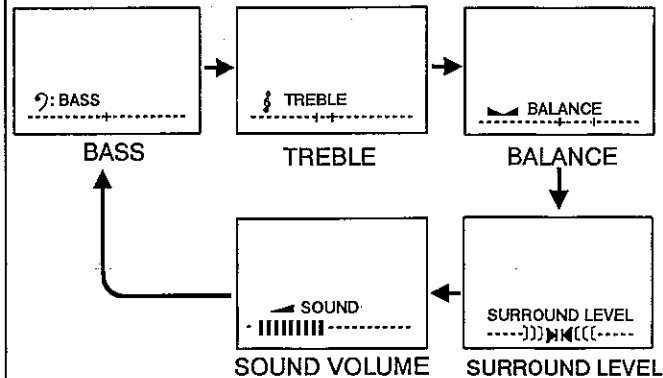

Note: "SURROUND LEVEL" will be skipped when the surround effect is turned off.


2 Press LEVEL (+ or -) **4** button to adjust each control level.

# Remote Control Operation

## PICTURE ADJUSTMENTS

1 Press PICTURE SELECT **6** button to select a picture control function.

Each time PICTURE SELECT button is pressed, the control function changes as follows.

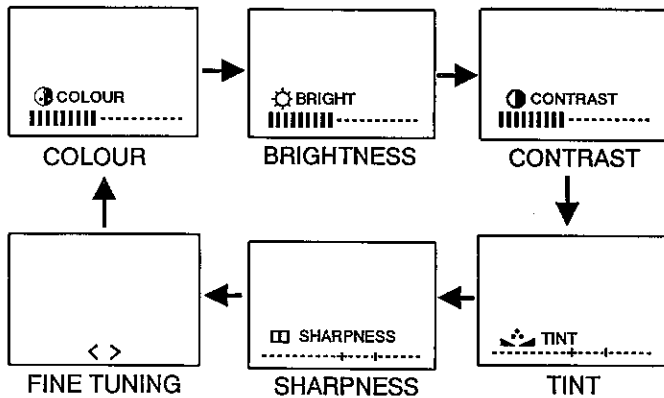

Note:  
"FINE TUNING" will be skipped during AV mode.

Note:  
"TINT" will be skipped during PAL and SECAM mode.

2 Press LEVEL (+ or -) **4** button to adjust each control levels.


Note:

Normally fine tuning is not required for this TV. However, in some case (such as radio interference) picture may become more clear by detuning from the best tuned frequency. In such case, you can use this fine tuning to eliminate some interference beat pattern.


## 12 .... Fuzzy ON/OFF

Press the Fuzzy ON/OFF button to set the viewing distance.

Fuzzy logic uses both viewing distance and room brightness data to automatically set optimum picture quality for the image on the screen.

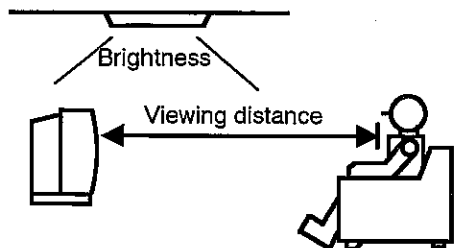


Each time the Fuzzy ON/OFF button is pressed, the viewing distance setting changes as shown below;

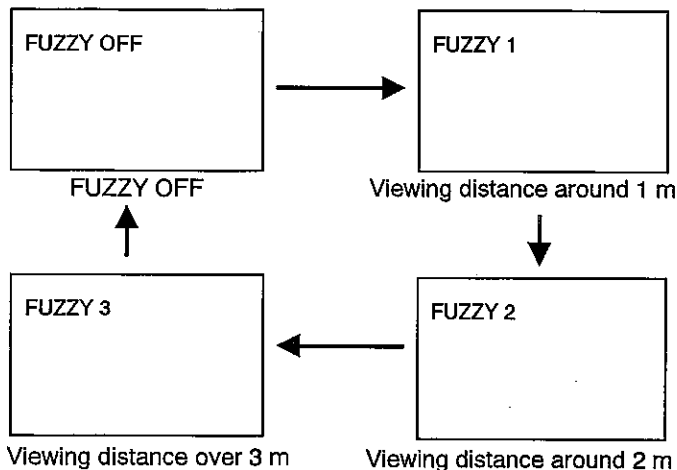

## 7 .... AV Selector


Each time the AV Selector **7** is pressed, the AV position changes as follows:

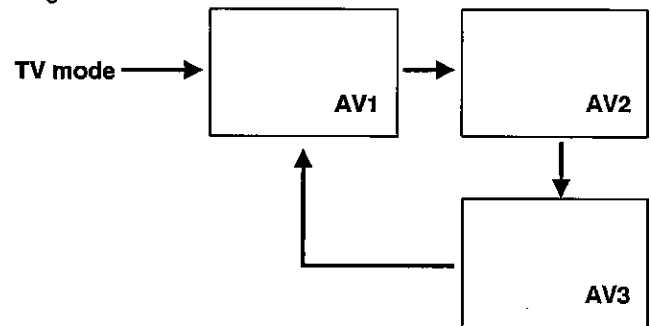

To return to the TV mode, press the TV Selector **8**.

## 9 .... Recall

To display the on-screen indications, press this button. The display disappears after five seconds.

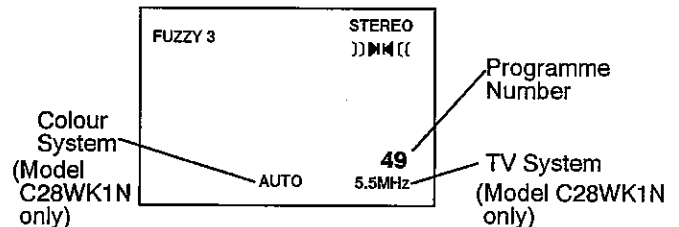


## Selecting language of the screen display


(Model C28WK1N only)

Either English or Chinese can be selected as the language of the screen display.


1 Press the Recall **9** button for more than 2 seconds.

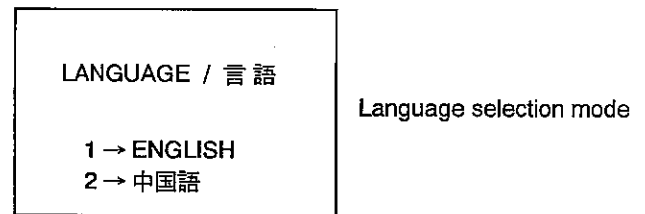

2 To select Chinese, press "2" button of the remote control transmitter.

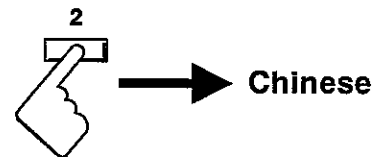

To select English, press "1" button of the remote control transmitter.

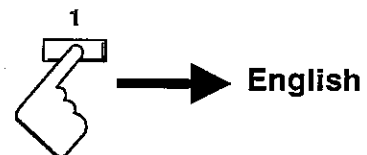


The TV set will return to the normal TV mode.



# Remote Control Operation

## 10 .... ALT (Alternate)

Press the ALT (Alternate) **10** button, and the programme position will alternately select the previous programme and the present programme. For example, now you are watching programme position "4" but you watched programme position "2" previously. If you press the ALT button, programme position "2" immediately appears.

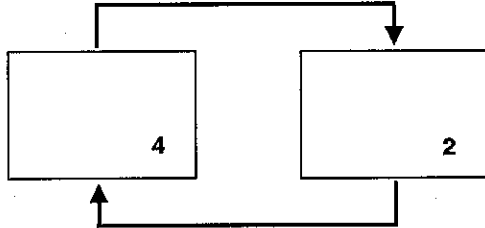


## 11 .... Sound mute

Should you wish to mute the sound (e.g. While talking on the telephone), press this button once. To switch the sound back on, press this button again.



## 13 .... Normalization


Press this button to recall the picture and sound settings which you stored using the Memory button **20** of the TV set.

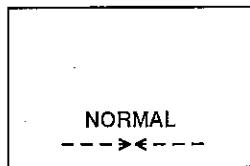

## 14 .... Off timer

After a set time has elapsed, the power of the TV receiver is switched off automatically.

Each time off timer button **14** is pressed, the set time changes as follows:

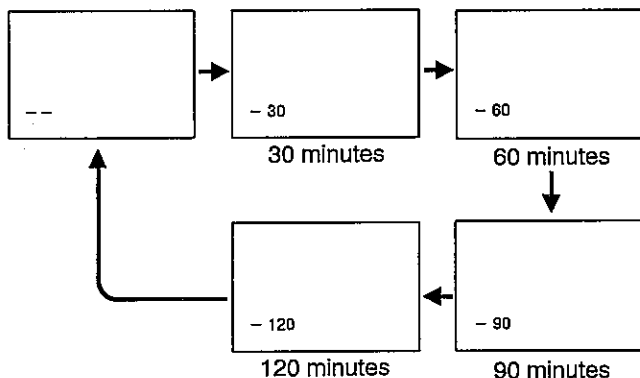


With the off timer being set and the channel display reset, the remaining time is displayed by pressing the off timer button again. When the button is pressed again within three seconds after the button was first pressed in above manner, the time is set to an upper time which is most close to the remaining time.

Just one minute before switching off, "- 01" and programme number you are watching are displayed on the screen.

The timer setting will be cancelled if the power is switched off.

## 15 .... Surround ON/OFF

To enjoy the surround effect, press the Surround ON/OFF **15** button. To cancel the surround effect, press this button again.

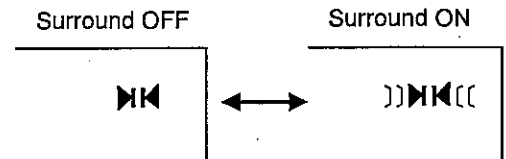

## 16 .... Stereo/Mono

 
When receiving the stereo broadcast, "STEREO" is displayed. If the sound of a stereo broadcast is not clear due to interference or poor reception, select the MONO position by pressing this button.

In the AV mode, select either STEREO or MONO to match the stereo or monaural condition of the audio signal coming from an external source, e.g. a VCR, AV equipment, or other component by pressing Stereo/Mono button.




## 17 .... Bilingual A/B

When receiving the bilingual broadcast, MAIN(A) is displayed. You can select the main or sub language with this button.

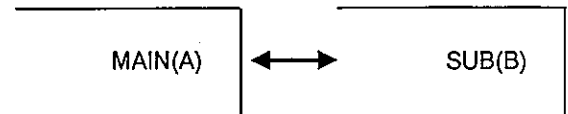

 In the AV mode, each time Bilingual A/B button is pressed, the audio channel changes as follows:

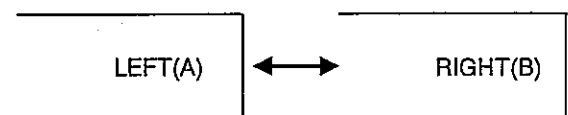


# Remote Control Operation

## 24 .... Picture Size Selector



The picture size can be selected according to the image being watched.

Each time the Picture Size Selector 24 is pressed, picture size changes as follows:

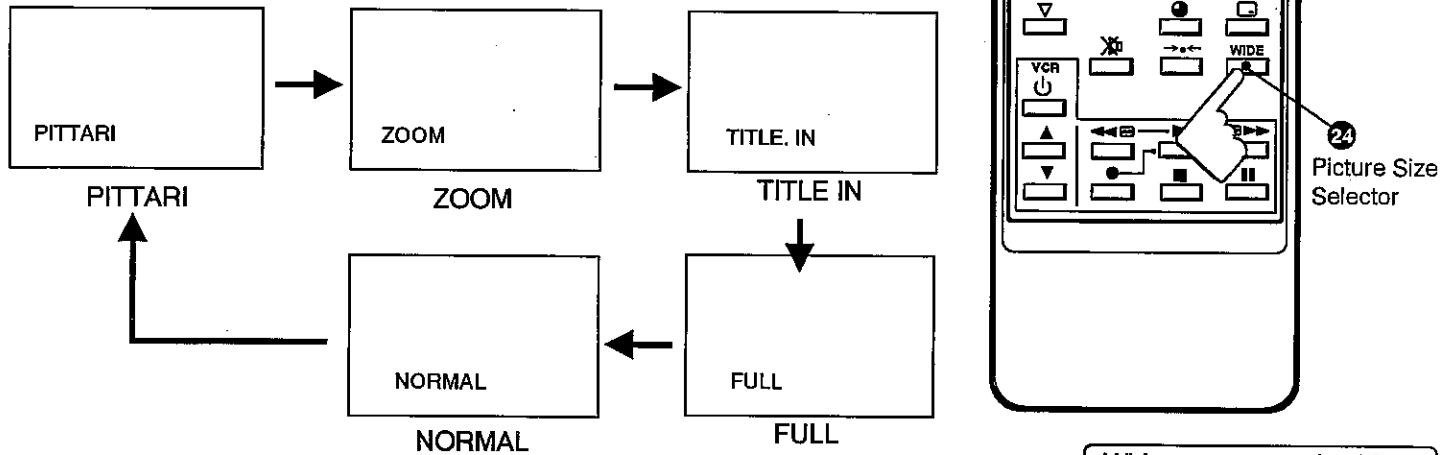


Normal television broadcasts, etc.

Wide-screen movie video software, etc.

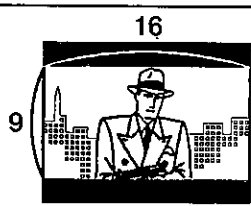
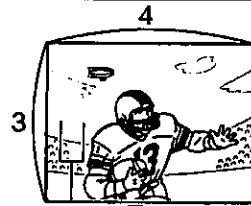


**PITTARI** Picture size for filling the oblong screen with normal television broadcasts. The left and right edges of the image are stretched and processed to fill the oblong screen and the top and bottom are also expanded slightly.

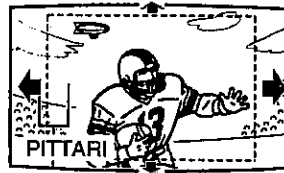


### ZOOM

Picture size for filling the oblong screen with wide-screen movie video software.

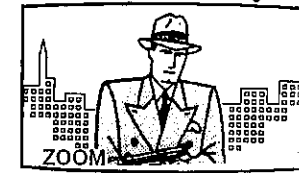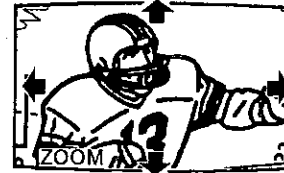


### TITLE IN

This mode is used when subtitles, etc. are outside the screen area and cannot be seen in PITTARI or ZOOM mode. By setting TITLE IN mode, the bottom part of the screen is compressed to bring the subtitles which were outside the screen area into the screen area.

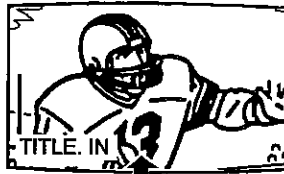


### FULL

Picture size for showing images compressed to a 4 : 3 ratio on the oblong screen. When a normal image is shown, the image width is stretched uniformly.

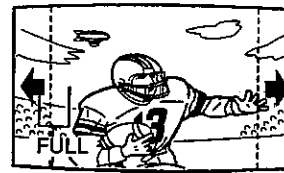

### NORMAL


Picture size for showing images at the traditional television aspect ratio of 4 : 3. The left and right edges of the screen can be left blank.

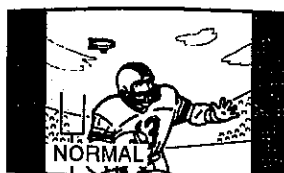

# Remote Control Operation

## VCR USE

This remote control transmitter has been designed especially to be used in conjunction with selected SANYO VCR's. Some SANYO VCR's may have their own functions, so please refer to the individual instruction booklet when using this remote control with SANYO VCR's to ensure compatibility.

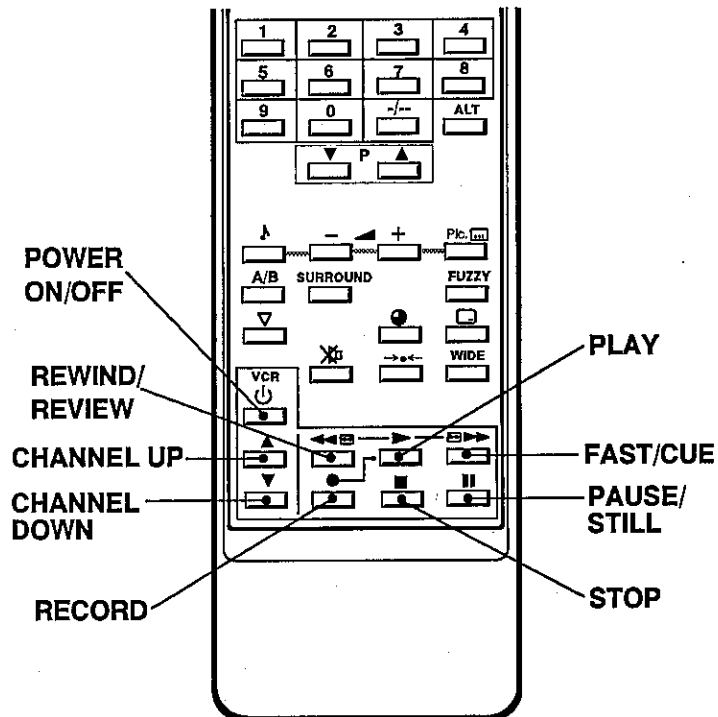

### POWER ON/OFF BUTTON

Use to turn VCR power on and off.

### PLAY BUTTON

Use to playback the tape.

### STOP BUTTON

Use to stop the movement of the tape.

### FAST/CUE

Use to advance the tape at fast speed, or in order to playback the tape at fast speed.

### REWIND/REVIEW

Use to rewind the tape, or in order to playback the tape in reverse at fast speed.

### PAUSE/STILL

Use to temporarily stop (Pause) the tape when recording, or in order to see a still image during playback.

### CHANNEL UP DOWN

Use to change the programme position for the VCR.

### RECORD

Use to record on the tape.

Press and hold down RECORD button, then press PLAY button.

## BATTERY INSTALLATION (REMOTE CONTROL TRANSMITTER)

- 1 Remove the battery cover by sliding.
- 2 Install two "AA" 1.5 volt batteries so that the "+" and "-" marks on the batteries match the "+" and "-" marks inside the unit.
- 3 Close the battery cover.

NOTE: Replace the batteries when the TV set is showing the following symptoms:

Operation is unsteady or erratic, sometimes the TV set does not work with transmitter. Discharged batteries may leak and damage the unit.

The normal life of batteries should be from nine to ten months.

# Pre-Setting of Stations

Up to 60 broadcast stations in your reception area can be stored in the electronic memory.

There are two ways of presetting as follows:

## Automatic presetting - the basic way



All receivable channels are automatically tuned in and memorized in consecutive programme positions.

## Manual presetting

Manually preset a channel if it cannot be automatically preset, such as when the signal is poor.

### Automatic presetting

1) Press PRESET **18** button.

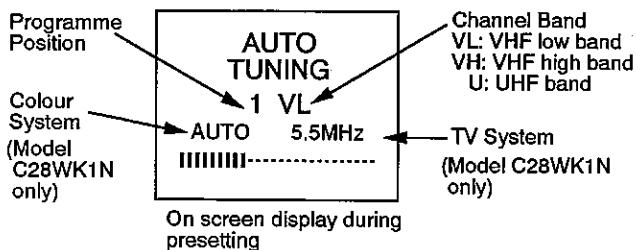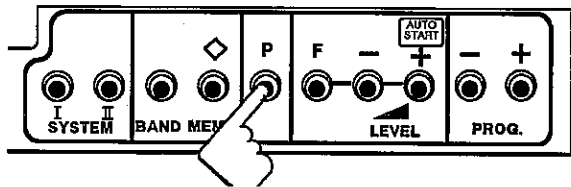


(Model C28WK1N-only)

If necessary, press the Colour System Selector **21** to select the colour system according to your receiving television signal (Normally, set the colour system to "AUTO" position. For Colour System Selector operation, refer to page 6).

If necessary, press the TV System Selector **23** to select the TV system according to your receiving television signal (Normally, set the TV system to "AUTO (no display)" position. For TV System Selector operation, refer to page 6).

2) Press LEVEL **4** (+) button.

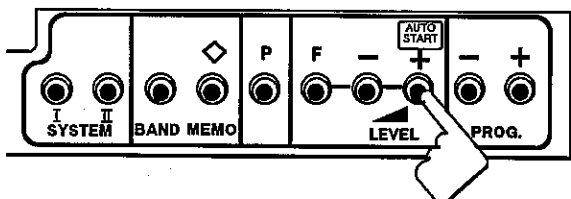



The channels are preset in consecutive positions beginning from the programme position "1".

After all available channels have been preset, the unit returns to the position "1".



Note: To cancel automatic presetting midway, press the TV Selector **8**.

### Manual presetting

1) Select the desired programme position by pressing Programme selector **2** or **2-1**.

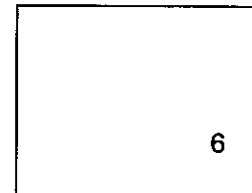
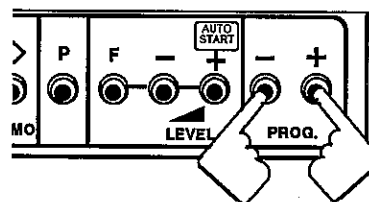


2) Press PRESET **18** button.

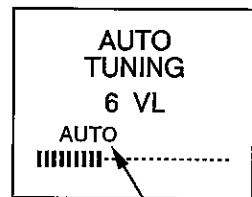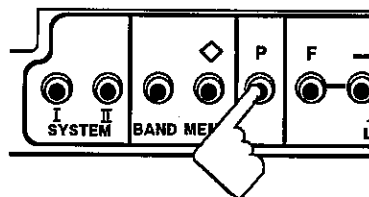

(Model C28WK1N only)



3) Press PRESET **18** button again.

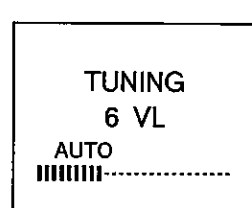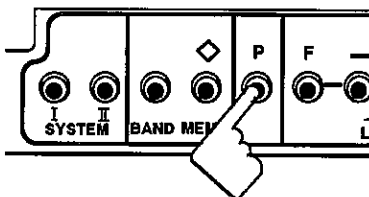



(Model C28WK1N-only)

If necessary.....

press the Colour System Selector **21** to select the colour system according to your receiving television signal. (For Colour System Selector operation, refer to page 6)

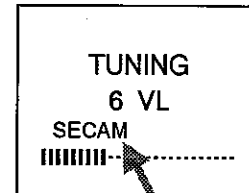
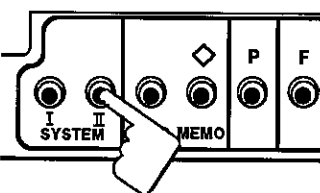


press the TV System Selector **23** to select the TV system according to your receiving television signal. (For TV System Selector operation, refer to page 6)

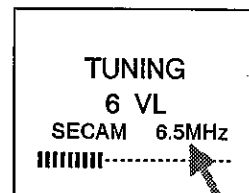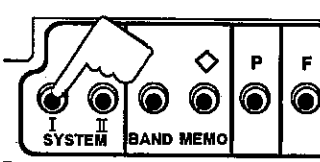



# Pre-Setting of Stations

4) Press BAND selector **19** to select the channel band.

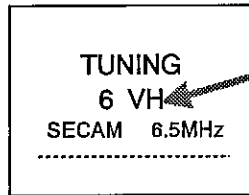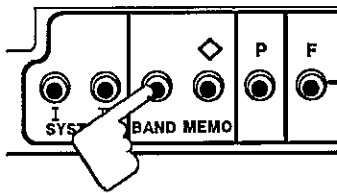



When BAND selector is pressed, the frequency will be set to the lowest frequency in the set band.

5) Press and hold LEVEL **4** (+/-) button until the desired station appears.

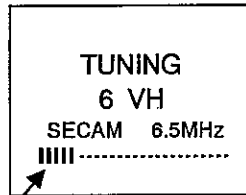
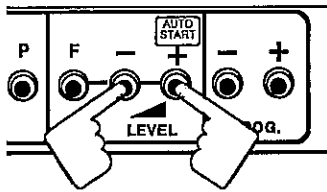


The number of upright segments increases for a higher frequency channel.

6) Press MEMORY **20** button.

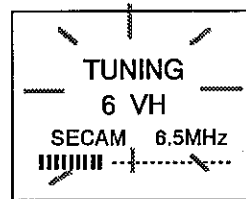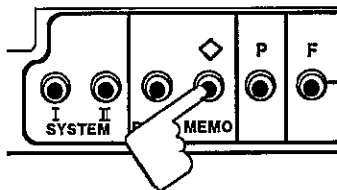

7) Press PRESET **18** button. This completes the presetting.

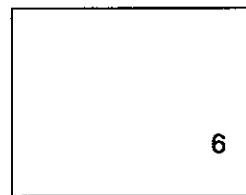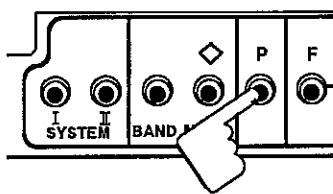


Repeat steps 1) to 7) for other desired channels.

## Memory Copy

This TV tuning system has another advanced feature called "Memory Copy".

For example, if you wish to copy the TV channel in the programme position "2" into the programme position "6":

1. Select the programme position "2",
2. Press PRESET button **18**.
3. Press PRESET button **18** once again.
4. Select the programme position "6" by pressing programme selector **2** of the TV set.

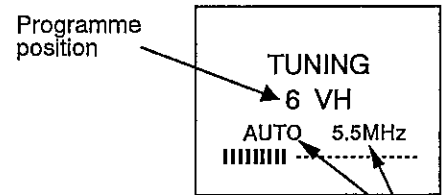


5. Press Memory button **20**.
6. Press PRESET button **18**.

(Model C28WK1N only)


# Inserting Channels and Deleting Channels

## Inserting Channels

The following example shows how to insert Channel-D of programme position "4" into programme position "2".

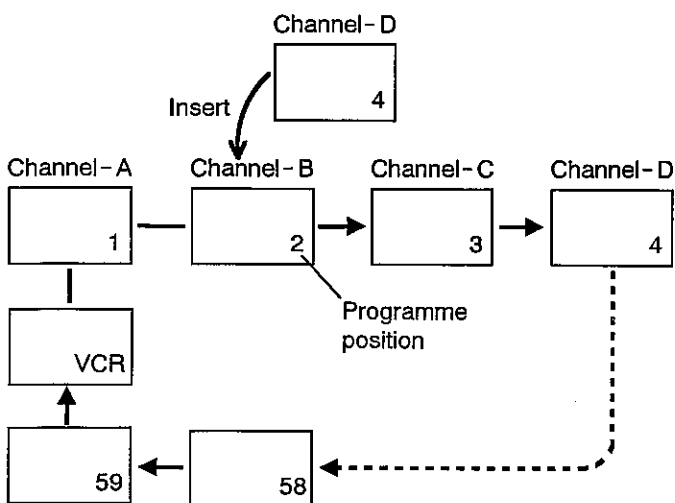

1. Select programme position "4" (Channel-D).
2. Press PRESET button **18**.
3. Press PRESET button **18** once again.
4. Select programme position "2" by pressing Programme Selector **2** of the TV set.

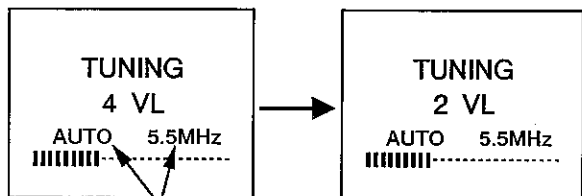


(Model C28WK1N only)

5. Press and hold down FUNCTION SELECT button **3**, then press the (+) Programme Selector **2** of the TV set.
6. Press PRESET **18** button.

Channel-D of programme position "4" is now inserted into programme position "2".


In this example, the channels from Channel-B (programme position "2") onward will be shifted successively into the next highest programme position.

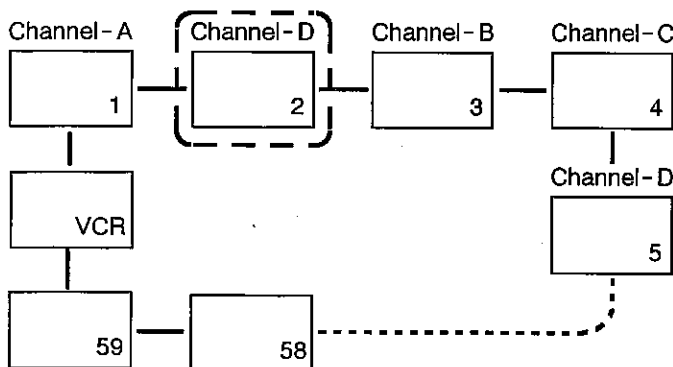


Note: You cannot insert a channel which would cause the channel in programme position "59" to shift to a higher programme position. You also cannot insert channels into the VCR position. When the above procedure is done, the position indicators will flash in red.

## Deleting Channels

The following example shows how to delete Channel-B from programme position "2".

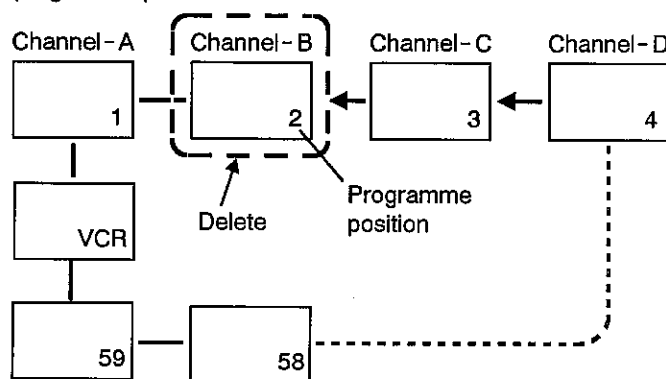


1. Select programme position "2" (Channel-B).
2. Press PRESET button **18**.
3. Press PRESET button **18** once again.

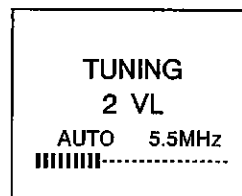


4. Press and hold down FUNCTION SELECT button **3**, then press the (-) Programme Selector **2** of the TV set.
5. Press PRESET **18** button.

Channel-B of programme position "2" is now deleted. In this example, the channels from Channel-B (programme position "2") onward will be shifted successively into the next lowest programme position.

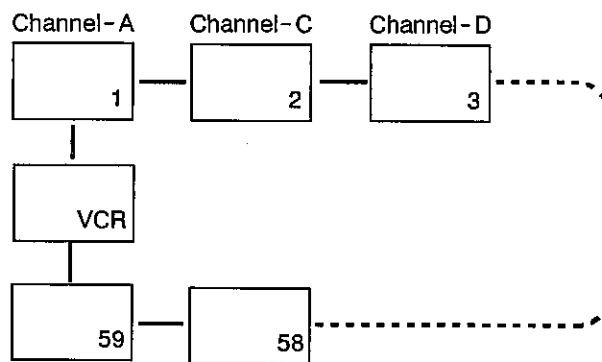


Note: Channel deletion is not possible in the VCR position. When the above procedure is done, the position indicator (VCR) will flash in red.

# Teletext Use

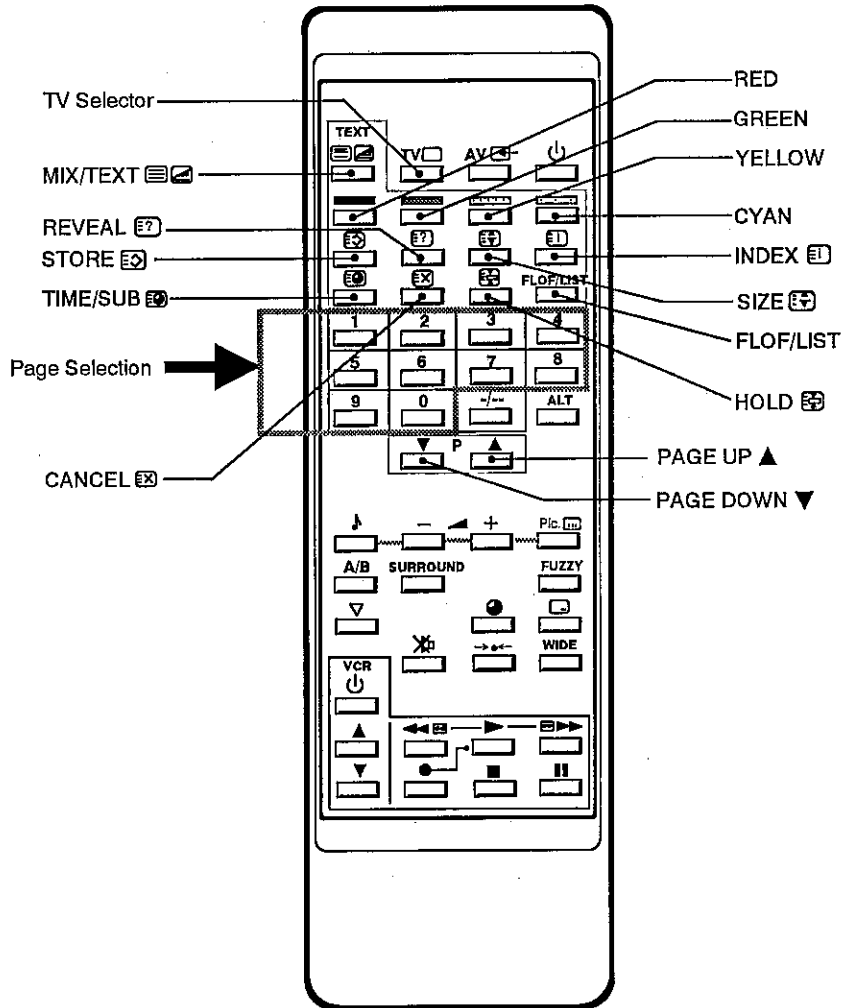


## Switching to the Teletext mode

Press the MIX/TEXT button, and the screen changes as follows:

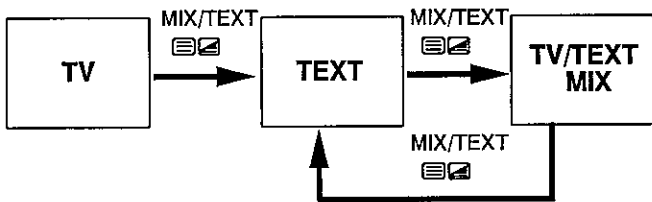


## Switching to the TV mode


To return to the TV mode, press the TV button.

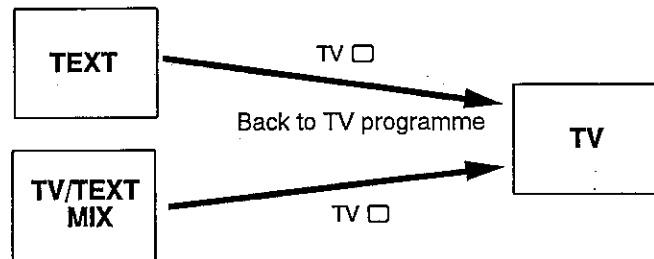

### (NOTE)

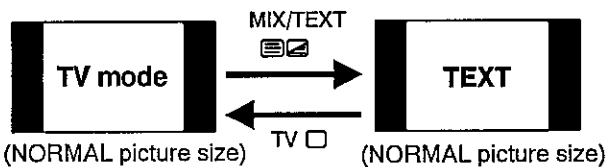

When switching from TV mode at NORMAL picture size to teletext mode, the teletext screen will also be at NORMAL picture size.

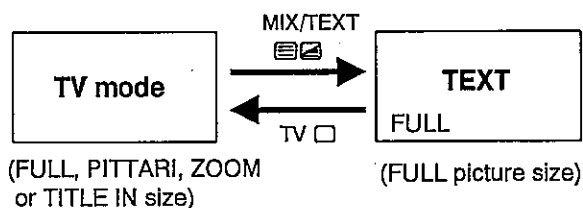

When switching from TV mode at FULL, PITTARI, ZOOM or TITLE IN picture size to teletext mode, the teletext screen will be at FULL picture size.

## ■ Page Selection

### DIRECT PAGE ACCESS

A page can be selected with the 0- 9 buttons. For example, to display page 120 press buttons 1, 2 and 0. The selected page number will appear on the screen.

### UP- DOWN PAGE ACCESS

If a page is displayed on the screen and you want to read the following page, you can press the UP button instead of selecting the page number. To bring back the previous page press the DOWN button. If you keep the UP or DOWN button pressed the page numbers will run up or down until you release the button.

The page number will change as follows by pressing the UP- DOWN button.

- (▲)P200 - P201 - P202 - .....- P299 - P200 - P201
- (▼)P200 - P299 - P298 - .....- P201 - P200 - P299

Note:In the FLOF/LIST mode, you can access the pages directly.

## ■ Sub- coded page access

For Teletext information which is longer than one page it may take some time for the automatic changing of sub pages to reach the sub page you require. It is possible, however, to enter the sub- page you require and then continue watching the normal television picture until the correct sub- page is reached.


- A. Select the required page using the page selection button.
- B. Press the TIME/SUB button. The character "S" and sub code digits "\*\*\*\*" will be displayed in the top left of the screen.
- C. Enter the desired sub- page number before figure "S\*\*\*\*" disappears. For example, If you select sub- page 10, you must press 0, 0, 1 and 0 button. Then the character "+" is displayed following the page number.
- D. Press the CANCEL to return to normal television programme. When the correct sub- page is reached the page number will appear on the normal television picture.
- E. Press the MIX/TEXT button to display the stored page.
- F. To clear the sub- coded page you must enter a new page number.

Note: It is not possible to select another television station during a sub- page access operation.

## VIEWING TV WHILE SEARCHING FOR A PAGE


In some cases it can take some time to look for a page. In the interval you can view TV by pressing the CANCEL button. When the page arrives, the page number will appear on the normal TV picture. Press MIX/TEXT button to display the page.

Note: When you press the CANCEL button, the green ">" mark is displayed at the top right of the screen. Whilst this ">" mark is displayed you can not select another TV channel.

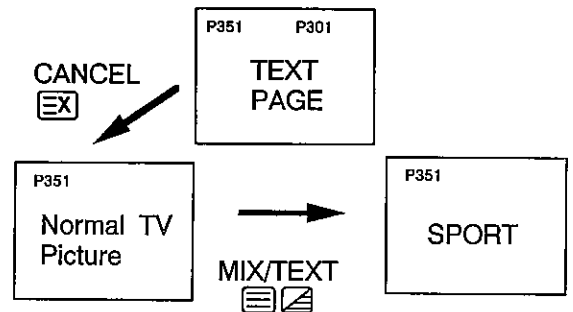

## ■ HOLD

If the teletext information is longer than one page, the pages are automatically changed. The automatic page changing can be cancelled by pressing the HOLD button. The word "HOLD" then appears on the top of the screen. Normal operation is restored by pressing the HOLD button again or entering a page number.

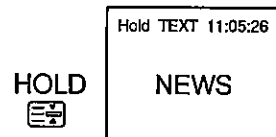




# Teletext Use


## DOUBLE LETTER HEIGHT

Either the top or bottom half of the display can be expanded by pressing the SIZE button. When the SIZE button is pressed for the first time, the top half of the display is expanded. If it is pressed once again, the bottom half of the display is expanded. To return the display to normal-sized characters, this button should be pressed a third time.

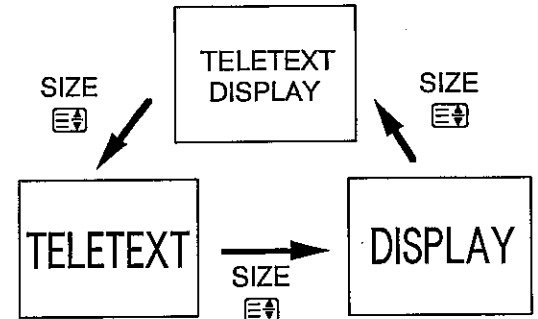

## DISPLAYING CONCEALED INFORMATION


In one of the lists of contents you may find the heading "QUIZ" (concealed information). If you have selected the relevant page number questions will appear on the screen. You can find out the correct answer to the questions by pressing the REVEAL button. Press the REVEAL button again to make the answers disappear.

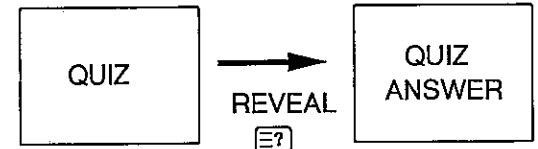

## ALARM CLOCK

The Alarm Clock Function can be set to operate at any requested time reminding viewers to carry out a specific task, i.e. making a phone call at a specified time.


First select either page 196 (BBC1) ※ or page 296 (BBC2) ※, using the page selection buttons. Press the TIME/SUB button, S\*\*\*\* will appear on the top of the screen. Select the time at which you require the alarm call. Example, for a call at 8.15 pm, press buttons 2015, watching that S\*\*\*\* changes to S20:15. Then press the CANCEL button to continue watching normal TV programmes. At 8:15 pm the words "ALARM CLOCK" in large letters will appear on the screen. Press the MIX/TEXT button to return to normal teletext operation. It is not possible to select another TV programme when in the CANCEL mode. (※ : Broadcast stations differ by country)

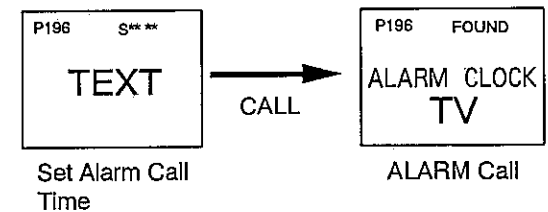

## NEWS FLASH

If you select the news flash page and view the TV programme by pressing the CANCEL button, the moment news comes in, the word "NEWS FLASH" and the news appears over the normal TV picture. If you want to make the news disappear press the CANCEL button again. To recall the news, press the MIX/TEXT button.


Note : It is not possible to select another TV station during a NEWS FLASH. You should first switch back to TV reception by pressing the TV Selector(TV) button. You can, however, change both the picture and sound settings.

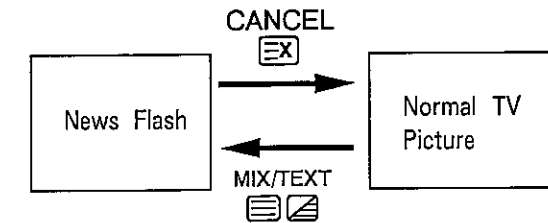

## UPDATED PAGES

There are pages which are updated as events progress, such as sports results, news reports and traffic information. If you have selected one of the above pages from the list of contents and you want to view television but still be kept informed about the other events, press the CANCEL button. The page will disappear and the TV station which will broadcast this will appear in the screen. As soon as this page is updated, the page number will appear on the normal TV picture. To display the updated page on the screen, press the MIX/TEXT button. The page will disappear when the CANCEL button is pressed again.


Note : It is not possible to select another TV station during an UP-DATE. You should first switch back to TV reception by pressing the TV Selector(TV) button. You can, however, change both the picture and sound settings.

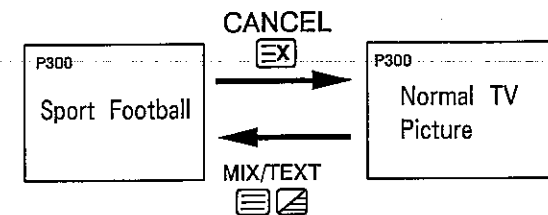

## TIME

If the time is required while a programme is being viewed, press the TIME/SUB button.

Providing that the channel being viewed is also transmitting teletext, the time will appear at the top righthand of the screen for five seconds. The digits displayed represent hours/minutes/seconds.

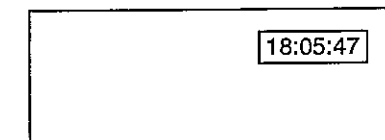

# Teletext Use

## ■ FLOF AND LIST (FLOF: Full-level -one feature)

When a broadcasting station provides FLOF service, you can access the text pages you desire quickly and easily.

### FLOF

In the text mode, FLOF mode can be selected by pressing FLOF/LIST button.


Then the index page which the broadcasting station provides, appears on the screen. At the bottom of the screen, red, green, yellow and cyan letters and "F" letters are indicated.

You can select a programme out of four programmes, by pressing one of the coloured buttons on the R/C transmitter. (For example, when pressing red, the red colour programme is selected)

In the same way, you can select the programme which is indicated at the bottom of the screen by pressing the colour button.

To get back to the initial index page, press the "INDX" button,

FLOF mode

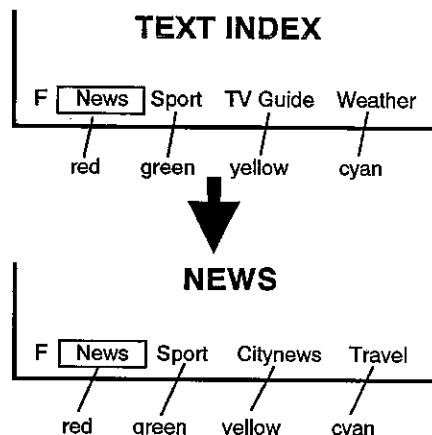


### LIST

In the LIST mode, the four coloured page numbers and "L" letter are indicated on the bottom of the screen. The number on the left side is enclosed by a red frame. First, input the page number you desire, into each coloured position using the digit button, then press the "STORE" button for more than two seconds.

When the page number is memorized, the four coloured numbers change into white frame momentarily.

After you memorize the four page numbers, you can select the page you desire by pressing the red, green, yellow or cyan button. Even if you select another page by inputting a new page number, (See direct page selection), the memorized pages return after switching power off or changing the programme position or pressing the INDEX button.

LIST mode

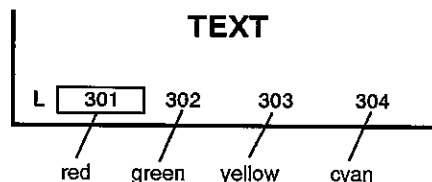

## NON FLOF SERVICE

When the station does not have FLOF service, and you press the FLOF/LIST button, the INDEX page (P100) is automatically displayed.

At the bottom of the screen, the four page numbers 100, 199, 101, 102, are also displayed.

Then, when you select a random page number out of the displayed four pages by pressing a colour button, the text of that page is displayed.

The selected page minus one, plus one, and plus two page numbers are displayed but their display order is random.

Of course at any time you can select new pages by inputting new page numbers.

## ■ MEMORY OF THE TEXT PAGES

When you assign a broadcasting station which is providing a TEXT service to some programme positions of your TV set, four pages of TEXT can be memorized on each programme position.

(To memorize the TEXT pages, see "LIST mode".) If it is required to have more than four instant text available from the same text service, tune the necessary number of programme positions to the same TV channel.

- i.e. TV programme position 1.....page, 300, 301, 302, 303
- 2.....page, 304, 305, 306, 307
- 3.....page, 308, 309, 310, 311
- .....
- 16....page, 411, 412, 413, 414

The memory capacity is 16 programme positions and four pages per each position.

### Note:


The producer and dealer does not take any responsibility for errors concerning teletext caused by wrong written teletext, wrong antenna installation or not sufficient power of transmitter (poor signal).

# Connecting other Equipment

- Connect the video and audio outputs of a VCR, video disc player, etc. to the input jacks of this TV set. Tapes and discs can be played back.

- To watch the input picture, press AV Selector **7**.


Each time the AV Selector **7** is pressed, the AV position changes as follows:

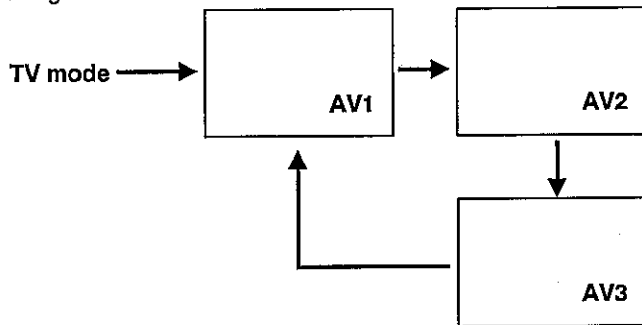


- If necessary, press Colour System selector **21** of the TV set to select the colour system to match the appropriate AV appliance.

In the AV mode, each time the Colour System selector **21** is pressed, the colour system changes as follows:

## Model C28WK1N

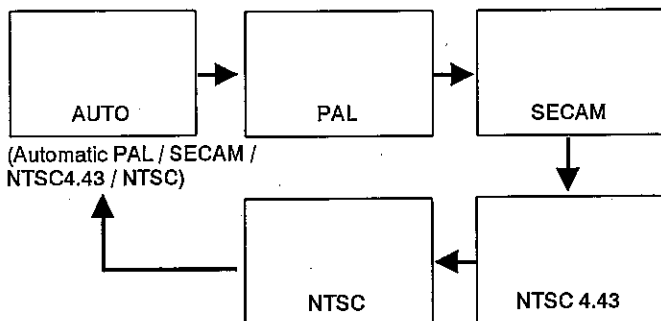

## Model C28WK1S

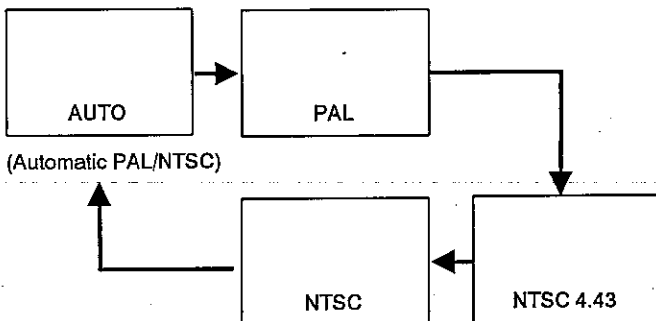

Note 1. When NAP system(PAL 60Hz) AV appliance is used, set the colour system to PAL position.

2. Colour System setting for each AV position are automatically stored in memory.


- See page 5 or page 8 for TINT adjustments on NTSC or NTSC4.43 systems.

- To return to the TV mode, press TV Selector **8**.

## ■ In the AV mode, you can select the TV programme.

If you wish to select the programme position "7" in the AV mode (while watching the playback from a VCR);

1. Select the programme position "7" by pressing the programme selector **2** or **2-1**.

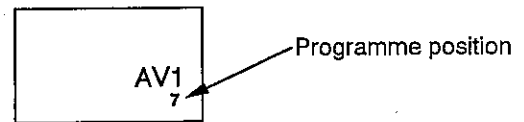


2. Press the TV selector **8** and the picture of the programme position "7" will appear.




# Connecting other Equipment

## Connecting to the AV1 Input Jacks


### REAR PANEL

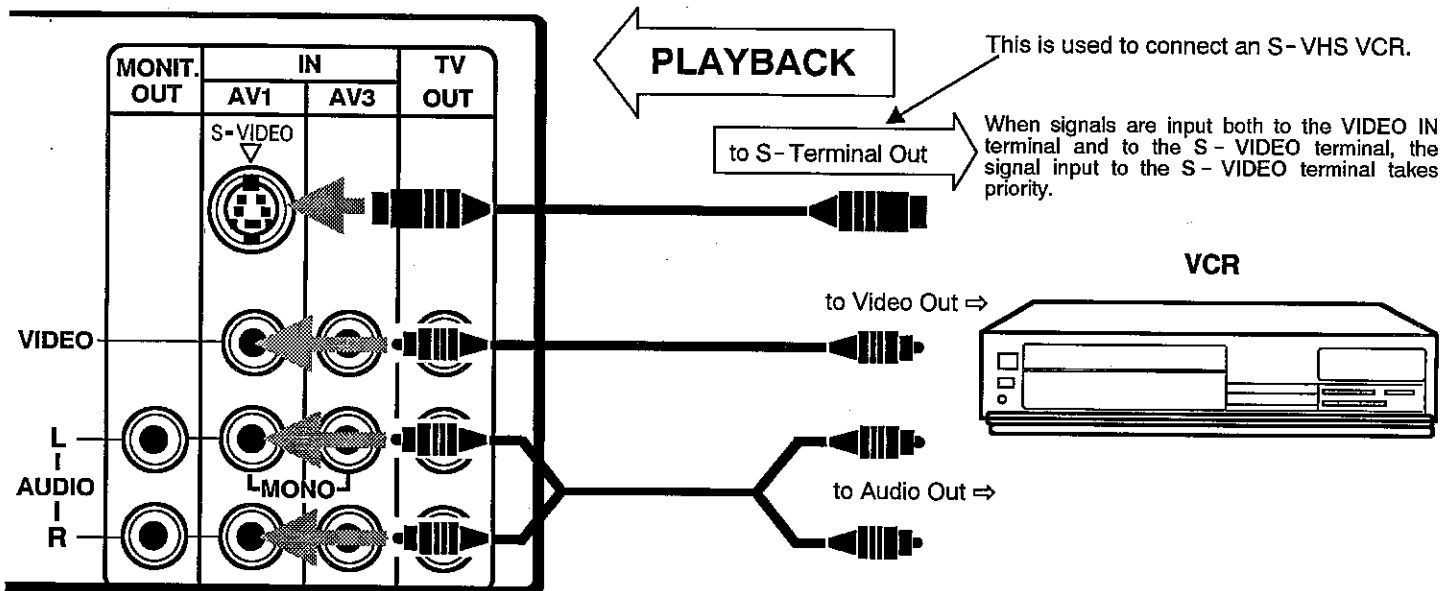

- Use the AV Selector **7** to switch to the AV1 position for watching.

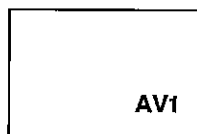

 Video equipment can be connected in the same manner to the AV3 input jack. Select the AV3 position when equipment is connected to this jack.

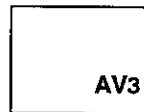

- If the audio signal from the VCR is stereo, be sure to connect the right and left channels to the respective right and left Audio-in terminals.

If the external audio signal is a monaural one, connect it to the left terminal of AUDIO IN. Then select the monaural mode of the audio channel in the TV set with the remote control Stereo/Mono button **15** or Bilingual A/B button **17**.

- **S-VHS VCR Connections.**


S-VHS VCR is designed with a highly advanced techniques. So the visual quality of S-VHS VCR is better than the other popular VHS VCR.

S-VHS VCR can be enjoyed by using S-terminal.


## Connecting to the Front Panel AV2 Input Jacks

It is convenient to use the AV2 input jack on the front panel for equipment that is often connected and disconnected.

### FRONT PANEL

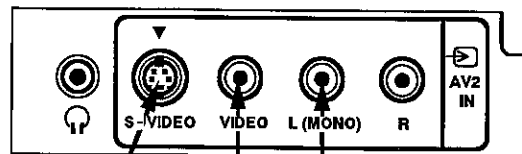


- Use the AV Selector **7** to switch to the AV2 position for watching.

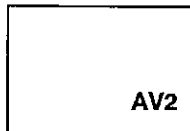

An S-VHS VCR may also be connected to the AV2 input terminal on the front panel.


8mm video movie camera

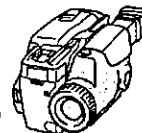

# Connecting other Equipment

## Connecting to the TV OUT Jacks


The TV OUT terminal provides audio and video outputs for TV broadcasts being received. They are used to record TV broadcasts.

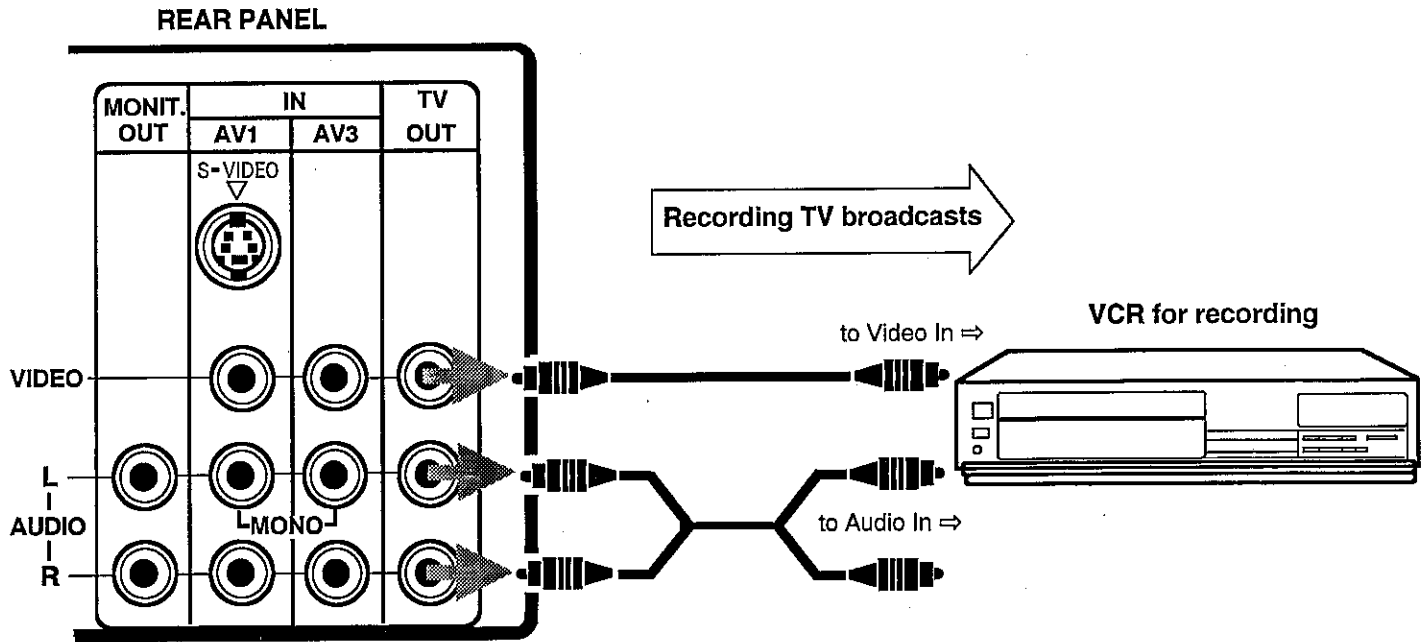

## Audio Monitor Out Connection

More powerful sound can be enjoyed by using your audio apparatus.


Connect the audio signal source from audio-monitor out terminal to the LINE-IN or AUX terminal of the audio apparatus.

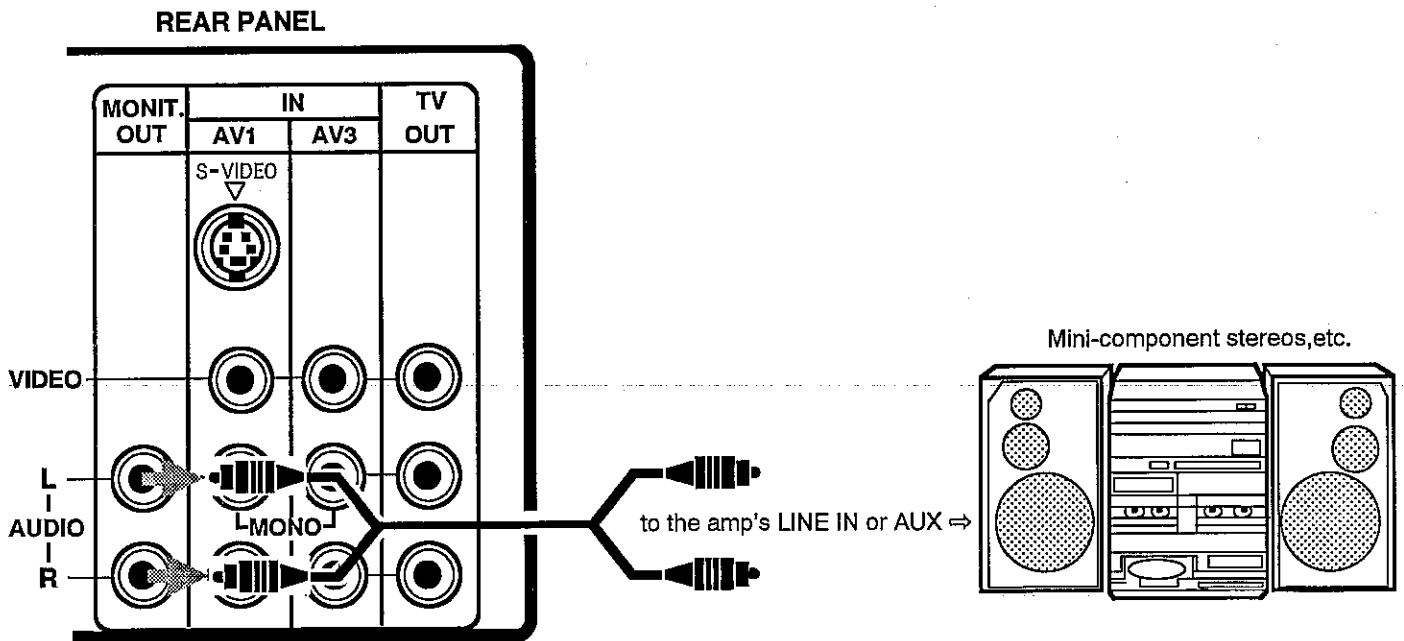

- Audio recording is also possible using this terminal.
- With this connection method you can enjoy surround sound using the speakers of your audio apparatus and the TV speakers.

# Connecting other Equipment

## External Speaker Connection

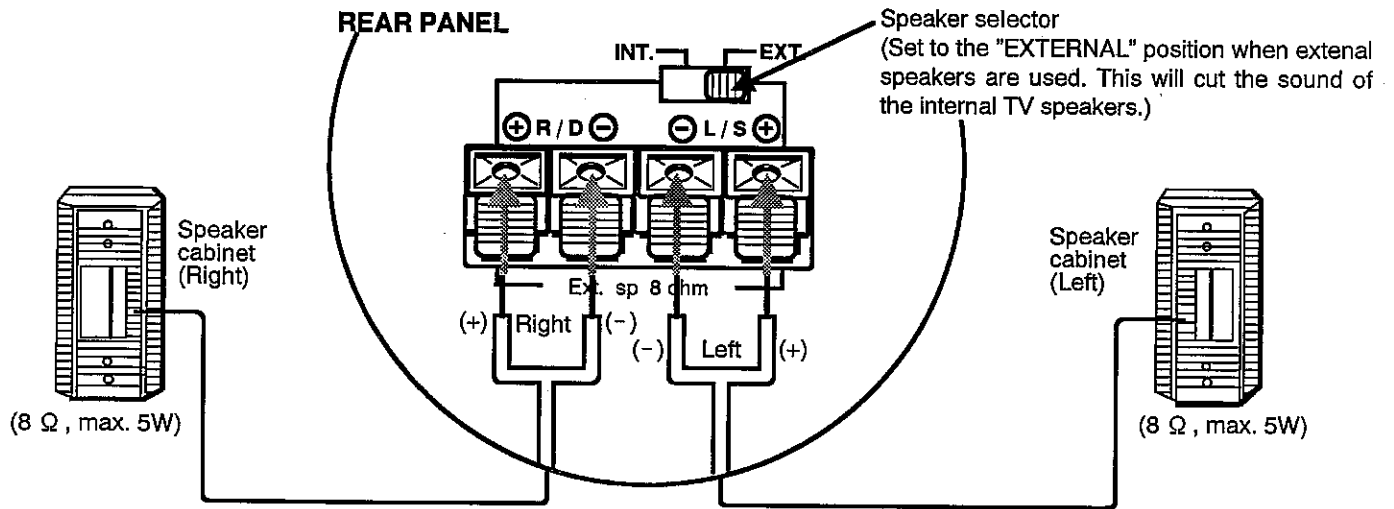


You can also enjoy Surround sound through connected external speaker.

## AV Connection to the Aerial Socket

The AV apparatus can also be connected to the aerial socket of your TV receiver.

When AV equipment is connected to the aerial socket, set the VCR to the "VCR" position, the VCR position can be selected directly the "0" key on the remote control transmitter.

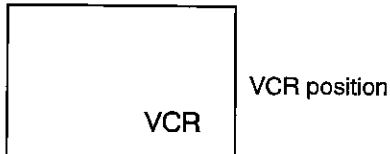

- For further details concerning this connection and adjustment, refer to the operating instructions for the AV equipment.

# Specifications

## Power Source

**C28WK1N** AC 110 / 127 / 220 / 240 Volts, 50/60Hz.  
(Range of operation: 80V-290V)

**C28WK1S** AC 220 - 240 Volts, 50/60 Hz.

## Receiving System

### C28WK1N

28 Systems of the colour broadcasting systems, VCR and Video disc. player playback signals now in use throughout the world, this multi-system colour television receiver has been designed for reception of any of the 28 different systems listed below.

28 Systems		Function
1	PAL-B/G	Reception of broadcasts and playback from video tape recorders
2	PAL-D/K	
3	PAL-I	
4	SECAM-B/G	
5	SECAM-D/K, K'	
6	NTSC-M/M	
7	NTSC 4.43/5.5MHz	Playback from special video tape recorders
8	NTSC 4.43/6.0MHz	
9	NTSC 4.43/6.5MHz	
10	NTSC 3.58/5.5MHz	
11	NTSC 3.58/6.0MHz	
12	NTSC 3.58/6.5MHz	
13	SECAM I (6.0MHz)	
14	SECAM L (Video in)	
15	PAL 60Hz / 5.5MHz	Playback from special disc. players
16	PAL 60Hz / 6.0MHz	
17	PAL 60Hz / 6.5MHz	
18	SECAM 60Hz / 5.5MHz	
19	SECAM 60Hz / 6.0MHz	
20	SECAM 60Hz / 6.5MHz	
21	NTSC 3.58 50Hz / 4.5MHz	
22	PAL S-VIDEO	Playback from S-Video tape recorders
23	SECAM S-VIDEO	
24	SECAM-L S-VIDEO	
25	NTSC3.58 S-VIDEO	
26	NTSC4.43 S-VIDEO	
27	50/60Hz Video Input	Playback from special video tape recorders
28	50/60Hz S-Video Input	

### C28WK1S

PAL - B/G  
(AV Input: PAL/NTSC/NTSC4.43)

## Channel Coverage

### C28WK1N

Colour System	Television System	VHF	UHF
PAL / SECAM	B/G	E2 - E12	E21 - E69
PAL	I	-	B21 - B69
NTSC	M/M	A2 - A13 J1 - J12	A14 - A69 J13 - J62
PAL / SECAM	D/K	R1 - R12 C1 - C12	R21 - R69 C13 - C57
SECAM	K'	K'4 - K'9	-

CATV: X, Y, Z, S1 - S20

### C28WK1S

VHF: 0-5, 5A, 6-11 (Australia)  
1-11 (New Zealand)

CATV: X, Y, Z, S1 - S20

UHF: 21 - 69

**Aerial input impedance** 75  $\Omega$

**Speakers** 8cm x 13cm x 2 Speakers

**Audio output ( Music)** 15 W

### Ext. terminals

Video inputs:

Phono jack x 3 (1V p-p, 75  $\Omega$ )

S-terminal x 2 (DIN 4 pin, separate Y/C signal input)

Audio inputs:

Phono jack (R/L) x 3 (436 mVrms, more than 40K  $\Omega$ )

Audio monitor outputs:

Phono jack (R/L) x 1 (436mVrms, less than 600  $\Omega$ )

TV outputs (video and audio):

Video output - Phono jack x 1

Audio output - Phono jack(R/L) x 1

External speaker terminals:

8  $\Omega$ , output max. 5W

Headphone jack: Mini. stereo jack x 1

**Dimensions** 742(W) x 500(H) x 495(D)mm

**Weight** approx. 38.5 Kg

**Made in Japan**

*Specifications subject to change without notice.*

1A  
1A  
1A  
1A  
1A

**SANYO**

---

SANYO ELECTRIC Co., Ltd.