
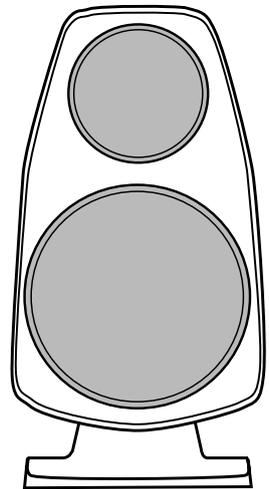
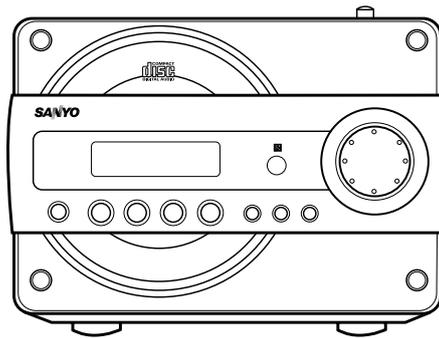
 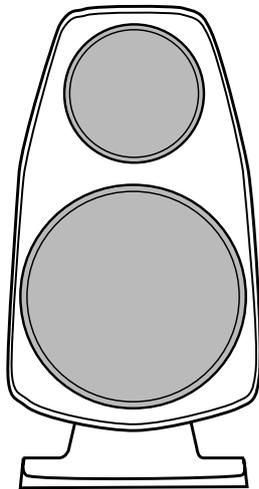


SANYO

INSTRUCTION MANUAL

DC-MCR60

Micro Component System



PRECAUTIONS

CAUTION - USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED IN THE OPERATING INSTRUCTIONS MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. THIS PRODUCT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED PERSONNEL.

CAUTION – INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.

ADVARSEL – USYNLIG LASER STRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION, UNDGÅ UDSÆTTELSE FOR STRÅLING.


VARNING – OSYNLIG LASER STRÅLNING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRR ÄR URKOPPLAD. STRÅLEN ÄR FARLIG.

VORSICHT – UNSICHTBARE LASERSTRAHLUNG TRITT AUS, WENN DECKEL GEÖFFNET UND WENN SICHERHEITVERRIEGELUNG ÜBERBRÜCKT IST. NICHT, DEM STRAHL AUSSETZEN.

VARO – AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.




CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

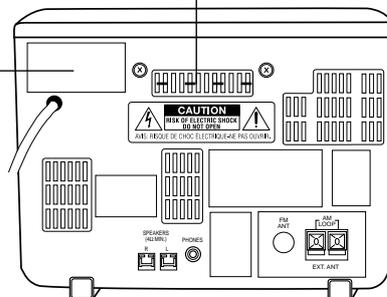

- The apparatus shall not be exposed to dripping or splashing.
- Do not use where there are extremes of temperature (below 5°C or exceeding 35°C) or where direct sunlight may strike it.
- Because of the CD player's extremely low noise and wide dynamic range, there might be a tendency to set the volume on the amplifier unnecessarily high. Doing so may produce an excessively large output from the amplifier which could damage your speakers.
- Sudden changes in the ambient temperature may cause condensation to form on the optical lens inside the unit. If this happens, take out the disc, leave the unit for about 1 hour, and then proceed to operate.
- The system's speakers use powerful magnets. Do not place timepieces, credit cards, cassette tapes or video tapes, etc. near the speakers.
- Do not install this equipment in a confined space, such as a book case or built in cabinet.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.

CONNECTIONS

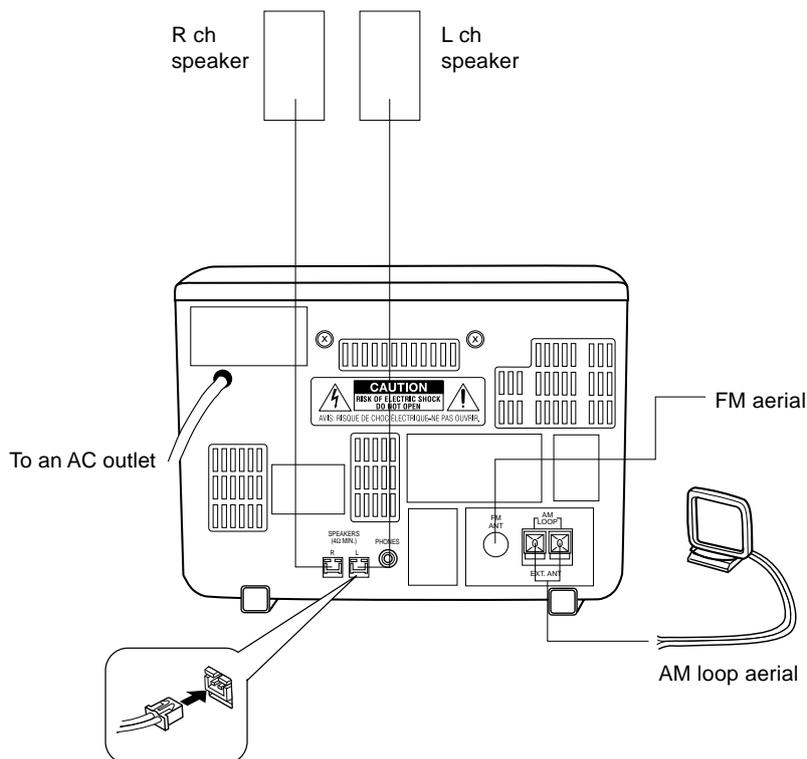

Note:

- Do not connect the mains lead to an AC outlet until all connections have been made.
- The system is not completely disconnected from the mains when the ⏻/ON button is set to the ⏻ position.

Speakers

Connect the connector of the left speaker lead to the "L" SPEAKERS socket and the connector of the right speaker lead to the "R" socket. If you have difficulty inserting the speaker lead connector, turn it over and reinsert it.

FM Aerial

FM indoor aerial is sufficient to receive broadcasts. Extend the aerial wire as straight as possible and, while listening to the sound from the system, secure it in a position which yields minimal distortion and noise.

AM Loop aerial


Assemble the loop aerial as shown in figure.



Unwind the aerial wires, then connect them to the AM LOOP terminals. Place the loop aerial in a position which yields the best AM reception, or attach it to a wall or other surface as shown in figure.

Note:

To minimize noise, the speaker, mains and any other leads should not come close to the indoor or external aerial lead and AM loop aerial. Do not place the aerial leads close to the system.

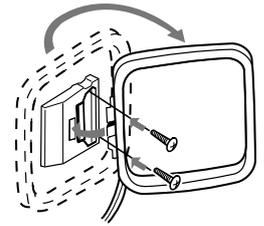


Screws (not supplied)

Headphones

Connect stereo headphones (not supplied) to the PHONES socket for monitoring or for private listening. The speakers are automatically disconnected when headphones are connected.


CONTROLS

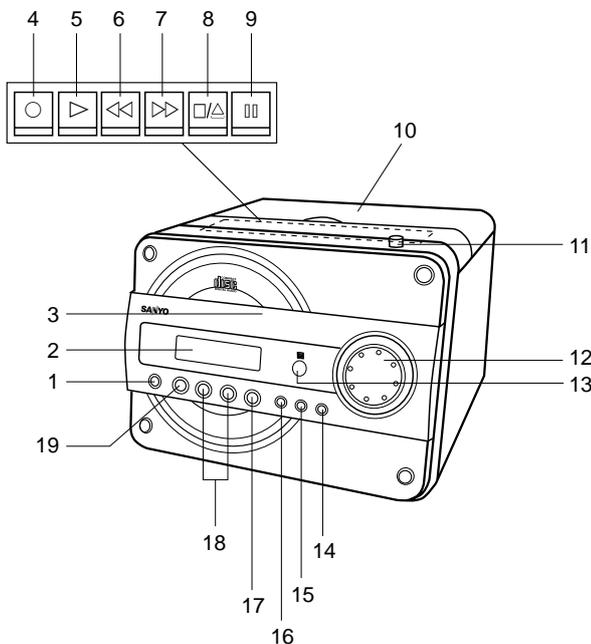

1. Power button (⏻/ON)
2. Display
3. CD compartment
4. Record button (REC)
5. Play button (PLAY)
6. Rewind button (REW)
7. Fast forward button (FFWD)
8. Stop/Eject button (STOP/EJECT)
9. Pause button (PAUSE)
10. Cassette button lid/Cassette holder
11. Open button for CD compartment lid (CD DOOR OPEN)
12. Volume control (VOLUME)
13. Remote sensor (IR)
14. Function button (FUNCTION)
15. Memory button (MEMORY)
16. Clock/Timer button (CLOCK/TIMER)
17. Stop button (□)
18. Skip/Search/Tuning buttons (◀◀/TUNING -, ▶▶/TUNING +)
19. Play/Pause button (▶/||)

REMOTE CONTROL

Controls

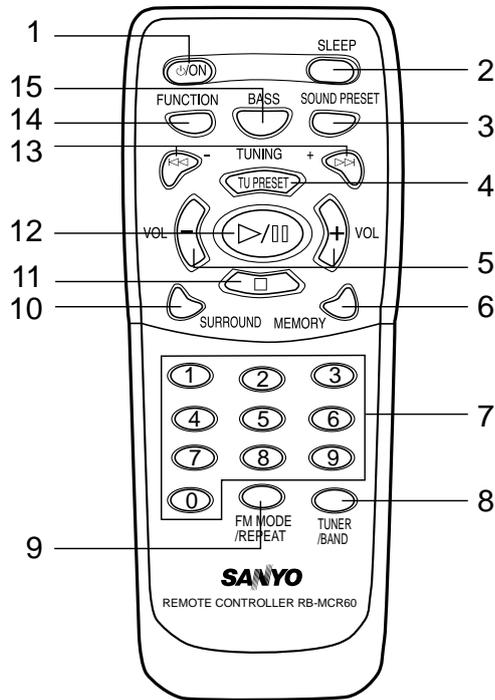

1. Power button (ON/OFF)
2. Sleep button (SLEEP)
3. Sound preset button (SOUND PRESET)
4. Preset tuning (TU PRESET)
5. Volume buttons (VOL -, VOL +)
6. Memory button (MEMORY)
7. Number buttons (1-9, 0)
8. Tuner function/Band select button (TUNER/BAND)
9. FM mode/Repeat button (FM MODE/REPEAT)
10. Surround button (SURROUND)
11. Stop button (□)
12. Play/Pause button (▶/⏸)
13. Skip/Search/Tuning buttons (◀◀/TUNING -, ▶▶/TUNING +)
14. Function button (FUNCTION)
15. Bass expander button (BASS)

Number buttons (1-9, 0)

These buttons are used to select the track numbers on a disc or pre-set radio stations.

If the function is "CD", the buttons select the track numbers on a disc. If the function is "TUNER", the buttons select preset radio stations.

With any other function, the buttons will not function.

- Two buttons must always be pressed.

Example:


To select No. 3, press 0, then 3.

To select No. 10, press 1, then 0.


To select No. 25, press 2, then 5.

Inserting batteries

1

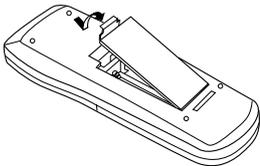

2

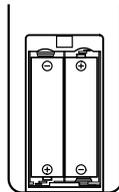


Two R03/AAA batteries
(not supplied)

Note:

Always remove batteries if the remote control is not to be used for a month or more. Batteries left in the unit may leak and cause damage.

Remote control range

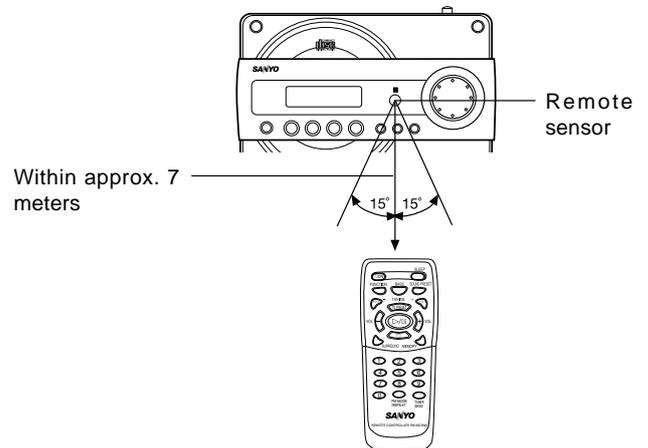

The buttons on the remote control perform similar functions to similarly marked buttons on the front panel.

ADJUSTING THE CLOCK (Main unit only)

Example: To set "PM 6:30",
First, press the \odot /ON button to turn the power off. Only the clock display appears.

1. Press the CLOCK/TIMER button for at least 2 seconds, " \odot " blinks on the display.



2. Press the MEMORY button. The hours display blinks.



3. Turn the VOLUME control to set the "hours".



4. Press the MEMORY button. The minutes display blinks.



5. Turn the VOLUME control to set the "minutes".



6. Press the MEMORY button. The clock starts.



- The time can be set accurately by pressing the MEMORY button when a time signal is heard.
- To display the clock during operation, press the CLOCK/TIMER button briefly. After a few seconds, the original display returns.
- If a power failure occurs or the mains lead is disconnected, the clock display blinks. Reset the time again.

Changing the clock to the 24-hour display

1. Press the \odot /ON button to turn the power off and present time display.
2. While clock is displaying, press the MEMORY button and hold it, then press the TUNING + button.

Example: PM 1:00 \rightarrow 13:00

To return the original setting, repeat steps above.

BEFORE OPERATION

Turning the power on and off

Press the \odot /ON button. The display lights.

To turn the power off, press the \odot /ON button again, the clock display remains lit.

- When the mains lead is connected to the AC outlet, the unit will respond to commands from the remote control.

Direct start function

If the following buttons are pressed when the unit is in standby, the unit turns on automatically and the function is set.

CD section \triangleright /00
Remote control \triangleright /00, TUNER/BAND

Selecting the function

Press the FUNCTION button to select the desired function. Each time the button is pressed, the display changes as follows:

CD \rightarrow Tuner (FM) \rightarrow Tuner (AM) \rightarrow TAPE \rightarrow CD \rightarrow . . .

The function is automatically selected when CD play started or when the TUNER/BAND button (on the remote control) has been pressed. (Except during recording)

- When the function selection is changed, CD play is automatically stopped.

Adjusting the volume

Turn the VOLUME control, or press the VOL - or VOL + button on the remote control. The volume level appears on the display. (VOL 0 ~ VOL 24).

Surround sound system (Remote control only)

Press the SURROUND button. "SURR" appears on the display and a "Wide" effect is created.

Bass expander system (Remote control only)

Press the BASS button to enhance the bass sound. "BASS" appears on the display.

Selecting the sound mode (Remote control only)

Press the SOUND PRESET button to select the sound mode matching the music to be listened to.

POP: Pops, etc.
CLAS: Classical music, etc.
ROCK: Rock music, etc.
JAZZ: Jazz, etc.

WHAT TO DO IF ...

If the operation of the unit or display is not normal,

1. Press the \odot /ON button to turn the power off.
2. While pressing the \square button, press the \triangleright /00 button for at least 1 second.
3. Press the \odot /ON button to turn the power on.
4. Operate the unit.


CD PLAY

Use compact discs bearing the symbol shown. In addition to conventional 12 cm CDs, this system can be used to play 8 cm CDs without an adapter.



- This unit can play back the CD-R/RW that have recorded music data as well. However, some CD-R/RWs can not be played back depending on the recording conditions.
- The CD-R/RW can't be recorded in this unit.

1. Press the FUNCTION button to select "CD" function.
2. Press the CD DOOR OPEN button, "OPEN" appears. The CD compartment opens.
Note: Don't place large thing in front of the unit within 20 cm.
3. Place the disc with the label facing yourself on the disc tray.
(Place only one disc at a time.)
4. Push the CD compartment lid back until it "clicks" into place. The total number of tracks and total playing time on the disc appear.

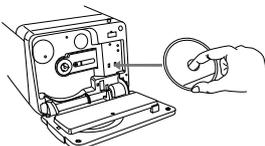

Note:

If the disc is loaded with the label facing the unit, or if a badly scratched disc is loaded, "Cd" appears. If this occurs, load the disc correctly or replace the damaged disc.

5. Press the ▷/00 button. Play starts from the first track. The current track number and elapsed playing time are displayed.



6. Press the □ button to end disc play. When the last track has been played, the player stops automatically.

Note:

Always press the □ button and wait for the disc to stop rotating before opening the CD compartment.

Notes on handling compact discs

- Do not expose the disc to direct sunlight, high humidity or high temperatures for extended periods of time.
- Discs should be returned to their cases after use.
- Do not apply paper or write anything on the disc surface.
- Handle the disc by its edge. Do not touch the playing surface (glossy side).
- Fingerprints and dust should be carefully wiped off the playing surface of the disc with a soft cloth.
Wipe in a straight motion from the centre to the outside of the disc.
- Never use chemicals such as record cleaning sprays, antistatic sprays or fluids, benzene or thinner to clean compact discs.

To start play from the desired track

Select the track by using the ▷▷ or ◀◀ button, then press the ▷/00 button.

Using the remote control

Press two number buttons within 4 seconds. (Example: press 0, then 3.)

Temporarily stopping play

Press the ▷/00 button, "▶" blinks on the display. To resume play, press the button again.

Skip play

To skip to track 6 while track 3 is playing, press the ▷▷ button repeatedly until "6" appears (in the track section) on the display. To skip back to track 3 while track 6 is playing, press the ◀◀ button repeatedly until "3" appears.

- The number buttons on the remote control can also be used for skip play. To skip to track 6 while one track is playing, press 0, then 6.

Search (forward/reverse)

If the ▷▷ or ◀◀ button is pressed during play, the player will search at high speed in the forward or reverse direction while the button is being pressed. When the button is released, normal play will continue.

Repeat play (Remote control only)


Press the FM MODE/REPEAT button before or during play. The player will play all the tracks or all the programmed tracks repeatedly. "↺" appears. To cancel repeat play, press the FM MODE/REPEAT button again. "↺" disappears.

PROGRAMMED PLAY

Up to 20 tracks on a disc can be programmed for play in any order.

- First, select "CD" function and load a disc that you want to programme.
- The tracks must be programmed in the stop mode.
- The same track can be programmed more than once.

1. Press the MEMORY button.

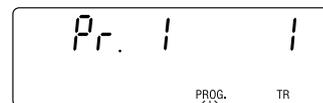

2. Select a track by using the ▷▷ or ◀◀ button.

- The number buttons on the remote control can also be used.



3. Press the MEMORY button.

4. Repeat steps 2 - 3 to programme additional tracks.

5. Press the ▷/00 button to start programmed play. When all programmed tracks have been played, the player stops automatically.

- The programme contents are retained in memory.

- Any attempt to programme more than 20 tracks will result in "FULL" being displayed and discontinuation of the programming.
- The programme contents are retained even if the function selection is changed. After selecting "CD" function, press the MEMORY button. The programmed contents appear.
- To cancel programmed play, press the □ button twice.

Checking the programme

Each time the MEMORY button is pressed in the stop mode, the programmed details sequentially appear on the display.

Changing a programme

To add a new track to a programme:

1. In the stop mode, press the MEMORY button repeatedly until "- - - -" appears.
2. Select a track as explained above.
3. Press the MEMORY button.

To change a track:


1. In the stop mode, press the MEMORY button repeatedly until the track number to be replaced is displayed.
2. Select a track as explained above.
3. Press the MEMORY button.

Note:


Programmed details cannot be partially deleted or inserted.

LISTENING TO TAPES

1. Press the FUNCTION button to select "TAPE".
2. Push the cassette button lid backward to reveal the cassette buttons.

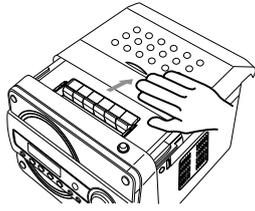

3. Press the STOP/EJECT button to open the cassette holder.
4. Load the cassette.
After loading the cassette, press the cassette holder back into position.

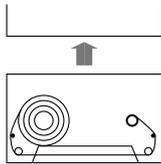

- Don't push the cassette button lid forward before pressing the cassette hold down.

5. Press the PLAY button to begin playback.
6. Press the STOP/EJECT button to stop playback at any time. Press it again to remove the cassette.
When the end of the tape has been reached, automatic stop will be activated.

Note:

- Always close the cassette button lid if the cassette is not to be used for a long time.
- Use the normal tape (TYPE 1).
- Endless tapes cannot be used.
- Do not use C-100 (or longer) tapes. They may jam in the mechanism.

Pause

Press the PAUSE button to temporarily stop playback or recording. Press it again to resume operation.

Fast forward and rewind

Press the FFWD or REW button. When the desired location has been reached, press the STOP/EJECT button.

LISTENING TO THE RADIO

Before use

When the unit is shipped from the factory, its AM frequency band is set as "522-1710 kHz (in 9 kHz steps)".

If your local AM broadcast system is organized in 10 kHz steps, change the frequency band to "520-1710 kHz (in 10 kHz steps)" as follows.

1. Press the FUNCTION button to select "AM".
2. While pressing the \square button on the front panel, press the TUNING - button on the front panel for at least 1 second.


To return the original setting, repeat steps above.

Automatic/Manual tuning

1. Press the FUNCTION button to select FM or AM. The radio frequency appears.
2. **Automatic tuning**
Press the TUNING + or TUNING - button for at least 1 second to tune in a station. The unit will scan up or down the band and receive the next receivable station. Press the button again to continue.
 - The $\triangleright\triangleright$ or $\triangleleft\triangleleft$ button on the remote control can also be used.

Manual tuning


Press the TUNING - or TUNING + button briefly until the desired frequency is displayed.

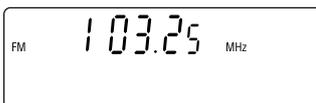


To preset stations (Remote control only)

Up to 20 stations for FM band, and 12 stations for AM band can be preset.

1. Tune in the stations to be preset as described above.
2. Press the MEMORY button.

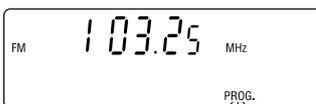

3. While "PROG." is blinking, press the TU PRESET button to select the channel to be preset.

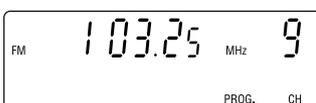

4. While "PROG." is blinking, press the MEMORY button. "PROG." disappears.
 - In this example, "103.25 MHz" FM station is preset on FM channel 9.
 - The number buttons on the remote control can also be used. In this example, press 0, then 9 after the step 2 above.
5. Repeat steps above to add more preset stations.
 - When presetting a new station, the previous preset station is cleared.

Listening to preset stations (Remote control only)

1. Press the TUNER/BAND button to select FM, AM.
2. Press the TU PRESET button to select the desired channel number.
 - The number buttons on the remote control can also be used. Press two number buttons within 2 seconds.

Preset scan tuning (Remote control only)

1. Press the TUNER/BAND button to select AM or FM.
2. Press and hold down the TU PRESET button for at least 1 second.
 - The preset stations are selected in sequence for approximately five seconds each.
3. Press the TU PRESET button when the desired station has been selected. Preset scanning will stop.

To receive FM stereo broadcasts (Remote control only)

Make sure that "MONO" is not displayed. If "MONO" appears, press the FM MODE/REPEAT button to turn the "MONO" indication off.

"**ST**" appears when an FM stereo broadcast is received.

- If the signal from an FM stereo station is weak and reception is poor, press the FM MODE/REPEAT button to change to the MONO mode. The reception may be improved, but the sound will be monaural.

RECORDING

Recording copyright material without permission of the copyright owners is usually an infringement. If you wish to re-record copyright material, permission from the copyright owner is necessary. SANYO does not approve of, and cannot be held responsible for, any unlawful use of this machine.

Recording compact discs (Synchronous recording)

1. Push the cassette lid backward.
2. Load a blank cassette.
3. Select "CD" function.
4. Load the disc to be recorded.
 - Select the track number if required.
 - For programmed recording, programme the material in advance (as described under "PROGRAMMED PLAY").
5. Press the REC button. The PLAY button is engaged simultaneously and CD recording starts.
 - When you want to record music as you listen, press the REC button. Recording starts automatically from the beginning of the track.
6. Press the STOP/EJECT button to stop recording. When the end of the tape is reached, the CD player and deck stop automatically.

Recording from the tuner

1. Push the cassette lid backward.
2. Load a blank cassette.
3. Tune in the radio station to be recorded.
4. Press the REC button to start recording.
5. Press the STOP/EJECT button to stop recording.


When beat is heard

Beat (a high-pitched noise) may sometimes be heard during the recording of radio broadcasts. If this occurs, while the MEMORY button is pressed, press the TUNING + button at the same time to select bc-1 or bc-2. Select the setting that gives the best result.

Safeguards against accidental erasure

Accidental erasure can be prevented by breaking out the tabs on the end of the cassette tape (where the tape is not exposed) using a screwdriver or similar implement.

If a tab is broken out in error and you wish to re-record the tape, simply block the tab hole using adhesive tape and the tape can be used for recording again.

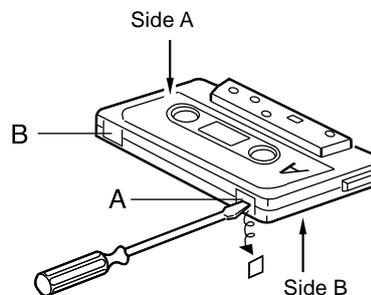

Break out tab A for side A.
Break out tab B for side B.

TIMER OPERATION

Using the timer (Main unit only)


Set the on and off times, and function to be used. Operation will start with the selected function at the on time. The sound will be gradually increased from a no-sound level to the current volume setting (fade-in). The power will be switched off at the off time. The timer will function every day unless it is released.

Note:

Make absolutely sure that the clock is set to the correct time before setting the timer.


Operation

1. Press the FUNCTION button to select the function and set the desired volume level for timer operation.
2. Press the CLOCK/TIMER button for at least 2 seconds.

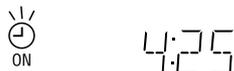

The previous timer on time setting appears.

3. Press the MEMORY button within 10 seconds.

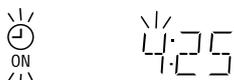


4. Set the timer on time by turning the VOLUME control, then press the MEMORY button (as described under "ADJUSTING THE CLOCK").



The timer off time setting appears.

5. Set the timer off time as described in step 4.

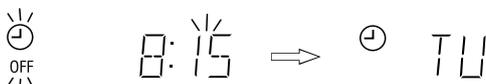

The previous function setting appears.

- "ON" remains lit.

6. Press the OFF/ON button to switch off the power.

- To switch off the power during a timer controlled operation, press the OFF/ON button. The timer will be set in the standby mode.

To release the timer

After turning the power on, press the CLOCK/TIMER button twice, "ON" disappears.

To set the timer again with the same settings

1. Press the CLOCK/TIMER button repeatedly to display "ON".
2. Press the OFF/ON button to switch off the power.

Note:

The timer operation is released if a power failure occurs.

Using the sleep timer (Remote control only)

The sleep timer automatically switches off the power after a preset time has elapsed. The volume will gradually be reduced (fade-out) during the 1-minute period before the unit turns off. There are 12 time periods available: 120, 110, 100, 90, 80, 70, 60, 50, 40, 30, 20, and 10 minutes.

Press the SLEEP button repeatedly to select the desired sleep time. "SLEEP" blinks and the selected time appears on the display. After a few seconds, the original display returns. "SLEEP" remains blinking.

To check the remaining sleep time

Press the SLEEP button once. After a few seconds, the original display return.


To release the sleep timer while in operation

Press the SLEEP button repeatedly until "SLEEP" disappears. The timer is also released if the power is switched off.

MAINTENANCE

Cleaning the tape heads


To ensure continued high performance, use cotton swab to clean the heads, pinch roller and capstan of the decks after about every 10 hours of use. If the dirt persists, soak the swab in a little methylated spirit or head cleaning fluid and then clean.

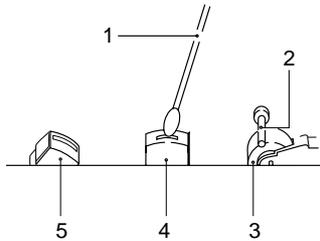

1. Cotton swab
2. Capstan
3. Pinch roller
- 4, 5. Heads

Cleaning the CD player lens

The lens should never be touched. If dust is on the lens, blow it off using a camera lens blower. (Consult your dealer.)

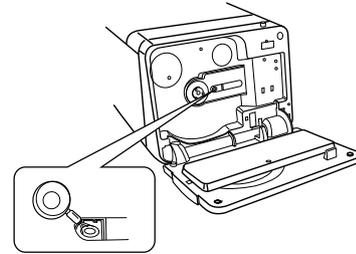

Cleaning the unit

Clean the outside of the unit with a clean soft cloth, moistened with lukewarm water. Do not use benzene, thinner or alcohol since they will mar the finish of the surfaces.

SPECIFICATIONS

Tuner

Reception frequency:

FM: 87.5 - 108 MHz

AM: 522 - 1710 kHz (9 kHz steps)

520 - 1710 kHz (10 kHz steps)

CD player

Channels:

2-channel stereo

Sampling frequency:

44.1 kHz

Pick-up:

Optical 3-beam semiconductor laser

Laser output:

0.6 mW (Continuous wave max.)

Wave length:

790 nm

Wow/flutter:

Below measurable limits

Cassette deck

Track system:

4-track, 2-channel stereo

Frequency response:

80 Hz to 15 kHz

Signal-to-noise ratio:

40 dB

Wow/flutter:

0.15% (WRMS)

Fast forward/rewind time:

Approx. 110 sec. (C-60)

General

Output power:

4 W x 2 (at 4 ohms, 10% distortion)

Outputs

SPEAKERS: 4 ohms

PHONES: 8 - 32 ohms

Power requirements:

AC 230-240V, 50 Hz

Power consumption:

18 W

Dimensions:

205(W) x 166(H) x 212(D) mm

Weight:

2.3 kg

Speaker systems

Type:

Full range bass reflex

Unit used:

10 cm cone type

Maximum power-handling capacity:

6 W (peak)

Nominal impedance:

4 ohms

Dimensions:

123(W) x 232(H) x 202(D) mm

Weight:

850g (per speaker)

Specifications subject to change without notice.

The SANYO logo consists of the word "SANYO" in a bold, sans-serif font. The letter "A" is stylized with vertical lines passing through it, and the "Y" also has vertical lines. The logo is positioned above a horizontal line.