 


SANYO

DC-SLIM3000

AU

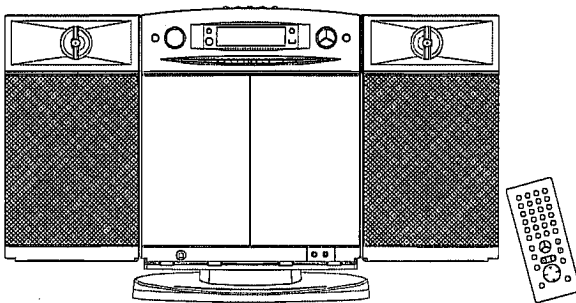

 

INSTRUCTION MANUAL 3 - CD AUDIO SYSTEM



ENGLISH P1-P27

Thank-you for choosing Sanyo. This slim, wall-mountable audio system has 3 separate disc drives. It also comes with AM/FM stereo tuner, clock/timer feature, removable speakers, motorized door and remote control. The unit is MP3/CDRW compatible.

SAFETY INFORMATION


	<div style="background-color: black; color: white; padding: 5px; font-weight: bold;">CAUTION</div> <div style="border: 1px solid black; padding: 5px; font-weight: bold;">RISK OF ELECTRIC SHOCK DO NOT OPEN</div>		 <p>This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.</p>
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL</p>			<p>This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.</p>

WARNING: TO AVOID THE HAZARDS OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR OTHER MOISTURE.


CAUTION: TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

SAFETY CERTIFICATION

 This unit is made and tested to meet exacting safety standards. It meets CSA and FCC requirements and complies with safety performance standards of the U.S. Department of Health and Human Services.

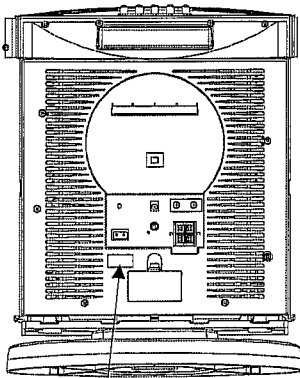

 CLASS 1 LASER PRODUCT
PRODUIT DE LASER DE CLASSE 1.

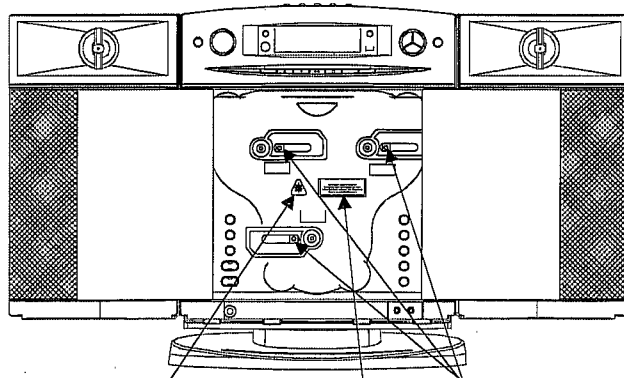

LASER APERTURE



INVISIBLE LASER RADIATION
DO NOT STARE INTO BEAM OR VIEW
DIRECTLY WITH OPTICAL INSTRUMENTS
CLASS 3A LASER PRODUCT

CAUTION - USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

FOR SAFE AND EFFICIENT OPERATION

- Do not damage the power cord.
- When not in use, disconnect the power cord from the outlet. Grasp the plug, not the cord, when disconnecting the unit.
- If water should enter the unit, electrical shock or malfunction may result. Use in an area where there is low humidity and little dust.
- Do not disassemble or alter the unit in any way.
- Do not use the unit in areas where extremes in temperature occur (below 5°C or exceeding 35°C), or where it may be exposed to direct sunlight.
- Because of the CD player's extremely low noise and wide dynamic range, there is a tendency to turn the volume on the amplifier higher than necessary. Doing so may produce an excessively high output from the amplifier, which can cause damage to your speakers. Please be careful in this regard.
- Sudden changes in the surrounding temperature can cause dew to form on the optical pickup lens inside unit. Under this condition, the unit may be unable to operate properly. If this should occur, remove the disc and allow the player to adjust to the surrounding temperature.
- Please use the original CD software, and any copy discs are not recommendable for use.

WARNING: Handling the cord on this product or cords associated with accessories sold with this product will expose you to lead, a chemical known to the State or California to cause cancer, and birth defects or other reproductive harm.

Wash hands after handling.

- The apparatus shall not be exposed to dripping or splashing.
Do not install the wquipment in a confined space, such as a bookcase or built-in cabinet.

THIS UNIT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.

IMPORTANT SAFETY INSTRUCTIONS

1. **Read Instructions** - All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating and use instructions should be followed.
5. **Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. **Water and Moisture** - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near swimming pool, and the like.
8. **Accessories** - Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



S3125A

PORTABLE CART WARNING
(symbol provided by RETAC)

10. **Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided according to manufacturer's instructions.
11. **Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

IMPORTANT SAFETY INSTRUCTIONS

12. **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed on or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
13. **Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.
14. **Overloading** - Do not overload wall outlet, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
15. **Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
16. **Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
17. **Damage requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance.

 
IMPORTANT SAFETY INSTRUCTIONS

18. **Replacement Parts** - When replacement parts are required, be sure the service technician uses replacement parts that have been specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
19. **Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
20. **Wall or Ceiling Mounting** - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
21. **Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
22. **Nonuse Periods** - Unplug the product's power cord when you will not use it for an extended period.

CONNECTIONS


LINE (AUX) IN/OUT CONNECTIONS

Press the LINE (AUX) button (34) to select IN or OUT mode.



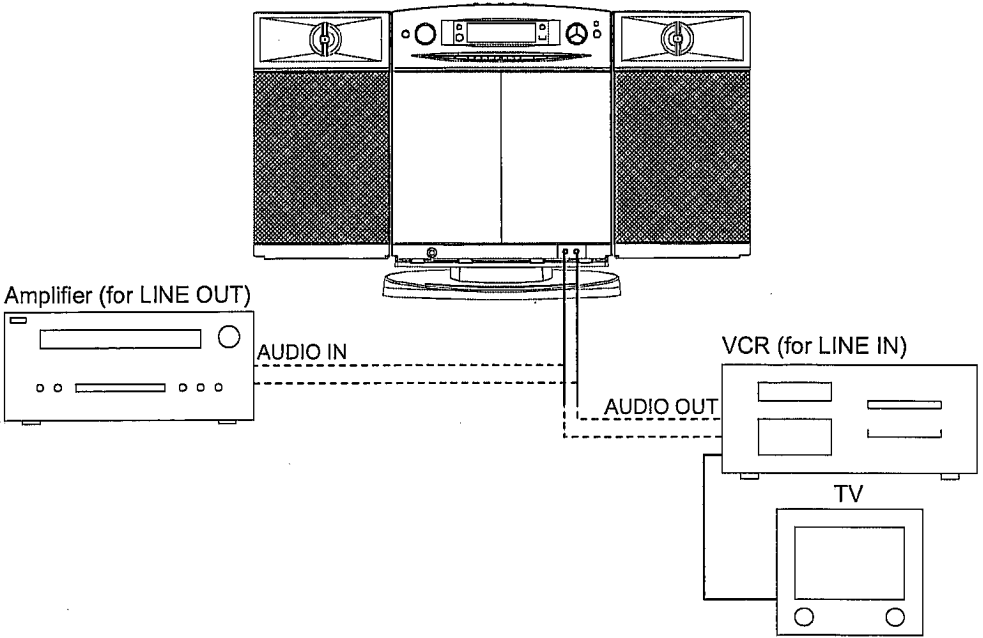


SUBWOOFER CONNECTIONS

 Connect the Active Subwoofer to the Subwoofer socket (45) at rear of main unit.

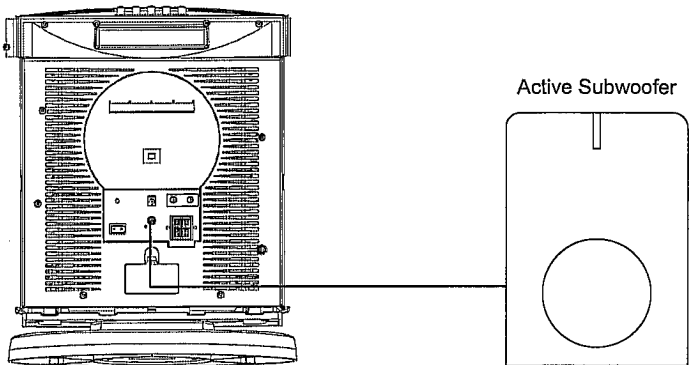

LOCATION OF CONTROLS - UNIT

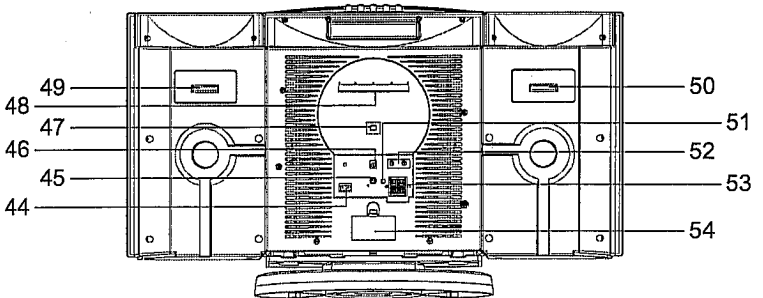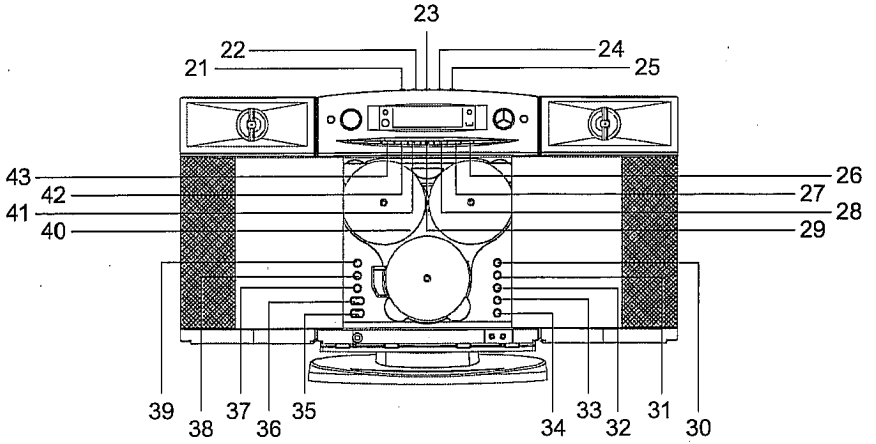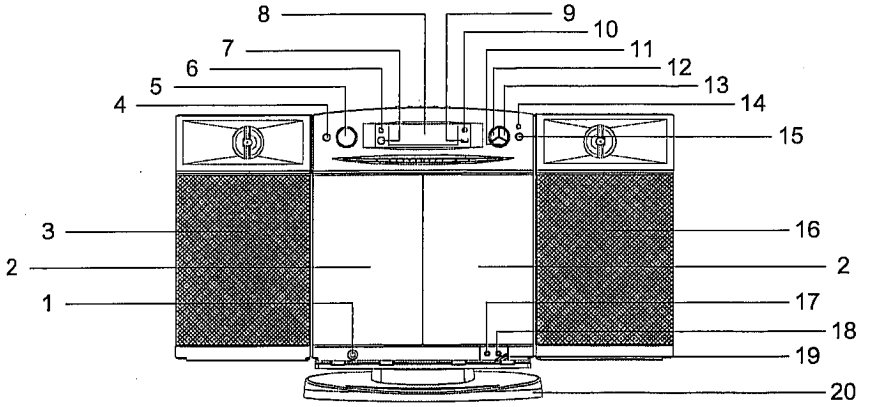   

LOCATION OF CONTROLS - UNIT (cont.)

- 1. Headphone Jack**
- 2. CD Door**
- 3. Detachable speaker (L)**
- 4. CD Door OPEN/CLOSE Button**
Open or close the CD door
- 5. VOLUME UP/DOWN Button**
Adjust volume level
- 6. MOODLIGHT Button**
Illuminates the CD compartment
- 7. Remote Sensor**
- 8. LCD Display**
- 9. SureWake LED Indicator**
SureWake function on or off indicator
- 10. BACKLIGHT Button**
Selects display backlit on or off
- 11. CD SELECTION - Disc 3 Button**
Selects disc 3
- 12. CD SELECTION - Disc 1 Button**
Selects disc 1
- 13. CD SELECTION - Disc 2 Button**
Selects disc 2
- 14. POWER STANDBY Indicator**
Standby indicator is lit when system switches off
- 15. POWER ON/STANDBY Button**
Switches the system on or off
- 16. Detachable Speaker (R)**
- 17. LINE Socket (L)**
- 18. LINE Socket (R)**
- 19. LINE Socket Cover**
Opens line socket cover
- 20. Pedestal**
- 21. TUNER/BAND Button**
Activates operating mode TUNER (radio) and selects the reception band
- 22. LINE Button**
Activates operating mode LINE
- 23. TIMER Button**
Activates the timer
- 24. MODE Button**
Toggles the display contents
- 25. SUREWAKE Button**
Turns on surewake function
- 26. FOLDER UP ▲ Button**
Activates the MP3 album (Forward)
- 27. FOLDER DOWN ▼ Button**
Activates the MP3 album (Backward)
- 28. ■ STOP Button**
Interrupts the CD playback / clears the CD program
- 29. ►|| PLAY/PAUSE Button**
Switches CD mode, starts CD playback, pauses CD
- 30. MUTE Button**
Mutes the sound
- 31. SLEEP Button**
Press for sleep to music.
- 32. MEMORY Button**
For tuner memory / CD program
- 33. SNOOZE Button**
Switches off the unit for 9 minutes while timer is on. The unit will then start again.
- 34. LINE IN/OUT Button**
Selects Line IN or OUT mode

LOCATION OF CONTROLS - UNIT (cont.)

35. SURROUND Button

Press to turn the surround sound ON or OFF. The indicator lights while surround is ON.

36. BASSXPANDER Button

Press for bassxpander sound.

37. EQ Button

Selects FLAT, POP, ROCK, JAZZ and DISCO sound effects

38. STEREO Button

Stereo / mono switching for FM stations

39. PRESET/REPEAT Button

-Retrieve preset radio stations (Forward)
-Repeats track / 1 disc / all discs for CD mode

40. 3 CD Changer Compartment

41. CD-TUNER-SKIP ►► Button

-Manual tuning, station search (Forward)
-CD forward title selection, forward search operation

42. CD-TUNER-SKIP ◄◄ Button

-Manual tuning, station search (Backward)
-CD reverse title selection, reverse search operation

43. MP3 MODE Button

Selects MP3 TITLE & ARTIST or ALBUM

44. AC Socket

Main power connection

45. Subwoofer Jack

For connection to a subwoofer

46. DC 14V Jack

Connects to CAR/BOAT adapter

47. AM Antenna

AM antenna connection socket (for the frame antenna included in the accessories)

48. Wall Mounting Holder - Center unit

Used to mount the center unit on a wall

49. Wall mounting Holder - R-Speaker

Used to mount the R-speaker on a wall

50. Wall mounting Holder - L-Speaker

Used to mount the L-speaker on a wall

51. Reset Switch

If the system does not display information, or the data appearing is wrong, press the "RESET" switch with a sharp object, e.g. needle or ballpoint pen. The data must then be re-entered.

52. FM Antenna

Note - Do not connect to external antenna

53. Speaker Terminal

54. Battery Compartment

Batteries (3 x 1.5V "AA" size) for power back-up of time and programmed radio stations.

 
NOTE:

If the system is connected to the power voltage, part of the machine is in operation due to the stand-by function. In order to switch off the system completely, pull out the power plug from the power socket.

INSTALLATION (Unit)


INSTALLATION PEDESTAL

1. Carefully align the unit tabs onto the pedestal holder (1).
2. Push the unit backward until it clicks (2).

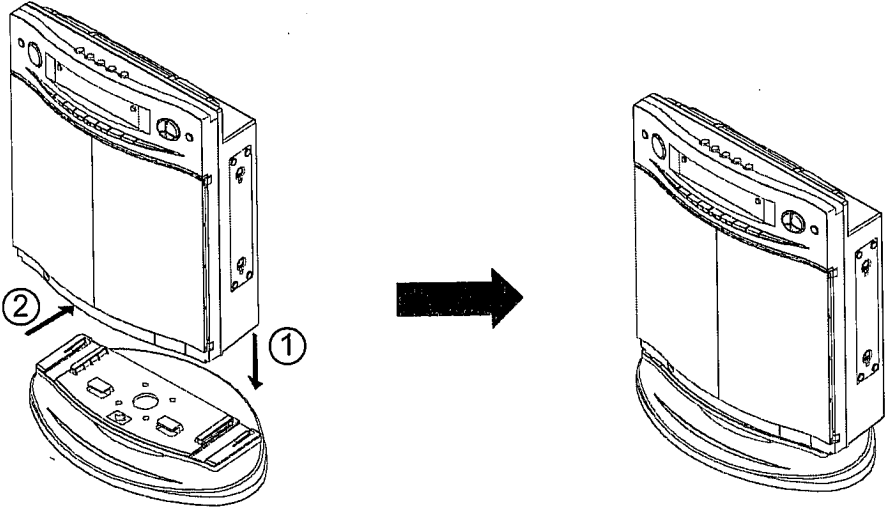

DISASSEMBLE PEDESTAL


 
1. Press down both side of safety lock ribs (3) then push forward slightly (4) at the same time.
2. Hold onto the unit (5) then push forward (6) again carefully to release the unit from the pedestal.

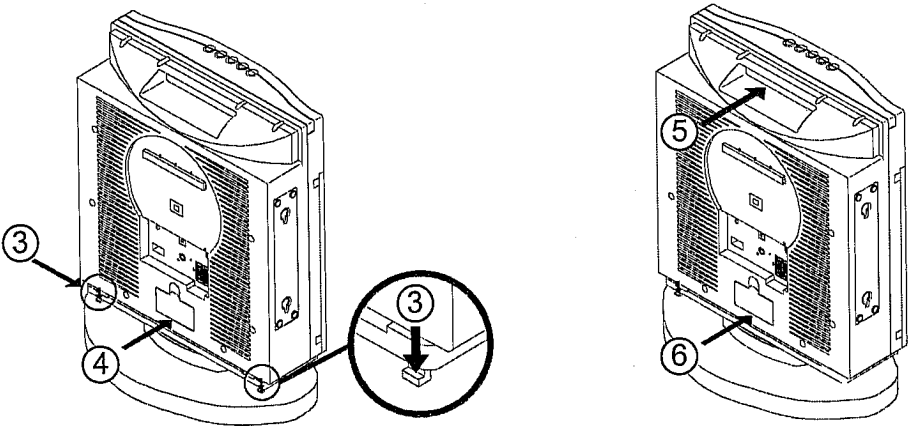

INSTALLATION (Speakers)

ASSEMBLE SPEAKERS

  1. Carefully align the speaker studs with the holes on the side of the main unit (1).
 2. Slide the speaker (2) downwards until it locks into place. Repeat for the remaining speaker.
- To detach the speaker, pull up on the speaker (3) then release from the main unit (4).

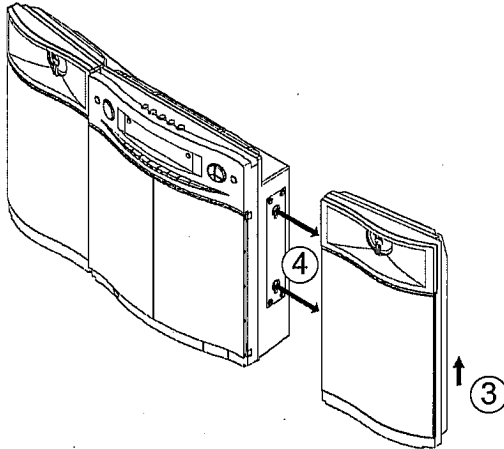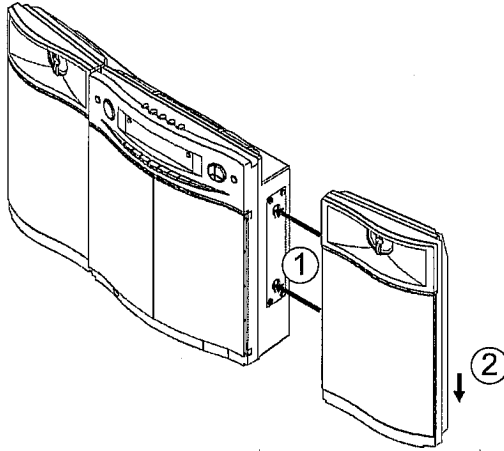


INSTALLATION (Wall Mounting)

Installation options:

- Wall mount
- One or both speakers attached or detached




To mount the center section on the wall:

 - Position the bracket (supplied) on the wall (as show below) where you want to hang the center unit. Drill 2 holes slightly undersized for a firm fit.
- Secure the bracket on the wall using 2 dowels and 2 screws (supplied).
- The mounting screws should be anchored into solid wall support, such as wood frame or concrete wall. Mount the center unit onto the wall bracket.
- Make sure the mounting tab on the center unit fits securely into the mounting slot on the wall bracket.
- Screws and plastic dowels are also provided for speakers if they are to be wall-mounted away from the center section.

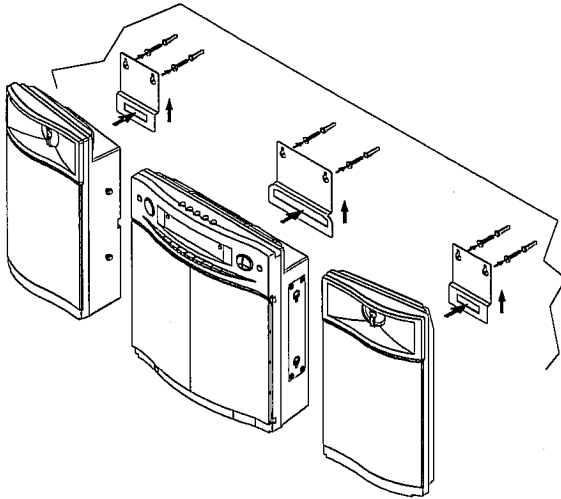


REMOTE CONTROL (Battery Installation)

   1. Remove battery tray by pressing point (1a) inside then sliding point (1b) area at the same time.
2. Pull out the battery tray.
3. Install or replace the button type battery "CR2032".
4. Close the battery tray.

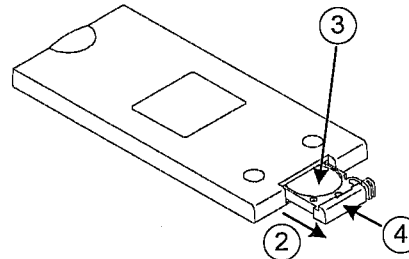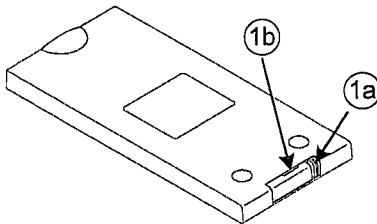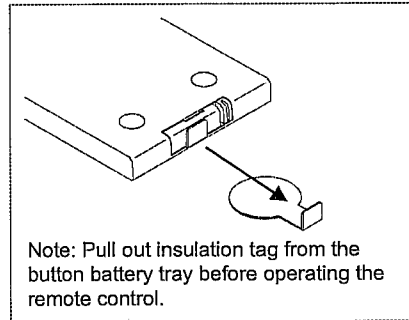

LOCATION OF CONTROLS - REMOTE CONTROL

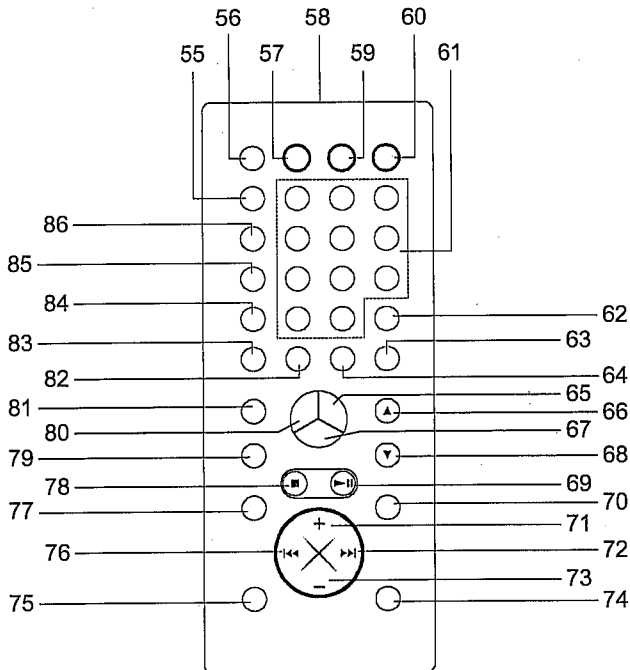 


LOCATION OF CONTROLS - REMOTE CONTROL (Cont.)

- 55. TIMER Button**
Activates/deactivates the timer
- 56. CD Door OPEN/CLOSE Button**
Opens the door while the unit is on. Other operating elements now become accessible, and you can insert or remove CDs.
- 57. MOOD LIGHT Button**
Press to turn on soft lighting from the CD door.
- 58. Remote Control Transmitter**
- 59. EQ Button**
Selects FLAT, POP, ROCK, JAZZ and DISCO sound effects
- 60. POWER ON/STANDBY Button**
Switches the system on or off
- 61. 1 - 9, 0/+10 NUMERIC Buttons**
Recalls TUNER preset stations / recalls CD tracks
- 62. MEM/PGM Button**
For tuner memory / CD program
- 63. MP3 MODE Button**
Selects title & artist or album in MP3 mode
- 64. REPEAT Button**
Repeats 1 track / 1 disc / all discs in CD mode
- 65. DISC-2 Button**
Press to play CD tray-2
- 66. ST/MO / FOLDER ▲ Button**
-Stereo/Mono switching for FM stations
-Selects MP3 album (Forward)
- 67. DISC-3 Button**
Press to play CD tray-3
- 68. FOLDER ▼ Button**
Selects MP3 album (reverse)
- 69. ►|| PLAY/PAUSE Button**
To play CD, start CD playback / short interruption of CD playback
- 70. MUTE Button**
Mutes the sound
- 71. VOLUME (+) Button**
Increases volume
- 72. CD / TUNER SKIP ►►► Button**
-Manual tuning up to stations, station search operation (Forward)
-CD forward title selection, forward search operation
- 73. VOLUME (-) Button**
Reduces volume
- 74. BASSXPANDER Button**
Press for rich bassxpander sound
- 75. SURROUND Button**
Press to turn the surround sound ON or OFF. The indicator lights while surround is ON.
- 76. CD / TUNER SKIP ◀◀◀ Button**
-Manual tuning down to stations, station search operation (Backward)
-CD backward title selection, backward search operation
- 77. TUNER / BAND Button**
Activates TUNER mode and selects the reception band
- 78. ■ STOP Button**
Interrupting the CD playback / clearing the CD programme


LOCATION OF CONTROLS - REMOTE CONTROL (Cont.)

- 79. SLEEP Button**
Press for sleep to music
- 80. CD selection - Disc 1 Button**
Press to access disc 1
- 81. SNOOZE Button**
Switches off the unit for 9 minutes while timer is on. The unit will then start again.
- 82. MODE Button**
Toggles the display contents
- 83. INTRO Button**
Plays 10 seconds of each CD track
- 84. RANDOM Button**
CD play in random sequence
- 85. PRESET Button**
Press to retrieve preset radio stations (Forward)
- 86. LINE Button**
Activates operating mode LINE

 POWER SUPPLY

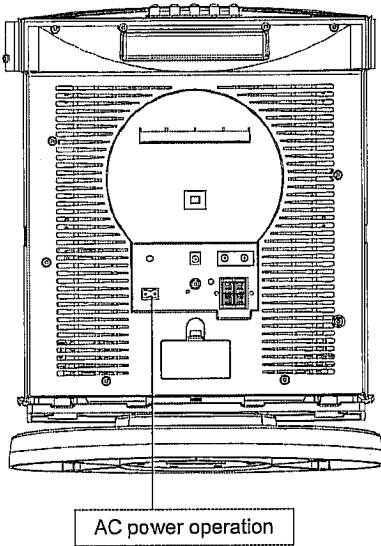

Take the cord out and connect it.

 

240V AC, 50 Hz



NOTE:

 
This unit is equipped with a polarized plug. If you have difficulty inserting the plug, turn it over and reinsert it.

CAUTION:

TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

BATTERY SUPPLY (For Tuner/Clock Memory Back-up)

Install batteries (not supplied).
Observe + and - signs.

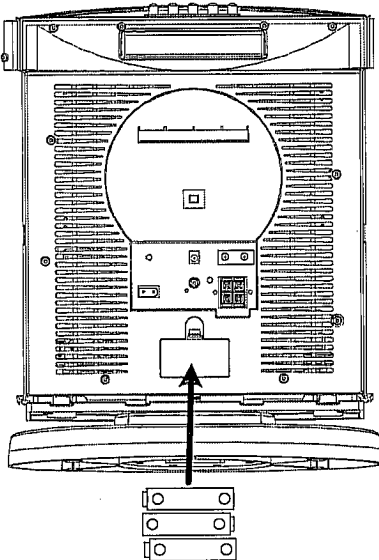

IMPORTANT NOTE:

SPENT OR DISCHARGED BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY IN COMPLIANCE WITH ALL APPLICABLE LAWS. FOR DETAILED INFORMATION, CONTACT YOUR LOCAL COUNTRY SOLID WASTE AUTHORITY.

CAUTION:

WHEN INSTALLING BATTERIES

To prevent leakage from the batteries, (leakage is corrosive and can cause personal injury and damage to the unit) observe the following precautions:

1. The batteries must be installed correctly. Match the polarities (+ and - signs) on the batteries, to the polarities shown on the battery compartment of the unit (see above).
2. Do not mix new batteries with old or used batteries.
3. Only use batteries of the same type and brand.
4. If the unit will not be used for an extended period of time, remove the batteries and store them in a cool place.
5. Carefully follow the battery manufacturer's instructions for proper use and disposal.
6. **DO NOT ALLOW YOUNG CHILDREN TO HANDLE BATTERIES.**

OPERATING INSTRUCTIONS

POWER ON/OFF

 
When the AC power is connected, the clock shows on the LCD display.

1. Press the POWER button to turn the unit 'ON'.

Note: The LCD display lights up.

2. You can now select your desired music source by pressing one of the function buttons:
TUNER/BAND or CD PLAY/PAUSE or AUX.

Example : FM mode



3. To switch to POWER OFF, press the POWER button.

The LCD display backlight goes off.

NOTE: Please turn off the unit to standby mode before disconnecting main power supply from the unit.



SETTING THE TIME

 
When the unit is first connected to AC power, the display shows "24:00". To set the clock to the current time proceed as follows:

1. With unit at off mode, press the MEM/PROG button once, the hour digits begin to flash.

MEMORY



2. Press the SKIP Forward or Backward buttons to adjust the hour. Be sure to set the hour correctly for AM or PM.




3. Press the MEM/PROG button again, the minute digits begin to flash.

MEMORY



 4. Press the SKIP Forward or Backward buttons to adjust the minute.



5. Press the MEM/PROG button once more, the display stops flashing and the clock begins to run.

 
MEMORY




TIMER ON/OFF SETTING

NOTE: The clock should be set before the Timer On/Off setting.


1. With unit at off mode, press the TIMER button once, the TIMER ON indicator begins to flash.



 
2. Press the MEMORY/PROGRAM button once, the hour digits begin to flash.



 
3. Press the SKIP forward or backward buttons to adjust the hour. Be sure to set the hour correctly.



 4. Press the MEMORY/PROGRAM button again, the minute digits begin to flash.



 
5. Press the SKIP forward or backward buttons to adjust the minute.




6. Press the MEMORY button once more, the timer on setting is finished.

Note: Timer "ON" indicator will stop flashing after about 3 seconds and then goes off.

 
Note: Timer function with Surewake starts the music quietly and then increases the volume to room level to make sure you awake (when SUREWAKE switch is set at ON position).



 
7. Press the MODE button again, the TIMER OFF indicator begins to flash.



 
8. Press the MEMORY button once, the hour digits begin to flash.



 
9. Press the SKIP forward or backward buttons to adjust the hour. Be sure to set the hour correctly.



 10. Press the MEMORY button again, the minute digits begin to flash.




 11. Press the SKIP forward or backward buttons to adjust the minute.





12. Press the MEMORY button once more, the timer off setting is finished.

 Note: Timer "OFF" indicator will stop flashing after about 3 seconds and then goes off.



  13. To cancel the timer on setting, press the TIMER button until "TIMER" display goes off.




SNOOZE FUNCTION


If the unit has switched itself on by means of the timer function, press the SNOOZE button to switch the unit off for approximately 9 minutes. After this time, the unit switches itself on again. Then press the SNOOZE button again for another 9 minutes, or switch the unit off with the POWER/STANDBY button.

SLEEP SETTING

 Pressing the SLEEP button permits settings from 00 minutes to 120 minutes. When the desired time appears, releasing your finger will set the time. (Pressing "SLEEP" after the 120-minute position will cancel the sleep timer)




Change of SLEEP

 

BASIC OPERATION

Electronic volume control

 Electronic volume control display




1. Press VOLUME UP or DOWN button to adjust sound level, the volume level (MIN - 01 ~ 59 - MAX) will be shown in the LCD display.
2. Holding down the button will result in continuous increase or decrease of the volume.

MUTING FUNCTION


If the MUTE button is pressed, the audio output will be muted, and "MUTE" indicator will be displayed.

 Example : Muted FM mode



Press once more to cancel.

 Cancel Muting



PRESET EQ FUNCTION

Press the EQ button repeatedly to cycle through the preset EQ shown on the LCD display - FLAT, POP, ROCK, JAZZ and DISCO.

 
SURROUND FUNCTION

Press the SURROUND button on remote control to ON for full sound.


BASSXPANDER Control

Press the BASSXPANDER button to get a rich bass sound.

Note: Display will recall the most recent setting when you first press BASSXPANDER button.




 To cancel the BASSXPANDER function, press once more.




Switching the display

 
- Pressing MODE button in the power Off mode changes the setting as follows:



 - Pressing CD/MODE button in the CD playing mode changes the setting as follows:



 - Pressing CD/MODE button in the tuner mode changes the setting as follows:




LISTENING TO THE RADIO


1. Press the POWER button to turn the system 'ON'.
2. Press the TUNER/BAND button to select the radio function.



 Example : FM mode



 4. Press the SKIP forward or backward buttons to tune to the desired station.



Manual Tuning - Press and hold the SKIP forward/backward buttons until the display approaches your desired station. Then tap the buttons repeatedly until the display shows the exact frequency.

 
Auto tuning - Press the TUNING forward or backward buttons momentarily and release. The tuner will move up or down to the next available station.

3. Press the TUNER/BAND button repeatedly to select AM or FM band.

5. When finished listening, press the POWER/STANDBY button to shut the system OFF.


STORING PRESET STATIONS

1. Tune to the station you wish to store.




The unit enables you to randomly preset 16 stations for FM and 16 stations for AM band.

 
2. Press the MEMORY button once.



 4. Press the MEMORY button again. The station is stored in channel 2.



 3. Press the PRESET/REPEAT button repeatedly to set the desired preset station number.



5. To store other stations, repeat above steps.

PRESET/
REPEAT



RECALLING PRESET STATION

Press the PRESET/REPEAT button repeatedly to select the desired station.

STEREO / MONO Function

Repeatedly pressing the button "ST / MO" switches between stereo and mono reception. The stereo reception of a station in the FM band is indicated on the display.

In the case of stereo stations with a bad reception (noise infested reception) we recommend switching the tuner to mono reception. Press the "ST / MO" button. In the display, the STEREO indicator disappears in mono mode.

WARNING:

Recording copyright material without permission of the copyright owners is usually an infringement, if you wish to re-record copyright material, permission from the copyright owner is necessary. SANYO does not approve of, and cannot be held responsible for, any unlawful of this machine.

IMPORTANT NOTE FOR CD-R/CD-RW/MP3 CD PLAYBACK CAPABILITY

 
1. Because of non-standardized format definition/production of MP3 CD, playback quality & performance are not guaranteed.

2. SANYO is not responsible for the playability of CD-R/CD-RW/MP3 CD in any case due to recording conditions such as PC performance, writing software, media ability and etc.

- To load a disc to 3 CD changer, simply put the disc onto the center spindle of the player and then press CD DOOR OPEN/CLOSE button again to close the CD door. After that, reading TOC will start.

Ensure that the disc is correctly mounted on the spindle and locked in place.

After reading TOC (1st Disc)

**To play the disc**


Press PLAY/PAUSE button to play the CD.

Playing disc 1 track 1

**To pause the playing**

 
Press PLAY/PAUSE button while the disc is playing, the playing time will flash.

While paused

**To stop the disc playing**

Press STOP button.

 Stop condition (TOC display)

**PLAYING COMPACT DISCS**

- Switch on the power and press the PLAY/PAUSE button to select the CD mode.
- If there is no CD inside, a "NO DISC" display will appear.


When there is no disc

**Loading a disc**

 - Press the CD DOOR OPEN/CLOSE button to open the CD door.

**Skip and Search Function**

Press the SKIP forward or backward buttons momentarily.



	IN PLAY MODE		IN STOP MODE
	PRESS ONCE	PRESS TWICE	PRESS ONCE
	BACK TO THE BEGINNING OF THE CURRENT TRACK	PREVIOUS TRACK	PREVIOUS TRACK
	NEXT TRACK	NEXT TRACK	NEXT TRACK

Press and hold the SKIP button during playback.

 
: FAST BACKWARD : FAST FORWARD

NOTE : During the search mode low level audio will be heard to assist in locating the correct point in the track.


To repeat a track or disc

Press REPEAT button on remote control:


Press once for one track repeat



 Press twice to repeat all tracks in playing disc



 Press three times to repeat tracks in all discs




With one further press, the repeat mode is cancelled.

Random play function

Press RANDOM button on remote control in stop condition to start random play. Press once again to cancel the function.

 Random playing start




Note: Random play can not operate while playing programmed tracks.

Intro playing function

In stop condition, press the INTRO button on remote control. After that the first 10 seconds of each song will be played.

If the INTRO button is pressed again, the CD will change to normal playing mode.

 Intro playing




PROGRAMMED PLAYBACK


The CD player enables you to program up to 40 tracks in a sequence of your choice. First select CD stop mode.

1. Press the MEMORY button on remote control one time.

 
Program input mode



 2. Press the SKIP forward or backward buttons to select the desired track to be programmed.




Choose track 4

 

3. Press the MEMORY button again, then track 4 is stored.

4. Continue to program, repeat steps 2 and 3.

 5. Press PLAY/PAUSE button to play the program tracks.



Note: If the program function has stopped with MEMORY indicator displayed, press the PLAY/PAUSE button, the program play will start.

 
Clear the program

In stop mode, press the STOP button once, the MEMORY indicator will go off and the preset programs will be cancelled.



PLAYING MP3 DISC

1. Switch on the power and press the PLAY/PAUSE button to select the CD mode.


After reading TOC



  2. Press the FOLDER ▲ or ▼ buttons to select desired album.



 3. Press the SKIP ►► or ◀◀ buttons to select desired track.
4. Press the PLAY/PAUSE button to play MP3.



Note: When an MP3 disc is playing, press and hold the MP3 MODE button, and the track no., title and artist information will be shown repeatedly in the display if disc information is available.

To resume normal play display, press the MP3 MODE button repeatedly until playing time appears.

To repeat a track or Folder

 
1. Press the REPEAT Button on remote control once, MP3 plays one track repeatedly and "REPEAT" is displayed.

One track repeat




2. Press this button twice, MP3 plays all tracks within the selected album repeatedly and "REPEAT ALL" is displayed.

All track repeat



3. Press this button three times, MP3 plays all tracks on the disc and REPEAT ALL DISC is displayed.

 All disc repeat




4. To cancel repeat function, Press the REPEAT button repeatedly until repeat function display goes off.

Random play function

Press RANDOM button on remote control in stop condition to start random play. Press once again to cancel the function.

 Random playing start




Intro play function

In the stop condition, press the INTRO button on remote control. The first 10 seconds of each song will be played.

If the INTRO button is pressed again, normal playing mode will resume.

 
Intro playing




PROGRAMMED PLAYBACK

The MP3 player enables you to program up to 40 tracks in a sequence of your choice. First select CD stop mode.

 
1. Press the MEMORY button on remote control once.



 
2. Press the SKIP ◀◀ or ▶▶ buttons or Numeric buttons on remote control to select your desired track.



 3. Press the MEMORY button again to store the selected track. (for example, track 38 shown below)



 4. Continue to program, repeating steps 1 to 3.
5. Press PLAY/PAUSE to play the programmed tracks.



Note: If the program function has stopped with MEMORY indicator displayed, press the PLAY/PAUSE button, the program play will start.

Clear the program

In the stop mode, press the STOP button once, the MEMORY indicator will go off and the preset programs will be cancelled.

CARE AND MAINTENANCE

COMPACT DISC CARE

- Treat the disc carefully. Handle the disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the disc.
- Do not attach adhesive tape, stickers etc., to the disc label.
- Clean the disc periodically with soft, lint-free, dry cloth. Never use detergents or adhesive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- If disc skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched).
- When cleaning the disc, wipe in straight lines from the centre of the disc to the edge of the disc. Never wipe in a circular motion.
- To remove a disc from its storage case, press down on the centre of the case and lift the disc out, holding it carefully by the edges.
- Fingerprints and dust should be carefully wiped off the disc's recorded surface with a soft cloth. Unlike conventional records, compact discs have no grooves to collect dust and microscopic debris, so gently wiping with a soft cloth should remove most particles.



CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on the unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- If the cabinets become dusty, wipe them with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinets.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will mar the finish of your unit.

Caution: never allow any water or other liquids to get inside the unit while cleaning.

TROUBLESHOOTING GUIDE

Should this unit exhibit a problem, check the following before seeking service.

Symptom	Possible cause	Solution
Radio		
Noise or sound distorted on AM or FM broadcasts.	Station not tuned properly for AM or FM	Retune the AM or FM broadcast station.
	FM: Line antenna is not extended.	Extend FM line antenna.
	AM: Unit is not positioned correctly.	Rotate unit until best reception is obtained.
FM STEREO indicator does not light	FM MODE button is set to MONO position.	Set FM MODE to FM STEREO position.
AM or FM, no sound.	TUNER Function button is not pressed.	Press TUNER function button.
	Volume at minimum	Increase Volume.
Compact Disc Player		
CD Player will not play.	CD Function button is not pressed.	Press the CD Function button.
	CD is not installed or installed incorrectly.	Insert CD with label side out.
CD skips while playing.	Disc is dirty or scratched.	Wipe disc with cloth or use another disc.
Disc is inserted but CD player skips over spot and will not play,	Disc inserted upside down.	Insert disc properly.
	Disc is dirty.	Clean disc.
	Disc is non-standard.	Use correct disc.

SPECIFICATIONS

AC Power	AC 240V, 50Hz	CD Section	Vertical Front Loading CD
Power Output	10 W CH 10% THD	Speaker System	Woofer: 5 1/4", 4 ohms Tweeter: 2", 4 ohms
Dimension of: Main Section	723(W) x 428(D) x 213(H)mm (Approx.)	Remote Control	41 Keys, Battery size "CR2032" (Battery included)
Radio section	Tuning : PLL with 32 Random Preset Memory Freq. Range : AM 522-1611KHz FM : 87.5-108MHz		

