

# SANYO

## INSTRUCTION MANUAL

## DMP-P3

### Clock Radio for iPod



iPod is a trademark of Apple Inc., registered in the US and other countries.

# TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTION.....	1
PREPARATION FOR USE.....	3
OVERVIEW.....	5
GENERAL FUNCTIONS.....	7
TUNER MODE.....	8
iPod MODE.....	9
CLEANING AND MAINTENANCE.....	9
INFORMATION.....	10
SPECIFICATIONS.....	10
COMPATIBLE IPODS CHART.....	11

## IMPORTANT SAFETY INSTRUCTIONS

- 1.) Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
- 2.) Install this unit in accordance with the manufacturer's instructions.
- 3.) Only use attachments / accessories / replacement parts specified by the manufacturer.
- 4.) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the unit.
- 5.) When a cart is used, use caution when moving the cart/unit combination to avoid injury from tip-over.
- 6.) Do not install this unit near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 7.) The unit shall not be exposed to dripping or splashing water and no object filled with liquids, such as vases, shall be placed on the apparatus.
- 8.) Do not use this apparatus near water and clean the unit with dry cloth only.
- 9.) Disconnect the unit from the power source when cleaning.
- 10.) No naked flame sources, such as lighted candles, should be placed on the unit.
- 11.) Keep the player clean and never store it next to a heat source or in dirty, humid or wet places. Keep it out of direct sunlight.
- 12.) Do not block any ventilation openings; the ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc. Give minimum 10cm distance around the apparatus for sufficient ventilation.
- 13.) To prevent fire or shock hazard, do not expose this unit to rain or moisture.
- 14.) Do not subject the product to harsh impacts. Do not drop the appliance. This may result in damage to the product and loss of data.
- 15.) Care is required with the use of this apparatus in tropical and/or moderate climates.
- 16.) Press the player's buttons gently. Pressing the buttons or the screen too hard can damage the unit.
- 17.) Do not use the player in an extremely dry environment, as this can lead to static discharge which can damage the player.
- 18.) If the unit experienced a crash due to a strong electromagnetic field or by other interference, please switch off the mains and disconnect unit from with the main power supply for a few minutes. Reconnect the unit with the power supply to reset the unit software, the unit will return to normal operation.
- 19.) To prevent fire or shock hazard, do not use this plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.
- 20.) Unplug this unit during lightning storms or when unused for long periods of time.
- 21.) Where the MAINS plug is used as the disconnect device, the disconnect device shall remain readily accessible.

- 22.) Do not destroy the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 23.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 24.) Do not overload wall outlet. Use only power source as indicated.
- 25.) Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
- 26.) Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, or has been dropped, does not operate normally.
- 27.) Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- 28.) Attention should be drawn to the environmental aspects of battery disposal.
- 29.) This product is not intended for commercial use. Household use only.
- 30.) Do not install this apparatus in a confined space, such as a book case or builtin cabinet. Minimum distance(about 100mm) around the apparatus for sufficient ventilation.
- 31.) To be completely disconnected the power input, the mains plug of apparatus shall be disconnected from the mains.

# PREPARATION FOR USE

## Before Setting Up The Unit

- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the power cord is properly installed.
- When moving the unit, be sure to first disconnect the AC power cord.
- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates too much heat, places lacking ventilation or dusty areas, places subject to constant vibration and/or humid or moist areas.

## Unpacking And Setting Up


- Remove the product from the carton and remove all packing material from the unit. We suggest that you save the packing material, if possible, in the unlikely event that your unit ever needs to be returned for service. The original carton and packing material is the only safe way to pack your product to protect it from damage in transit.
- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
- Place your unit on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
- Unwind the FM antenna and extend it to its full length. It must be fully extended to provide the best FM reception.

## Protect Your Furniture

This model is equipped with non-skid rubber 'feet' at the bottom of the unit to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

## Power Source

This product is designed to operate on normal 240V~50Hz AC power only. Do not attempt to operate the unit on any other power source. You could cause damage to the product that is not covered by your warranty.

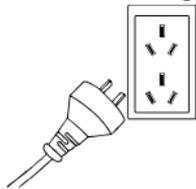

## AC Power Supply Connection

1. Check the rating label located at the bottom of the unit corresponds to your local mains supply.
2. Make sure the wall socket is switched off, then plug the AC plug into the wall socket.
3. Switch on the wall socket.


### CAUTION:

The device is connected to the mains with the AC plug. Disconnect the AC plug from the wall socket if you want to completely disconnect the device from the mains. Make sure the power plug is easily accessible during operation and not hindered by other objects.

## DC Backup Battery

### Install Battery

1. Open the battery compartment door.
2. Install 1 x 9V/6F22/006P/PP3 type battery (not included) into the back up battery compartment located at the bottom of the unit (Alkaline batteries are recommended for longer life time).
3. Be sure to observe the polarity markings, and then close the battery compartment cover.
4. In the event of AC Power cut off, the backup battery maintains the time settings.

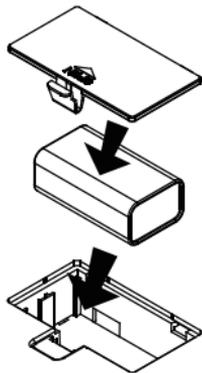

### Battery Precautions

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
4. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture.(Follow battery manufacturer's directions.)
5. Do not disassembly it.Do not dispose of the old battery in a fire.


# OVERVIEW

## FRONT VIEW


PM INDICATOR  
ALARM INDICATOR





## TOP VIEW

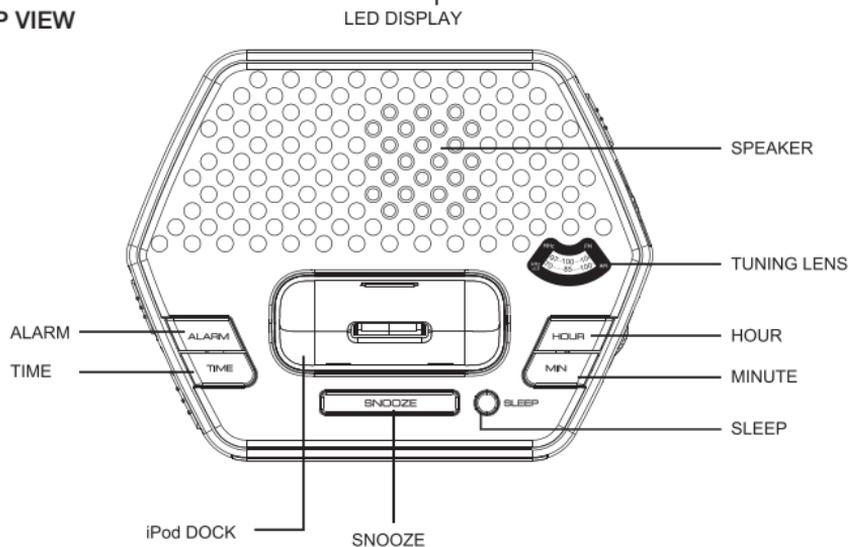


## REAR VIEW

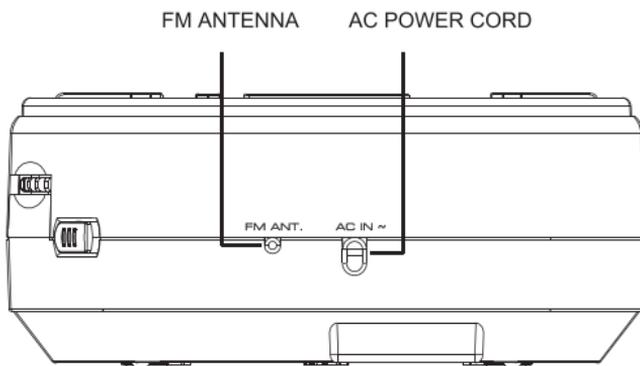

## SIDE VIEW

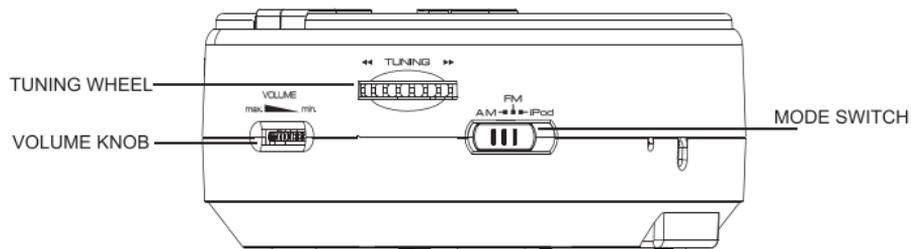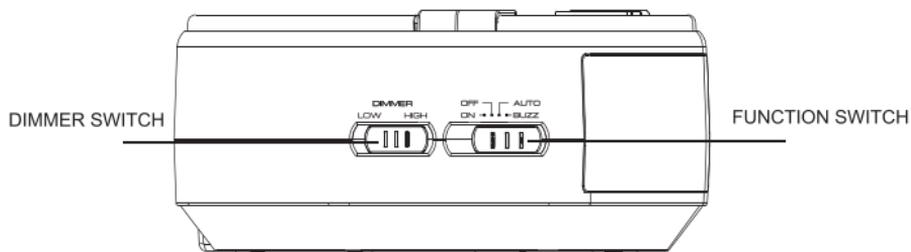

## BOTTOM VIEW

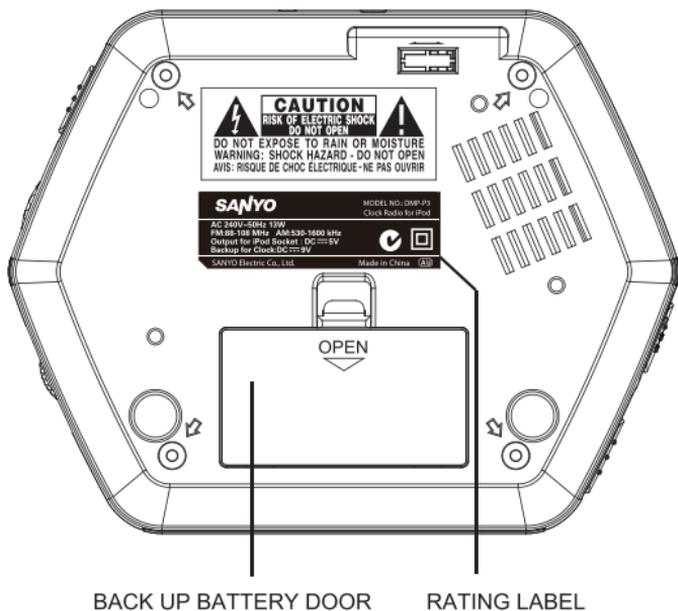

# GENERAL FUNCTIONS

## Switching On and Off

1. The unit will automatically switch to standby mode once the AC power source is connected.
2. Switch on the device from standby mode by sliding the **FUNCTION** switch to **ON** position.
3. Switch the device to standby mode by sliding the **FUNCTION** switch to **OFF** position.
4. The display will show the time once the AC power source is connected.

## Selecting Play Mode

1. Switch the unit on by sliding the **FUNCTION** switch to **ON** position.
2. Select the play mode by sliding the **MODE** switch to either **AM / FM / iPod**.

## Adjusting the Volume

The volume can be adjusted by rotating the **VOLUME** knob located at the side of the unit.

## Setting Clock

1. Press and hold the **TIME** button and press the **HOUR** button to set the hour and press the **MIN** button to set the minute.
2. Release the buttons to confirm settings.

## Setting Alarm

1. Press and hold **ALARM** button on the unit and press the **HOUR** button to set the hour and press the **MIN** button to set the minute.
2. Release the buttons to confirm settings.
3. Slide the **FUNCTION** switch to **AUTO / BUZZ** to set the alarm.
4. Select **AUTO** mode to wake up by radio and select **BUZZ** mode to wake up by buzzer.
5. The **ALARM LED** will illuminate on the display once the alarm is set.
6. Slide the **MODE** button to select the wake-up mode.
7. When the alarm time is reached, depending upon your prior selection, the AM radio or FM or the buzzer will sound.
8. If the **iPod** is selected as the wake-up mode, the buzzer will sound.
9. Press **ALARM** button to cancel the alarm and the **ALARM LED** will remain on the display and the alarm will sound again on the next day at the same time.
10. Slide the **FUNCTION** switch to **ON / OFF** to cancel the alarm.

## Snooze Function

Press **SNOOZE** button to silence the **ALARM** sound (radio / buzzer) temporarily for approximately 9 minutes. The snooze function is repeatable for 119 minutes and will automatically stop, however the alarm remains set and activates again according to your alarm mode settings.

## Sleep Function

This function switches the unit from operation mode to **STANDBY** mode after the specified time. (Supports AM / FM mode only).

1. Press and hold the **SLEEP** button to turn the unit on and press HOUR and MIN buttons to set the sleep time.
2. The sleep time ranged from 1 minute to 1 hour 59 minutes.
3. Having set the sleep time, press **SLEEP** button to reset the sleep time to 59 minutes.
4. Press the **SNOOZE** button to cancel **SLEEP** function.

Note:

1).Sleep function would not be able to turn off the iPod. In this case, once the sleep function is activated, the speaker of the unit will mute but the iPod will keep on playing.

2).This function is only available when the function setting to OFF position.

## Dimmer Function

The brightness of the display can be controlled by sliding the **DIMMER** switch to HIGH / LOW position.

# TUNER MODE

## Radio Antenna

1. The FM antenna is located at the back of the unit. If FM is weak, extend the FM antenna to its full length or try varying the position and direction of the FM antenna until you find the strongest signal.
2. The AM bar antenna is built-in inside the unit. If AM reception is weak, change the position of the unit until the internal antenna picks up the strongest signal.

## Listening to Radio


1. Slide the **FUNCTION** switch to ON position.
2. Select AM / FM mode by sliding the **MODE** switch.
3. Tune to the desired radio station by rotating the **TUNING WHEEL**.The related frequency is displayed beneath the **TUNING LENS**.
4. To turn off the radio, slide the **FUNCTION** switch to OFF position to switch the unit into standby mode.

## iPod MODE

### iPod Universal Dock Adaptor

1. Select the iPod universal dock adaptor (not included, check your iPod packaging if it came with this adaptor) that fits with your iPod model.
2. Install the adaptor with the 2 tabs facing the front, by pushing it down in the universal dock on top of the unit.
3. To remove the adaptor, press its inside rear surface and pull it upward.

Note: Make sure you use the correct adaptor for your iPod to prevent damage due to insecure iPod seating.

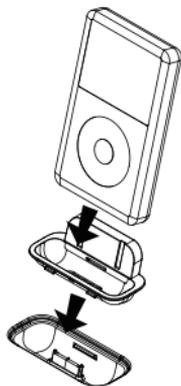

### Listen to iPod

1. With the correct iPod universal dock adaptor installed, gently dock the iPod into the unit's universal dock.
2. Depending upon your iPod, the iPod battery will begin to charge when docked- PLEASE REFER TO IPOD COMPATIBILITY CHART ON PAGE 11. For charging period, follow your iPod's instruction manual.
3. Slide the FUNCTION switch to ON position and slide the MODE switch to IPOD mode.

4. Control the iPod to playback music as mentioned in the iPod's instruction manual  
Note: This unit display cannot display any music information from your iPod. Please view the music information through your iPod display.

Charging your iPod while in AM radio mode is not recommended as it can interfere with the AM reception.

## CLEANING AND MAINTENANCE

1. If the cabinet becomes dusty, wipe it with a soft cloth.
2. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth.
3. Never allow water or any liquid to get inside the cabinet.
4. Never use any abrasive cleaners or cleaning pads as these will damage the finish of your unit.

# INFORMATION

## Troubleshooting

If a fault occurs, first refer to this information before you take the device for repair. If you are unable to rectify the fault using the information given here, contact Customer Support for advice.

Under no circumstances should you attempt to repair the device yourself, as this would invalidate the warranty.

PROBLEM	POSSIBLE CAUSE	REMEDY
No Sound	Volume is too low. Power cord incorrectly connected.	Increase volume Connect power cord correctly.
The device does not respond to button commands	Electrical static discharge.	Switch off the device, disconnect the mains cable and plug it in again after a few seconds.
Poor radio reception	Weak radio signal	FM: Extend the FM antenna to its full length or try to change the position and direction of the FM antenna. AM: Change the position of the unit until it picks up the strongest signal.
	Interference from electrical devices such as televisions, video recorders, computers, neon lamps, etc.	Move the unit away from the other operating electrical equipments such as motorized appliances, televisions, and microwave ovens.

## SPECIFICATIONS

Power:	AC 240 V ~ 50 Hz
AM :	530 - 1600 kHz
FM:	88 - 108 MHz
DC Backup :	9V (6F22 9Vx1)
Unit output power:	1 x 0.5 W
Power Consumption :	13W
Measurement:	160(L) X 125(W) X 69(H)mm
Weight:	0.67 KG

## Compatible iPods chart – DMP-P3

	Model	Compatible Format
	iPod 1st & 2nd Gen	Audio
	iPod 3rd Gen	Audio
	iPod 4th Gen	Audio
	iPod 4th Gen Photo	Audio
	iPod 4th Gen Color	Audio
	iPod 5th Gen & iPod Classic	Audio
	Mini 1st & 2nd Gen	Audio
	Nano 1st & 2nd Gen	Audio
	Nano 3rd Gen	Audio
	Nano 4th & 5th Gen	Audio
	iPod Touch 1st & 2nd Gen	Audio
	iPod Touch 3rd Gen	Audio

Thank-you for choosing the SANYO DMP-P3 alarm clock radio with iPod docking. Designed specifically to work with your docking iPod, this system provides high quality audio and radio performance that brings out the best in your music. Please read this instruction book carefully before operating the DMP-P3, and keep it for future reference.

CODE NO.: 309-031750-0001

**SANYO**

SANYO Electric Co.,Ltd.  
Made In China