 


SANYO

INSTRUCTION MANUAL

MCD-S670F

 
**CD Portable Stereo Radio
Cassette Recorder**

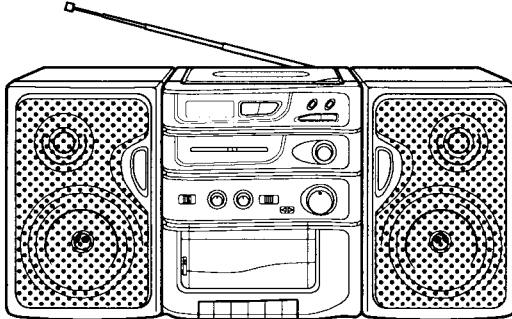

CAUTION

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED IN THE OPERATING INSTRUCTIONS MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

THE COMPACT DISC PLAYER SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED PERSONNEL.

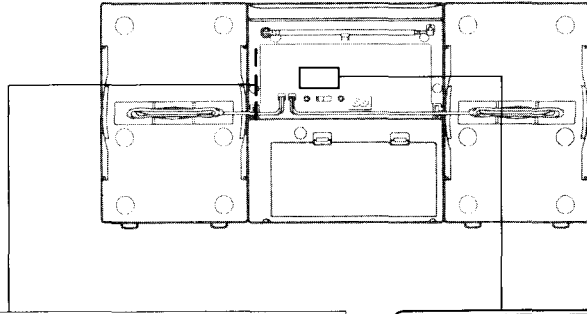

CAUTION - INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS DEFEATED.
AVOID EXPOSURE TO BEAM.

ADVARSEL - USYNLIG LASER STRÅLING VED ÅBNING.
NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION,
UNDGÅ UDSÆTTELSE FOR STRÅLING.

VARNING - OSYNLIG LASER STRÅLNING NÅR
DENNA DEL ÄR ÖPPNAD OCH SPÄRR ÄR URKOPPLAD.
STRÅLEN ÄR FARLIG.

VORSICHT - UNSICHTBARE LASERSTRAHLUNG TRITTT AUS.
WENN DECKEL GEÖFFNET UND WENN SICHERHEITSVERRIEGELUNG
ÜBERBRÜCKT IST. NICHT, DEM STRAHL AUSSETZEN.

VARO !- Avattaessa ja suojauslaitus ohitettaessa olet alltiina
näkyvätönäälle lasersäteilylle. Älä katso säteeseen.

 


CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT


FOR SAFE AND EFFICIENT OPERATION

- The apparatus shall not be exposed to dripping or splashing.
- Do not damage the mains lead.
- When not in use, disconnect the mains lead from the outlet. Grasp the plug, not the lead, when disconnecting the unit.
- If water should enter the unit, electrical shock or a malfunction may result. Use in an area where there is low humidity and little dust.
- Do not disassemble or alter the unit in any way.
- Do not use the unit in areas where extremes in temperature occur (below 5°C or exceeding 35°C), or where it may be exposed to direct sunlight.
- Because of the CD player's extremely low noise and wide dynamic range, there is a tendency to turn the volume on the amplifier higher than necessary. Doing so may produce an excessively high output from the amplifier which can cause damage to your speakers. Please be careful in this regard.
- Sudden changes in the surrounding temperature can cause dew to form on the optical pickup lens inside the unit. Under this condition the unit may be unable to operate properly. If this should occur, remove the disc and allow the player to adjust to the surrounding temperature.


SPEAKER SYSTEM CONNECTIONS

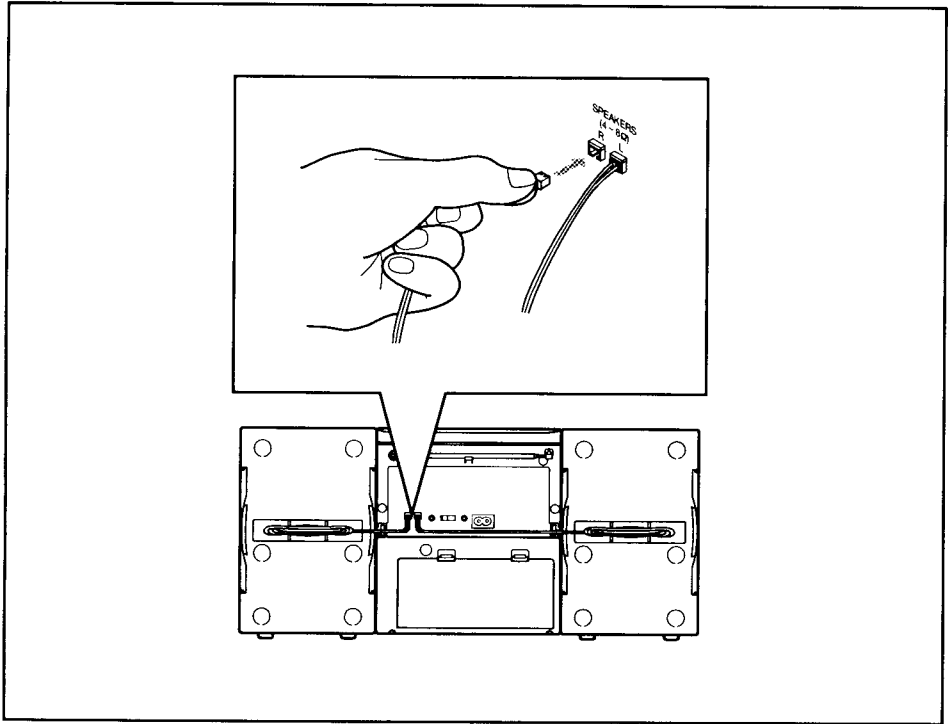


To detach the speaker enclosures

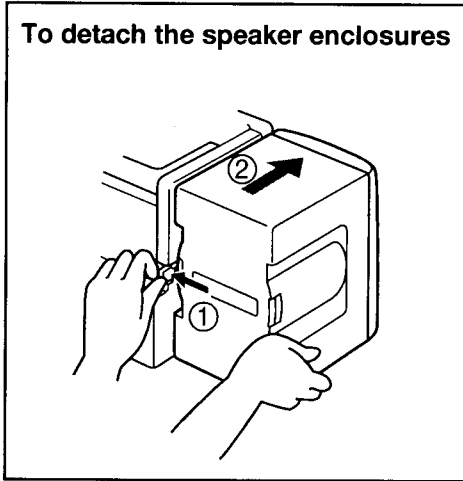 

To attach the speaker enclosures

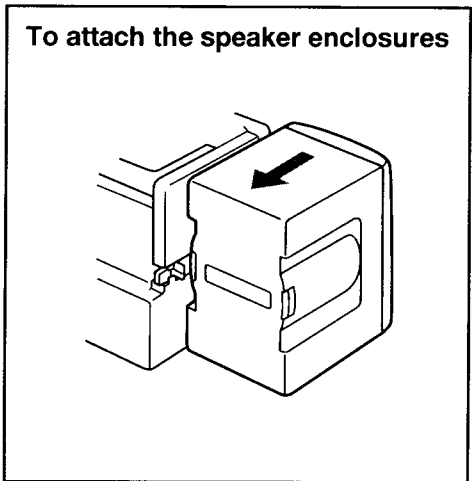 


POWER SUPPLY

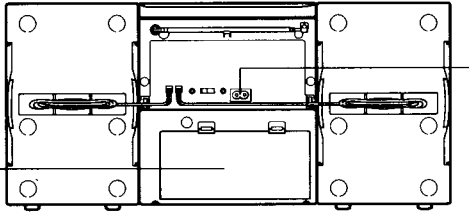 


Battery power operation

 Install batteries.
Observe + and - signs.

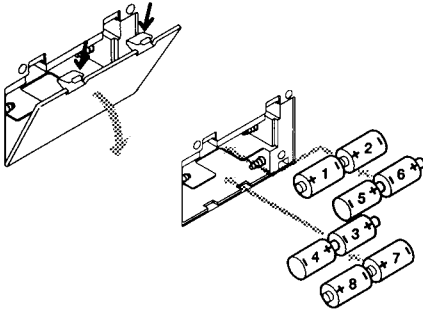

8 "D" size batteries

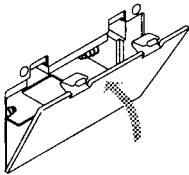 

Replace lid.

 
AC power operation

Take out the cord and
connect it.

AC INPUT



AC 230~240 V,
50Hz



NOTES:

- When the mains lead is connected to the unit, the installed batteries will be automatically disconnected.
- The FUNCTION switch is mounted on the secondary side. The unit is not disconnected from mains, even switched off.

CAUTION:

WHEN INSTALLING THE BATTERIES

To prevent leakage from the batteries, which is corrosive and can cause personal injury and damage to the unit, observe the following precautions:

1. The batteries must be installed correctly. Match the polarities (+ and - signs) on the batteries, to the polarities shown on the back of the unit.
2. Do not mix new batteries with old or used batteries.
3. Only use batteries of the same type and brand.
4. If the unit will not be used for an extended period of time, remove the batteries and store them in a cool place.

 
 
5. Carefully follow the battery manufacturer's instructions for proper use and disposal.
6. DO NOT ALLOW YOUNG CHILDREN TO HANDLE BATTERIES.

NOTE:

When the batteries have become discharged, they must be disposed of in a safe manner that complies with all applicable laws.


GENERAL OPERATION

To control the sound.

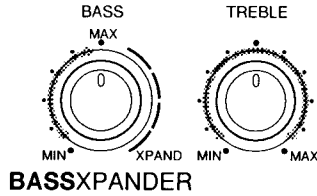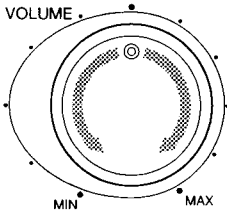


Bass expander control (BASSXPANDER)

 
Turn the BASSXPANDER control to adjust the bass output level.

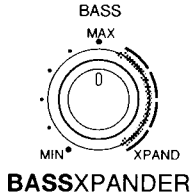

Using external microphone

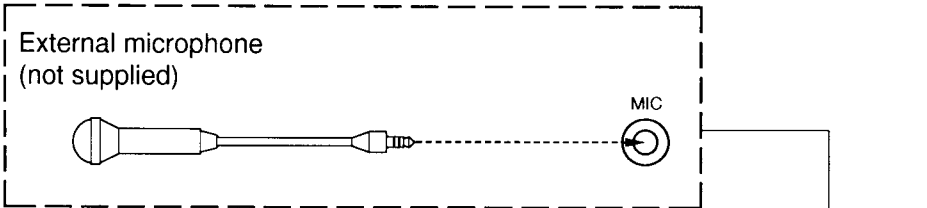 


Using headphones


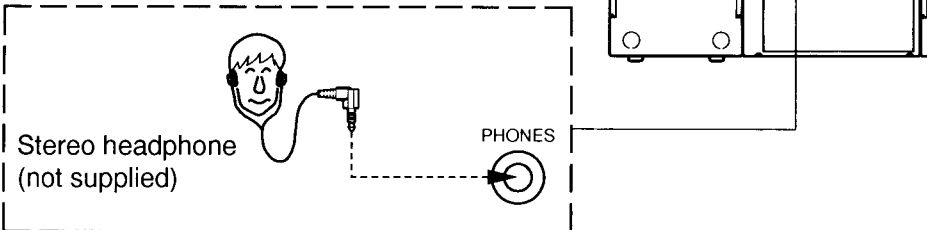 


COMPACT DISC OPERATION

 CD PLAY

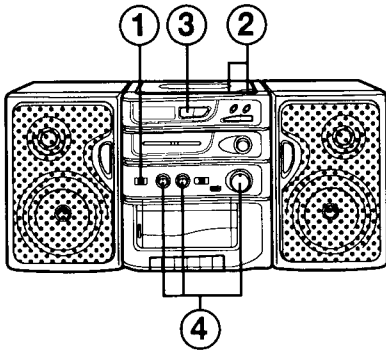


3 Press **PLAY/PAUSE**.

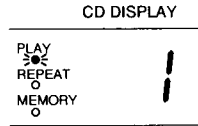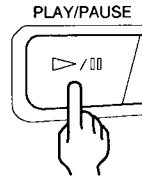  


The **PLAY** indicator will light.

 
4 To control the sound.

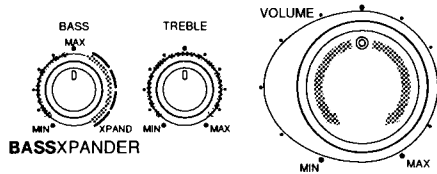


1 To **CD**.

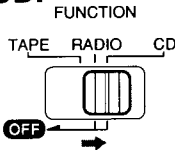 


2

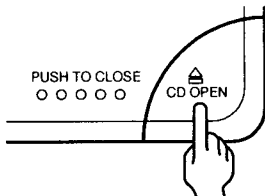 


Push down.

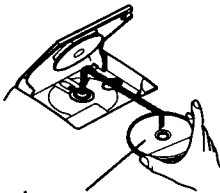 


Label facing up

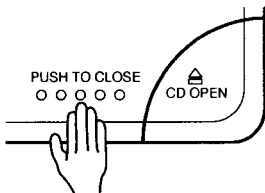 

Push down.

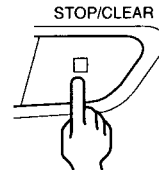 


Press **STOP/CLEAR**.

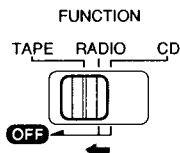 

To **OFF (TAPE)**.

 CD DISPLAY



The CD DISPLAY will show the total number of tracks on the disc as shown below.

TRACKS	CD DISPLAY
1 ~ 19	1 ~ 19
More than 19	"0" Flashes

Table

NOTES:

- If a disc is loaded upside down, or if no disc is loaded, the CD player will not operate.
- Opening the CD compartment lid while a CD is playing could scratch the disc. Always press the STOP/CLEAR button and wait for the disc to stop rotating before opening the CD compartment lid.

Compact discs

 
- Both 8 cm and 12 cm discs can be played in this unit.
NOTE: Place only one disc at a time in the CD compartment.
- Only discs bearing the logo as shown can be played in this unit.



- Always place the compact disc in the CD compartment with the label facing up. Compact discs can be played on only one side.
- Fingerprints and dust should be carefully wiped off the disc's signal surface (opposite the label side) with a soft cloth. Gently wipe in a straight motion from the inside to the outside of the disc.
- Discs should be returned to their cases after use to avoid serious scratches which could cause the player to skip.
- Do not expose a disc to direct sunlight, high humidity, or high temperatures for extended periods of time to prevent warping the disc.
- Do not apply paper or write anything on either side of the disc. Sharp writing instruments, or the inks used in some felt-tip pens, may damage the surfaces of the disc.
- Do not use cleaners or antistatic sprays on discs, such as those used for phonograph records.


IMPORTANT NOTE

If an abnormal display indication, or an operating problem occurs, disconnect the mains lead. Remove the D batteries (see page 3). Wait at least 5 seconds, then reconnect the mains lead. Reinstall the D batteries.

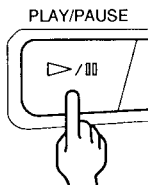

PAUSE MODE

 1. Press the PLAY/PAUSE button during play. Play will temporarily stop, and the PLAY indicator will flash.
2. Press the PLAY/PAUSE button again to resume play. The PLAY indicator will remain ON.

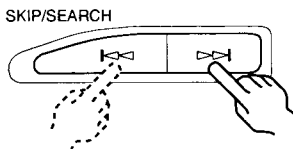


Press and hold down during playback

TRACK SEARCH

1. In the play mode, press and hold down the \lll or \ggg SKIP/SEARCH button to lower the volume level and quickly advance or return to any part of the disc. The CD DISPLAY will flash.
2. Release the \lll or \ggg SKIP/SEARCH button to return the volume to normal level and resume play.

NOTE:

 If the \lll or \ggg SKIP/SEARCH button is pressed during the PAUSE mode, no sound will be heard, and the PAUSE mode will continue when the button is released.

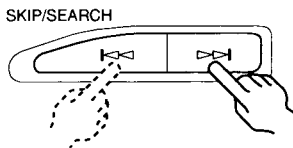

Press and release repeatedly

TRACK SKIP

1. Press and release the \lll or \ggg SKIP/SEARCH button repeatedly during play to quickly locate the beginning of a track.
2. The CD DISPLAY will show the number of the selected track. Play will continue from the beginning of the new track.

 
NOTE:

If the \lll or \ggg SKIP/SEARCH button is pressed while the unit is in the PAUSE mode, the unit will remain in the PAUSE mode when the button is released.


PROGRAMMED PLAY

With programmed play, up to 16 tracks on a disc can be memorized and played in any order.



TO PROGRAM

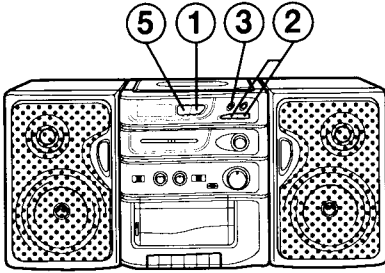

1 Press **STOP/CLEAR**.

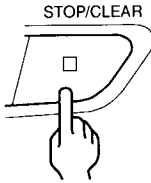 

2 Press **◀◀ or ▶▶**.

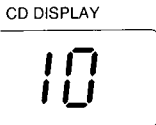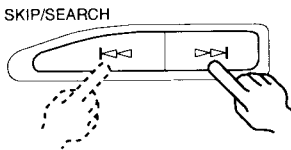  


3 Press **MEMORY**.

MEMORY



 CD DISPLAY



- The **MEMORY** indicator will light on the unit.

4 Repeat 2 and 3 to memorize additional tracks.

Checking the program

Press **MEMORY**.

MEMORY

 


To view the memorized track numbers, in the order they were entered.

TO BEGIN PROGRAM PLAY

5 Press **PLAY/PAUSE**.

PLAY/PAUSE

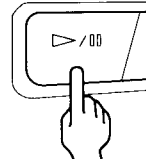


Programmed play will begin.

- To cancel programmed play, press **STOP/CLEAR** twice.
The **MEMORY** indicator will go off.

REPEAT PLAY

 REPEAT

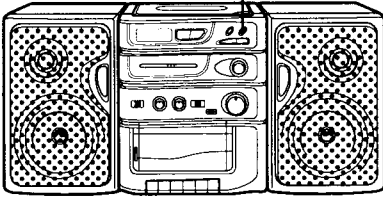

Press REPEAT before or during play (or programmed play).

REPEAT



CD DISPLAY

PLAY
○
REPEAT
●
MEMORY
○

8

- The REPEAT indicator will light on the unit.

To cancel repeat play

 
Press REPEAT again.

REPEAT




- The REPEAT indicator will go off.


RADIO OPERATION

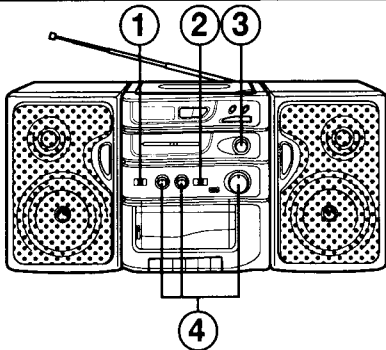


1 To RADIO.

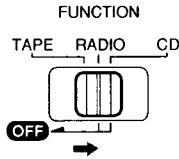 


2 To AM or FM.

 

3 Tune in a station.

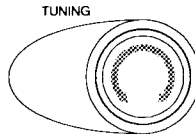 


Dial pointer

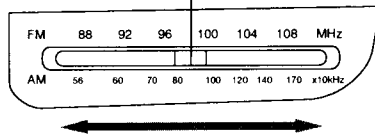 

NOTE:


The unit will automatically switch to stereo when an FM stereo broadcast is received.

 4 To control the sound.

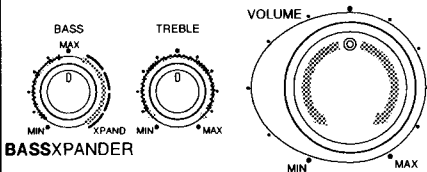


To improve reception

 FM - Extend and change position.

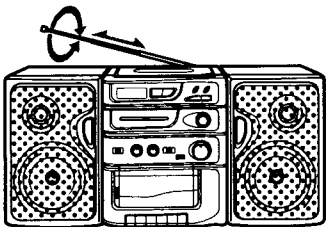


AM - Rotate unit.

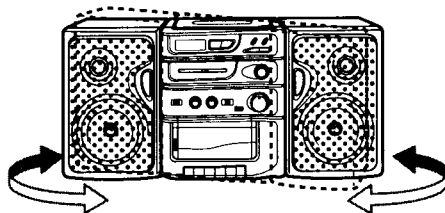 


CASSETTE TAPE OPERATION

 
PLAYBACK

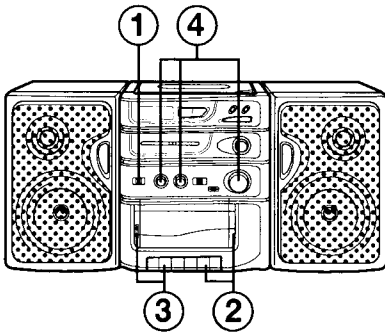



1 To TAPE.

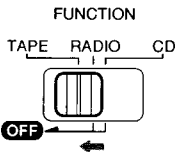 

2 Press STOP/EJECT. Insert cassette.

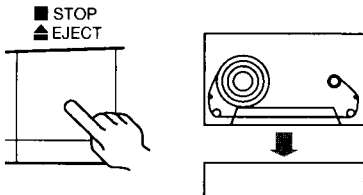 


3 Press PLAY.

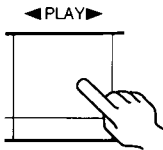  

To change the tape direction, press the DIRECTION lever. The DIRECTION indicator lights, ▶ or ◀.

Press to temporarily stop the tape during playback or recording. Press it again to continue.

 To quickly wind the tape




Full automatic stop

This unit has a full-release stop system to protect the tape and prevent pinch roller damage. When the end of the tape is reached in Recording or Fast wind mode, the tape mechanism will automatically stop.


Automatic reverse playback

 This unit will play both sides of the tape continuously, until the STOP/EJECT button is pressed.

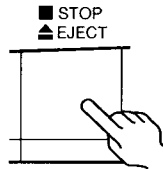


Press STOP/EJECT once to stop the tape. Press again to remove the cassette.

 4 To control the sound.

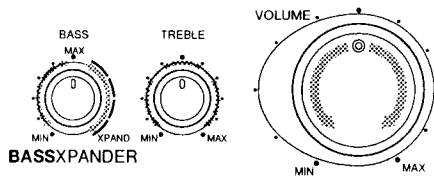

RECORDING

 A) Recording from the built-in radio

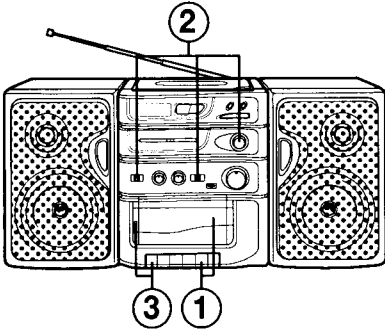

WARNING

UNAUTHORIZED RECORDING OF COPYRIGHTED MATERIAL MAY VIOLATE APPLICABLE COPYRIGHT LAWS. SANYO ASSUMES NO RESPONSIBILITY FOR UNAUTHORIZED DUPLICATION, USE OR OTHER ACTS WHICH INFRINGE UPON THE RIGHTS OF COPYRIGHT OWNERS.

Automatic Level Control (ALC) recording

 
The ALC circuit adjusts the recording input level automatically. No adjustments are required.

When the reverse mode is selected, recording is not possible.


BEAT CANCEL switch

When recording a radio program, an irritating "whistling" sound may sometimes be heard. If this occurs, select position 1, 2 or 3. Leave the switch in the position that gives the best results.


1 Press STOP/EJECT. Insert cassette.

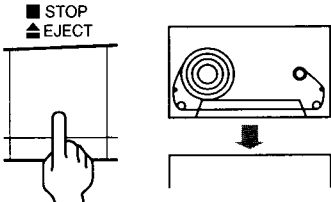


2 To RADIO

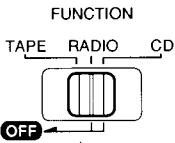 


To AM or FM. Tune in a station.

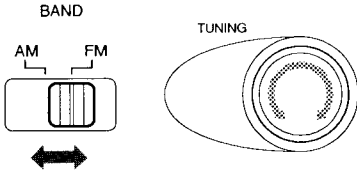 


3 Press REC.

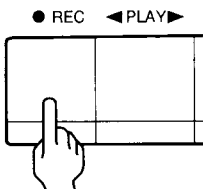 

 Press DIRECTION lever once if the DIRECTION indicator ◀ lights.

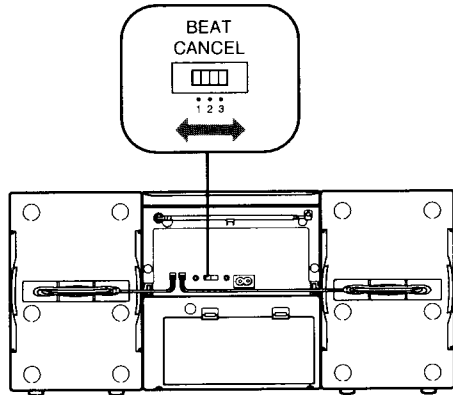


Back side of the unit

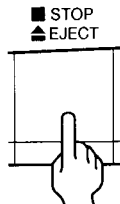 


Press STOP/EJECT once to stop the tape. Press again to remove the cassette.


 
B) Recording from a compact disc

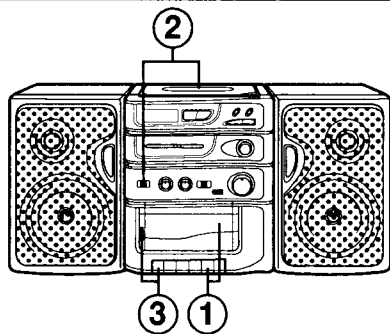

1 Press STOP/EJECT. Insert cassette.

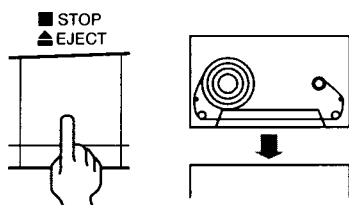 

2 To CD.

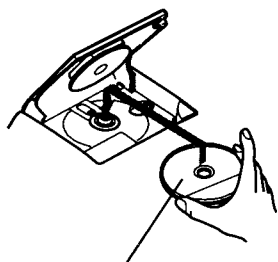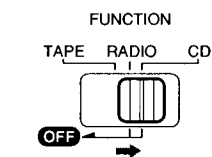  


Label facing up

Safeguards against accidental erasure

To protect side A, break out tab (1). To protect side B, break out tab (2).

NOTE:

 A cassette with the erase guard tabs removed cannot be erased or used for recording and the REC button cannot be depressed. To record or erase a protected cassette, cover the tab openings with adhesive tape (3).

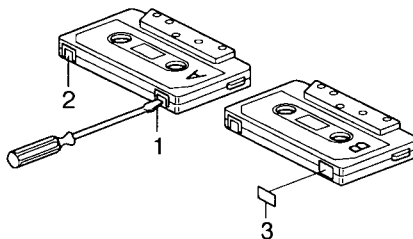


Synchronous recording (CD-TAPE SYNCHRO DUBBING)

This recording system starts disc play and cassette recording at the same time.

When the REC button is pressed, recording will start at the beginning of track number 1 of the disc.

If a program has been entered, recording will start from the beginning of the first programmed track.

 
3 Press REC.

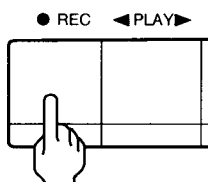

Press DIRECTION lever once if the DIRECTION indicator ◀ lights.

MIC MIXING

 MIXING PLAYBACK

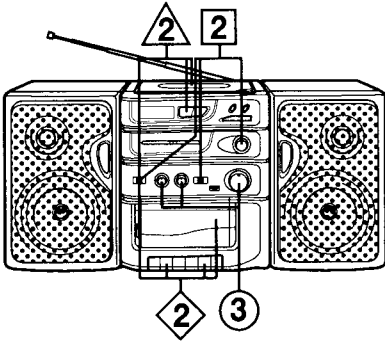

NOTE:

If a whistling noise comes from the speaker while using the external microphone, decrease the VOLUME level or keep the microphone away from the speaker.

1

 
 
 


External microphone
(not supplied)




(Back of unit)


2 Play a CD.

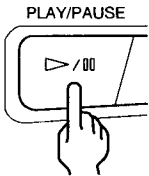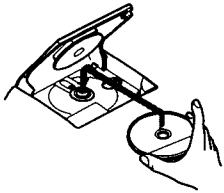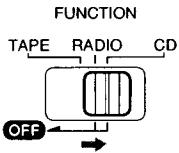


2 Play the radio.

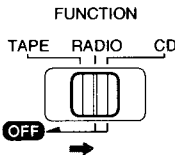 


BAND

 


TUNING

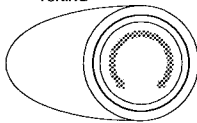 


2 Play a cassette.

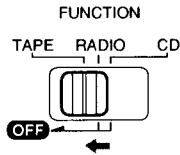 


■ STOP
▲ EJECT

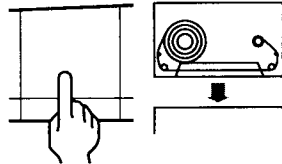 


◀ PLAY ▶

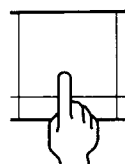 


4 Sing a song!

 


3 To control the sound.

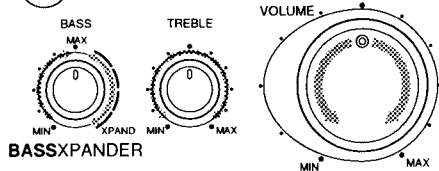 


MIXING RECORDING

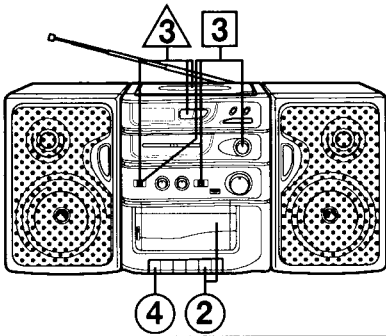 


1

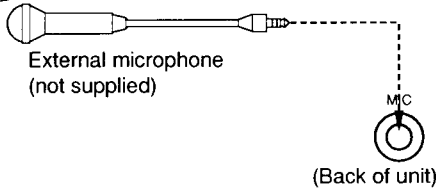 


2

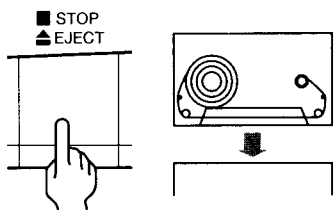 


3 Record a CD.

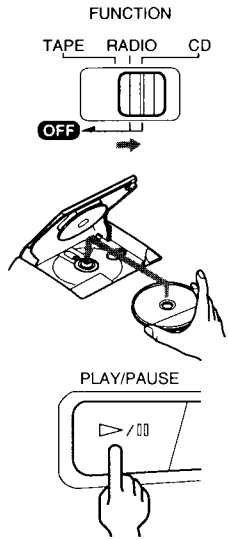 


3 Record the radio.

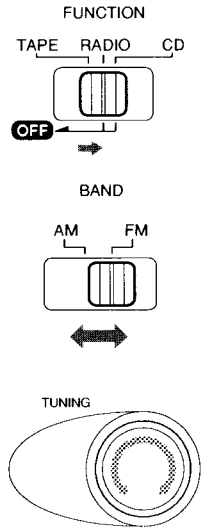 


5 Talk or sing a song!

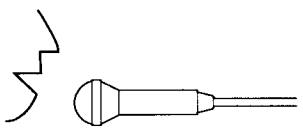 


4

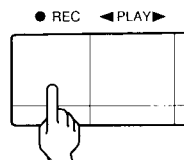 


MIC RECORDING

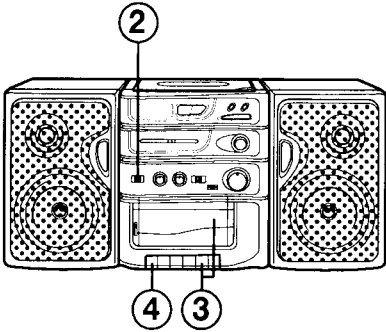 


3 Press STOP/EJECT.
Insert Cassette.

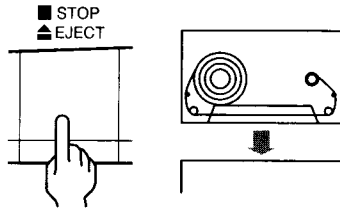 


1

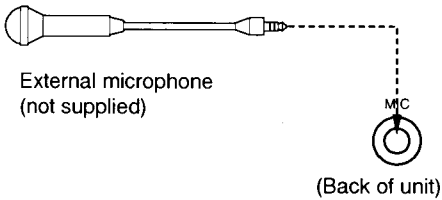 


4 Press REC.

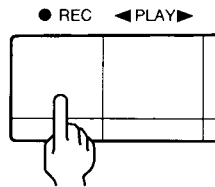 

2 To TAPE.

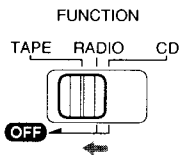 

5 Talk!

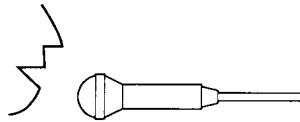 

MAINTENANCE

Cleaning the unit

 
Clean the outside of the unit with a clean soft cloth, moistened with lukewarm water. Do not use solvents such as benzene or thinner. These will permanently damage the units finish.

Cleaning the tape heads


When dust or reddish-brown oxide builds up on the tape deck heads, pinch roller and capstan, the following problems may result:

- Poor sound quality during playback
- Distorted, poor quality recordings
- Erratic tape speed during recording or playback

1. Press the STOP/EJECT button to open the cassette compartment lid.

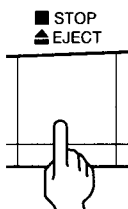


 2. Moisten a cotton swab (1) with Isopropyl alcohol or special head cleaning fluid. Gently rub the face of each head (4, 5) with alcohol. Also clean the capstans (2, 7) and pinch rollers (3, 6).

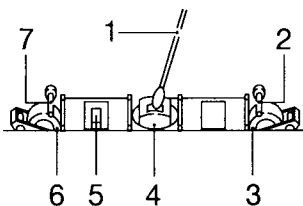

Cleaning the CD player lens

 The lens should never be touched. If dust is on the lens, blow it off using a camera lens blower. (Please consult your dealer.)

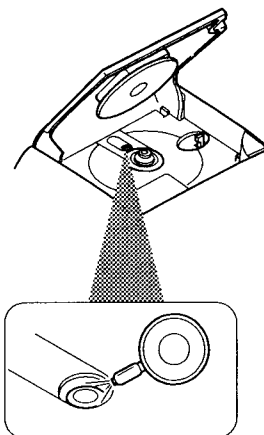

If trouble occurs ...

To avoid the hazard of electric shock and damage to the unit, have the unit bench tested by an authorized SANYO service station. Do not remove the unit from its cabinet to attempt repairs yourself.

SPECIFICATIONS

(CASSETTE SECTION)

Recording system: AC bias, 4-track stereo
Erasing system: Magnet erase
Tape speed: 4.75 cm/sec.
Fast forward and rewind time:
110 sec. (C-60 tape)
Frequency response: 80 ~ 12,000 Hz
(Normal tape)

(CD SECTION)

Channels: 2 channels
S/N ratio: 70 dB
Wow & Flutter: undetectable
Sampling frequency: 44.1 kHz
Quantization: 16 bits linear/ch
Pick up light source: Semi-conductor laser
Pick up wave length: 790 nm
Laser output: Continuous wave max. 0.6 mW

(RADIO SECTION)

Tuning ranges: AM: 525 ~ 1,710 kHz
FM: 88 ~ 108 MHz
Aerials: Built-in ferrite bar and telescopic rod aerials

(GENERAL)

Output power: 4.0 W x 2 (DC max.)
Speaker: 12 cm x 2, 4 ohms
PIEZO x 2
Terminal impedance PHONES: 32 ohms
MIC: 200 ~ 600 ohms/mV
Power source: AC: 230 ~ 240 V, 50 Hz
DC: 12 V
(8 "D" size batteries)
Dimensions: 600 x 280 x 220 mm
(W x H x D)
Weight (approx.): 6.3 kg including batteries

Specifications subject to change without notice.

1AD6P1P0137-B
(AU)

The SANYO logo is rendered in a bold, black, sans-serif font. The letter 'Y' is stylized with multiple parallel vertical lines passing through it, creating a sense of motion or depth. The letters are closely spaced and have a strong, blocky appearance.

SANYO Electric Co., Ltd.
Printed in Hong Kong