 


SANYO

 
INSTRUCTION MANUAL

MCD-Z81F

**CD Portable
Radio Cassette Recorder**

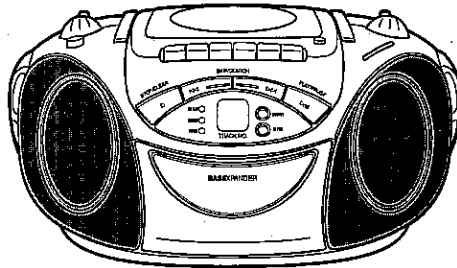

PRECAUTIONS

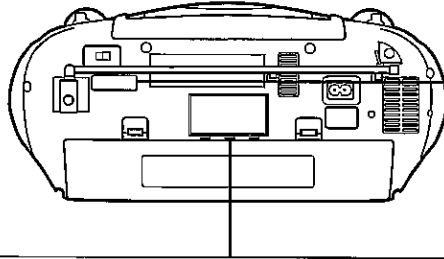

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

CAUTION-INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.

ADVARSEL-USYNLIG LASER STRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION, UNDGÅ UDSÆTTELSE FOR STRÅLING.

VARNING-OSYNLIG LASER STRÅLNING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRR ÄR URKOPPLAD. STRÅLEN ÄR FARLIG.

VORSICHT! -UNSIHTBARE LASERSTRAHLUNG TRITT AUS, WENN DECKEL GEÖFFNET UND ENN SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT IST. NICHT, DEM STRAHL AUSSETZEN.

VARO I-Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen.

 


CAUTION - USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED IN THE OPERATION INSTRUCTION MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

THIS PRODUCT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED PERSONNEL.

- The apparatus shall not be exposed to dripping or splashing.
- Do not use where there are extremes of temperature (below 5°C or exceeding 35°C).
- Because of the CD player's extremely low noise and wide dynamic range, there might be a tendency to set the volume on the amplifier unnecessarily high. Doing so may produce an excessively large output from the amplifier which could damage your speakers.
- Sudden changes in the ambient temperature may cause condensation to form on the optical lens inside the unit. If this happens, take out the disc, leave the unit for about 1 hour, and then proceed to operate.
- Do not install this equipment in a confined space, such as a book case or built in cabinet.
- The rating label is located on the back of the unit.

CONTROLS

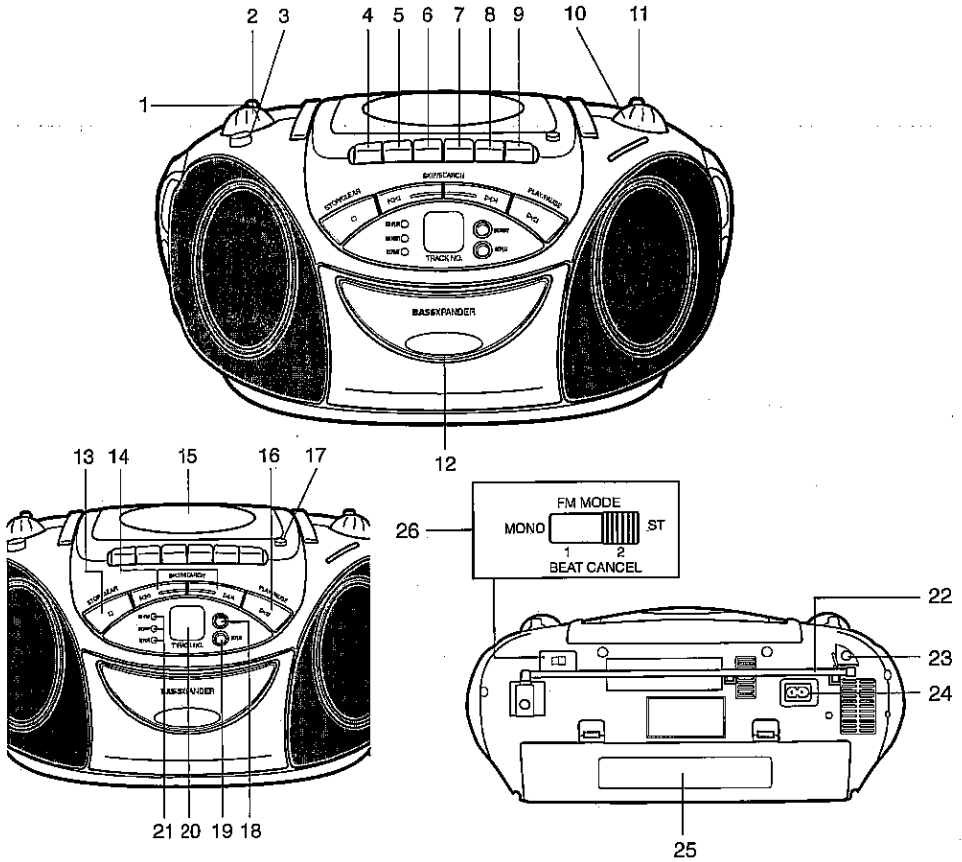

- | | |
|---|--|
| <ul style="list-style-type: none"> 1. Function switch (FUNCTION) 2. Volume control (VOLUME) 3. Bass expander button (BASSXPANDER) 4. Pause button (PAUSE) 5. Stop/Eject button (STOP/EJECT) 6. Fast Forward button (FFWD) 7. Rewind button (REW) 8. Play button (PLAY) 9. Record button (REC) 10. Tuning control (TUNING) 11. Radio band switch (BAND) 12. Cassette holder 13. Stop/Clear button (STOP/CLEAR) 14. Skip/Search buttons (SKIP/SEARCH) | <ul style="list-style-type: none"> 15. CD compartment lid 16. Play/Pause button (PLAY/PAUSE) 17. CD compartment opening button (CD OPEN) 18. Memory button (MEMORY) 19. Repeat button (REPEAT) 20. CD track number display (TRACK NO.) 21. Indicators (CD PLAY, MEMORY, REPEAT) 22. Telescopic aerial 23. Headphones socket (PHONES) 24. AC input socket (AC INPUT) 25. Battery compartment lid 26. FM mode/ Beat cancel switch (FM MODE/ BEAT CANCEL) |
|---|--|

Search (forward/reverse)

If the ►►| or |◀◀ SKIP/SEARCH button is pressed during play, the player will search at high speed in the forward or reverse direction while the button is being pressed. When the button is released, normal play will continue.

Repeat play

Press the REPEAT button before or during play (or programmed play).

Each time the button is pressed, the repeat mode change as follows.

The REPEAT indicator blinks:

One track repeat mode.

The REPEAT indicator lights:

All tracks repeat mode.

The REPEAT indicator goes out:

Normal play mode.

PROGRAMMED PLAY

Up to 16 tracks on a disc can be programmed for play in any order.

- To begin the programming procedure, select "CD" function first.
- The same track can be programmed more than once.
- Load a disc that you want to programme before starting programmed play.

1. Press the STOP/CLEAR button if necessary.
2. Press the MEMORY button. The MEMORY indicator and "Pr" blink.
3. Select a track by using the SKIP/SEARCH buttons.
4. Press the MEMORY button.
5. Repeat steps 3 - 4 to programme additional tracks.
6. Press the PLAY/PAUSE button to start play. The MEMORY indicator remains lit. When all programmed tracks have been played, the player stops automatically.
 - The programme contents are retained in memory.

To cancel programmed play, press the STOP/CLEAR button twice.

Checking the programme

 
Press the MEMORY button twice in the stop mode, the programmes tracks sequentially appear on the display.

WHAT TO DO IF..

If an abnormal display indication or an operating problem occurs, disconnect the mains lead and remove all batteries. Wait at least 5 seconds then reconnect the mains lead and reinstall the batteries. Resume the operation.

LISTENING TO TAPES

1. Set the FUNCTION switch to TAPE.
2. Press the STOP/ EJECT button. The cassette holder opens.
3. Load the cassette into the cassette holder.

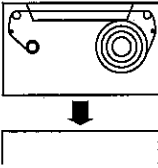

After loading the cassette, press the cassette holder back into position.

4. Press the PLAY button to begin playback.
5. Press the STOP/ EJECT button to stop playback at any time. Press it again to remove the cassette.

When the end of the tape has been reached, the tape stops automatically.

Note:

- Use the normal tape (TYPE 1).
- Endless tapes cannot be used.
- Do not use C-100 (or longer) tapes. They may jam in the mechanism.

Pause

Press the PAUSE button to temporarily stop playback or recording. Press it again to resume operation.

Fast forward and rewind

Press the FFWD or REW button. When the desired location has been reached, or the tape has been wound to the end, press the STOP/ EJECT button.

LISTENING TO THE RADIO

1. Set the FUNCTION switch to RADIO.
2. Select the desired radio band with the BAND switch.
3. Tune in a desired station by turning the TUNING control.
4. To turn the radio off, set the FUNCTION switch to TAPE/OFF.

To receive FM stereo broadcasts

Set the FM MODE switch to ST.

- If the signal from an FM stereo station is weak and reception is poor, set the FM MODE switch to MONO. The reception may be improved, but the sound will be monaural.

To improve reception

FM: Pull out the telescopic aerial and adjust its position.

AM: Rotate the unit.

RECORDING

Recording copyright material without permission of the copyright owners is usually an infringement. If you wish to re-record copyright material, permission from the copyright owner is necessary. SANYO does not approve of, and cannot be held responsible for, any unlawful use of this machine.

Recording compact discs (Synchronous recording)

1. Load a blank cassette.
2. Select "CD" function.
3. Load the disc to be recorded.
 - Select the track number if required.
 - For programmed recording, programme the material in advance (as described under "PROGRAMMED PLAY").
4. Press the REC button. The PLAY button is engaged simultaneously and CD recording starts.
5. Press the STOP/EJECT button to stop recording.

Recording from the radio

1. Load a blank cassette.
2. Tune in the radio station to be recorded.
3. Press the REC button to start recording.
4. Press the STOP/EJECT button to stop recording.

When beat is heard

Beat (a high-pitched noise) may sometimes be heard during the recording of radio broadcasts. If this occurs, set the BEAT CANCEL switch to the position that reduces the level of the beat noise.

 
Safeguards against accidental erasure

To protect side A, break out tab (1). To protect side B, break out tab (2).

- To erase or record a protected cassette, cover the tab openings with adhesive tape (3).

Note:

The REC button cannot be depressed when using a protected cassette.

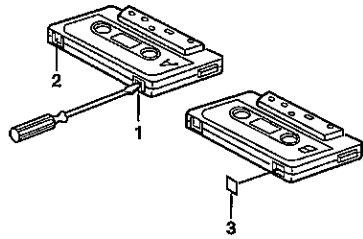

MAINTENANCE

Cleaning the tape heads

 
To ensure continued high performance, use a cleaning tape (available from your local audio dealer) to clean the head block of the deck after about every 10 hours of use.

Cleaning the unit

Clean the outside of the unit with a clean soft cloth, moistened with lukewarm water. Do not use benzene, thinners, or alcohol since they will mar the finish of the surfaces.

Cleaning the CD player lens

The lens should never be touched. If dust is on the lens, blow it off using a camera lens blower. (Consult your dealer.)

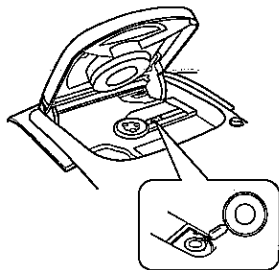

SPECIFICATIONS

CD Player

Channels:
2-channel stereo

Sampling frequency:
44.1 kHz

Pick-up :
Semiconductor laser

Laser output:
0.6mW (Continuous wave max.)

Wave length:
790 nm

Wow & Flutter:
Below measurable limits

Radio

Reception frequency:
FM: 87.5 ~ 108 MHz
AM: 526.5 ~ 1606.5 kHz

Cassette deck

Track system:
4-track, 2-channel stereo

Erasing system:
Magnet erase

Tape speed:
4.75 cm/sec.

Frequency response:
80 ~ 12,000 Hz

Fast forward / rewind time:
Approx.110 sec. (C-60)

General

Output power :
2W/ch (DC max.)

Speakers:
10 cm x 2

 
Terminals:
PHONES: 32 ohms

Power source:
AC:230V,50Hz
DC:12V, 8 "D/R20" batteries

Dimensions:
380(W) x 170(H) x 260 (D)mm

Weight :
Approx.2.7 kg (not including batteries)

Specifications subject to change without notice.



(AU) 1AD6P1P1506-B

SANYO

SANYO Electric Co., Ltd.
Printed in China