



Sanyo Australia Pty Ltd Inc in Victoria

Personal Records

Model No _____ Serial No _____ Retailers Name _____

Original Buying Date _____ Suburb/Town/City _____

Sanyo

Sydney	Brisbane	Adelaide	Perth	Melbourne
7 Fingtree Dye	1177 Mayneview Street	219 George Street	Unit 2/7 Matchless Street	370 Whitehorse Road,
Australia Centre	Milton, Brisbane 4094	ADELAIDE SA 5000	KEWDALE WA 6105	NUNAWADING VIC 31931.
Homebush 2140	Ph (07) 39670944	Ph (08) 410 3277	Ph (09) 359 3973	Ph (03) 875 4400
Ph (02) 763 9900				

Sanyo Regional Repairers

Newcastle	ACT	Wollongong	Townsville
Dacqi Electronics	Electronic Services	208 Central St	53 Thuringowa Dve
17 Arnott St	15 Kambah St	Wollongong 2500	Kirwan 4814
Newcastle West 2302	Fyshwick 2609	Ph (042) 27 3233	Ph (077) 79 4493
Ph (049) 29 5197	Ph (06) 280 6422		

For Further Sanyo repairers and Sanyo office automation dealers
Please ask your closest Sanyo office



RM 6018 AM/FM CLOCK RADIO

INSTRUCTION MANUAL

SLEEP FUNCTION

- 1 Set the Function switch to the "Radio" position.
- 2 Press and hold the Sleep button. The LED display shows 59 minutes. The radio turns on and then turns off automatically after 59 minutes.
- 3 To select a shorter playing time than 59 minutes, press and hold the Sleep and Minute buttons simultaneously. The LED display changes in reverse sequence (from 59 minutes).
- 4 To select a longer playing time (to a maximum of one hour and 50 minutes), press the Sleep and Hour buttons simultaneously. The display shows one hour plus the selected number of minutes.
- 5 To turn off the radio at any time during the preset period, press the Snooze button.

SANYO WARRANTY

You will keep your Sanyo warranty if you provide proof of original buying date when requesting service for your product bought both in Australia and Overseas.

OTHER RIGHTS

Your express and implied rights and remedies under the Trade Practices Act and other laws are different to your Sanyo warranty benefits.

SANYO WARRANTY

Except for the details below, Sanyo will repair (or at its option replace) any part of your Sanyo product which in its or its repairer's opinion needs repair or replacement because of manufacture or parts during the 6 months commencing from your products original buying date.

HOW TO CLAIM YOUR SANYO WARRANTY

- Please provide proof of original buying date when requesting Sanyo warranty service - for your product bought both in Australia and overseas.
- Please install and use your product in accordance with instructions on your product or in your operating manual.

PLACE AND TIME OF SERVICE

Please take or send your product (at your cost and risk) to and from Sanyo or its repairer. If you send your product and/or leave it with or it is taken by Sanyo or its repairer you are wise to insure it for both the sending and return journey.


Sanyo service hours are only Monday to Friday (excluding public holidays) 8:30 am to 4:30 pm
Services for which you may be asked to pay at the then current rates

Repairs needed because of

- cockroach or other insect or mice damage
- leaking batteries
- accident, misuse, negligence or tampering with
- use other than in accordance with instructions on your product or in your operating manual
- lightning strikes
- salt built up or rust or corrosion if you live near the ocean or in a high humidity area
- repairs or attempted repairs by anyone other than Sanyo or its repairer or office automation dealer
- use of the product on voltage other than that specified for your product
- repairs to your product if bought at auction



CONTROLS

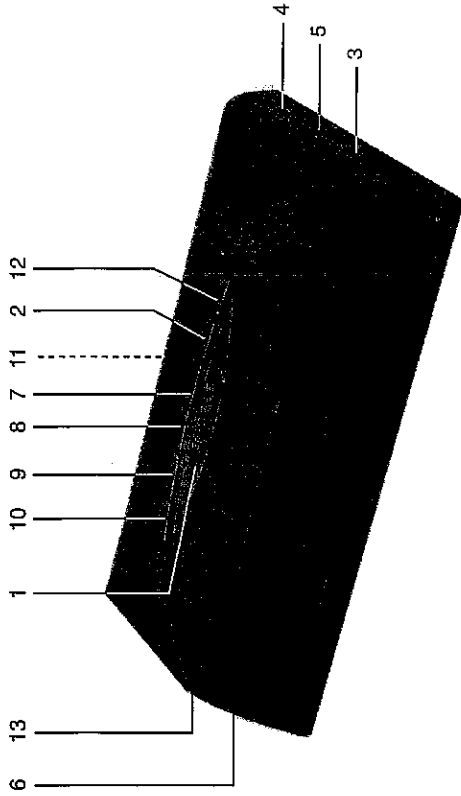

2

RADIO OPERATION

- 1 Connect the AC power cord to an AC power outlet.
- 2 Set the **Function** switch to the "On" position.
- 3 Set the band selector to "AM" or "FM".
- 4 Turn the tuning control to select the desired station.
- 5 Adjust the volume control.
- 6 Set the **Function** switch to the "Off" position to turn off the radio.

TIME SETTING

- 1 Press the **Time** and **Hour** buttons simultaneously to set the hour.
- 2 Press the **Time** and **Minute** buttons simultaneously to set the minute.

- 1 Snooze Button
- 2 Alarm Set Button
- 3 Tuning Control
- 4 Volume Control
- 5 Band selector (FM/AM)
- 6 Function Switch (Off/On/Radio/Buzz)
- 7 Minute Button
- 8 Hour Button
- 9 Time Button
- 10 Sleep Button
- 11 Battery compartment
- 12 Alarm/Sleep Off Button
- 13 Dimmer Switch

BATTERY BACKUP SYSTEM

The battery backup system requires a 9V battery (not supplied). Insert the battery in the battery compartment, making certain that the positive and negative (+ and -) battery terminals are attached to the corresponding terminals on the plate in the battery compartment.

If an AC power failure occurs, the clock automatically switches to the battery power supply and the clock and timer memory continue running for up to four hours (the display does not appear). When the AC power resumes, the display shows the clock time again. If the AC power failure lasts longer than four hours, the clock must be reset.

3

ALARM TIME SETTING

- 1 Press the **Alarm** and **Hour** buttons simultaneously to set the hour of the desired alarm time.
- 2 Press the **Alarm** and **Minute** buttons simultaneously to set the minute of the desired alarm time.
- 3 Set the **Function** switch to "Radio" (to wake up to the radio) or to "Buzz" (to wake up to the buzzer).
- 4 Adjust the **Volume** control to the desired sound level if you wish to wake up to the radio.
- 5 The radio (or buzzer) automatically turns on at the desired time.

Note : To stop the radio (or buzzer), press the **Alarm Off** button.

SNOOZE FUNCTION

When the alarm goes off, you can silence it temporarily (for nine minutes) by pressing the **Snooze** button once. This procedure can be repeated. The alarm is silenced for another nine minutes each time the **Snooze** button is pressed. (This function operates only when the **Function** switch is set to either "Radio" or "Buzz").

4

5