


Please follow the simple directions in this instruction book to get full advantage of all the capabilities and special features built into your SANYO Solid-State Radio.

IMPORTANT

- * If you plan not to use your radio for more than two or three weeks, please remove the batteries. Old batteries may leak and damage the radio.
- * If the sensitivity or sound quality deteriorates, replace all batteries with new ones as soon as possible.
- * Always turn off your radio when not using it. Leaving it on will shorten the service life of the batteries.
- * Keep the radio away from extremely high temperature or excessive moisture.
- * Never use solvents containing benzol or petroleum for cleaning the cabinet. Wipe off dust and stains with a soft cloth soaked in mild soapy water only.

TO INSTALL BATTERIES

1. Open the battery compartment lid by sliding it in the direction of the arrow.
2. Insert three "D" size flashlight batteries into the battery compartment and with a cloth strip placed under the battery. Polarities must be as indicated.
3. Close the battery compartment lid.

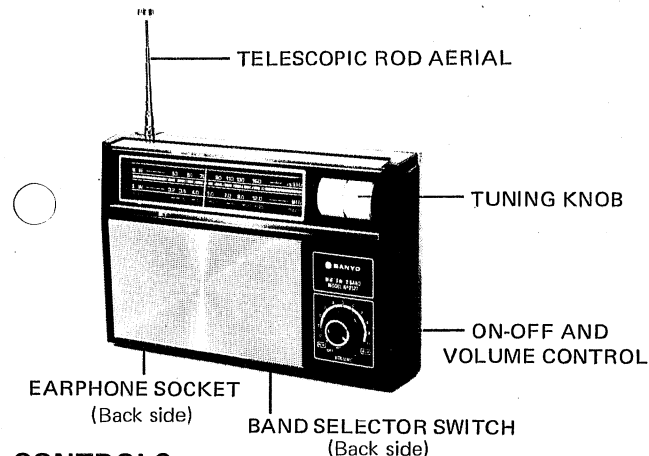

CONTROLS

ON-OFF AND VOLUME CONTROL

Turn the ON-OFF AND VOLUME control knob clockwise. The radio is switched on with a slight click. To increase the sound volume, rotate this knob further clockwise. To turn off the radio, turn the knob counter-clockwise until a slight click is heard.

BAND SELECTOR SWITCH

Set the BAND SELECTOR switch to your desired band. The radio frequency ranges are as follows:
MW 530 – 1605 kHz
SW 3.2 – 12.0 MHz

TUNING KNOB

Turn this knob in either direction to tune in your desired station.

AERIAL (ANTENNA)

This radio is equipped with a built-in ferrite bar aerial for MW band and a telescopic rod aerial for SW band reception. As the ferrite bar aerial is directional, rotate the radio slowly to find the position that gives optimum reception quality. On SW band, extend the telescopic rod aerial to its full length.

EARPHONE SOCKET


For private listening, connect an earphone plug to this socket. The internal speaker is automatically disconnected when the earphone plug is plugged into this socket.

SANYO ELECTRIC CO., LTD.
SANYO ELECTRIC TRADING CO., LTD.



SANYO

RP 2127

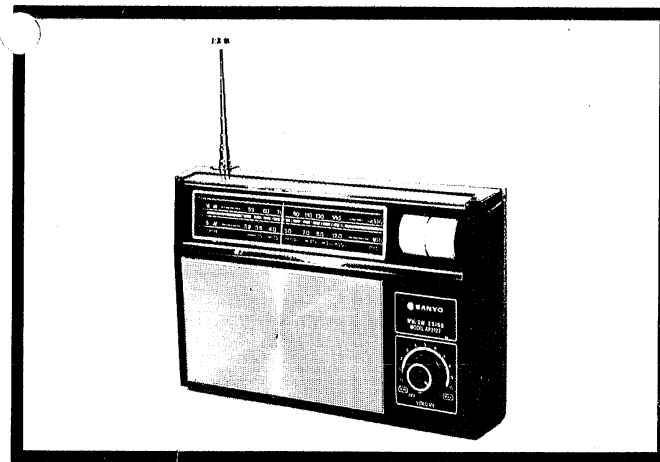

**SANYO MW/SW
PORTABLE RADIO**

**OPERATING
INSTRUCTIONS**