



INSTRUCTION MANUAL

RP-LT1000D

FM/AM Digital Radio



SANYO Electric Co., Ltd.
Printed in China



8809LT10002L (AU)

SPECIFICATION

Tuning range:
FM: 87.5 - 108 MHz
AM: 522 - 1620 KHz
Power output:
2 mW/ch (MAX)
Output:
PHONES: 32 ohms
Power Supply:
DC: 1.5V "AAA/R03/HP16" battery
Dimensions:
Approx: 46 x 86 x 23 mm (WxHxD)
Weight:
Approx: 40g (without battery)
Specifications subject to change without notice.


FOR SAFE AND EFFICIENT OPERATION

- The apparatus shall not be exposed to dripping or splashing.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not disassemble or alter the unit in any way.
- Do not expose the unit to extreme temperatures, such as those caused by a hot stove or the inside of car parked in the summer sun, such conditions can damage the unit. Always clean with a soft cloth dampened with water only.

CLEANING

Wipe the outside of the unit with a clean soft cloth, moistened with lukewarm water and wrung dry. Do not use solvents such as benzene or thinner which will permanently damage the surface of the unit.

CONTROLS

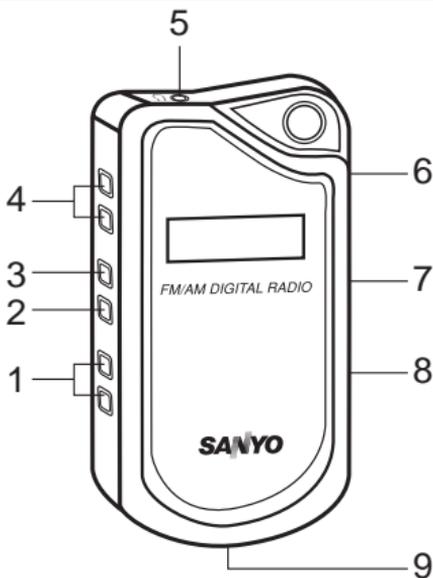


- | | |
|--|---|
| <ol style="list-style-type: none"> 1. Tuning buttons
(TUNING +, TUNING -) 2. Memory button (MEMORY) 3. Band select button (BAND) 4. Preset tuning buttons
(PRESET +, PRESET -) 5. Earphone socket () | <ol style="list-style-type: none"> 6. Volume control
(- VOLUME +) 7. Power button (POWER) 8. Hold switch (HOLD ►) 9. Battery compartment
(back panel) |
|--|---|

POWER SOURCE

TO INSTALL THE BATTERIES

1. Open the battery compartment lid by sliding the lid in the direction of the arrow.
2. Insert one "AAA/R03/HP16" size battery (not supplied) into the battery compartment. As shown follows:

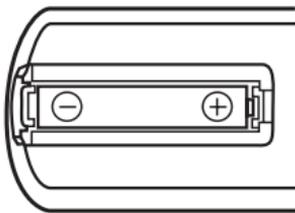

3. Close the battery compartment lid.

NOTE:

- Alkaline battery is recommended.
- Rechargeable battery may result in shorter playing time.
- Dispose of battery in the proper manner according to state and local regulations.
- Any battery may leak electrolyte if inserted incorrectly; if disposed of in fire; or if an attempt is made to charge a battery not intended to be recharged.
- Discard leaky battery immediately to avoid possible skin burn or other personal injury.
- If alkaline battery is weak and discharged, " " blinks on the display. If this occurs, recharge the rechargeable battery or replace the alkaline battery.

CAUTION:**WHEN INSTALLING THE BATTERIES**

To prevent battery electrolyte leakage, which may result in injury and damage to the unit or other object, observe the following precautions.

1. Battery must be installed with the proper polarity (see diagram on the back of the unit.)
2. Remove the battery when it is not to be used for a month or more.

 
RADIO OPERATION

1. Connect the stereo earphone to the  socket.
 2. Press the POWER button to "ON" to turn on the radio.
 3. Press the BAND button to select AM or FM.
 4. **Manual tuning**
Press the TUNING - or TUNING + button briefly until the desired frequency is display.
 5. **Automatic tuning**
Press the TUNING - or TUNING + for at least 1 second to tune in a station. The unit will scan up or down the band and receive the next receivable station. Press the button again to continue.
- Make sure you turn down the volume before turning the power on.

To turn the radio off, press the POWER button to "OFF".

Note: To avoid the frequency changed by accidentally touching the buttons, slide the HOLD switch to the direction of the arrow. "HOLD" appears.

HOLD ►




WEAK RECEPTION

If the reception of an FM station transmitting is weak, as the earphone cord also serves as an FM aerial, repositioning the earphone cord may improve reception. Slightly rotate the unit can strengthen weak AM signals.

PRESET STATIONS

This unit can store up to 10 AM and 20 FM stations in memory.

1. Choose band and frequency as described above.
2. Press and hold the MEMORY button for at least 1 second. "MEMORY" appears and preset number "1" blinks on the display.

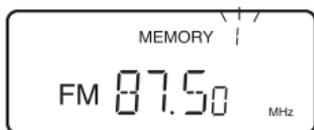

3. Within 5 seconds press the PRESET + or PRESET - button to select the channel number to be preset.
4. Press the MEMORY button.

NOTE:

When presetting a new station, the previous preset station is cleared.

LISTENING TO PRESET STATIONS

1. Press the BAND button to select FM or AM.
2. Press the PRESET + or PRESET - button to select the desired channel number. The selected channel number appears.