

No Sound, Static only on Some Channels

The Problem:

On some channels (could be all) there is no sound just static. Also, the picture can be snowy with no colour.

The Cause:

The wrong sound system is selected, on the channel at tuning or by pressing the sound system button on the remote control.

The Remedies:

1. On models like **CP32WF2** and **CP28WF2**


A. during tuning make sure that **S1** is selected:

Important !

About Sound System: Always select "S-1" of the sound system.



B. During normal operation, use the **Sound System selector**

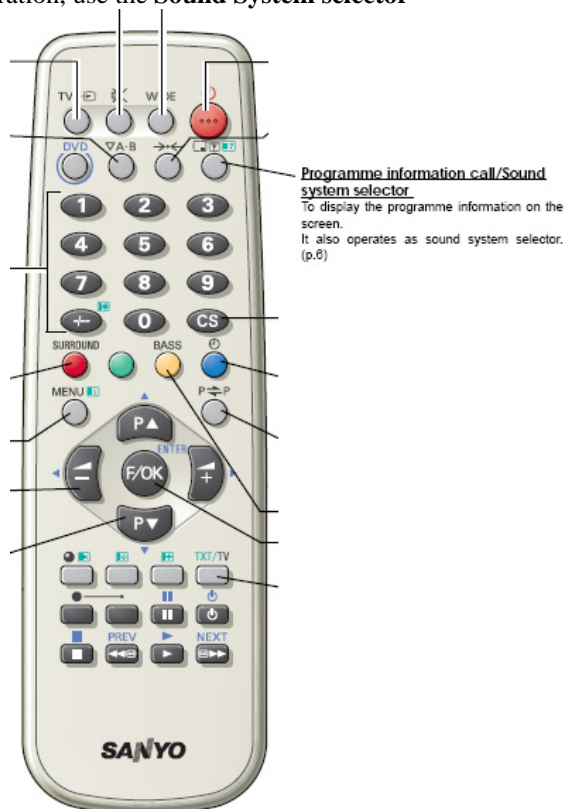

to select the **S1** sound system.

2. On models like **CP29FS2**.
 - A. During tuning select **BG** for the **SIF** setting.

PRESET	
AUTO TUNING	▷
POSITION	1
FREQUENCY	271.65 MHz
SYSTEM	AUTO
SIF	BG
AFC	ON
SKIP	OFF
MEMORY	--

- C. During normal operation, use the **S.SYS** button on the remote control to select the **BG** sound system.

