



# MP3 PLAYERS MUSIC DOWN LOADS USING WINDOWS MEDIA PLAYER VER. 10.

## SWITCHING COPY PROTECTION OFF

Windows Media Player by default copy protects the music it is ripping (copping) from CDs. This makes the files unplayable on our MP3 players. To correct this, Windows Media Player needs to be adjusted not to copy protects the files. It is done via the “Tools” menu.

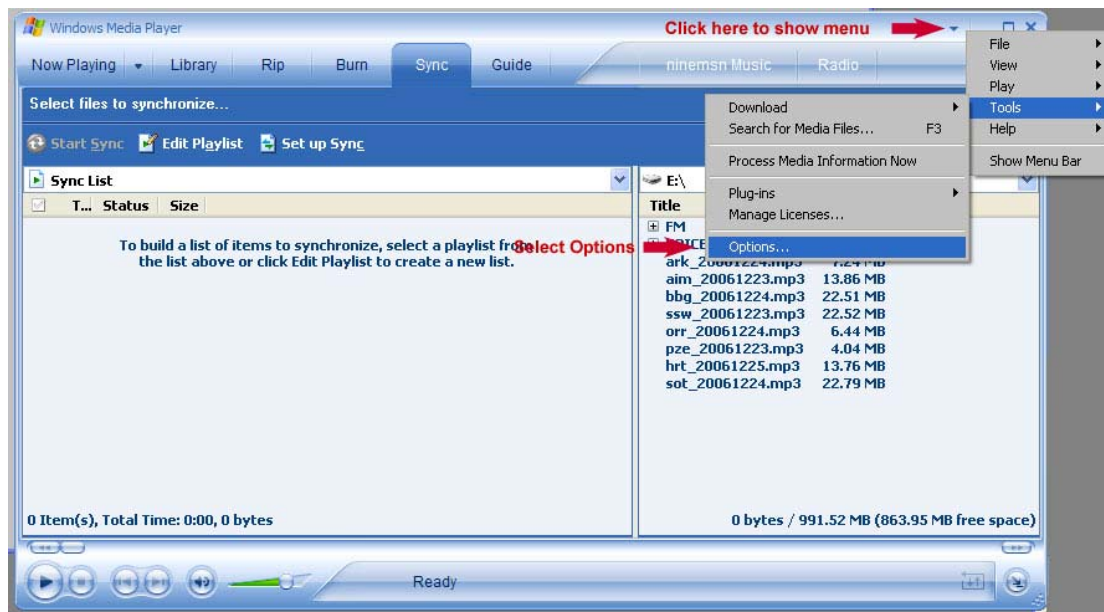

On the “Options” dialog select “Rip Music” and make sure that the “Copy protect music” is check box is cleared

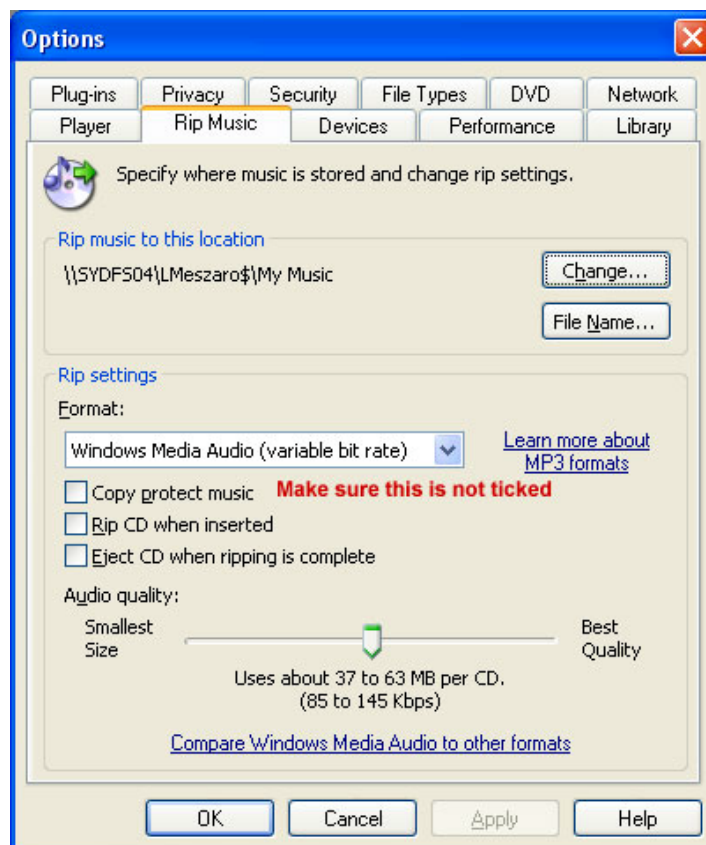


For more information: <http://www.microsoft.com/windows/windowsmedia/player/faq/sync.mspx>


## SETTING UP THE DEVICE (MP3 PLAYER)

Before you can sync (copy) music using Windows Media Player, it has to be set up to recognise the MP3 player as a Mass Storage Device player.


Connect the MP3 player to the USB port and make sure it shows up in the “My Computer” folder.

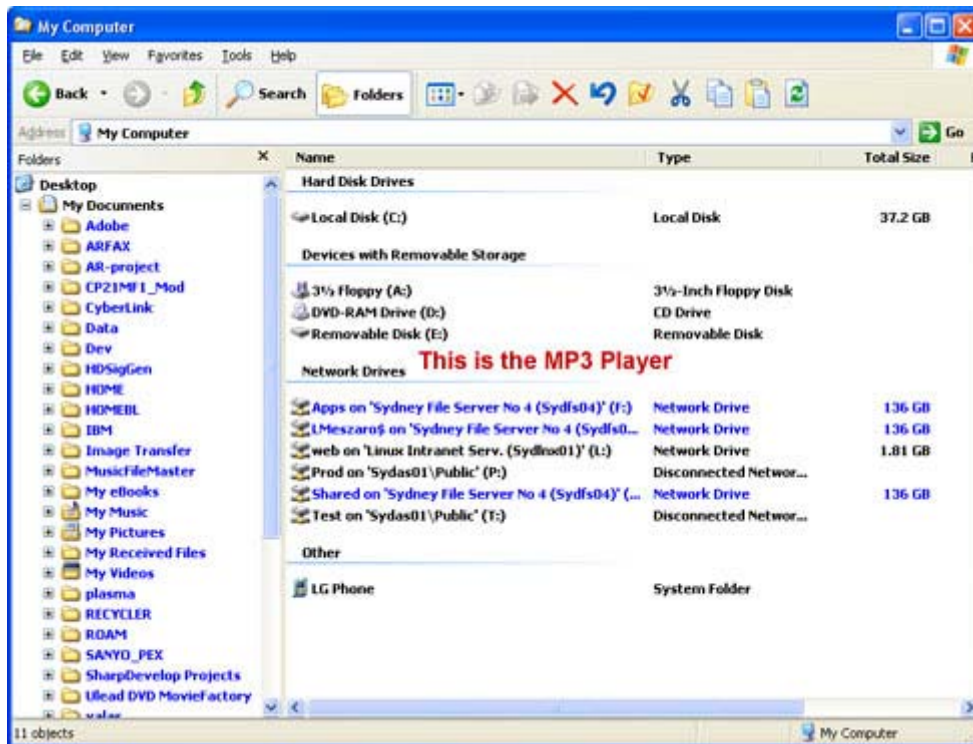

In Windows Media Player click on the “Sync” button and select the MP3 “Removable Disk” from right hand side dropdown list.

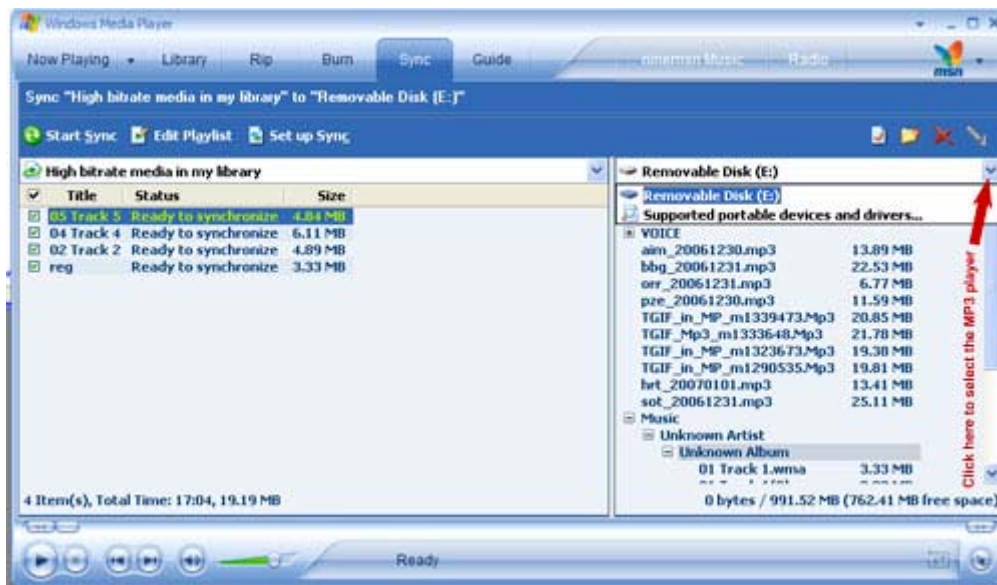

Select the play list to be synchronised from the left-hand side dropdown list.

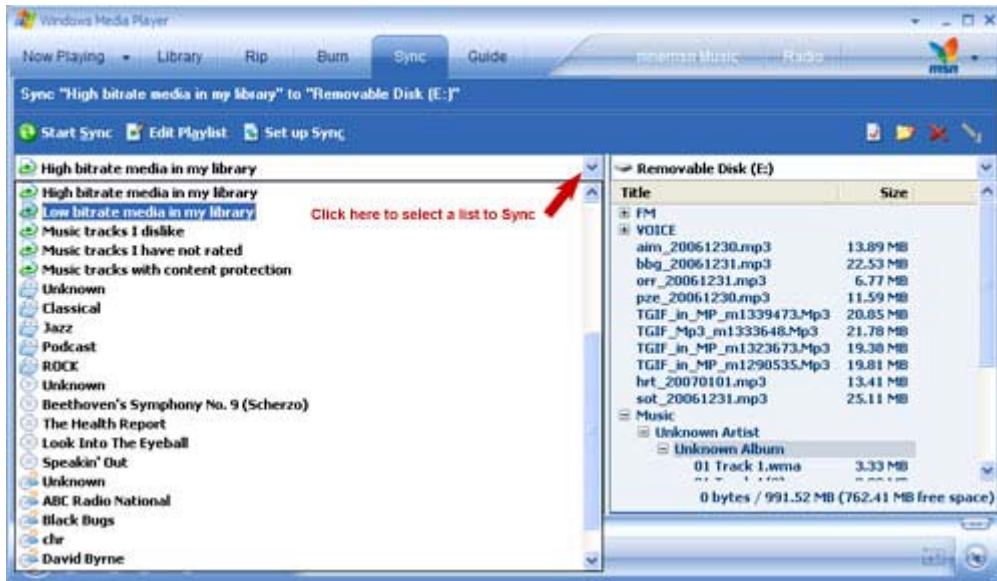

You can refine the selection by clearing the check boxes next to the tracks. When you finished selection, click the "Start Sync" button.

