

Connecting a TV

 
Choose one of the following TV connections, depending on the capabilities of your equipment.

RF Connection

Only Video and S-Video available on this model!

Connect the RF OUT (TO TV) jack on the DVD Recorder to the antenna in jack on your TV using the supplied 75-ohm RF cable (R). **If you use this connection, tune your TV to the DVD Recorder's RF output channel (CH 36 for Australia, CH 35 for New Zealand).**


Rear of TV

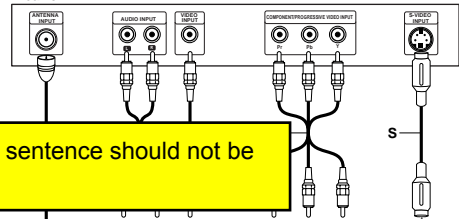

Audio/Video Connection

The crossed out sentence should not be in the manual.

 - 1 Connect the VIDEO OUT jack on the DVD Recorder to the video in jack on your TV using the supplied video cable (V).
- 2 Connect the Left and Right AUDIO OUT jacks from the DVD Recorder to the left/right audio in jacks on your TV using the supplied audio cables (A).

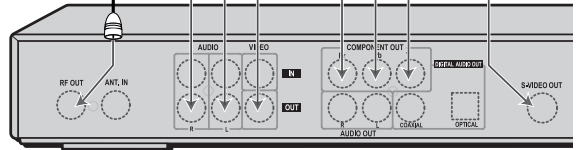

Rear of DVD Recorder

S-Video Connection

- 1 Connect the S-VIDEO OUT jack on the DVD Recorder to the S-Video in jack on your TV using an S-Video cable (S).
- 2 Connect the Left and Right AUDIO OUT jacks from the DVD Recorder to the left/right audio in jacks on your TV using the supplied audio cables.

Progressive Scan Connection

- If your television is a high-definition or 'digital ready' television, you may take advantage of the DVD Recorder's Progressive Scan output for the highest video resolution possible.
- If your TV does not accept the Progressive Scan format, the picture will appear scrambled.

- 1 Connect the COMPONENT/PROGRESSIVE VIDEO OUT jacks on the DVD Recorder to the corresponding input jacks on your TV using a Y Pb Pr cable (C) if the Component Video jacks (Y, Pb, Pr) are available on your TV.
- 2 Connect the Left and Right AUDIO OUT jacks from the DVD Recorder to the left/right audio in jacks on your TV using the supplied audio cables.



- Progressive Scan does not work with the RF, Audio/Video or S-Video connections.

 
 
 
 
 
Initial Installation

After successfully connecting your DVD Recorder to your TV and other devices, this chapter will show you how to complete the initial installation.


 You must follow the initial installation process to set the time, date, channels, and language preferences for the DVD Recorder.

- 1 'Initial Setup Wizard' is displayed on the screen. Make sure the RF cable from your antenna or cable TV jack is connected. Press [ENTER] to begin initial installation.
- 2 'OSD Lang' message is displayed on the screen. Select the desired language for the on screen menu using [▲/▼]. Press [ENTER] to confirm.
- 3 'Country Setting' message is displayed on the screen. Select the desired country using [▲/▼]. Press [ENTER] to confirm.
- 4 'Auto Scan' message is displayed on the screen. The DVD Recorder detects channels automatically and stores them in memory.
- 5 'Clock Set' message is displayed on the screen.
Set the clock.
Use [◀/▶] to move left/right and use [▲/▼] to change the settings.
After setting the clock, press [ENTER] to confirm. If you cancel the process during Initial Installation, you should repeat this procedure.
- 6 'Adjust channels' message is displayed on the screen. Press [ENTER] to confirm.

If this screen does not appear, reset the unit to factory settings by following the "Re-Installation" instructions on page 16.

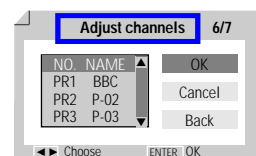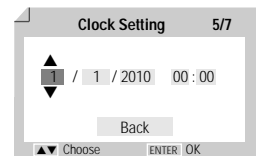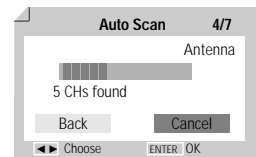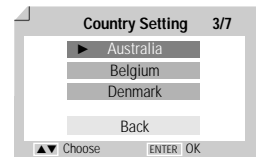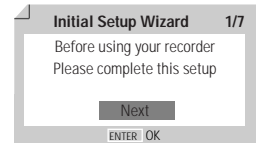

 - 7 'Complete' message is displayed on the screen. 'Initial Installation' process is finished.

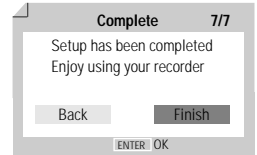

Re-Installation

This set is equipped with the multi-tuner for receiving many countries' broadcasting. In order to receive broadcasting of different countries, follow as below.

 
- 1 Press [SETUP] and select the 'Restore Defaults' using [◀/▶]. Then, RESET the set. (see page 28)
- 2 Power On, then you see the 'Initial Installation'.
- 3 Select the country which you want to (on page 26), then repeat the steps 4-10 on page 17-18.

Setup Menu Overview

The DVD Recorder Setup menu includes four categories, including: Initial Setup, Disc Operation, Disc Edit and Timer Recording. Press [SETUP], [◀/▶] and [ENTER] on the remote control to view the first and second levels of the Setup menu.


1. Initial Setup Screen

go to page 17-28.

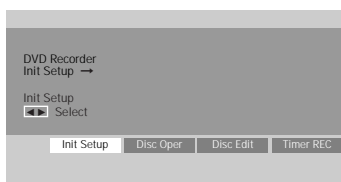


2. Disc Operation Screen

 go to page 46-48.

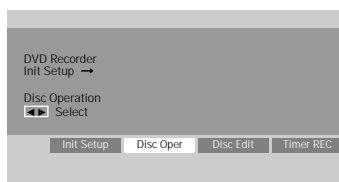


3. Disc Edit Screen

 go to page 49-51.

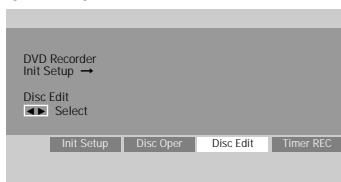

4. Timer Recording Screen

 go to page 41-43.

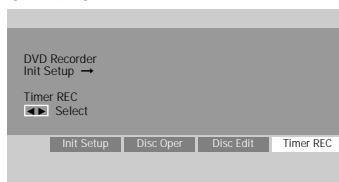

'Installation' Settings

Manual Setting

To complete the set-up of your DVD Recorder when the auto set has not stored all of the channels or when you wish to store a new channel.

1 Press [SETUP]. The Setup menu appears.

While 'Init Setup' is selected, press [ENTER] to go to the initial setup page.

 
 
2 Use [◀/▶] to select 'Installation'.

3 While 'Installation' is selected, press [▼] to select 'Manual Setting'.

4 Press [ENTER]. The 'Manual Setup' menu appears.

5 Select 'Standard' using [◀/▶].

Use [▲/▼] to select the desired 'Standard' (PAL BG, PAL DK, PAL II, or SECAM L), then press [ENTER].

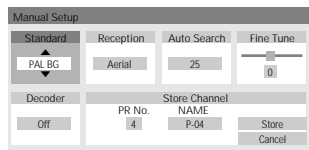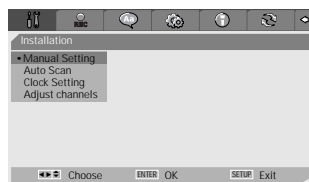

This set is equipped with the Multi-Tuner. You can search broadcastings of other countries. If the set can not search the channels, please Re-Install. (see page 19.)

6 Select 'Reception' using [◀/▶].

Use [▲/▼] to select the desired broadcast system (Aerial or Cable), then press [ENTER].

Aerial: If you are using a standard antenna to receive channels.

Cable: If you are using basic cable to receive channels.

7 Select 'Auto Search' using [◀/▶].

Search the real channel number by pressing [◀/▶].

8 Select 'Fine Tune' using [◀/▶]. You can adjust the fine tuning by pressing [▲/▼].

9 Select 'Decoder' using [◀/▶].

When the program is encoded (and you have a decoder connected to socket EURO AV2), press [▲/▼] to select 'On' and press [ENTER] to confirm.

10 Select 'PR No.' using [◀/▶].

Use [▲/▼] or digit key [0-9] to select program number to store.

11 Select 'NAME' using [◀/▶]. Press [ENTER] to move to the second level. If your DVD Recorder is showing no station name or is showing a station name incorrectly, you can correct this.

Either select the name from the stored list or you create the station name and enter a 4-digit name. Change the letters with the [ENTER], move the next letter with the [▲▼◀▶].

