


# Option Setting

## After replacing the Memory IC (IC803)

The memory IC (IC803), stores the option data of TV set and service adjustments data for each circuit, therefore, when the memory IC is replaced, it should be programmed to the following settings and “SERVICE ADJUSTMENT” on pages 9 to 12.

### 1) To enter to the Option Mode

Press and hold the **F/OK button** on the remote control and **Programme down button (CH▼)** on the front panel of the TV. The option window will appear on the screen.

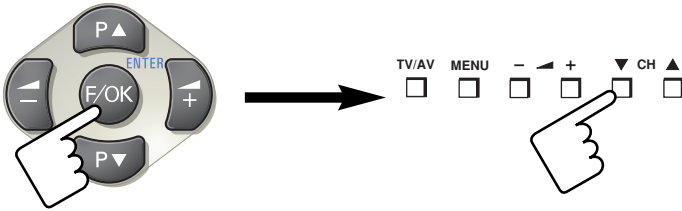

ON-TIMER	ON
SORT MODE	Tuning
P&P	ON
Wel. Text	ON
Comb Filter	OFF
WSS-Aust	ON
Auto Volume	OFF
3D Surround	ON
Country	BG/DK/I/LL'
AV3	ON
CS/A,B	CS

Option Mode

### 2) To set the Option Mode

Select the desired option item by pressing the **Programme down or up button**.

To switch the option mode, use the **Level up or down button**.

The data which is set in the option mode is stored into the memory IC automatically.

The following table shows the available option items and default setting mode.

Option Mode	Mode	Description & Note
ON-TIMER	ON or OFF	On-timer available, default “ON”
SORT MODE	Sorting or Tuning	Tuning mode, default “TUNING”
P & P	ON or OFF	Plug & Play mode, default “ON”
WEL. TEXT	ON or OFF	Display message when first set up, default “ON”
Comb Filter	OFF or ON	For factory use, default “OFF”
WSS-Aust	ON or OFF	Default “ON”
Auto Volume	ON or OFF	Auto volume, default “OFF”
3D Surround	ON or OFF	Default “ON”
Country	UK or IRE or B/G, D/K, I, L/L'	TV system, default “ B/G, D/K, I, L/L ”
Wide	ON or OFF	Wide mode, default “ON”
AV3	ON or OFF	Front AV disable, default “ON”
CS/A,B	CS or A/B	Default “CS”

### 3) Exit from the Service Mode

Press the **Programme information call button**  or turn off the TV set by using the mains switch.