

Connection Other Equipment

 
- 2 Press ◀ or ▶ to display “SETTING” menu.
Then Select “AV3” with ▲ or ▼

SETTING	
TIMER	▶
OSD LANGUAGE	ENGLISH
TEXT LANGUAGE	ENGLISH
AV3	DVD
SVM	1
PROGRAM SWAP	▶
CHILD LOCK	OFF

- 3 Select AV3 option in VIDEO mode or DVD mode with ◀ or ▶.
- 4 Press the **MENU** button repeatedly to return to the normal TV mode.

- Connecting to a Player without Video Component Video Output Terminal (Y, C_b or C_r).


Connect a composite video cable from the AV equipment to the Y-terminal (component video terminal) of AV3 input.

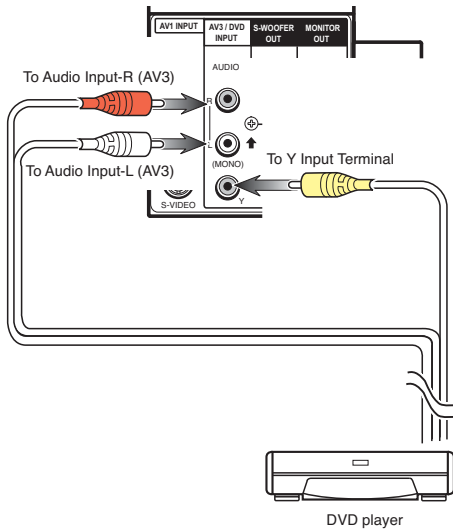

TV/AV To watch a program in this connection status, select AV3.

Connecting of Monitor Output Terminal

 
Monitor output terminal outputs signal of picture currently playing. It may be used to record TV program or reproduce video program received from connection with AV input terminal.

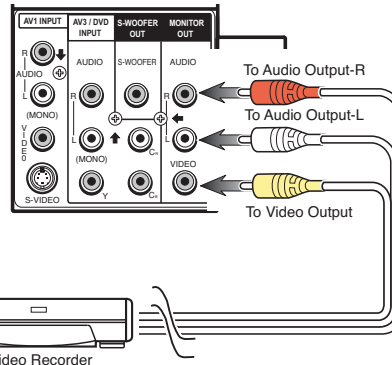

- To record a TV program, select channel desired in TV mode.
- To reproduce a video program input from the AV1 input terminal, select AV1.

Connecting to a AV Device with TV Antenna Jack

 AV device can be connected to the antenna jack of the TV set.

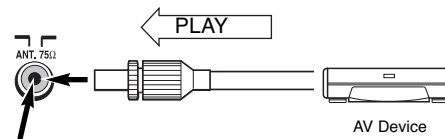

Antenna Jack

To watch programs input from the antenna jack, operate as follows:

- (1) Start on the AV device to play the program.
- (2) Select the channel position desired, and start MANUAL tuning. (See page 12).

See instruction manuals of the relevant AV devices for details of connection and adjustment.

Connecting to Sub-Woofer Output Terminal

This TV set is equipped with External Subwoofer terminal. Additional external amplifier is needed to active the external sub woofer (e.g. Active Sub Woofer).

