

FOXTELTM

digital



FOXTEL Digital Remote

Advanced User Guide

Table of contents

Introduction	3
Batteries	3
The FOXTEL Digital Remote	4
Using the FOXTEL Digital Remote with the FOXTEL Digital Guide	5
AV Mode of the FOXTEL Digital Remote	6
Using the av button with a loop-through device	7
Remote Control Functions in AV mode	8
Setting up the FOXTEL Digital Remote for your television	9
Search Procedure	10
Identifying the Code programmed into the FOXTEL Digital Remote	11
Learning Feature	12
Deleting a Learned Function	13
Volume Direct	14
Abbreviations/Terms used in the guide	15
Trouble-shooting	16
Television Code Reference	19

Introduction

The FOXTEL Digital Remote will enable you to:

1. Operate your FOXTEL Digital service
2. Control the main functions of your television (e.g. Volume Adjustment)
3. Control other pieces of audio/visual equipment connected to your FOXTEL service

This Advanced User Guide will provide you with easy to understand instructions on how to use the FOXTEL Digital Remote to control your television by inputting manufacturer codes into the FOXTEL Digital Remote. These codes are provided in the back of this guide. This will enable the FOXTEL Digital Remote to control almost any television!

If your television brand is not included or you are having difficulties entering the codes, you can “learn” the codes into the FOXTEL Digital Remote.

Note: For information on using the FOXTEL Digital Remote to operate the FOXTEL Digital service, refer to the “FOXTEL Digital Set-Top Unit” Guide which was provided to you at your installation.

Batteries

The FOXTEL Digital Remote requires 2 new AA (LR6, UM3) alkaline batteries. When the batteries need replacing, a message will appear on the FOXTEL Service and a battery low symbol will be in the i-Search banner.

To change the batteries:

1. Remove the battery cover by pushing back the catch at the bottom of the FOXTEL digital remote and then lift off the cover.
 2. Remove the old batteries
 3. Install two fresh AA (LR6, UM3) alkaline batteries as indicated by the illustration in the battery compartment. Be sure to match the + and – marks on the batteries to their respective marks inside the battery compartment.
 4. Replace the battery cover by inserting the tabs at the top of the battery cover first, then pushing the cover into place.
- Do not leave flat batteries in your FOXTEL Digital Remote
 - Do not mix different battery types, eg Alkaline and Manganese.
 - Do not mix old and new batteries – replace both batteries at the same time
 - Dispose of flat batteries in an environmentally-friendly way

The FOXTEL Digital Remote

FOXTEL

Takes you from the TV Guide (or any FOXTEL Digital menu screen) to the last channel you were watching

av

Switches to 'AV mode'

box office

To order movies and events from the FOXTEL Box Office

tv guide

Displays your FOXTEL Digital Guide's programme listings screen

setup

Displays the Setup screen where you can change the set-top unit's settings

vol + and –

Changes the volume up or down

mute

Turns the sound on or off

colour buttons

Use to select the matching colour option shown on screen

red colour button

Launches an active service when you see the red button on your TV screen

number buttons (0-9)

Use to change channel, enter numbers and select on-screen options



Power

Puts the set top unit into or out of standby

active

Displays the Active screen for FOXTEL's range of interactive services

planner

Displays the Personal Planner, to view your programme reminders

i

Displays more information about a programme

ch + and –

Changes channel and pages up and down through listings in the TV Guide

arrow buttons

Moves the highlight around the screen

select

Confirms a choice or makes a selection. Also displays the i-Search banner

help


Takes you instantly to the FOXTEL Digital Help Channel, regardless of what channel or menu you are viewing

back

Jumps back to the previous screen or previous channel you were watching

Using the FOXTEL Digital Remote with the FOXTEL Digital Guide

You can use the following buttons on the FOXTEL Digital remote to perform the following functions on the FOXTEL Digital service:

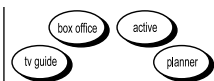

- To display any section of the FOXTEL Digital Guide, press the corresponding button on your FOXTEL Digital Remote (e.g. to display FOXTEL **Box Office**, press box office)

- Use the **arrows** to move the highlight around the screen, then to choose the highlighted item, press **select**.

- On many of the FOXTEL Digital Guide screens, you use the **colour** buttons to choose options or change the display. When a colour button is displayed next to an option, press the same colour button on your FOXTEL Digital Remote to choose that option.

- Press the **number** buttons to enter numbers on the screen. You can also use the number buttons as a short-cut, whenever a numbered list is shown. You can use the **number** buttons to write the letters and symbols marked on the buttons onto the screen. Press the button once for the first letter, and again for the next letter, until the letter you want is displayed (similar to sending text messages with your mobile phone).

- To see information about a highlighted programme, press **i**

- To exit any screen, without saving any changes, and go **back** to the previous FOXTEL Digital Guide screen, press back.


- When full screens of listings are displayed, you can press **ch +** and **ch -** to 'page up' and 'page down' a full screen of listings.

- To return to the FOXTEL Digital channel you were last watching, press **FOXTEL**.

AV Mode of the FOXTEL Digital Remote

Pressing the av button on the FOXTEL Digital Remote allows:

- The FOXTEL Digital STU to route the input from the VCR SCART connector on the back of the FOXTEL Digital STU to the output of the primary or TV SCART. In practice this means your VCR (or DVD Recorder) should be connected to the VCR SCART connector on the FOXTEL Digital STU. Pressing the av button displays the VCR's output on the television. If nothing is connected to the VCR SCART on the FOXTEL Digital STU then pressing the av button on the FOXTEL Digital Remote blanks the television screen
- The FOXTEL Digital Remote to enter AV mode. In AV mode as a default the FOXTEL Digital Remote buttons are disabled unless it has been programmed as shown in this guide (in which case it will control your television's functions)

To identify which of the two SCART connectors is the VCR SCART look at the back of the FOXTEL Digital Set Top Unit, the VCR SCART will be marked either VCR or with the  symbol.

Using the av button with a loop-through device

You may wish to connect more items of equipment to your television than your television has connectors to support (e.g. the FOXTEL Digital STU, plus a VCR, DVD player and/or games console). In this circumstance the FOXTEL Digital STU can act as an AV switcher allowing the television connector used by the FOXTEL Digital STU to be shared with another item of equipment. This item is referred to as the 'loop-through device' as it is connected to the VCR SCART connector at the back of the FOXTEL Digital STU rather than directly to the television (see diagram on the previous page). Usually this device is the VCR.

If you have a 'loop-through device' you use the **av** button on the FOXTEL Digital Remote to switch between the FOXTEL service and the loop-through device.

1. To switch to the looped-through device, press the **av** button on the FOXTEL Digital Remote.

Once you have pressed the av button, all the buttons on the FOXTEL Digital Remote are disabled, (unless it has been programmed as shown in this guide, in which case it will control your television's functions) except FOXTEL and the FOXTEL Digital Guide buttons - **tv guide, box office, active** and **planner**.

2. To return to FOXTEL, press **FOXTEL** (or any of the FOXTEL Digital Guide buttons).

- *If you want to use the 'loop-through' facility, your television must be connected to the TV SCART connector on the FOXTEL Digital STU while the loop-through unit (e.g. VCR) must be connected to the VCR SCART connector on the FOXTEL STU and the Video Output for the STU must be set to PAL.*
- *If your setup does not include a looped-through device then your television will display a blank screen when the av button is pressed. To return to FOXTEL, press the FOXTEL button.*
- *If the FOXTEL Digital STU is not responding to the FOXTEL Digital Remote, it may be because the av button on your Remote has been pressed. Press FOXTEL to reactivate the FOXTEL Digital Remote.*

FOXTEL Digital Remote Functions in AV mode

When in AV mode with a Television Code programmed into the FOXTEL Digital Remote the buttons perform the following functions

1. Power

The **Power** button will operate the Power or Standby function on your television.

2. FOXTEL

Switches the FOXTEL Digital Remote back to FOXTEL mode and allows the FOXTEL service to override any loop-through device.

3. tv guide

Switches the FOXTEL Digital Remote back to FOXTEL mode, allows the FOXTEL service to override any loop-through device and displays the FOXTEL Digital Guide.

4. box office

Switches the FOXTEL Digital Remote back to FOXTEL mode, allows the FOXTEL service to override any loop-through device and displays the FOXTEL Box Office menu.

5. active

Switches the FOXTEL Digital Remote back to FOXTEL mode, allows the FOXTEL service to override any loop-through device and displays the FOXTEL Active menu

6. planner

Switches the FOXTEL Digital Remote back to FOXTEL mode, allows the FOXTEL service to override any loop-through device and displays the FOXTEL Planner

7. setup

Activates your television's teletext decoder if available.

8. i

Clears/removes television information display

9. Arrows, select and back

These buttons are disabled when the FOXTEL Digital Remote is in AV mode.

10. Volume +/-

Change the volume on the television.

11. Channel +/-

Change channel on the television.

12. mute

Mutes the volume on the television.

13. help

Acts as the AV button did on your television's remote control, switches between AV inputs on the television.

14. Number Buttons

The Number buttons (0 - 9) change channel on the television.






15. Coloured Buttons

These buttons are disabled when the FOXTEL Digital Remote is in AV mode

Note: not all the above functions are supported for all televisions in the Code library

Setting the Code for your Television

To set your Television Code:




 




1. Switch your television on (not on standby).
2. Find your Code in the Television Code Reference section at the end of this guide. Codes are listed by TV manufacturer name. The most common Code is listed first.
3.  Press and release the **av** button on the FOXTEL Digital Remote.
4. 
 Press and hold the select button, then press and hold the red button. Keep both buttons held down until the LED on the FOXTEL Digital Remote flashes twice
5.  Now enter your 4-digit Television Code using the number buttons. The LED will flash twice to indicate that the Code has been accepted.
6.  Point the FOXTEL Digital Remote towards your Television and press the **Power** button. If your Television switches off, the FOXTEL Digital Remote is successfully setup to control your Television set.

- Some televisions do not switch on when the **power** button is pressed. If this occurs try pressing a "number" button on the FOXTEL Digital Remote to switch on your television.
- If your television does not respond, follow steps 1 through 6 for each Television Code listed for your television brand. If none of the Television Codes listed for your brand operate your device, then try the Search Method described further in this guide if your brand is not listed at all.
- Some Television Codes are quite similar. If your device does not respond or is not functioning properly with one of the Television Codes, try another Code listed under your brand.

Search Procedure

If your television does not respond to the FOXTEL Digital Remote after you have tried all the Television Codes listed for your television brand, you may need to search for your Television Code. This method will also work if your television brand is not listed at all. An alternative to this search procedure is to use the FOXTEL Digital Remote's learning capability as described on the following page.











To search for your Television Code:

1. Switch your television on (not on standby).
2.  Press the **av** button on the FOXTEL Digital Remote.
3.  Press and hold the select button, then press and hold the red button. Keep both buttons held down until the LED on the FOXTEL Digital Remote flashes twice.

4.  Press the **av** button and release.
5.  Now point the FOXTEL Digital Remote towards your Television and press the **Power** button.
6.  If your television turns off press the **select** button to store the Code
7.  If your television does not turn off, press the **av** button again, followed by the **Power** button. Keep alternating between the **av** and the **Power** buttons until your television set turns off.
You may have to press these buttons many times (up to 180 times) so please be patient.
8.  As soon as your television turns off, press the **select** button to store the Code.

- *Some televisions do not switch on by pressing the **Power** button. Please try pressing a number (0-9) button to switch your television back on.*
- *If you cannot control the television properly, please continue the Search Method, as you may be using the wrong Code.*

Identifying the Code programmed into the FOXTEL Digital Remote

Once you have set up the Code for your television, you can recall back your television Code for future reference.

-  Press the av button on the FOXTEL Digital Remote.
- 
 Press and hold the select button, then press and hold the red button. Keep both buttons held down until the LED on the FOXTEL Digital remote flashes twice.
-  Press **9 9 0**. The LED will flash twice.
-  For the first digit of your four-digit Code, press **1** and count all the red flashes. If there are no flashes, the digit is "0".
-  For the second digit of your four-digit Code, press **2** and count all the red flashes. If there are no flashes, the digit is "0".
-  For the third digit of your four-digit Code, press **3** and count all the red flashes. If there are no flashes, the digit is "0".
-  For the fourth digit of your four-digit Code, press **4** and count all the red flashes. If there are no flashes, the digit is "0".

You now have your four-digit Code.

Learning Feature

The FOXTEL Digital Remote offers a Learning Feature that allows you to copy almost any function from your original remote control onto the FOXTEL Digital Remote.










Please note that the Learning Feature is not possible when the FOXTEL Digital Remote is in FOXTEL mode. The **av**, **FOXTEL**, **tv guide**, **box office**, **active** and **planner** buttons can not have a function learnt onto them.

Before you start:

- Ensure your original remote control is working correctly.
- Ensure the FOXTEL service is not displaying battery low indicator message
- Ensure the FOXTEL Digital Remote and your original (television) remote control are pointing at your television
- The FOXTEL Digital Remote can learn up to 20 functions



Example: To copy the "Power" function from your television remote control onto the Power button in AV mode of the FOXTEL Digital Remote, follow the steps below:

- 1.** Place the FOXTEL Digital Remote and your television remote control on a flat surface. Ensure the ends which you normally point at your television are facing each other (as illustrated above). Keep the remote controls at a distance of 2 to 5 cm (one to two inches).
- 2.**  Press the **av** button on the FOXTEL Digital Remote.
- 3.**   Press and hold the select button, then press and hold the red button. Keep both buttons held down until the LED on the FOXTEL Digital remote flashes twice
- 4.**    Press **9 7 5** (the LED will flash twice).
- 5.**  Press and release the button on the FOXTEL Digital Remote where you want to place the learned function (e.g. **Power** button). The LED will flash rapidly.
- 6.**  Press and hold the button on your television remote control that you want to copy (e.g. Power button) until the LED on the FOXTEL Digital Remote flashes twice.
- 7.** If you want to copy other functions repeat steps 5 and 6 by pressing the next button you want to copy by learning.
- 8.**  To exit the learning mode press and hold the Select button until the LED flashes twice. Alternatively, do not press any button for 10 seconds and the FOXTEL Digital Remote will time-out of learning mode.

- You may choose to select a button that allows you to switch a function on and off (e.g. Pressing the Mute button once will mute the sound, pressing it again will return the sound). If you experience difficulties learning this function onto the FOXTEL Digital Remote, then in Step 6, press and release the button on your original television remote control instead of holding it down.

- If you have trouble using the learning feature ensure you are away from direct sunlight or incandescent lighting when completing the steps above.

Deleting a learned function from AV Mode

To delete a Learned Function from the FOXTEL Digital Remote, complete one of the following three options:

Delete a single learned function

1. Press the **av** button on the FOXTEL Digital Remote.
2. Press and hold the select button, then press and hold the red button. Keep both buttons held down until the LED on the FOXTEL Digital remote flashes twice.
3. Press **9 7 6** (the LED will flash twice).
4. To delete the Learned Function, press the button you wish to delete twice. The LED will flash twice to indicate that the function learned on the button has been deleted. This button will now revert back to its original function.

Delete all learned functions

1. Press the **av** button on the FOXTEL Digital Remote.
2. Press and hold the select button, then press and hold the red button. Keep both buttons held down until the LED on the FOXTEL Digital remote flashes twice.
3. Press **9 7 6** (the LED will flash twice).
4. Press the **av** button **twice**. The LED will flash twice to indicate that all the learned functions have been deleted. All learned buttons in AV mode will now revert back to their original function.

Delete all learned functions and Television Code

1. Press the **av** button on the FOXTEL Digital Remote.
2. Press and hold the select button, then press and hold the red button. Keep both buttons held down until the LED on the FOXTEL Digital remote flashes twice.
3. Press **9 8 1**.
4. The LED will flash twice to indicate that all learned functions and any Code has been deleted. All buttons in AV mode will now be disabled.

Volume Direct

The Volume Direct feature makes it possible for the **volume +/-** and **mute** buttons on the FOXTEL Digital Remote to control the volume of your television rather than the volume of the FOXTEL Digital STU. This feature will occur in FOXTEL and AV modes.

1. Press the **av** button on the FOXTEL Digital Remote.
2. Press and hold the select button, then press and hold the red button. Keep both buttons held down until the LED on the FOXTEL Digital Remote flashes twice.
3. Press **9 9 3** (the LED will flash twice).
4. Press the **av** button. The LED will flash twice to indicate that Volume Direct has been set. The FOXTEL Digital Remote will now control the volume of your television even when in FOXTEL mode.

To reset the Volume Direct feature so that the FOXTEL Digital Remote controls the volume for the FOXTEL Digital STU only, complete the following steps

1. Press the **av** button on the FOXTEL Digital Remote.
2. Press and hold the select button, then press and hold the red button. Keep both buttons held down until the LED on the FOXTEL Digital Remote flashes twice
3. Press **9 9 3** (the LED will flash twice).
4. Press the **volume +** button. The LED will flash twice to indicate that Volume Direct has been reset. The FOXTEL Digital Remote will now control the volume of the FOXTEL Digital STU.

To control the volume of your home theatre system/amplifier with the FOXTEL Digital Remote, learn the volume +, volume - and mute buttons from your home theatre system/amplifier remote control into the FOXTEL Digital Remote. Finally set the Volume Direct feature to ensure the **volume +**, **volume -** and mute buttons control the home theatre system/amplifier when the FOXTEL Digital Remote is in FOXTEL mode.

Abbreviations/Terms used in the guide

- SCART: A SCART cable carries the video, audio and system control signals, to and from the VCR, TV, Games Console or other equipment.
- STU: Refers to the FOXTEL Digital Set Top Unit.
- Loop Through: An input signal that is redirected, looped through and sent back out to make it available to be displayed by another device (e.g. the FOXTEL Digital STU).
- LED: Light Emitting Diode (this is on the front panel of the STU and top of the FOXTEL Digital Remote) which light up when buttons or functions are selected.”
- av: The **av** button is intended to be used if you connect additional audio/visual equipment to your television.

Trouble-shooting

Problem	Possible Cause/s	Solution
The FOXTEL Digital Remote is not working	Batteries are flat FOXTEL Digital Remote is damaged	Replace batteries Contact a representative from the place of purchase
The LED flashes on the FOXTEL Digital Remote but there is no response from the FOXTEL Digital STU	Line of Sight issue FOXTEL Digital Remote is in AV Mode FOXTEL Digital STU not responding	Ensure that the path from the FOXTEL Digital Remote to any device is not obstructed in any way Press the FOXTEL button on the FOXTEL Digital Remote Refer to the FOXTEL Digital Set-Top Unit Guide
The FOXTEL Digital Remote does not respond in AV mode after pressing a button	FOXTEL Digital Remote is in FOXTEL Mode Wrong Television Code used	Press the av button on the FOXTEL Digital Remote Try another Television Code Try the Learning Feature Try the Code Search Feature
The FOXTEL Digital Remote does not operate your television	Batteries are flat Line of Sight issue	Replace batteries Ensure that the path from the FOXTEL Digital Remote to any device is not obstructed in any way
The FOXTEL Digital Remote is not performing commands correctly	Wrong Television Code used FOXTEL Digital Remote is damaged	Try another Television Code Try the Learning Feature Try the Code Search Feature Contact a representative from the place of purchase
Original device remote control does not function	Batteries are flat Original device remote control faulty	Replace batteries Contact a representative from the place of purchase/manufacturer

Trouble-shooting

Problem	Possible Cause/s	Solution
<p>The Learning Feature does not work</p>	<p>Original device remote control faulty</p>	<p>Check that the batteries of the FOXTEL Digital Remote are not flat</p> <p>Contact a representative from the place of purchase/manufacturer</p>
	<p>Line of Sight issue</p>	<p>Ensure that the path between the FOXTEL Digital Remote and device remote control is not obstructed in any way</p>
	<p>Incorrect steps followed</p>	<p>Refer to the "Learning Feature" section of this guide to re-complete the steps</p>

Before Contacting Your Retailer

Prior to contacting your retailer for any technical assistance regarding the information covered in this guide, please refer to the following points which may resolve any technical issues you may experience:

- 1.** Ensure that you follow the instructions for battery installation and replacement as outlined on page 3 of this Advanced User Guide.
- 2.** Ensure that the path from the FOXTEL Digital Remote to the device is not obstructed in any way (there must be a clear line of sight).
- 3.** If you are trying to control the FOXTEL Digital service ensure the FOXTEL Digital Remote is in FOXTEL mode by pressing the FOXTEL button
- 4.** If you have programmed a Television Code into the FOXTEL Digital Remote and are trying to operate your television ensure that the FOXTEL Digital Remote is in AV mode by pressing the AV button.
- 5.** Ensure the device you are operating with the FOXTEL Digital Remote is working correctly. You may need to use the original remote control for the device to ensure it is functioning correctly. If you continue to experience problems with the original remote control, refer to the manufacturers instructions for the device.
- 6.** Please ensure that you read this manual thoroughly. This guide has been designed to guide you through the steps required to successfully use the FOXTEL Digital Remote supplied.

If you require further technical assistance, please contact your retailer or the support hotline 1300669347 8:30am-6:00pm (Eastern Standard Time).

Television Code Reference

888	0292	0440		
A.R. Systems	0584	0402		
Accent	0037	0065	0584	
Accuphase	0584	1937		
Acura	0037			
Adcom	0653	0312		
Addison	0681	0136		
Admiral	0121	0191	0446	0292
Adyson	0245	0244		
AEA	0065	0584		
Agashi	0244	0245		
AGB	0544			
Aiko	0037	0065	0584	0244
	0399	0063	0461	0100
	0389	0292	0245	
Aim	0065	0100	0440	0584
	0781	0236	0734	
Aiwa	0733	0729		
Akai	0037	0389	0236	0584
	0065	0399	1565	0831
	0461	0773	0730	0063
	0246	0312	0724	0100
	0781	0191	0440	0757
	0476	0742	0544	0743
	0630	0576	0508	0245
	0659	0244	0292	0206
	0405	0634	1065	0501
Akashi	0037			
Akiba	0246	0310	0483	0065
	0584			
Akira	0218			
Akito	0300	0065	0584	
Akura	0065	0246	0292	0584
	0696	0387	0440	0037
	0310	0742		
Alaron	0207	0244		
Alba	0037	0065	0446	0398
	0584	0064	0263	0246
	0399	0696	1065	0383
	0244	0275	0191	0515
	0607	0742	0471	
Alkos	0063			
Allorgan	0245			
Allstar	0065	0584		
Ambassador	0205			
Amplivision	0245			
Amstrad	0037	0205	0065	0544
	0292	0390	0399	0246
	0440	0461	0584	1065
Anam	0065	0584	0037	
Anam National	0065	0584	0678	
Anglo	0037	0292		
Anitech	0037	0292	0065	0584
	0310	0130		
Ansonic	0398	0065	0584	0037
	0696	0402	0191	0130
	0439	0287	0275	1465
	0312	0456	0132	
AOC	0037	0088	0121	0136
	0206	0207		
Aolingpike	0292	0440		
Apollo	0501			
Arcam	0244	0245		
Ardem	0065	0584		
Aristona	0584	0065		
ASA	0132			
Asberg	0065	0584	0130	
Asora	0037			
Astra	0065	0584		
Asuka	0246			
ATD	0726			
Atlantic	0065	0584	0244	0348
	0287			
Atori	0037			
Audiosonic	0037	0065	0137	0584
	0742	0743	0245	0398
	0365	0292	0246	0456
Audioton	0245	0398	0292	0456
Aumark	0088			
Autovox	0572	0245	0275	
AWA	0037	0064	0185	0402
	0440	0065	0584	0244
	0634	0245	0136	0292
Axxent	0037			
Axxon	0742			
Baihe	0037	0292	0440	
Baile	0037	0402		
Baird	0137	0371	0218	0100
	0245	0236		
Bang & Olufsen	0593			
BaoHuaShi	0292	0440		
Baosheng	0037			
Barco	0191			
Basic Line	0037	0402	0065	0246
	0191	0696	0584	0310
	0245	0483	0367	1065
Bastide	0245			
Baur	0037	0065	0389	0540
	0572			
Beaumarck	0206			
Beijing	0037	0236	0254	0292
	0402	0440	0510	0849
Beko	0398	0063	0456	0742
	0743	0446	0065	1065
	0584	0634		
Bennett	0584	0065		
Beon	0065	0584	0446	
Best	0365	0398		
Bestar	0065	0584	0398	0402
Binatone	0245			
Black Diamond	1065	0584		
Black Panther	0130			
Black Strip	0063			
Blacktron	0310			
Blackway	0310	0246		
Blaupunkt	0223	0476	0483	0198
	0064			
Blue Sky	0065	0246	0584	0742
	0696	1065	0515	0743
	1937	0310	0483	1962
Blue Star	0310			
Bondstec	0275			
Boots	0245	0300	0037	
Bosch	0348			
BPL	0065	0310	0584	
Brandt	0137	0653	0363	0315
	0499	0371	0588	
Brandt				
Electronique	0315	0363		
Brinkmann	0065	0584	0696	0547
	0446			
Brionvega	0065	0390	0584	
Britannia	0244	0245		
Brother	0292			
Bruns	0456			
BSR	0191	0389		
BTC	0246			
Bush	0037	0696	0064	0246
	0065	0191	0300	0310
	0383	0399	0263	0402
	0547	0726	1065	0292
	0389	0515	0236	0245
	0312	0584	0742	
Caihong	0037			
Candle	0214			
Canton	0246			
Capsonic	0292			
Carad	0065	0584	0696	1065
Carrefour	0064	0065	0584	
Carver	0198			
Cascade	0037	0065	0584	
Casio	0065	0584	0191	
Cathay	0065	0584		

CCE	0065	0245	0584
Celebrity	0028		
Celestial	0847	0848	0849
Centrex	0808	0854	
Centrum	1065		
Centurion	0065	0584	
Century	0275		
CGE	0275	0446	0398 0191
Changcheng	0037	0292	0402 0440
Changfei	0037	0402	
Changfeng	0292	0440	0724 0781
Changhai	0037		
Changhong	0855	0848	0037 0292
	0536	0849	
Chengdu	0037		
Ching Tai	0037	0207	
Chun Yun	0028	0037	0207
Chunfeng	0037	0292	
Chung Hsin	0136	0064	
ChungFeng	0440		
Chunsun	0037		
Cimline	0037	0263	0246
Citizen	0088	0214	
City	0037		
Clarivox	0065	0446	0584 0130
Clatronic	0065	0275	0398 0399
	0742	0246	0292 0584
	0245	0037	0130 0348
	0607	0634	
Clayton	1065		
CMS	0244		
CMS hightec	0245		
Concorde	0037		
Condor	0348	0065	0398 0584
	0244	0037	0310 0130
	0275	0446	0439 0191
	0292		
Conia	0782	0849	
Conrad	0065	0584	
Conrowa	0037	0173	0292 0440
	0724	0726	0781 1198
Contec	0037	0244	0064 0185
	0292	0065	0584
Continental Edison		0137	0315
	0515		
Cosmel	0037	0365	0065 0584
Crosley	0275	0191	
Crown	0037	0740	0065 0398
	0584	0446	0515 0607
	0742	0634	0743 0387
	0236	0367	1962
CS Electronics	0244	0246	0275
CTC	0275		
Curtis Mathes	0088	0121	0173 0194
	0730		
Cybertron	0246		
Daewoo	0662	0402	1937 0527
	0065	0584	0037 0244
	0246	0245	1165 0206
	0198	0136	
Dainichi	0246	0244	
Danichi	0246		
Dansai	0065	0584	0292 0063
	0244	0037	0064 0245
	0236		
Dansette	0440		
Dantax	0398	0742	0634 0743
Datsura	0236		
Dawa	0037	0065	0584
Daytek	0726	0734	
Dayton	0037		
Daytron	0037	0402	0065 0584
Dayu	0402		
de Graaf	0236	0072	0255 0576
	0191		
DEC	0823		
Decca	0065	0100	0300 0544
	0584	0245	1165

Deitron	0065	0584	0402 0246
Denon	0173		
Denver	0065	0584	0634 0615
DER	0218		
Desmet	0348	0065	0584 0037
Diamond	0292	0726	0724 0037
	0244	0399	
Digatron	0065		
Digiline	0065	0584	0696
Digitex	0848		
Digitor	0065	0584	
Dixi	0037	0065	0584 0275
	0245		
DL	0808	0065	
Dongda	0037		
Donghai	0037		
DTS	0037		
Dual	0547	0572	0245 0371
	0065	0584	0287 0191
	1165	0659	
Dual Tec	0245		
Dumont	0132	0130	0245 0100
Dunai	0572	0191	
Durabrand	1465	0206	
Dux	0065	0584	
Dynatron	0065	0584	
E-Elite	0246		
Ecco	0734		
ECE	0065	0584	
Edison-Minerva	0515		
Elbe	0287		
Elbe-Sharp	0544		
Electroband	0028		
Elekta	0037	0065	0584 0292
	0310		
Elin	0065	0244	0576 0584
	0132	0389	0476 0191
	0037		
Elite	0246	0065	0348 0584
Elta	0037	0292	0244
Emco	0275		
Emerson	0205	0206	0207 0275
	0065	0584	0399 0310
	0348	0389	1937 0398
	0191	0349	
Enzer	0724	0781	
Erres	0065	0584	
ESC	0065	0584	0245
Estèle	0191		
Ether	0037		
Etron	0037	0065	0584 0191
Eurofeel	0292	0245	
EuroLine	0065		
Euroman	0244	0292	0065 0584
	0245	0398	
Europa	0065	0584	
Europhon	0065	0544	0130 0191
	0245	0584	0275 0244
Expert	0287	0191	
Fagor	0065	0584	
Family Life	0065	0584	
Feilang	0037		
Feilu	0037		
Feiyan	0292	0440	
Feiyue	0037		
Fenner	0402	0037	
Ferguson	0065	0137	0653 0218
	0315	0363	0371 0588
	0584	0063	0132 0136
	0389	0499	0576 0471
Fidelity	0191	0244	0389 0065
	0572	0584	0399 0440
	0292		
Filsai	0245		
Finlandia	0236	0387	0576 0389
	0191	0100	0315 0371
	0073		

Finlux	0065	0132	0100	0584
	0207	0742	0439	0544
	0245	0191	0743	0130
	0659	0508	0657	0501
	0446	0634		
Firstar	0037			
Firstline	0037	0065	0244	0584
	0245	0402	0275	0696
	0349	0742	0191	1937
	0130	0439	0572	0100
	0263	0236	0389	1065
Fisher	0132	0245	0064	0236
	0398	0572	0073	0185
	0389	0191	0100	
Flint	0483			
FNR	0130			
Formenti	0065	0191	0348	0584
	0244			
Formenti-Phoenix	0244	0348		
Fortress	0121			
Fraba	0065	0584	0398	
Friac	0037	0065	0584	0130
	0398	0527	0683	
Frontech	0191	0275	0292	0476
	0245	0037		
Fujitsu	0207	0711	0100	0214
	0130	0245	0191	0037
	0065	0584	0389	0287
Fujitsu General	0037	0214	0245	0191
Funai	0696	0207	0292	0440
Furi	0173	0292	0440	
Futronic	0292	0823		
Future	0065	0584		
Galaxi	0130	0065	0584	0389
	0191			
Galaxis	0398	0446	0065	0130
	0584			
Galeria	0037			
GBC	0191	0037	0402	0246
GE	0371	0206	0310	0588
	0315	0137	0363	0653
GEC	0065	0191	0071	0389
	0100	0245	0544	0584
Geloso	0037	0275	0191	0402
General	0214	0618	0137	0315
	0499			
General Electric	0371	0315		
General Technic	0037			
Genesis	0037	0065	0584	
Genexxa	0191	0246	0065	0584
	0440	0037		
Giant	0245			
Gintai	0749			
Goldfunk	0696			
Goldline	0365			
GoldStar	0065	0037	0206	0398
	0405	0245	0275	0584
	0244	0191	0389	0137
	0634	0072	1962	0742
	0743			
Gooding	0515			
Goodmans	0662	0064	0402	0065
	0100	0207	0527	0245
	0584	0263	1065	0371
	0696	0399	1937	0292
	0544	0037	0515	0063
	0508	0588	0363	0246
	0607			
Gorenje	0398			
GPM	0246			
Gradiente	0198	0065	0584	
Graetz	0191	0742	0389	0399
	0065	0367	0584	
Granada	0065	0073	0100	0584
	0236	0254	0245	0384
	0367	0387	0544	0136
	0064	0501	0363	0588
	0191	0253	0371	0576

Grandin	0310			
Grundig	0536	0065	0223	0515
	0584	0615	0734	0037
	0064	0471	0398	
Grunpy	0207			
Haaz	0734			
Haier	0726	0292	0807	
Haihong	0037			
Haiyan	0292	0440		
Halifax	0292	0244	0245	
Hallmark	0206			
Hammerstein	0292	0088		
Hampton	0244	0245		
Hanimex	0246			
Hankook	0206			
Hanseatic	0065	0348	0389	0456
	0572	0584		
Hantarex	0037	0544	0065	0584
	0130			
Hantor	0065	0584		
Harley Davidson	0071	0207		
Harwood	0037	0440	0065	0584
	0515			
Hauppauge	0065	0584		
Havermy	0121			
HCM	0037	0310	0440	0065
	0584	0245	0246	0446
	0292			
Hedzon	0584	0065		
Hema	0245	0037		
Highline	0292	0065	0584	
Hikona	0246			
Himitsu	0807			
Hinari	0037	0236	0064	0065
	0584	0207	0246	0191
	0383	0471	0515	0263
	0292			
Hisawa	0310	0483		
HISense	0236	0037	0173	0255
	0536	0724	0781	0849
	1198	0808	0584	
Hitachi	0173	0253	1253	0037
	0064	0384	0072	0071
	0136	0501	0191	0371
	0606	0245	0137	0255
	0185	0206	0207	0544
	0100	0214	0509	0527
	0065	0591	0536	0584
	0576	0747	0662	0772
	1065	1165	1198	0387
	0389	0540	0508	0657
Hitachi Fujian	0136	0856	0253	
Höher	0742			
Home Electronics	0634			
Hongmei	0037	0121	0292	
Hongyan	0292	0440		
Hua Tun	0037			
Huafa	0037	0173		
Huanghaimei	0037			
Huanghe	0037			
Huanglong	0037			
Huangshan	0037	0292	0440	
Huanyu	0244	0402	0255	0292
Huaqiang	0292	0440		
Huari	0173	0292	0440	
Hyper	0037	0244	0245	0275
Hypersonic	0389			
Hypson	0065	0292	0584	0310
	0742	0743	1962	0245
	0483	0696		
Hyundai	0065	0831	0584	0734
	0781			
Iberia	0065	0584		
ICE	0245	0292	0065	0399
	0037	0584	0246	0244
Ices	0246			
Imperial	0065	0191	0275	0398
	0446	0584	0439	0389

Imperial Crown 0037 0292 0402 0440
 Indiana 0065 0584
 Ingelen 0191 0515 0742 0389
 Inno Hit 0037 0100 0544 0065
 0584 0246 0245 0275
 0130 0310
 Innova 0065
 Interactive 0065 0584 0540 0191
 0389 0398 0137 0439
 Interbuy 0037 0065 0292 0275
 0540 0584
 Interfunk 0065 0191 0275 0389
 0540
 Internal 0065 0584 0527 0402
 1937
 International 0244
 Intervision 0065 0310 0245 0130
 0483 0292 0399 0405
 0547 0476 0398 0515
 0246 0191 0275 0037
 0584
 Irradio 0037 0065 0584 0246
 0275 0399
 IRT 0726
 Isukai 0246 0065 0584 0310
 0483
 ITC 0245 0348
 ITS 0065 0399 0246 0310
 0292 0244 0037 0584
 ITT 0191 0389 0508 0572
 0576 0501 0367 0236
 0207
 ITT Nokia 0389 0576 0191 0501
 0508 0236 0207 0367
 0634 0659
 ITV 0312
 JCB 0028
 Jean 0064 0749 0037 0207
 JEC 0063
 Jialicai 0037 0292 0440
 Jinfeng 0236 0254
 Jinque 0037 0292 0440
 Jinta 0037 0292 0440
 Jinxing 0037 0173 0584 0065
 0292 0726 0849
 JMB 0065 0527 0662 0402
 0584 0471
 Jubilee 0584
 Juhua 0292 0440
 JVC 0681 0064 0218 0399
 0536 0634 0711 0246
 0446 0121
 Kaige 0037 0292 0440
 Kaisui 0037 0244 0245 0246
 0310
 Kamp 0244
 Kangli 0037 0292 0402
 Kangyi 0037 0292 0440
 Kapsch 0191
 Karcher 0065 0584 0398 0191
 0310 0130 0292 0742
 0634
 Kathrein 0584 0065
 Kawasho 0244
 KB Aristocrat 0191
 Kendo 0065 0263 0390 0584
 0191 0547 0540 0398
 0405 0456 0439 0130
 0275
 Kennedy 0191
 Kennex 1065
 KIC 0245
 Kingsley 0244
 Kioto 0584 0734
 Kiton 0584 0065 0696
 KLL 0065
 Kneissel 0287
 Kolin 0136 0064

Kolster 0065 0584 0130 0275
 Kongque 0037 0292
 Konichi 0037
 Konka 0065 0584 0399 0742
 0446 0246 0753 0754
 0669 0844 0615 0782
 0807 0823
 Kontakt 0515
 Korpel 0065 0584
 Kosmos 0065 0584
 Kotron 0440 0292
 Koyoda 0037
 KTV 0245
 Kuaile 0037 0292 0440
 Kuba 0191
 Kuba Electronic 0191
 Kulun 0037
 Kunlun 0236 0254 0292 0402
 Kyoshu 0440 0446 0292
 Kyoto 0191 0244 0245
 LaSAT 0398
 Leader 0037
 Lecson 0065 0584
 Legend 0037
 Lemair 0439
 Lenco 0065 0749 0037 0191
 0402 0584 0132
 Lesa 0275
 Levis Austria 0065 0584
 Leyco 0065 0292 0100 0584
 0607
 LG 0065 0398 0037 0405
 0584 0245 0742 0244
 0191 0672 0088 0206
 0136 0634 0137 1962
 0726 0743
 Liesenk & Tter 0065 0584
 Lifetec 0065 0037 0547 0402
 0696 0540 0683 1065
 1165 0584 0246 0292
 0711
 Lloyd's 0037
 Loewe 0540 0065 0584 0683
 0398 0390 0544
 Logik 0088 0726 0037 0292
 0399
 Logix 0696
 Longjiang 0292 0440
 Luma 0065 0191 0439 0584
 0402 0037 0390 0287
 Lumatron 0065 0584 0390 0191
 0287 0389 0245 0292
 0607
 Luxman 0384 0389 0508 0236
 Luxor 0576 0191 0501 0207
 1065 0245 0659
 LXI 0206
 Madison 0065 0584
 Magnadyne 0130 0275 0544 0572
 Magnafon 0130 0544
 Magnavox 0065 0584 0064 0207
 0214 0734 0808
 Magnum 0742 0065 0584 0743
 Mandor 0292
 Manesth 0065 0245 0263 0584
 0292 0348 0063 0191
 Manhattan 0065 0584 0696 1065
 0191
 Marantz 0065 0584 0440
 Mark 0065 0584 0245 0244
 0402 0037 0742 0743
 Masuda 0246 0399 0037 0292
 0065 0245 0584

Matsui	0037	0065	0584	0063			
	0515	0064	0263	0100			
	0205	0236	0383	0245			
	0300	0399	0471	0461			
	0544	0572	0607	0483			
	0191	0073	0223	0363			
	0742	1065	0657				
Matsushita	0678						
Matsuyama	0615						
Maxam	0292						
MCE	0037						
McMichael	0071						
Mediator	0065	0584					
Medion	0065	0696	1065	0547			
	0540	0584	1165	0726			
	1465						
Megatron	0173	0206					
MEI	1065	0065	0584				
Meile	0292	0440					
Meletronic	0037	0065	0540	0132			
	0137	0371	0191	0275			
	0245	0315	0402	0508			
	0244	0439	0584	0662			
	0389	0223					
Memorex	0037	0206	0207	1065			
	0088						
Memphis	0365	0100	0037				
Mercury	0065	0037	0584				
Mermaid	0065						
Metronic	0653						
Metz	0223	0065	0584	0615			
	0696	1065					
MGA	0206	0065	0584	0246			
	0132						
Micromaxx	0065	0584	0696	1065			
Minato	0065	0584					
Minerva	0515	0223	0544	0136			
Minoka	0440	0065	0584	0387			
Mitsubishi	0136	0121	0540	0065			
	0206	0064	0207	0584			
	0236	1962	1065				
Mitsuri General	0191						
Mivar	0244	0544	0398	0245			
Monaco	0037						
Morgan's	0065	0584					
Motorola	0121						
MTC	0088	0398	0540	0191			
	0244	0389	0476				
MTEC	0300						
Mudan	0037	0236	0254	0292			
	0440						
Multitec	0065	0584	0696	1065			
Multitech	0037	0130	0244	0065			
	0245	0398	0584	0275			
	0292						
Murphy	0132	0244	0100	0191			
Myryad	0584	0065					
NAD	0194	0206	0389	0191			
Naiko	0065	0634	0584				
Nakimura	0402	0065	0584				
Nanbao	0037	0292	0440				
Nansheng	0292	0440					
Naonis	0191						
NAT	0254						
National	0254	0236	0255	0536			
NEC	0198	0615	1198	0206			
	1298	0037	0064	0348			
	0483	0402	0214	0245			
	0065	0584	0292	0440			
	0536	0527					
Neckermann	0065	0398	0584	1533			
	1038	0191	0446	0275			
	0245	0439	0348	0540			
NEI	0065	0365	0584	0399			
	0191						
Nesco	0207	0275					
Netsat	0065	0584					
Network	0365						
Neufunk	0065	0037	0584	0246			
	0310	0742					
New Tech	0065	0037	0584	0371			
	0245	0476					
Newave	0037	0749	0206	0121			
Nicam	0572						
Nicamagic	0244						
Nikkai	0100	0063	0246	0065			
	0584	0244	0245	0292			
	0365	0037	0064				
Nikko	0206						
Noblisko	0130	0244					
Nokia	0389	0191	0501	0508			
	0576	0634	0659	0387			
	0367	0236	0402	0207			
	0348	0137					
Nordic	0245						
Nordmende	0137	0742	0315	0371			
	0588	0223	0065	0584			
	0363	0191	0499				
Norfolk	0191						
Normerel	0065	0584					
Novak	0065	0584					
Novatronic	0065	0402	0584				
NU-TEC	0483	0726					
Oceanic	0191	0389	0236	0591			
	0501	0576	0508				
Odeon	0292						
Omega	0292						
Omni	0808	0726	0854				
Onwa	0399	0630	0246	0461			
	0130						
Optimus	0194	0678					
Optonica	0121						
Orbit	0065	0584					
Orion	0065	0207	0205	0383			
	0584	0263	0683	0742			
	0348	0349	0471	0544			
	0037	0572	0130	0292			
	0440						
Orline	0065	0246	0584				
Ormond	0696	1065	0065	0584			
Orsowe	0544						
Osaki	0100	0246	0245	0292			
	0440	0065	0300	0402			
	0383	0584					
Osio	0065	0584					
Oso	0246						
Osume	0185	0100	0064	0246			
	0065	0584					
Otto Versand	0064	0065	0245	0348			
	0371	0540	0584				
Pacific	0065	0584	1165	0742			
	1065	0471					
Pael	0244						
Palladium	0398	0446	0065	1533			
	1038	0584	0275	0191			
	0245	0439	0683	0547			
	0742	1165					
Palsonic	0292	0312	0440	0065			
	0807	0245	0405	0246			
	0726	0584	0476	0446			
Panama	0037	0245	0292	0244			
	0065	0584	0275				
Panasonic	0678	0254	0136	0065			
	0584	0191	0236	0389			
	0255	0536	0544	0576			
Panda	0037	0808	0236	0254			
	0854	0292	0734	0440			
	0536	0726	0849				
Papouw	0065						
Pathe Cinema	0191	0244	0348	0398			
Pathe Marconi	0137						
Pausa	0037						
Penney	0088	0206					
Perdio	0348	0100	0191	0065			
	0244	0310	0584				

Philco	0446	0173	0275	0065	RFT	0456			
	0584	0191	0398	0214	Rhapsody	0244			
	0206	0547	0509		Ricoh	0065	0584		
Philex	0191				Rinex	0446			
Philharmonic	0245				Roadstar	0037	1065	0246	0292
Philips	0065	0584	0749	0028		0446	0065	0584	0696
	0071	0451	0214	0371		0310			
	0206	0136	0402	0037	Rodex	0065	0584		
Phoenix	0065	0584	0398	0191	Rover	0064			
	0100	0244	0348		Rowa	0065	0292	0726	0037
Phonola	0065	0584	0244			0245	0740	0244	0615
Pilot	0584	0065	0740	0734	Roxy	0476			
Pioneer	0194	0065	0137	0198	Royal Lux	0398	0440	0363	
	0584	0191	0451	0456	Rukopir	0584	0065		
	0315	0398	0371	0389	Ruyi	0255			
	0540				Saba	0137	0653	0191	0315
Pionier	0398					0363	0371	0544	0389
Plantron	0065	0584	0292	0037		0576	0499	0588	0742
Playsonic	0742	0065	0245	0367	Sagem	0483	0310		
	0743				Saige	0037			
Policom	0130	0137	0389	0191	Saisho	0037	0263	0544	0205
Polytron	0725	0310				0292	0245	0572	0191
Poppy	0037				Saivod	0065	0584	0696	0740
Portland	0402	1937				1065			
Powerpoint	0515	0065	0584	0726	Sakai	0191			
Prandoni-Prince	0275	0544	0389		Sakyno	0483			
Precision	0245				Salora	0191	0384	0387	0389
Premier	0037	0292				0576	0544	0367	0236
Prima	0037	0292	0440			0508			
Princess	0726				Salsa	0363			
Prinz	0100	0572	0389		Sambers	0130	0544		
Profex	0037	0191	0389		Sampo	0037	0064	0121	0206
Profi	0037					0678	0749		
Profitronic	0065	0584	0130		Samsung	0646	0672	0088	0615
Proline	0065	0349	0584	0653		0065	0206	0584	0037
	0662	0439	0100			0730	0121	0245	0476
Prosonic	0065	0584	0398	0402		0510	0398	0292	0244
	0399	0696	0742	0244		0100	0207	0236	0547
	0607	0245				0191	0653	0254	0849
Protech	0037	0065	0584	0130	Sandra	0244	0245		
	0245	0275	0292	0365	Sanjian	0292	0440		
	0446	0696	0310	0191	Sansui	0065	0683	0757	0584
	1065					0734	0399	0754	0753
Proton	0206	0037	0672			0630	0483		
Provision	0527	0065	0584	1065	Santon	0037			
	0742				Sanyo	0236	0185	0749	0064
Pye	0065	0584	0402	0440		0073	0398	0367	0100
Pymi	0037					0244	0132	0245	0173
Qingdao	0236	0254	0292	0440		0440	0037	0536	0572
Quasar	0275	0678	0037			0191	0065	0136	0584
Quelle	0065	1533	1038	0132	Sanyuan	0037	0121		
	0389	0440	0137	0572	Save	0065	0584		
	0540	0064	0245	0275	SBR	0065	0584	0071	
	0696	0584	0185	0223	Schaub Lorenz	0389	0576	0742	0634
	0292	0037				0402			
Questa	0064				Schneider	0065	1165	0246	0275
R-Line	0065					0584	0399	0547	0572
Radiola	0065	0584	0245			0696	0287	0371	0245
Radiomarelli	0544	0275	0065	0584		0389	1065	0191	0742
RadioShack	0065	0584	0206			1937			
Radiotone	0037	0065	0584	0456	Scotch	0206			
	0398	0607	0446	0440	Scotland	0191			
	0696	0292	1065		Scott	0206	0207		
Rank Arena	0064	0824	0185	0630	Sears	0206	0207		
	0781				Seaway	0662			
RCA	0028	0653	0088	0121	SEG	0064	0065	0245	0584
	0206	0588	0363	0646		0292	1065	0696	1465
	0371	0781				0515	0037	0191	0662
Realistic	0206					0130	0275	0390	0244
Recor	0065	0446	0584			0246	1937		
Rectiligne	0065	0584			SEI	0130	0205	0544	1533
Rediffusion	0389	0576	0064			0572	1038	0191	0065
Redstar	0065	0584				0584			
Reflex	0065	0584	1065	0696	Sei-Sinudyne	0130	0544	1533	1038
Reoc	0742	0662	1937			0572	0065	0584	
Revox	0065	0584	0398		Seleco	0191	0287	0390	0439
Rex	0191	0287	0292	0439		0399	0064	0292	
	0275				Sencora	0037			

Sentra	0063	0246	0037	SuperTech	0037	0244	0065	0584
Shancha	0292	0440			0246			
Shanghai	0037	0236	0254	0292	Supra	0206	0402	0037
	0440				Supreme	0028		
Shaofeng	0173	0255		Susumu	0246	0363	0315	
Sharp	0121	0037	1221	0185	Sutron	0037		
	0064	0284	0681	0678	SVA	0615		
	0214	0544		Sydney	0244	0245		
Shen Ying	0037	0207		Sylvania	0214			
Shencai	0037	0173	0292	0440	Synco	0028	0064	0088
Sheng Chai	0037	0207				0206		
Sheng Chia	0037	0121	0207		Sysline	0065	0584	
Shenyang	0037	0292	0724	0781	Sytong	0244		
Sherwood	0037				Tacico	0206	0207	0037
Shintoshi	0065	0584			Tactus	0300		
Shivaki	0065	0584	0471	0402	Tai Yi	0037		
	0206				Taishan	0037	0402	
Show	0446	0037	0100		Tandberg	0439	0137	0365
Siarem	0130	0544	0191			0389	0191	
Siemens	0065	0185	0223	0584	Tandy	0246	0100	0121
	0389					0191	0275	0245
Siera	0065	0584	0615		Tashiko	0064	0749	0071
Siesta	0398					0678	0198	0244
Silva	0065	0584	0244	0389		0191		
Silver	0064	0065	0483	0389	Tatung	0037	0064	0065
	0584	0207	0743	0191		0100	0544	0088
SilverCrest	1065	0065	0584			0300	0657	0245
Simpson	0214				TCL	0854	0440	0726
Singer	0037	1565	0065	0584	TCM	0742		
	0130	0275	0363	0191	Teac	0037	0726	0065
Sinudyne	0130	0205	0263	0544		0292	0310	1465
	0572	0191	0389	1533		1065	0446	0584
	1038	0065	0584			0740	0572	0696
Skantic	0384					0245	0734	0749
Sky	0065	0310	0584			1937	0206	0198
Skysonic	0724	0781			TEC	0245	0275	0037
Skyworth	0065	0584	0037	0292		0363	0365	0287
	0724	0726	0781			0584	0389	0191
SLX	0696				Tech Line	0065	0584	0696
Smaragd	0515				Techica	0246		1465
Sogera	0348				Technema	0348		0440
Solavox	0191	0389	0100	0576	Technics	0678		
	0065	0584			TechniSat	0683	0065	0584
Sonawa	0246				Technol Ace	0207	0191	
Songba	0037				Technosonic	0065	0584	
Soniko	0065	0584			Teco	0037	0064	0121
Sonitron	0236	0398	0367	0245		0246	0292	0681
Sonoko	0037	0065	0584	0292		0245	0446	0634
	0310	0245			Tedex	0037	0734	0236
Sonolor	0191	0236				0615	0065	0312
Sontec	0065	0584	0398	0037		0823		0584
Sony	0028	1533	1679	1038	Tek	0823		
	0064	0678	0130	0065	Teknika	0088	0207	0214
	0584	0185			Teleavia	0371		
Sound & Vision	0130	0246	0402	0065	Telefunken	0653	0588	0730
	0584					0615	0363	0726
Soundesign	0206	0207	0214			0740	0499	0848
Soundwave	0065	0446	0584	0348		0065	0584	0742
	0743				Telefusion	0065	0584	
Sowa	0088	0254	0064	0206	Telegazi	0065	0191	0287
Spectra	0037					0292	0312	0584
Ssanyong	0037				Telemeister	0348	0065	0584
Staksonic	0037				Telesonic	0065	0584	
Standard	0037	0065	0245	0584	Telestar	0037	0065	0584
	0246	1065	0348	0402		0440	0607	
Starlite	0037	0191	0065	0584	Teletech	0037	0065	0584
	0292	0440				0275	0365	1065
Stenway	0310	0246			Teleton	0064	0245	0214
Stern	0191	0287	0292	0439		0287		0191
Strato	0065	0584	0292	0037	Televideon	0348	0191	0244
Stylandia	0245				Television	0065	0584	
Sunic Line	0065	0584			Telexa	0130		
Sunkai	0349	0383			Tempest	0037	0065	0584
Sunstar	0399	0065	0584	0037	Tensai	0132	0246	0348
	0607	0292				0584	0245	0037
Sunwood	0065	0584	0037			0399	0405	0275
Superla	0544	0244	0245			0191	0743	
Supersonic	0236	0584	0726	0292	Tenson	0348	0037	
					Tesla	0065		

Texet	0244	0245	0246	0402	0037	Warumaia	0402			
Thomson	0137	0653	0315	0588	0371	Watson	0065	0348	0584	0191
	0584	0499	0363	0065			0246	0607	0547	0037
Thorn	0063	0136	0065	0137			0696	1065	1465	
	0100	0253	0371	0132		Watt Radio	0130	0572	0191	0244
	0218	0389	1533	1038		Wega	0064	0065	0584	
	0527	0540	0584	0363		Wegavox	0037	0065	0584	
	0387	0064	0071	0300		Weipai	0037			
	0073	0402	0384			Welltech	0742			
Thorn-Ferguson	0132	0136	0371	0137		Weltblick	0065	0584	0348	0245
	0218	0389	0363	0527		Welttech	0312			
	0063					Weston	0065	0584		
Tiane	0121					Wharfedale	0065	0547	0584	
TMK	0205	0206				White				
Tobishi	0246					Westinghouse	0065	0348	0214	0244
Tobo	0037	0292	0440				0584	0365	1937	
Tokaido	1065					Windstar	0310	0365		
Tokyo	0244	0063	0476			Windy Sam	0584			
Tomashi	0310					Wintel	0742			
Tongguang	0292	0440				Worldview	0483			
Tongtel	0808	0615				Xenius	0662			
Toshiba	0063	0088	0037	0536		Xiahua	0037	0292	0440	0726
	0064	0121	0271	0173			0807			
	0130	0255	0245	0292		Xianghai	0037			
	0137	0440	0223	0646		Xiangyang	0292	0440		
	0672	0678	0849	0726		Xihu	0292	0440		
	0065					Xinaghai	0440			
Towada	0130	0245				Xingfu	0037			
Toyoda	0037	0399	0292			Xinghai	0292			
Trakton	0037	0292	0245			Xingyu	0037			
Trans Continen	0245	0065	0584			XLogic	0726			
Transonic	0065	0726	0584	0740		Xrypton	0065	0584		
	0483	0615	0540	0292		Yamaha	0678			
	0446	0037				Yingge	0037			
Triad	0065	0584	0246			Yokan	0065	0584		
Trical	0185					Yoko	0065	0245	0292	0584
Trident	0544	0245					0246	0037	0398	0367
Tristar	0292	0246					0244	0275		
Triumph	0205	0271	0544	0584		Yonggu	0037			
	0065					Yorx	0246			
Tuntex	0037					Yousida	0037			
TVTEXT 95	0584					Yuhang	0037			
Uher	0348	0065	0584	0402		Zanussi	0245			
	0446	0398	0287	0508		Zenith	0206	1937		
Ultravox	0130	0402	0275	0244		Zenor	0367			
	0191	0065	0584			Zhuhai	0037	0402		
Unic Line	0065	0584	0501	0483		Zonda	0726	0807		
United	0065	0584	0742	0743		ZX	0312			
Universum	0065	0132	0292	0398						
Univox	0065	0584	0365	0191						
Utax	0191									
Vestel	0065	0191	0245	0584						
	0696	1065								
Vexa	0037	0065	0584							
Vibrant	0300									
Victor	0681	0064	0678							
Videocon	0536									
Videologic	0246	0244								
Videosat	0275									
VideoSystem	0065	0584								
Videotechnic	0245									
Videoton	0384	0191								
Vidikron	0130									
Vidtech	0064	0206								
Viper	0365									
Visiola	0244									
Vision	0065	0348	0292	0584						
	0245									
Vistar	0389									
Vortec	0065	0584								
Voxson	0191	0206	0065	0584						
	0446									
Waltham	0245	0384	0446	0315						
	0065	0584	0696	0137						
	1065									
Wards	0207	0206								

Warranty

Universal Electronics B.V. warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period.

This warranty does not cover product parts that are subject to wear, that can be considered as consumable parts by their nature or that are made of glass. Further, this warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product.

To obtain warranty service during the warranty period, please contact our customer service. Please notice that we need your purchase receipt so that we may establish your eligibility for service.

703776

HdH 1150206