


SANYO

Steam & Dry Iron

Model no: A-100

Power supply: 220-240 V AC 50Hz

Power: 1850 watt

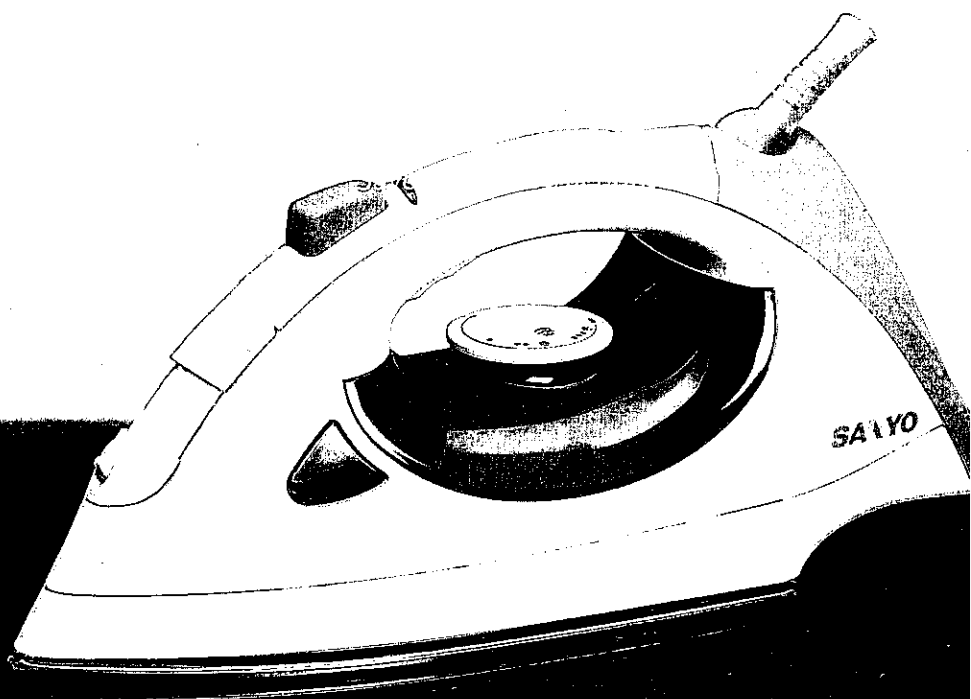

Instruction Manual Save these instructions



FOR YOUR SAFETY

- Carefully read these instructions before using your appliance for the first time.
- Do not immerse in water or other liquids. Ensure that the appliance does not get wet.
- Keep out of reach of children. This appliance is not intended for use by young children or infirm persons without supervision.
- Use this appliance only for its intended use. This appliance is intended for household use only and not for commercial or industrial use.
- The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
- Do not leave iron unattended while plugged in or on an ironing board.
- If appliance is to be used by a third party, please supply the instruction manual with it.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

ELECTRICAL SAFETY

- **This appliance must be earthed.**
- This appliance must be connected to a 220-240V AC 50Hz mains supply.
- An appliance dropped or damaged should not be used until examined by a service engineer.
- Do not permit the power cord to come in contact with hot objects.
- Please ask a service engineer to replace a worn or damaged power cord immediately with an approved lead of the same size and type.

- The iron should always be turned to the "Off" position before plugging in or unplugging from power outlet. Never pull cord to disconnect from outlet.
- Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.
- Unplug from mains outlet when appliance is not in use, in storage and before cleaning.

FEATURES:

- 1850 watt performance**
- Stainless steel sole plate**
- Trigger action shot of steam**
- Fine mist spray**
- Variable temperature control**

OPERATING INSTRUCTIONS

- After unpacking the iron, remove any stickers or protective foil from the sole plate and wipe with a damp cloth or towel and dry with a dry cloth or towel.
- Some parts of the iron have been slightly greased and as a result the iron may smoke slightly for a short time when switched on for the first time.
- Before using for the first time, it is important to clean the inside of the iron by allowing it to steam freely for a minute. This allows removal of any impurities left by the manufacturing process.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down - there may be hot water in the reservoir.
- Always ensure that the iron has completely cooled down before storing. Loop cord loosely around iron when storing.





Temperature control

Turn your temperature control dial to the position you desire according to the following fabric indications:

- Synthetics
- Silk / wool
- Linen / cotton

Dry iron

- This appliance can be used as a dry iron, even if there is water in the reservoir. **DO NOT** leave water in the reservoir for long periods of time.
- Unwrap the cord.
- Stand the iron on heel rest, then plug in the iron.
- Adjust the dial to the required setting to suit fabric.
- The indicator lamp will go out when the iron has reached the required temperature.
- The iron heats up more quickly than it cools. Allow time for the iron to heat up when changing from a low temperature to a high temperature. Conversely, wait for a while when changing to a cooler setting.
- Never leave the iron face down on its sole plate when it is on or hot as this can result in a fire.

Steam iron

- Unwrap the cord. Check that the iron is unplugged from power outlet before filling with water.
- Hold the iron in one hand at about a 45-degree angle. Pour water into water inlet periodically stopping to check the level of water in the water tank. The iron will have to be stood back onto its heel rest to read the water level. Be careful never to overfill past the "MAX" line on the water tank. Close the water inlet cover after filling.

- Plug in the iron.
- Set the dial to the steam setting and the indicator lamp will illuminate on and off regularly during ironing indicating constant temperature control.
- For steam function slowly squeeze the steam trigger, steaming will commence.
- Steaming will stop when the iron is placed on heel rest and trigger deactivated.

Spray feature

- Press the spray button to release a fine spray onto the clothing article.

CARING FOR YOUR IRON

- Avoid ironing over zippers, rivets, buttons etc. as they will scratch the sole plate.
- Water and its mineral content vary widely by geographic location. If you live in a hard water area, to ensure optimum performance of your iron, we strongly recommend the use of distilled water.
- To clean the outer surface of the iron, use a soft damp cloth and dry it afterwards with a dry towel. Clean only after unplugging from the mains supply and allowing the iron to cool down sufficiently.
- Scales and other residue can be wiped off the sole plate with a damp cloth and a non-abrasive cream cleaner.
- Do not put vinegar or other de-scaling agents into the water reservoir.



STORAGE OF YOUR IRON

- After use and before cleaning, remove plug from mains supply.
- Always remove all water from iron after each use.
- Turn iron upside down to empty. Pour out any remaining water by shaking the iron taking care to avoid any splashing as the water may still be hot.
- To evaporate the remaining moisture, plug in the cord and heat iron for a few moments. Activate steam trigger switch to remove any remaining water in tank.
- Always ensure that the iron has completely cooled down before storing. Loop cord loosely around iron when storing.

