 


# SANYO

## Corded Steam & Dry Iron

<b>Model no.:</b>	<b>A101</b>
<b>Power supply:</b>	<b>AC 230-240V ~ 50Hz</b>
<b>Power:</b>	<b>1800 watt</b>

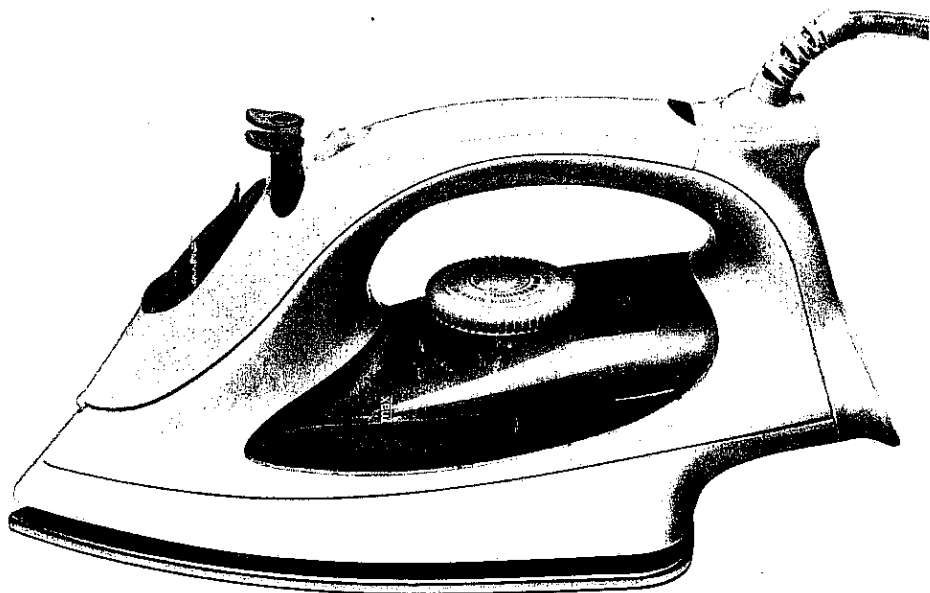

**Instruction Manual** *Save these instructions*





## **FOR YOUR SAFETY**

- Carefully read these instructions before using your appliance for the first time.
- Do not immerse in water or other liquids. Ensure that the appliance does not get wet.
- Keep out of reach of children. This appliance is not intended for use by young children or infirm persons without supervision. Young children must be watched to ensure that they do not play with the appliance.
- Only use this appliance for its intended use. This appliance is intended for household use only and not for commercial or industrial use.
- This appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
- Do not leave the iron unattended while plugged in or on the ironing board.
- If the appliance is to be used by a third party, please supply the instructions with it.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use.

## **ELECTRICAL SAFETY**

- This appliance must be earthed.
- This appliance must be connected to a 230-240 V ~ 50Hz mains supply.
- An appliance dropped or damaged should not be used until examined by a service engineer.
- Do not permit the power cord to come in contact with hot objects.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

**Instruction Manual - save these instructions**

- The iron should always be turned to the "Off" position before plugging in or unplugging from the power outlet, or when filling the water tank. Never pull cord to disconnect from outlet.
- Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.
- Unplug from the mains outlet when not in use, in storage and before cleaning.

## **FEATURES.**

**3 metre cord length**

**Vertical steam**

**Powerful burst of steam**


**Adjustable temperature and steam**

**Push button for fine mist spray**

**Stainless steel soleplate**

## **OPERATING INSTRUCTIONS**

- After unpacking the iron, remove any stickers or protective foil from the sole plate and wipe the exterior of the iron with a soft damp cloth or towel and dry with a dry towel. Do not immerse the iron in any liquid.
- Some parts of the iron have been slightly greased and as a result may smoke slightly for a short time when switched on for the first time.
- Before using the iron for the first time it is important to clean the iron by allowing it to steam freely for a minute. Refer to steam iron use. This allows removal of any impurities left by the manufacturing process.
- Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down - there may be hot water in the reservoir.
- Always ensure that the iron has completely cooled down before storing. Loop cord loosely around iron when storing.

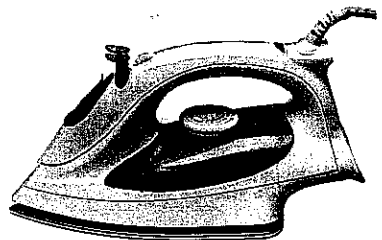



### Temperature Control.

- Always set temperature control to Off position before plugging in to mains supply. Turn your temperature control to the position you desire according to the following fabric indicators.

OFF •SYNTHETICS/NYLON/RAYON •• SILK/WOOL •••MAX LINEN/COTTON

### Dry Iron

- This iron can be used as a dry iron, even if there is water in the reservoir. DO NOT leave water in the reservoir for long periods of time.
- Unwrap the cord.
- Stand the iron on heel rest, and then plug in.
- Adjust the temperature controller dial to the desired fabric setting.
- The indicator light will light to indicate heating. When the iron has reached the required temperature the light will go out. The iron is ready for use.
- The iron heats up more quickly than it cools down. Allow time for the iron to heat up when changing from a low temperature to a high temperature. Conversely wait for a while when changing to a cooler setting.
- Never leave the iron face down on its soleplate when it is on as this may result in a fire.

### Steam Iron

- Unwrap the cord. Check that the iron is unplugged from the power outlet and steam switch is at Off position before filling with water.
- Hold the iron in one hand at about a 45 degree angle. Open water tank cover and pour water into the water inlet, periodically stopping to check the water level in the water tank. The iron will have to be stood back on its heel rest to

**Instruction Manual - save these instructions**

read the water level. Be careful never to overfill past the "MAX" line on the water tank. Close the water inlet cover after filling.


- Plug in the iron.
  - Set the dial to the steam setting. Indicator will illuminate on and off regularly during ironing indicating constant temperature control.
  - When the iron has reached steam temperature, adjust the steam switch to desired steam setting, steaming action will commence. Steaming will stop when the iron is placed on its heel or when the steam switch is turned to the non-steam position. Set steam level to the following settings
- Off    • Low steam    • Medium steam    • Full steam
- For burst of steam function, press the burst of steam button.

### **Spray feature**

- Press the spray button to release a fine spray onto the clothing article.

### **CARING FOR YOUR IRON**

- Avoid ironing over zippers, rivets, buttons etc, as they will scratch the sole plate.
- Water and its mineral content vary widely by geographic location. If you live in a hard water area, to ensure optimum performance of your iron, we strongly recommend the use of distilled water.
- To clean the outer surface of the iron, use a soft damp cloth and dry it afterwards with a dry towel. Clean only after unplugging from the mains supply and allowing the iron to cool down sufficiently.
- Scales and other residue can be wiped off the sole plate with a damp cloth and a nonabrasive cream cleaner.
- Do not put vinegar or other descaling agents into the water reservoir.

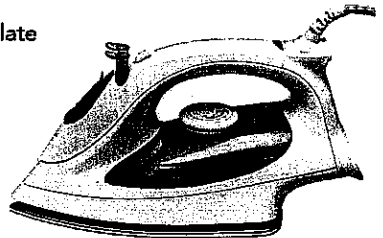

## **STORAGE OF YOUR IRON**

- After use and before cleaning, remove the plug from the mains supply.
- Always remove all water from the iron after each use.
- Turn the iron upside down to empty. Pour any remaining water by shaking the iron, taking care to avoid any splashing as the water may still be hot.
- To evaporate the remaining moisture, plug the iron in again and heat for a short period. Select the full steam position on steam switch to remove any remaining water from the tank.
- Always ensure that the iron has completely cooled down before storage. Loosely loop the cord around the iron when storing.

