 




SANYO

ASW 501P

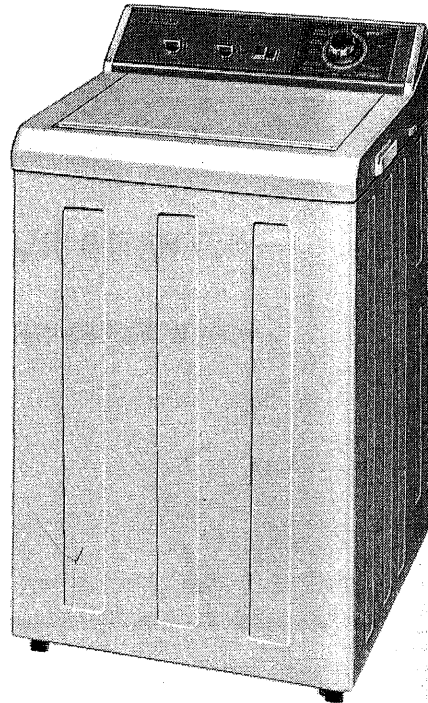


SANYO AUTOMATIC WASHER OPERATING INSTRUCTIONS

Thank you for purchasing the SANYO AUTOMATIC WASHER. Please read these instructions carefully before using.

NAMES OF PARTS

WATER LEVEL SELECTOR

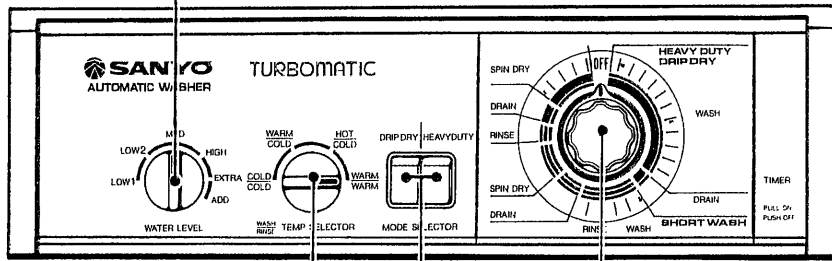

WATER TEMPERATURE SELECTOR

CONTROL KNOB

MODE SELECTOR

DRAIN OUTLET
(Rear of washer)

HOT WATER INLET

LID

COLD WATER INLET

BLEACH INLET

DRAIN
OUTLET

TUB

LINT FILTER

PULSATOR


WASH BOARD

POWER CORD

WATER
SUPPLY
HOSES

REAR
COVER

HOSE
BAND

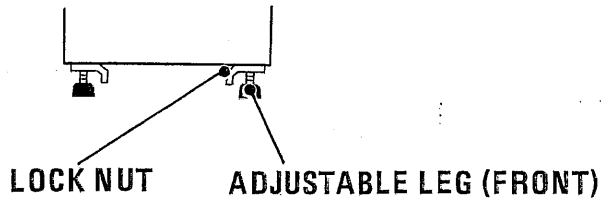


ACCESSORIES

Drain hose

Water supply hose (2-each)



Goose neck

Hose band (2-each)

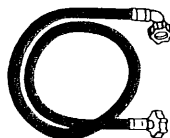

BEFORE WASHING

- (1) Remove packing from inside the washer.
- (2) Adjust height of front leg until desired level is obtained, and run Lock nut up to the base of machine to tighten and lock front leg.
- (3) Attach elbow end of the supply hoses to the machine and to the hot and cold water taps.
- (4) Fit the Drain Hose by slipping the hose bands onto both ends, and attach one end to the Drain Outlet of machine. If the Goose Neck will fit your laundry drain facilities, attach the Goose Neck to the free end of the Drain Hose.

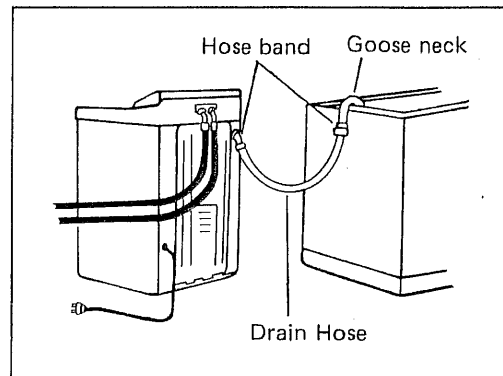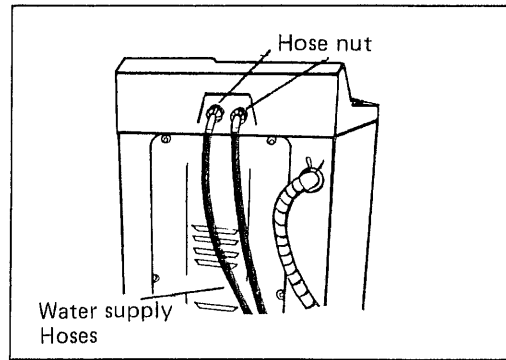

WASHING

(1) To start the washer

1. Push control knob to ensure the washer is off.
2. Plug in power cord.
3. Turn taps ON.
4. Add the proper amount of detergent.
5. Put the clothes in one article at a time.
6. Close lid.
7. Set the correct water level.
8. Select the water temperature.
9. Select the wash cycle mode.
10. Turn control knob to desired wash time.
11. Pull control knob to start washer.

NOTE: The washer will not spin with the lid open. Turn knob in a clockwise (to the right) direction. — never counter clockwise.

(2) To stop the washer

- Push the control knob and the washer will stop.
- Open the lid when it is operating spin cycle and the washer will stop.

(3) To finish the washer

1. Push control knob.
 2. Turn taps off.
 3. Turn control knob clockwise to wash cycle.
 4. Pull control knob for a few seconds.
 5. Push control knob.
 6. Unplug power cord.
- When used DRIP DRY cycle.
 1. Change the mode selector from DRIP DRY to HEAVY DUTY. The washer will operate drain and spin cycle.
 2. Push control knob, and then follow washing instructions (3) 2 ~ 6.

WASHING HINTS

(1) WASHING PROGRAMME

| | WASH | DRAIN | RINSE | DRAIN | SPIN | RINSE | DRAIN | SPIN |
|--------------|-------------|--------|--------|--------|--------|--------|--------|--------|
| HEAVY DUTY | 0 - 10 min. | 2 min. | 5 min. | 2 min. | 3 min. | 2 min. | 2 min. | 5 min. |
| DRIP DRY | 0 - 10 min. | 2 min. | 5 min. | 2 min. | 3 min. | 2 min. | | |
| SHORT WASH | | | 5 min. | 2 min. | 3 min. | 2 min. | 2 min. | 5 min. |
| Drain - Spin | | | | | | | 2 min. | 5 min. |

- Washing cycles are selected with the MODE SELECTOR.
- Drip dry cycle is selected with the MODE SELECTOR.
- WASH of SHORT WASH should be operated from first RINSE of HEAVY DUTY cycle.

(2) TEMPERATURE SELECTOR


The Temperature Selector has four positions.

COLD/COLD – Washer will take in only cold water for both washing and rinsing.

WARM/COLD – Washer will take in warm water for washing and cold for rinsing.

HOT/COLD – Washer will take in hot water for washing and cold for rinsing.

WARM/WARM – Washer will take in warm water for washing and warm for rinsing.

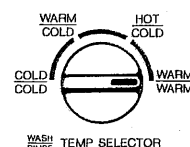

NOTE: The warm water filling temperature should be determined by placing the hand under the spray nozzle, whilst filling. If the water is too hot, close off the hot water tap slightly until temperature is acceptable. If, on the other hand, the temperature of the water is considered to be too cold, then ensure that the hot water tap is turned on fully and slightly close off the cold water tap until the desired temperature is reached.

| CLOTHES | CYCLE MODE | | WATER TEMPERATURES | |
|---------------------------------|------------|-------------|--------------------|-------|
| | CYCLE | WASH TIME | WASH | RINSE |
| Work clothes, Nappies | HEAVY DUTY | 10 min. | HOT | COLD |
| Shirts (cotton), Heavily soiled | HEAVY DUTY | 8 - 10 min. | HOT | COLD |
| Shirts (cotton), Medium soiled | HEAVY DUTY | 6 - 8 min. | HOT | COLD |
| Shirts (synthetic) | HEAVY DUTY | 4 - 8 min. | WARM | COLD |
| Lightly soiled clothes | SHORT WASH | 4 - 5 min. | COLD | COLD |
| Permanent press | DRIP DRY | 4 - 6 min. | WARM | WARM |
| Delicate | SHORT WASH | 2 - 4 min. | WARM | COLD |
| Synthetic knitted | HEAVY DUTY | 2 - 6 min. | WARM | COLD |

(3) WATER LEVEL SELECTOR

Choose the water level in accordance with the type of laundry and the amount.


LOW 1 is for a load capacity of up to 1.5 kg.

LOW 2 is for loads from 1.5 kg to 2.5 kg.

MEDIUM is for loads from 2.5 kg to 3.0 kg.

HIGH is for loads from 3.0 kg to 3.6 kg.

EXTRA is for loads over 3.6 kg.

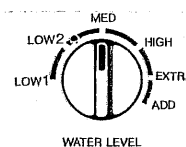

WASHING HINTS

The water level selector is designed with a "ADD" position to enable you, should you desire, to increase the level of water in the wash and spin tub to a new higher setting once the washer has completed filling. To reset turn the water level selector knob fully clockwise past the EXTRA setting and return to the new required level.

The washer will now fill to the selected level.

| WATER LEVEL | | LOW 1 | LOW 2 | MEDIUM | HIGH | EXTRA |
|-----------------------|--------------------|----------|-----------|-----------|-----------|-----------|
| WATER VOLUME | | 38 ℓ | 44 ℓ | 49 ℓ | 54 ℓ | 57 ℓ |
| DETERGENT (Synthetic) | | 50 g | 60 g | 70 g | 75 g | 80 g |
| SOFTENER | | 25 mℓ | 28 mℓ | 32 mℓ | 35 mℓ | 37 mℓ |
| BLEACH | | 85 mℓ | 100 mℓ | 110 mℓ | 120 mℓ | 130 mℓ |
| CLOTHES | Work clothes | 2 pieces | 3 pieces | 4 pieces | 5 pieces | 6 pieces |
| | Shirts (cotton) | 7 pieces | 12 pieces | 15 pieces | 18 pieces | 21 pieces |
| | Shirts (synthetic) | 8 pieces | 13 pieces | 16 pieces | 19 pieces | 22 pieces |

- This chart may be used as a guide for washing.
- When use the SHORT WASH cycle, sprinkle the half quantity of the above detergent around the inside of the wash and spin tub.

(4) MODE SELECTOR

Ensure "HEAVY DUTY" push button is depressed unless DRIP DRY is required.

To Drip-Dry, depress the DRIP DRY button immediately prior to wash.


The washer will wash as normal but will come to rest before final DRAIN segment with the wash and spin tub full of water.

Remove the dripping wet articles, and depress "HEAVY DUTY" button to complete cycle.

SOME USEFUL INFORMATION

(1) Using a bleach

Pour bleach in the bleach inlet at the WASH cycle.

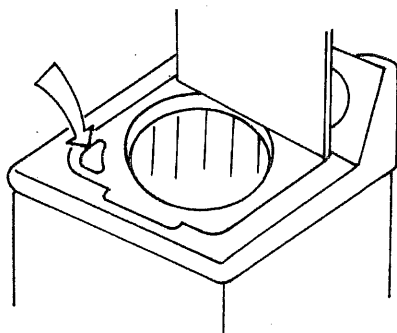


- NOTE:
- Clean the bleach inlet with water after pouring bleach in.
 - Do not leave water with bleach in the tub for long periods.

(2) Lint filter

Clean the lint filter after every washing.

Remove the lint filter from the wash and spin tub and turn filter bag inside out.


Clean under a running tap, ensuring all loose lint and cottons are removed.

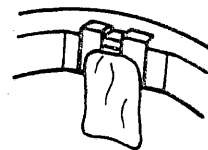

(3) Drain hose



The built-in pump is capable of discharging water to a maximum height of 1.2 meters and minimum height of 0.7 meters.

This must be within 1.5 meters of either side of the location of the washer.

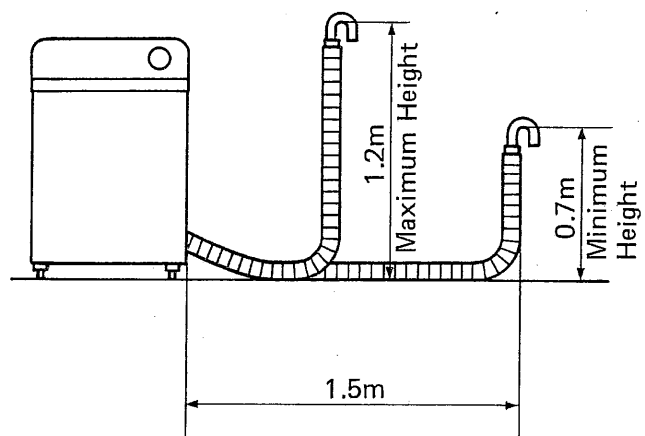

CARE AND MAINTENANCE

1. Never put your hand into the washer while it is still operating.
2. Do not splash water on the control panel.
3. Be sure to turn off the taps after every washing.
4. Keep the washer out of sunlight, rain and moisture.
5. Do not use brushes, polishing powder, benzine and other volatiles to clean the washer.
6. Wipe the washer clean and dry with a soft cloth.

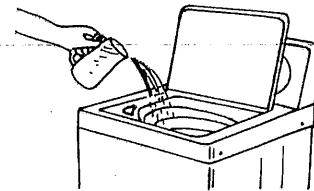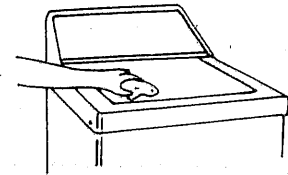


SERVICE

If the washer fails to operate properly, check the following matters before you call your dealer.

1. When the motor does not start.
 - Is there a proper supply of power?
 - Is control knob pushed on?
 - If the washer stopped during spin cycle, refer to 4.
2. When operation is excessively noisy.
 - Are clothes collected on one side of the tub?
 - Is the washer installed on firm, level area?
3. When the drain pump does not drain out.
 - Check the drain hose for kinks.

4. When the washer stops during operation.
If the washer stops in the spin cycle.

- Open the lid and re-arrange the clothes evenly around the tub.

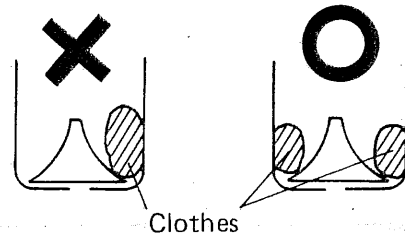

SPECIFICATIONS

| | |
|------------------------|---|
| Overall dimensions | 610(W) x 645(D) x 976(H) mm |
| Weight | 35 kg |
| Power source | 50 Hz, 240V |
| Power consumption | WASH/SPIN MOTOR 360 W PUMP MOTOR 115 W |
| Water levels | LOW 1 : 38 litres LOW 2 : 44 litres MEDIUM : 49 litres HIGH : 54 litres EXTRA : 57 litres |
| Pulsator | 160 rpm |
| Spin dryer | 800 rpm |
| Spin drying method | Centrifugal spin drying |
| Service water pressure | Below 550 kPa (80 p.s.i) |

 **SANYO**
SANYO ELECTRIC CO., LTD.
OSAKA JAPAN

301-6-411S-88400
Printed in Japan