

INSTRUCTION MANUAL  
使用说明书


**SANYO** 三洋

SC-78A

---

**VACUUM CLEANER**

吸尘器

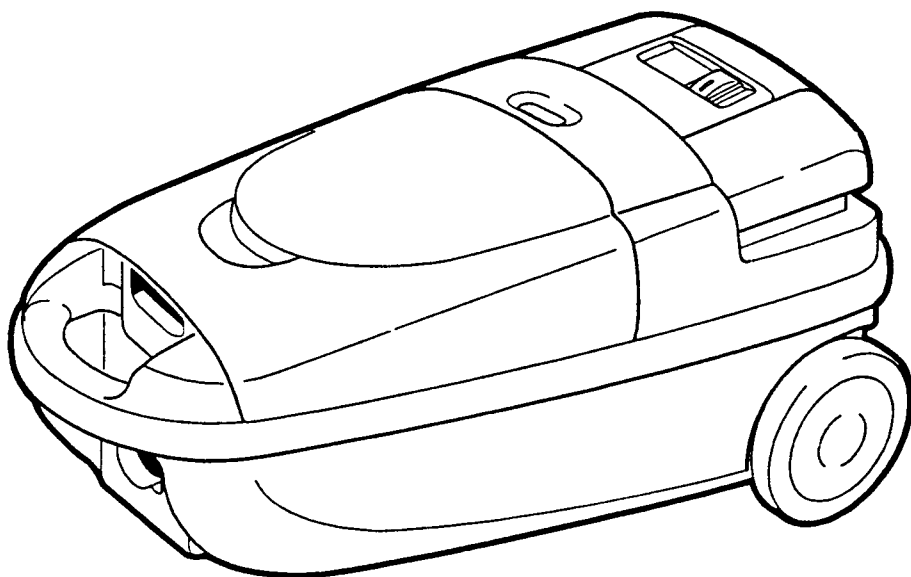

- Expansion Pipe / 伸缩管
- Floor Nozzle / T型吸尘头

Thank you for your purchase of the Sanyo Vacuum Cleaner.  
Please read these instructions carefully before using.

## A FEW PRECAUTIONS

---

1. Operating without the filter in place will allow dust to enter the motor and could damage the vacuum cleaner.
2. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolor the plastic parts of the unit.
3. Keep the vacuum cleaner free of insecticides. Do not wipe with benzine, thinner, petrol or other oils which might cause discoloration or cracking. To clean the body and hose, dampen a cloth with a mild detergent and wipe clean.
4. Blocking the suction inlet or allowing the dust to clog the hose will decrease the efficiency of the motor.
5. Never try to vacuum the following objects. They may damage the unit or cause a fire.
  - \* Wet things, mud, soil, and fluids
  - \* Burning cigarettes
  - \* Needles and razor blades
  - \* Inflammable materials such as gasoline and thinner
6. The following kinds of treatment shorten hose life:
  - \* Bending hose at an acute angle when storing
  - \* Pulling the hose with excessive force
  - \* Placing heavy objects on, or stepping on the hose
7. Pull out the plug from the power source after use. Grasp the plug – not the cord – when pulling out the plug. Pulling on the cord may lead to shortcircuiting.
8. Long and continuous use causes the exhaust air and the body of the vacuum cleaner to become warm. This, however, does not denote malfunction.
9. When vacuuming places that are very dusty, and also when vacuuming regularly, empty the dust compartment before it becomes completely filled. Frequent emptying lengthens the life of the motor and maintains strong suction power.
10. (For Special area only, Australia, New Zealand and Singapore)  
If the supply cord of this appliance is damaged, it must only be replaced by a repair shop appointed by the manufacturer, because special purpose tool are required.

# NAME AND FUNCTION OF PARTS

## Expansion Pipe / 伸缩管


- The pipe is adjustable according to the height of the user.
- 可根据使用人的身高来调节伸缩管长度。

(How to expand/contract the pipe)

- Adjust the length of the pipe while pushing the button in.
- \* Make sure that you hear a "clicking" sound.


< 伸缩方法 >

- 在按着按钮的同时,可调节到便于使用的长度。
- \* 请确认是否听到"卡嗒"一声。

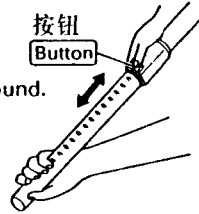

(When the pipe wouldn't expand/contract)

- Pull the pipe up hard.
- < 当不能伸缩时 >
- 请用力朝上拉管子。

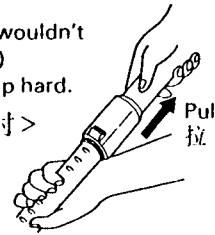

Caution


- \* Please do not place your hand on the expansion pipe buttons during operation.
- \* Please do not push the button in when adjusting the length.

注意

- 请勿按着伸缩管的按钮进行吸尘操作。
- 在调节长度时,务必一边按着按钮一边进行调节。

## Attachments / 附件

 Crevice tool / 尖嘴头



- For vacuuming edges and gaps.
- 适于角落和缝隙的吸尘。

Round brush / 圆头刷



- The head of the brush can rotate.
- For vacuuming fragile or easily scratched items.
- 刷子头部可以旋转。
- 用于脆弱或易破损之物的吸尘。

Paper Bag Type

- One paper bag setted in the vacuum cleaner and two extra paper bags provided.

纸袋式

- 吸尘器内装有一只纸袋, 此外还提供两只备用纸袋。

Cloth Bag Type

- One cloth bag setted in the vacuum cleaner.

布袋式

- 吸尘器内装有一只布袋。

## Floor Nozzle / T型吸尘头

- The two-way floor nozzle has lever with two positions.
- 两用T型吸尘头具有双位控制杆。



FLOOR:

For vacuuming wooden floors, linoleum or plastic covered floors.


FLOOR: 用于木质地板、亚麻油毡或塑料铺面地板的吸尘。



RUG:

For vacuuming rugs and carpets.


RUG: 用于厚毛毯和地毯的吸尘。

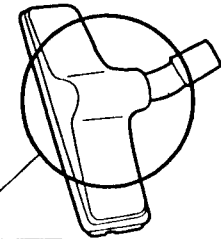

### Vacuum Power Adjustment Ring / 吸尘功率调节环

- The full vacuum power of the cleaner may be too strong in certain cases, for instance when vacuuming curtains and draperies. In these cases, turn the vacuum power adjustment ring (on the hose) to control the vacuum power. Match the hole in the ring with the hose hole to reduce the power.

- 对于某些材料，如窗帘和绸缎呢绒等来说，全吸尘功率可能会太强，在这种情况下，转动吸尘功率调节环（在软管上）以调节吸尘功率。当调节环上的小孔与软管上的小孔对准时，吸尘功率就会变小。

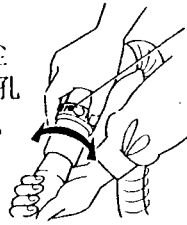

Vacuum power adjustment ring  
吸尘功率调节环

### Dust Indicator / 灰尘指示灯

- The dust indicator shows the amount of dust that has collected in the dust compartment. Hold the floor nozzle away from the floor, while operating to check.
- 灰尘指示器指示集尘室内收集的灰尘数量。在进行检查时，请将吸尘头提起使其离开地板。

DUST INDICATOR  
灰尘指示灯



- Vacuuming can continue.
- 表示能继续进行吸尘。


DUST INDICATOR  
灰尘指示灯



- Suction power decreases. The cloth bag or paper bag should be emptied.
- 吸尘功率下降，应清空布袋或纸袋。

### Foot Switch / 脚踏开关

- To start the vacuum cleaner, press the foot switch and then press the POWER CONTROL switch. To stop the cleaner momentarily, turn off the POWER CONTROL. When vacuuming is completed, turn off the POWER CONTROL and the foot switch.
- 要启动吸尘器时，先用脚踩下脚踏开关，然后踩下POWER CONTROL开关。要使吸尘器暂停时，请关断POWER CONTROL开关。清扫好后，请关断POWER CONTROL开关和脚踏开关。

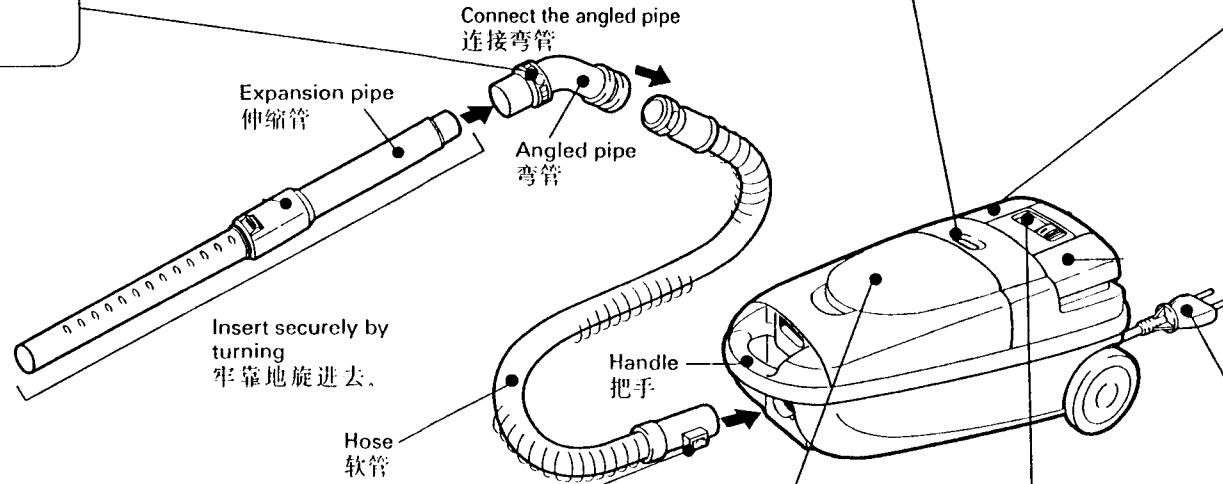

Connect the angled pipe  
连接弯管

Expansion pipe  
伸缩管

Angled pipe  
弯管

Insert securely by turning  
牢靠地旋进去。

Hose  
软管


Handle  
把手

### Hose Stopper / 软管上推器

- Insert the hose all the way up to the hose stopper. To detach it, press the hose stopper and pull the hose toward you.
- 请将软管尽力插到软管上推器。取下上推器时，请按上推器，并朝外拔出软管。

### Handy Attachment Compartment / 附件存仓

- The compartment stores a crevice tool and round brush.
- 仓内存放有维修工具和圆刷。

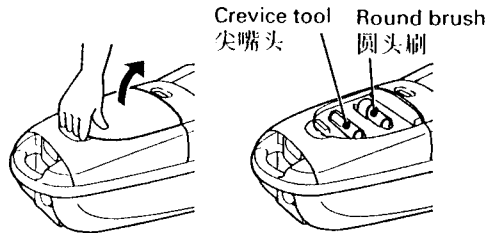


Crevice tool  
尖嘴头

Round brush  
圆头刷

### Power Control / 功率控制


 
- Set the POWER CONTROL to MAX for maximum suction.
- 把POWER CONTROL置于MAX位置可得到最大的吸尘功率。



### Cord and Plug / 电源线和插头

- Pull out the cord and connect the plug. Do not extend the cord from the unit beyond the red marker line.
- 拉出电源线，然后连接插头。从本机中拉出电源线时，勿使其超过红色标线。

## Blower (Exhaust outlet) / 鼓风机(排气口)

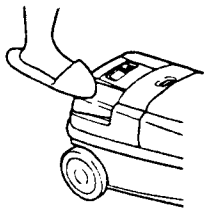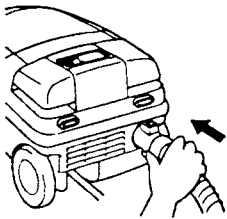

- Use blower to blow dust behind furniture, etc.
  1. Insert the hose into the exhaust outlet.
  2. Start the vacuum cleaner by pushing on the foot switch.\* The crevice attachment can be used to blow dust.
- 使用鼓风机以吹出家俱等背面的灰尘。
  1. 将软管插入排气口。
  2. 踩下脚踏开关来起动吸尘器。\* 维修附件能用于吹出灰尘。

## Cord Rewind Button / 电源线卷回钮

- To pull the cord back into the unit, press the cord rewind button.


Caution:

- \* Hold the plug when rewinding the cord so that the plug does not damage furniture, hands, the vacuum cleaner or the cord by hitting them. Holding the plug will make rewinding smoother.

- 要将电源线卷回到机内时，请按下电源线卷回钮。

注意：

- \* 在卷回电源线时应握住电源插头，以免插头撞击到家具、手、吸尘器或电源线而使它们受到损伤。握住插头能确保平稳地卷绕。

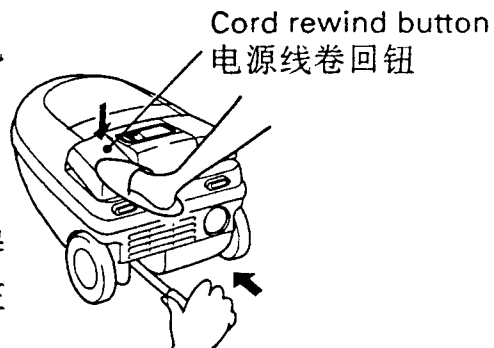


## Unclogging the Hose / 清理软管

- When the hose is clogged with dust, remove it in the following manner:
  - 1) Pull out the angled pipe by turning the removal ring in either direction.
  - 2) Use a vinyl garden hose to push out the dust clogging the hose.
  - 3) Insert the angled pipe in place and return the ring to its original position.
- Do not use the hose without the angled pipe in place. If the hose is used without the angled pipe, the hose will bend excessively, causing it to break.

- 当软管被灰尘堵塞时，请按下述方法来清除灰尘：

- 1) 朝任一方向转动拆卸环来拉出弯管。
- 2) 用乙烯软管推出堵在软管内的灰尘。
- 3) 将弯管插入到位，把环转回到原来位置。


- 请勿在没有装上弯管的情况下使用软管。如果没有弯管就使用软管，则软管可能会极度弯曲而引起破裂。

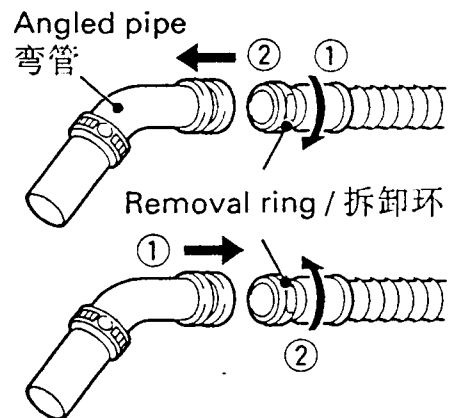

# DUST DISPOSAL / 灰尘倒出

Turn the motor off, pull the hose out of the unit and empty out the dirt as follows:


1. Open the dust compartment cover.

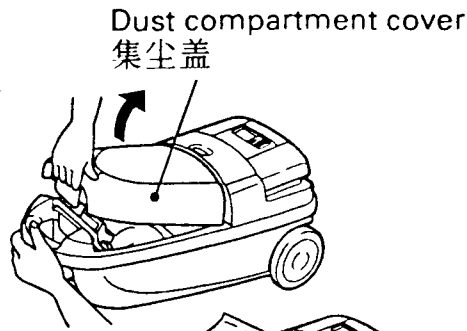

关掉马达，拉出软管，然后按下述将灰尘完全倒出。


1. 打开集尘盖

2. Release the hook and take out the cloth bag or paper bag.

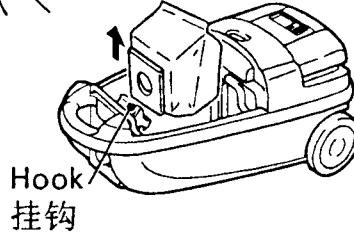

2. 松开挂钩，取出布袋或纸袋。

 3. (Cloth Bag Type)  
Remove the holder for the cloth bag and empty the contents of the bag. Reinstall the holder exactly as it was before.




Remove by pulling in the direction of the arrow.  
按箭头方向拉出。

3. (布袋型)  
取下布袋夹口，腾空其中。重新装上夹口。


(纸袋型)

除去用过的纸袋。

(Paper Bag Type)  
Dispose the used paper bag.

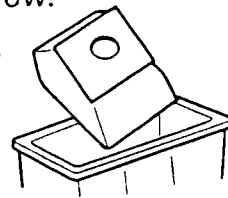


4. Put the top frame of the bag in the groove.

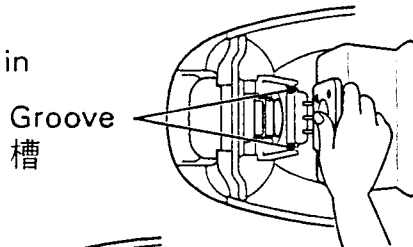


4. 将袋的上框放下槽中。

5. Pull the hook and hang the bag securely on the tab.

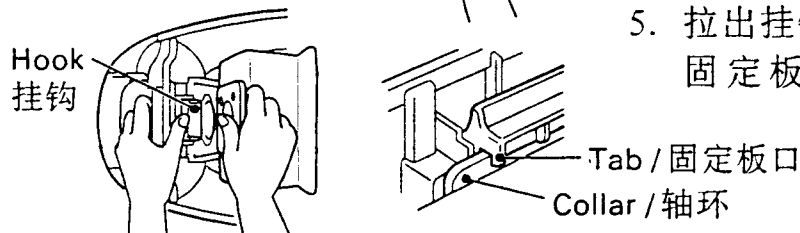

5. 拉出挂钩，将袋挂牢在固定板上。

6. Close the dust compartment cover.

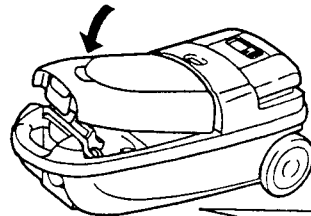

6. 关上集尘盖

- The bag has not been attached properly if the lid will not close.
- 若盖口合不上，则说明袋未装到位。

## IMPORTANT (Paper Bag Type only) / 重要事项 (仅纸袋型)

- Use only genuine Sanyo paper bags to assure best results.
- Genuine Sanyo paper bags are available through your dealer.  
(Be sure to state the type number SC-P8A.)

- 请使用正宗的三洋纸袋，以确保最好的效果。
- 正宗的三洋纸袋可在销售店购买到。(购买时请说明型号为 SC-P8A)

## CARE OF FILTER / 清洗过滤网

- A severely soiled or clogged filter should be thoroughly washed with fresh tepid water. A neutral detergent could be used if required.

1. Washing 2. Drying




- 过滤网很脏或堵塞时，应该用新鲜的温热水进行彻底清洗。如有必要，请使用中性清洁剂。

1. 洗涤 2. 干燥

Cloth bag (Cloth Bag Type only)

Filter

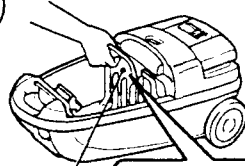

Filter  
过滤网

- Remove the filter and rinse it with water.  
(Caution)  
Never insert the cloth bag or filter into the vacuum cleaner unless it is completely dry.

Be sure the bag is facing the right direction.

↓ 务必使袋口朝正确的方向。

布袋（仅布袋型）

过滤网

- 取下过滤网，装水其中  
(注意)  
布袋或过滤网未干完之前，绝对不得插入吸尘器中。

## CARE AND MAINTENANCE

If you have a problem with your vacuum cleaner, consult the handy guide below. If the vacuum cleaner is malfunctioning, do not operate it. Contact your dealer or the nearest Sanyo Service Center.

| Problem  | Possible cause   | Possible solution  |
|--|--|--|
| (1) Cleaner won't run.                                     | 1. Not firmly plugged in.<br>2. No voltage in wall outlet. | 1. Plug unit in firmly.<br>2. Check fuse or breaker.           |
| (2) Suction does not increase after cleaning out the dirt. | 1. Filter dirty.<br>2. Clogged floor nozzle or hose.       | 1. Clean out the filter.<br>2. Clean out floor nozzle or hose. |
| (3) Cord doesn't fully rewind.                             | 1. Cord twisted or uneven.                                 | 1. Pull out cord and rewind.                                   |

## 维护保养

如果你的吸尘器有问题，请查阅下表。如果吸尘器功能不正常，请不要使用它。此时，可求教你的销售店或就近的三洋维修服务中心。

| 问 题               | 可能原因                           | 解决办法                           |
|-------------------|--------------------------------|--------------------------------|
| (1) 吸尘器不运转。       | 1. 电源插头未正确插好。<br>2. 墙上电源插座没有电。 | 1. 正确地插好电源插头。<br>2. 检查保险丝或断路器。 |
| (2) 在清除灰尘后，吸力不增加。 | 1. 过滤网脏。<br>2. T型吸尘头或软管堵塞。     | 1. 清理过滤网。<br>2. 清理T型吸尘头或软管。    |
| (3) 电源线不完全缩进。     | 1. 电源线扭曲或不直。                   | 1. 拉出电源线，重新卷绕。                 |

**SANYO** 三洋

SANYO Electric Co., Ltd.  
OSAKA, JAPAN