 


## CARE OF FILTER / 清洁过滤网

### Cloth bag (Cloth Bag Type only)

- A severely soiled or clogged filter should be thoroughly washed with fresh tepid water. A neutral detergent could be used if required.

1. Washing 2. Drying

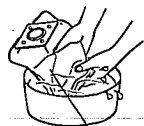

Cloth bag  
布袋

### 布袋 (仅布袋型)

- 过滤网很脏或堵塞时, 应该用新鲜的温热水进行彻底清洗。如有必要, 请使用中性清洁剂。

1. 洗涤 2. 干燥

 
### Filter

- Remove the filter and rinse it with water.

(Caution)

Never insert the cloth bag or filter into the vacuum cleaner unless it is completely dry.

Filter  
过滤网

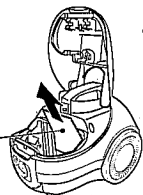

### 过滤网

- 取下过滤网, 装水其中 (注意)  
布袋或过滤网未干完之前, 绝对不得插入吸尘器中。



## CARE AND MAINTENANCE

If you have a problem with your vacuum cleaner, consult the handy guide below. If the vacuum cleaner is malfunctioning, do not operate it. Contact your dealer or the nearest Sanyo Service Center.

Problem	Possible cause	Possible solution
(1) Cleaner won't run.	1. Not firmly plugged in. 2. No voltage in wall outlet.	1. Plug unit in firmly. 2. Check fuse or breaker.
(2) Suction does not increase after cleaning out the dirt.	1. Filter dirty. 2. Clogged floor nozzle or hose.	1. Clean out the filter. 2. Clean out floor nozzle or hose.
(3) Cord doesn't fully rewind.	1. Cord twisted or uneven.	1. Pull out cord and rewind.

### 维护保养

如果你的吸尘器有问题, 请查阅下表。如果吸尘器功能不正常, 请不要使用它。此时, 可求教你的销售店或就近的三洋维修服务中心。

问题	可能原因	解决办法
(1) 吸尘器不运转。	1. 电源插头未正确插好。 2. 墙上电源插座没有电。	1. 正确地插好电源插头。 2. 检查保险丝或断路器。
(2) 在清除灰尘后, 吸力不增加。	1. 过滤网脏。 2. T型吸尘头或软管堵塞。	1. 清理过滤网。 2. 清理T型吸尘头或软管。
(3) 电源线不完全缩进。	1. 电源线扭曲或不直。	1. 拉出电源线, 重新卷绕。

 
## INSTRUCTION MANUAL 使用说明书

# SANYO 三洋

## SC-Y120/120D

## VACUUM CLEANER

### 吸尘器

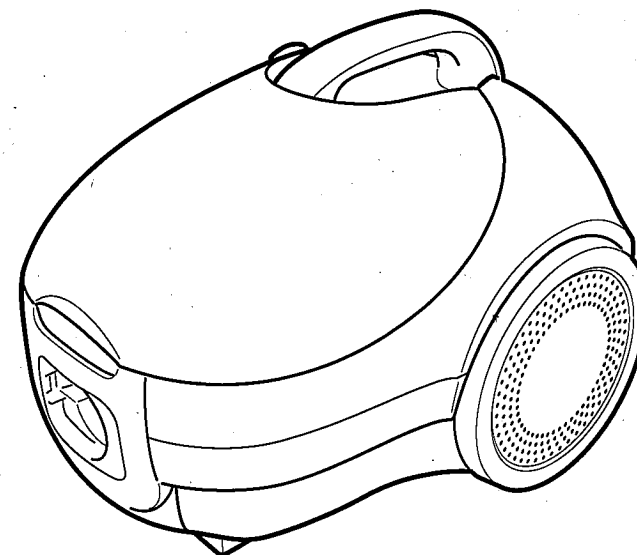

# SANYO 三洋

SANYO Electric Co., Ltd.  
OSAKA, JAPAN

 
HOUSEHOLD USE ONLY

仅供家庭使用

# NAME AND FUNCTION OF PARTS (Assemble as indicated in the center illustration.) / 部件名称和功能 (如中央图示进行组装)

## Power Control / 功率控制

- The handle slide switch allows you to change the vacuum suction.
- 手柄调速开关具有调节功率的功能。
- Set the power control to "Super High" for maximum suction.
- 将开关置于“超强”位置获取最强吸力。
- To start, slide switch toward "Super High". To stop, slide switch to "OFF".
- 朝“超强”方向推动调速开关启动吸尘器，将开关置于“关”位置停止吸尘。

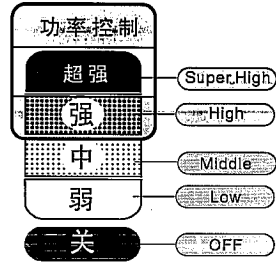

## Cord Rewind Button / 电源线卷回钮

- To pull the cord back into the unit, press the cord rewind button.

Caution:

 
- \* Hold the plug when rewinding the cord so that the plug does not damage furniture, hands, the vacuum cleaner or the cord by hitting them. Holding the plug will make rewinding smoother.

- 要将电源线拉回机内时，请按电源线卷回钮。

注意：


- \* 当卷回电源线时，请握住插头以免因插头撞击而损坏家具、您的手、吸尘器或电源线，握住插头能确保平稳地卷回。

Cord rewind button  
电源线卷回钮

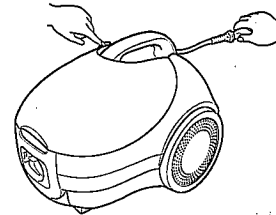


## Cord and Plug / 电源线和插头

 - Pull out the cord and connect the plug.
- Do not extend the cord from the unit beyond the red marker line.
- 拉出电源线，然后连接插头。
- 从本机中拉出电源线时，勿使其超过红色标线。

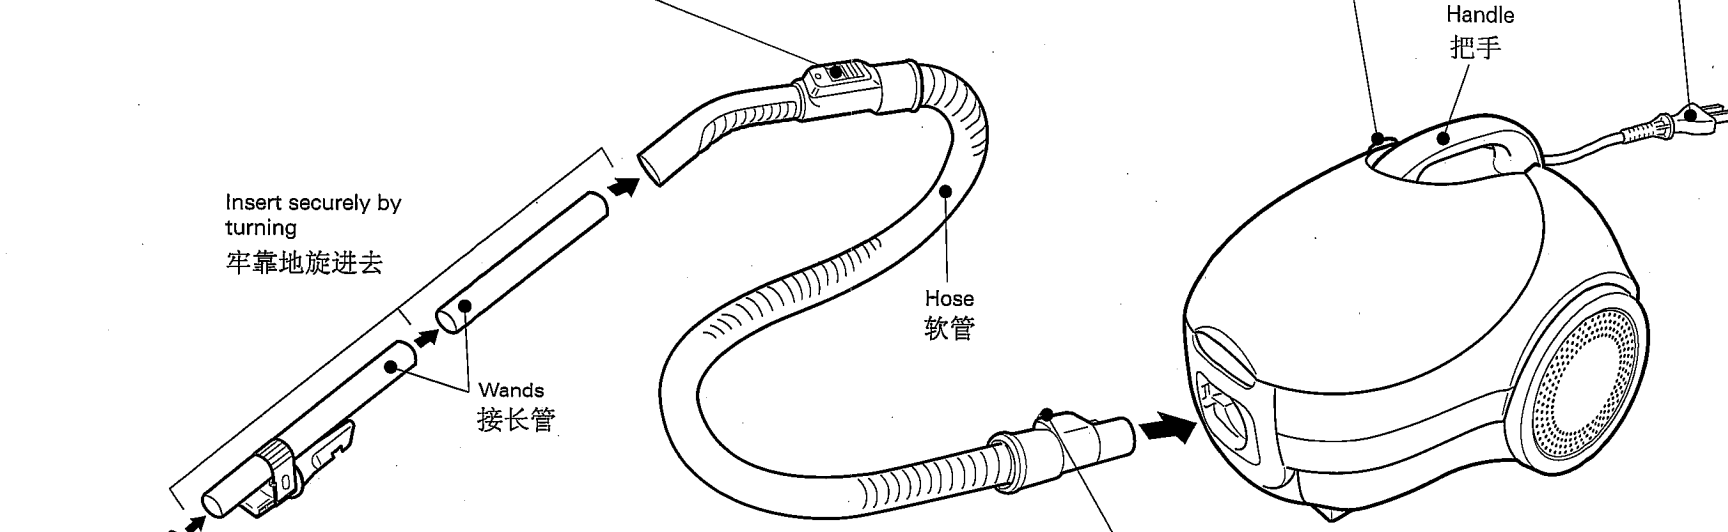

## Attachments / 附件
 
### Crevice tool / 尖嘴头



- For vacuuming edges and gaps.
- 适于角落和缝隙的吸尘。

### Round brush / 圆头刷



- The head of the brush can rotate.
- For vacuuming fragile or easily scratched items.
- 刷子头部可以旋转。
- 用于脆弱或易破损之物的吸尘。

### Paper Bag Type

- One paper bag set in the vacuum cleaner and two extra paper bags provided.

### 纸袋式

- 吸尘器内装有一只纸袋，此外还提供两只备用纸袋。

### Cloth Bag Type

- One Cloth bag set in the vacuum cleaner.

### 布袋式

 
- 吸尘器内装有一只布袋。

## Hose Stopper / 软管上推器

- Insert the hose all the way up to the hose stopper.
- To detach it, press the hose stopper and pull the hose toward you.

Hose stopper  
软管上推器

- 请将软管尽力插到软管上推器取下上推器时，请按上推器，并朝外拔出软管。

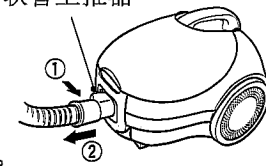

## HOW TO USE THE HOSE STAND / 软管架的使用方法

- The vacuum cleaner with the floor nozzle, wands and hose can be stored while still connected.

- 真空吸尘器可在与吸尘嘴、接杆和软管连接着的情况下存放。

① Stand the vacuum cleaner up and insert the pipe holder into the pipe-holder hole.

 
Hold here  
握住这里

Wind  
卷绕

① 把真空吸尘器向上竖起，将管子卡箍插入管子卡箍孔。

② Hold the hose and wind it around the expansion pipe.

② 握住软管将其卷绕在连接管上。

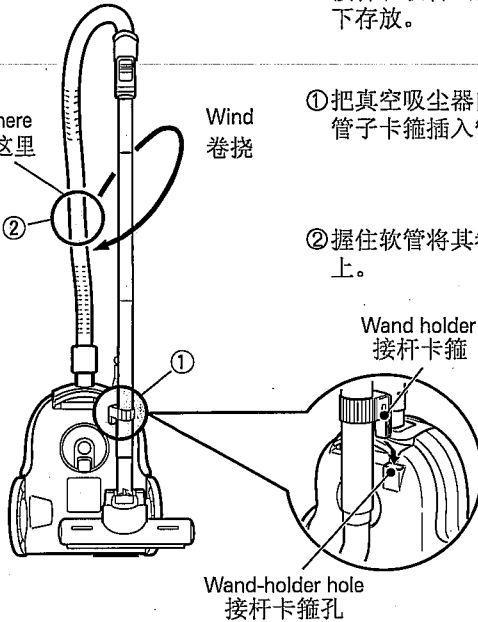


### Caution

Do not carry the vacuum cleaner while it is in the storage position. (Injury or damage may result if the hose or coupling pipe becomes unattached.)

### 注意：

 在真空吸尘器处于存放位置时不要搬动它。  
(如果软管或连接管脱开，则会导致意外事故或损坏。)

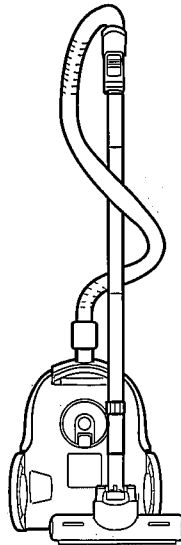

承蒙购买三洋吸尘器，深表感谢！  
使用前，请仔细阅读该说明书。

## 注意事项

---

1. 过滤器未安装到位，就操作本机时，将使灰尘进入马达，从而损坏吸尘器。
2. 使吸尘器避开炉子或其它热源。否则高温将使本机的塑料部件变形和变色。
3. 请勿让吸尘器接触杀虫剂。勿用苯、稀释剂、汽油或其它油类物质擦拭，否则可能会引起变形或破裂。清洗机体或软管时，请将软布浸上中性清洁剂来擦净。
4. 封闭吸尘入口或让灰尘堵塞软管时，将降低马达效率。
5. 绝对勿吸取下列物质。否则这些物质可能会损坏本机或引起火灾。
  - \* 湿的东西、泥土、粉尘或液体
  - \* 燃着的香烟
  - \* 针或刀片
  - \* 汽油和稀释剂之类的易燃物
6. 下列做法将会缩短软管的使用寿命：
  - \* 存放时，将软管弯曲成锐角
  - \* 拉动软管时用力过大
  - \* 在软管上压放重物或踩踏软管
7. 使用后，请从电源上拔出插头。拔出插头时应拿插头，而非电源线。拉电源线可能会导致短路。
8. 长时间和连续使用可能引起排除的空气和吸尘器本体发热。然而，这并非功能失常。
9. 当吸尘之处非常脏，以及定期吸尘时，要在其完全充满之前，将吸尘器腾空。频繁将吸尘器腾空时，会延长马达寿命，并保持强大的吸力。
10. 若本吸尘器的电源线损坏，因为维修时需要专用工具，务必请厂家指定维修处更换之。
11. 请勿将吸尘器作玩具使用，当附近有儿童或体弱者，请不要靠近使用。

Thank you for your purchase of the Sanyo Vacuum Cleaner.  
Please read these instructions carefully before using.

## A FEW PRECAUTIONS

---

 
1. Operation without the dust compartment and /or filters in place will allow dust to enter the motor and could damage the vacuum cleaner.
2. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolor the plastic parts of the unit.
3. Keep the vacuum cleaner free of insecticides. Do not wipe with benzine, thinner, petrol or other oils which might cause discoloration or cracking. To clean the body and hose, dampen a cloth with a mild detergent and wipe clean.
4. Blocking the suction inlet or allowing the dust to clog the hose will decrease the efficiency of the motor.
5. Never try to vacuum the following objects. They may damage the unit or cause a fire.
  - \* Wet things, mud, soil, and fluids
  - \* Burning cigarettes
  - \* Needles and razor blades
  - \* Inflammable materials such as gasoline and thinner
6. The following kinds of treatment shorten hose life:
  - \* Bending hose at an acute angle when storing
  - \* Pulling the hose with excessive force
  - \* Placing heavy objects on, or stepping on the hose
7. Pull out the plug from the power source after use. Grasp the plug-not the cord-when pulling out the plug. Pulling on the cord may lead to shortcircuiting.
8. Long and continuous use causes the exhaust air and the body of the vacuum cleaner to become warm. This, however, does not denote malfunction.
9. When vacuuming places that are very dusty, and also when vacuuming regularly, empty the dust compartment before it becomes completely filled. Frequent emptying lengthens the life of the motor and maintains strong suction power.
10. If the supply cord of this appliance is damaged, it must only be replaced by a repair shop appointed by the manufacturer, because special purpose tools are required.
11. Do not allow it to be used as a toy. Close attention is necessary when used by or near children or infirm persons.

# DUST DISPOSAL / 灰尘倒出

Turn the motor off, pull the hose out of the unit and empty out the dirt as follows:


关掉马达，拉出软管，然后按下述将灰尘完全倒出。

1. Open the dust compartment cover.

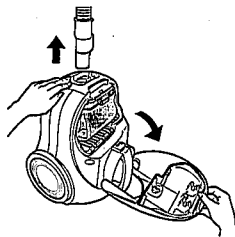

1. 打开集尘盖

 2. Release the hook and take out the cloth bag or paper bag.

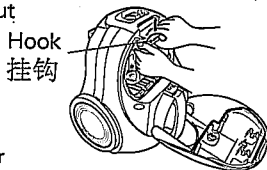

2. 松开挂钩，取出布袋或纸袋。

3. (Cloth Bag Type)  
Remove the holder for the cloth bag and empty the contents of the bag.

 


3. (布袋型)  
取下布袋夹口，腾空其中，重新装上夹口，(纸袋型)  
除去用过的纸袋。

Reinstall the holder exactly as it was before.  
(Paper Bag Type)  
Dispose the used paper bag.


Remove by pulling in the direction of the arrow.  
按箭头方向拉出。

4. Put the top frame of the bag in the groove.

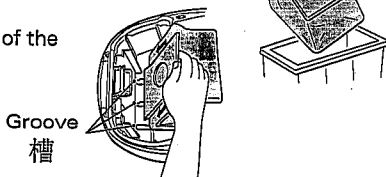


4. 将袋的上框放下槽中。

 5. Pull the hook and hang the bag securely on the tab.

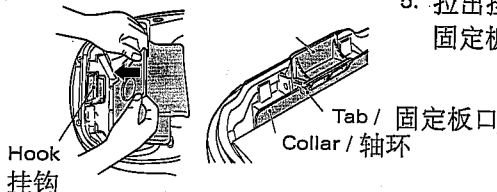

5. 拉出挂钩，将袋挂牢在固定板上。

 6. Close the dust compartment cover.

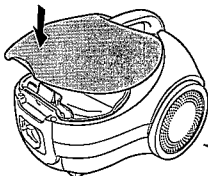

6. 关上集尘盖

• The bag has not been attached properly if the lid will not close.  
• 若盖口合不上，则说明袋未装到位。

## IMPORTANT (Paper Bag Type only) / 重要事项 (仅纸袋型)

- Use only genuine Sanyo paper bags to assure best results.
- Genuine Sanyo paper bags are available through your dealer.  
(Be sure to state the type number SC-P5A.)

- 请使用正宗的三洋纸袋，以确保最好的效果。
- 正宗的三洋纸袋可在销售店购买到，(购买时请说明型号为SC-P5A)