


# SANYO

## 5 Speed Hand Mixer with turbo

Model no: SHM 500

Power supply: 220-240 V AC 50Hz

Power: 250 watt

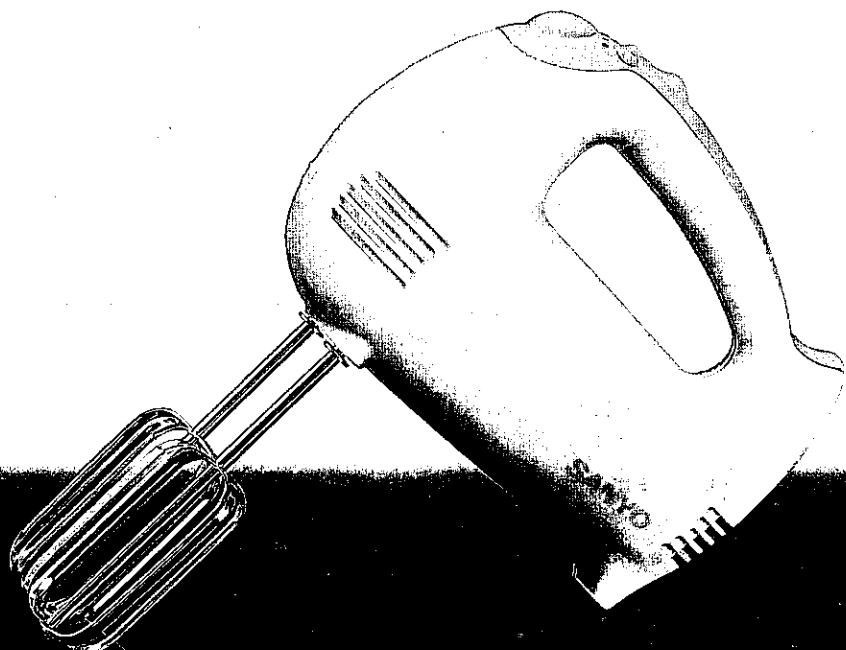

**Instruction Manual** *Save these instructions*



## FOR YOUR SAFETY

- Carefully read these instructions before using your appliance for the first time.
- Do not immerse in water or other liquids. Ensure that the appliance does not get wet.
- Keep out of reach of children. This appliance is not intended for use by young children or infirm persons without supervision.
- Use this appliance only for its intended use. This appliance is intended for household use only and not for commercial or industrial use.
- Use only genuine attachments supplied by an authorised Service Dealer.
- The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
- Do not let the power cord hang over edge of table or counter.
- Do not leave this appliance unattended when connected to the mains supply.
- If appliance is to be used by a third party, please supply the instruction manual with it.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

## ELECTRICAL SAFETY

- This appliance must be connected to a 220-240V AC 50Hz mains supply.
- An appliance should never be left unattended when plugged in.
- An appliance dropped or damaged should not be used until examined by a service engineer.

- Do not permit the power cord to come in contact with hot objects. Please ask a service engineer to replace a worn or damaged power cord immediately with an approved lead of the same size and type.
- Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.
- This unit has been permanently lubricated at the factory and requires no further lubrication.

#### FEATURES:


- 5 Speed controls
- Turbo boost function
- 250 watt performance motor
- 2 Beaters and 2 dough hooks
- Stand up base

#### OPERATING INSTRUCTIONS

- After unpacking the hand mixer wipe with a damp cloth or towel and dry with a dry cloth or towel. Wash the beaters in warm soapy water and dry with a dry cloth or towel.
- To fit the beaters, check that the hand mixer is unplugged from the mains supply then insert them fully into the slots at the base of the mixer.
- Lower the beaters into the mixture before switching on the mixer.
- The mixer has five speeds, which are selected using the speed switch, and a turbo boost feature. The controls are conveniently located on the handle.
- Use lower speeds to begin with and gradually increase to higher speeds if required.

The following speeds are suggested:

- Speed 1: Dough or cake mixes
- Speed 2 - 3: Sauces, short or puff pastry etc.
- Speed 4 - 5: Puree, cream, egg whites etc.

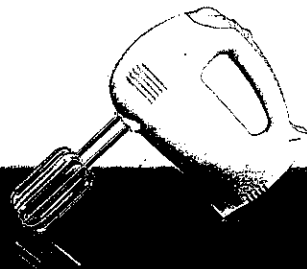

- You may wish to raise the mixer slightly before switching off to prevent excessive mixture clinging to the beaters. Always turn the mixer off before completely removing the beaters from the bowl.
- During mixing, occasionally use a spatula (not supplied) to scrape mixture from the sides of the bowl to ensure that all the ingredients are thoroughly and evenly mixed.
- To remove beaters, press the eject button. The eject button will not work if the speed control is not on zero.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to reduce risk of injury to you and/or damage to the appliance.
- Do not place unnecessary strain on the motor by beating mixtures which do not allow the beaters to revolve freely.

**Note: This appliance is designed for short-term operation only and must not be continuously operated for periods of time in excess of 3 minutes. If operated continuously for up to 3 minutes, switch the appliance off and allow it to cool down completely before further operation.**

## HOW TO CLEAN YOUR MIXER

- After use and before cleaning, remove plug from mains supply.
- To clean the outer surface of the mixer, use a soft damp cloth and dry it afterwards with a dry towel.
- All removable parts on the hand mixer should be detached and cleaned thoroughly in warm, soapy water after use.
- Do not immerse mixer in water.

