


SANYO

Stick Mixer Set

Model no: SHM-600GP

Power supply: 220-240 V
AC 50Hz

Power: 250 watt

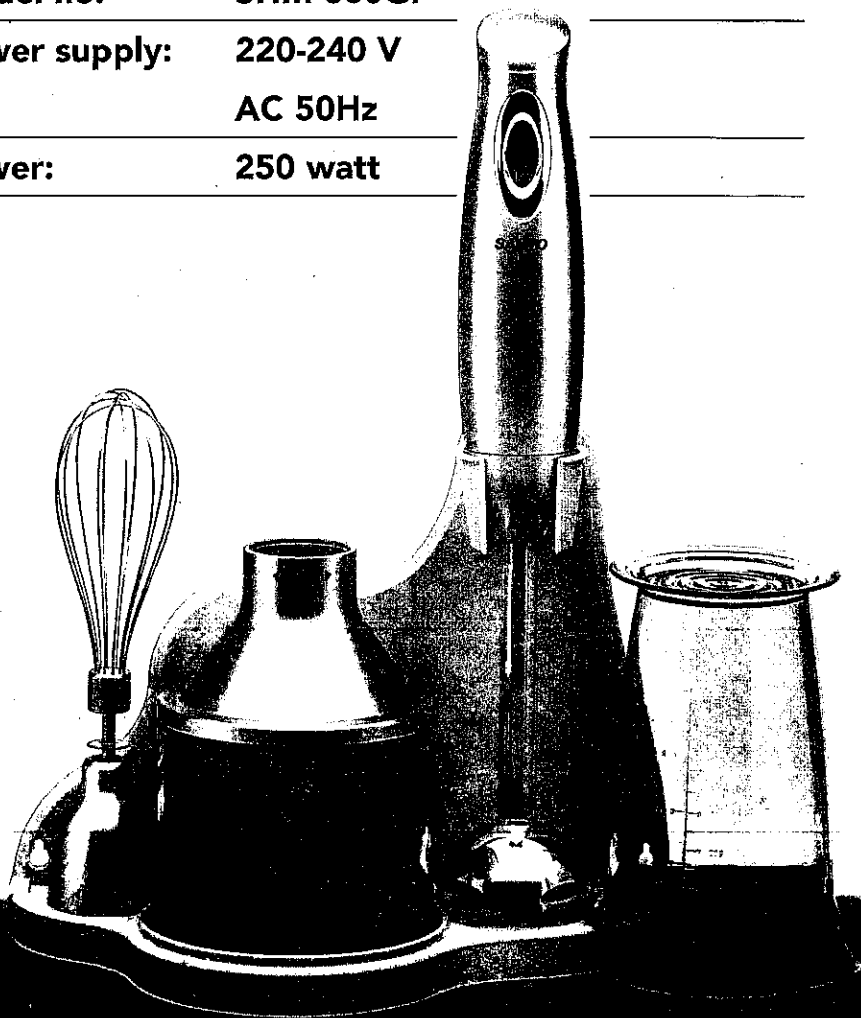

Instruction Manual *Save these instructions*





FOR YOUR SAFETY

- Carefully read these instructions before using your appliance for the first time.
- Do not immerse the appliance in water or other liquids. Ensure that the appliance does not get wet.
- Keep out of reach of children. This appliance is not intended for use by young children or infirm persons without supervision. Young children must be supervised to ensure that they do not play with the appliance.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from blades during operation to reduce risk of injury to you and/or damage to the appliance.
- Use this appliance only for its intended use. This appliance is intended for household use only and not for commercial or industrial use.
- The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
- Do not let the power cord hang over edge of table or counter.
- Do not leave this appliance unattended when connected to the mains supply.
- Use only genuine attachments supplied by an authorised Service Dealer.
- If appliance is to be used by a third party, please supply the instruction manual with it.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

ELECTRICAL SAFETY

- This appliance must be connected to a 220-240 V AC 50Hz mains supply.
- An appliance should never be left unattended when plugged in.
- An appliance dropped or damaged should not be used until examined by a service engineer.
- Do not permit the power cord to come in contact with hot objects. A damaged supply cord must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.
- This unit has been permanently lubricated at the factory and requires no further lubrication.


FEATURES:

- 250 watt performance motor**
- Ergonomic slimline handle**
- Detachable stainless steel mixing leg**
- Wall mount and 600 ml mixing cup**
- Whisk attachment**
- Mini chopper attachment**

OPERATING INSTRUCTIONS

- After unpacking the stick mixer wipe with a damp cloth or towel and dry with a dry cloth or towel. Wash all accessories in warm soapy water and dry with a dry towel. Do not immerse stick mixer body in any liquid.

Caution. Do not touch cutting blade edges.

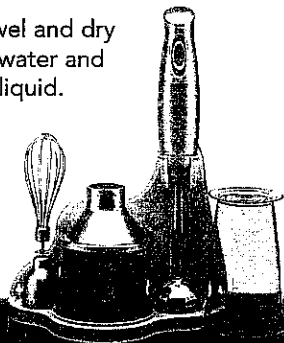



TO USE AS A STICK MIXER

- Assemble the stick mixer parts. Lock the mixing arm into the mixer body by first inserting together the two parts and turning the mixing arm hard to the right to lock in place.
- Plug the stick mixer into an AC power outlet.
- This appliance can be used to chop small solid ingredients or to mix liquids. Cut larger ingredients into smaller pieces before placing into mixing bowl or container. If chopping fruits or vegetables, use a container with tall sides.
- Do not place unnecessary strain on the motor by mixing mixtures that do not allow the blades to revolve freely.
- Place mixing blade into ingredients and turn on. Hold the stick mixer firmly. The mixer will turn off once switch is released.
- During mixing, occasionally use a spatula (not supplied) to scrape mixture from the sides of the bowl to ensure that all the ingredients are thoroughly and evenly mixed.

TO USE AS A WHISK


- Remove mixing arm by rotating to the left from main mixer body. Assemble the whisk mixer parts by first inserting together the two parts and turning the whisking arm hard to the right to lock in place.
- Plug the stick mixer into an AC power outlet.
- This appliance can be used to beat egg white, whip cream or whisk similar ingredients such as sponge or desert mix.
- Do not place unnecessary strain on the motor by mixing mixtures that do not allow the whisk to revolve freely.
- Place whisk into ingredients and turn on. Hold the stick mixer firmly. The mixer will turn off once switch is released. Use a wide bowl and rotate the whisk throughout the mixture during mixing.

- During mixing, occasionally use a spatula (not supplied) to scrape mixture from the sides of the bowl to ensure that all the ingredients are thoroughly and evenly mixed.

TO USE AS A CHOPPER.

- Assemble the chopper parts. Carefully remove the plastic cover from the chopping blade. **Warning blade edges are sharp**, avoid contact with the blade edges, always hold by the upper plastic arm. Place the chopping blade onto the central shaft in the chopping bowl. **(make sure the gear box and the blade are matched up before using)**. Place the food into the chopping bowl. Place the chopping bowl lid onto the chopping bowl and rotate until it locks into position. Fit the chopping bowl to the mixer body by first inserting together the two parts and turning the chopping bowl hard to the right to lock in place.
- Plug the stick mixer into an AC power outlet.
- Hold the stick mixer firmly in a vertical position with the chopper bowl on a flat surface and turn on. The mixer will turn off once switch is released.
- This appliance can be used to chop small solid ingredients. Cut larger ingredients into smaller pieces before placing into chopping bowl.
- Do not place unnecessary strain on the motor by chopping food items that do not allow the blades to revolve freely.

Note: This appliance is designed for short-term operation only and must not be continuously operated for periods of time in excess of 1 minute. If operated continuously for up to 1 minute, switch the appliance off for a period of 5 minutes and allow it to cool down completely before further operation.

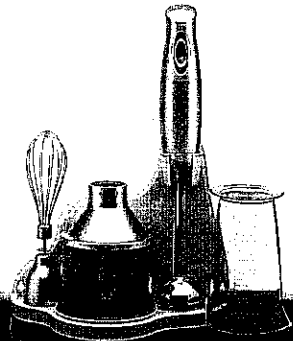

HOW TO CLEAN YOUR STICK MIXER

- After use and before cleaning always remove plug from the mains supply.
- To clean the outer surface of the Stick Mixer, use a soft damp cloth and dry it afterwards with a dry towel.
- For cleaning, the mixing arm, whisk, or chopping bowl can be removed by turning to the left and removing from the mixer body. Wash the mixer arm, whisk and chopping bowl in warm soapy water.
- Do not immerse the mixer body or the mixing arm in any liquid.
- Store mixer in wall mount supplied.



