 




**SANYO**

**SK 5500**

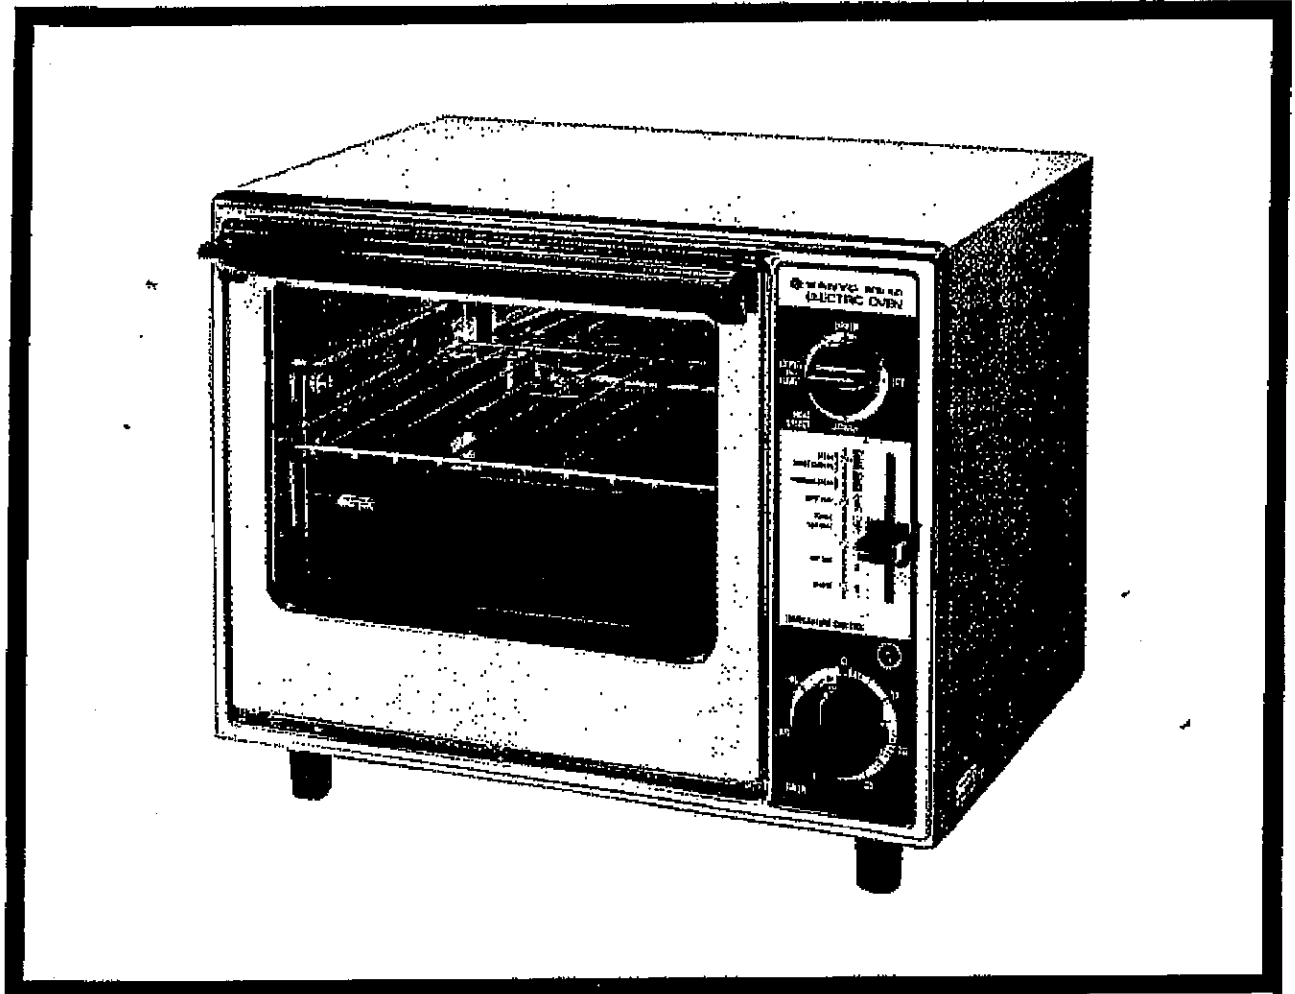

# **SANYO ELECTRIC OVEN OPERATING INSTRUCTIONS**

Thank you for your purchase of the Sanyo Electric Oven.

Please read these instructions carefully before using.

## **FEATURES**

---

1. Upper and lower heater for fast, even cooking.
2. Thermostat temperature control for added heating efficiency and complete safety.
3. Four-level rack support, handy recipe guide.
4. Heater selector switches and indicator lamp.
5. Large glass front window for checking food being cooked.
6. Cabinet finished in attractive orange.
7. Shut-off timer (60 minutes).

## **HOW TO USE**

---

### **1. Heater Selector Switches**

Select both heaters, the upper heater or the lower heater according to cooking needs. When the heater selector switches and timer are turned on, the pilot lamp lights up.

When heat inside the oven reaches the preset level, the thermostat is activated and heating momentarily stops. From that point on, the unit adjusts and maintains the temperature at a constant level by turning on and off.

Most cooking is done with both heaters in operation. However, browning with only the upper heater or low heat cooking with only the lower heater can be easily and efficiently carried out with this unit.

#### **Note:**

Always be sure to preheat the oven before putting food in.

1. Set the temperature control dial in accordance with the food to be cooked.
2. Switch on both heaters (upper and lower).
3. Set the timer to about 10 minutes.

 
When the chime rings, the oven is well heated and ready for cooking. Reset the timer to the desired cooking time.

## 2. Temperature Control Dial

The temperature control dial can be adjusted to any one of 7 positions, or set in between these positions. Align the white line on the temperature control dial to the desired temperature.

Note:

The indicated temperature is attained when both heaters are in operation.

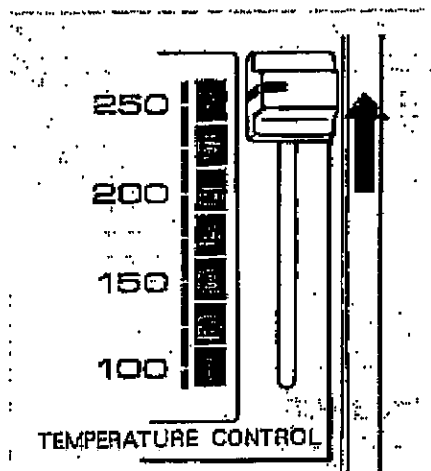


## 3. Timer

- Turn the timer dial clockwise until the white line points to the desired cooking time.
- When cooking time is completed the oven will shut off automatically and a chime will sound.
- The oven can also be shut off manually by turning the timer counterclockwise to 0.

Note:

 When setting the timer to less than 10 minutes, first turn it past the desired time and then turn it back until the desired time is reached.

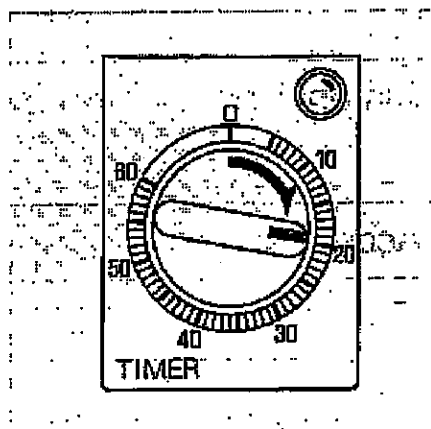

## 4. Drip trays and baking grill

A 4-level rack support is provided inside the oven for a drip tray or grill. Once food has been placed on the tray or grill, simply slide it onto the proper level. The baking grill can also be arranged inside the tray. Consult the following chart for proper usage.

Drip Tray	Baking Grill	Drip tray with Grill
Roast chicken Hamburg steak Gratin Sponge cake Most other oven-cooked foods	Baked potatoes Other dry foods	Broiled fish Other grilled foods with drip

Note:

Do not use 2 drip trays at the same time. Prepare one while the other is being used in the oven.

When cooking is finished, remove the drip tray and/or grill with the supplied tray handle. Take proper precautions to avoid burning.

## 5. Rack Supports

 
The tray or grill can be positioned in any one of 4 levels according to the dish to be cooked. For example, when cooking food that should have the top part well browned such as macaroni gratin, use the top or second level. For deep roasting of a fairly large amount of food, e.g., roast chicken, use the third or bottom level.

## A FEW THINGS TO REMEMBER


1. Allow a space of at least 10 cm between the oven and the wall.
2. Do not put objects on top of the oven while it is in operation.
3. Unplug the cord after use.
4. Use only a properly wired AC outlet. Do not overload the outlet with other appliances.
5. Do not open the back cover. If repairs are needed, consult your dealer or nearest Sanyo Service Center.
6. Use the supplied tray handle for removing the tray and/or grill from the oven.
7. Do not apply water to the glass window while the oven is in operation. This could crack the glass.
8. To avoid accidents, use with care. Keep children away from the oven.

## CARE AND MAINTENANCE

1. After the oven has cooled, remove the drip tray and baking grill and wash with water and sponge.
2. Use a dry cloth to clean the outer surface and glass window.
3. The 4 rack supports can also be detached for cleaning. Simply remove the 2 nuts and remove the rack supports from the cabinet walls. To reattach, align the holes in the rack supports with the rollers, place the rack supports against the cabinet walls and re-fit the 2 nuts, tightening them securely.

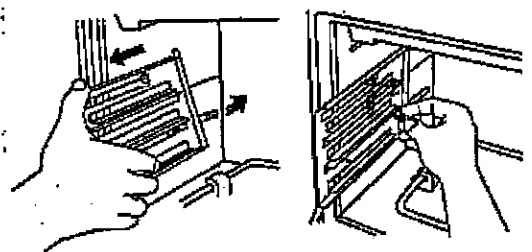

# NAME OF PARTS

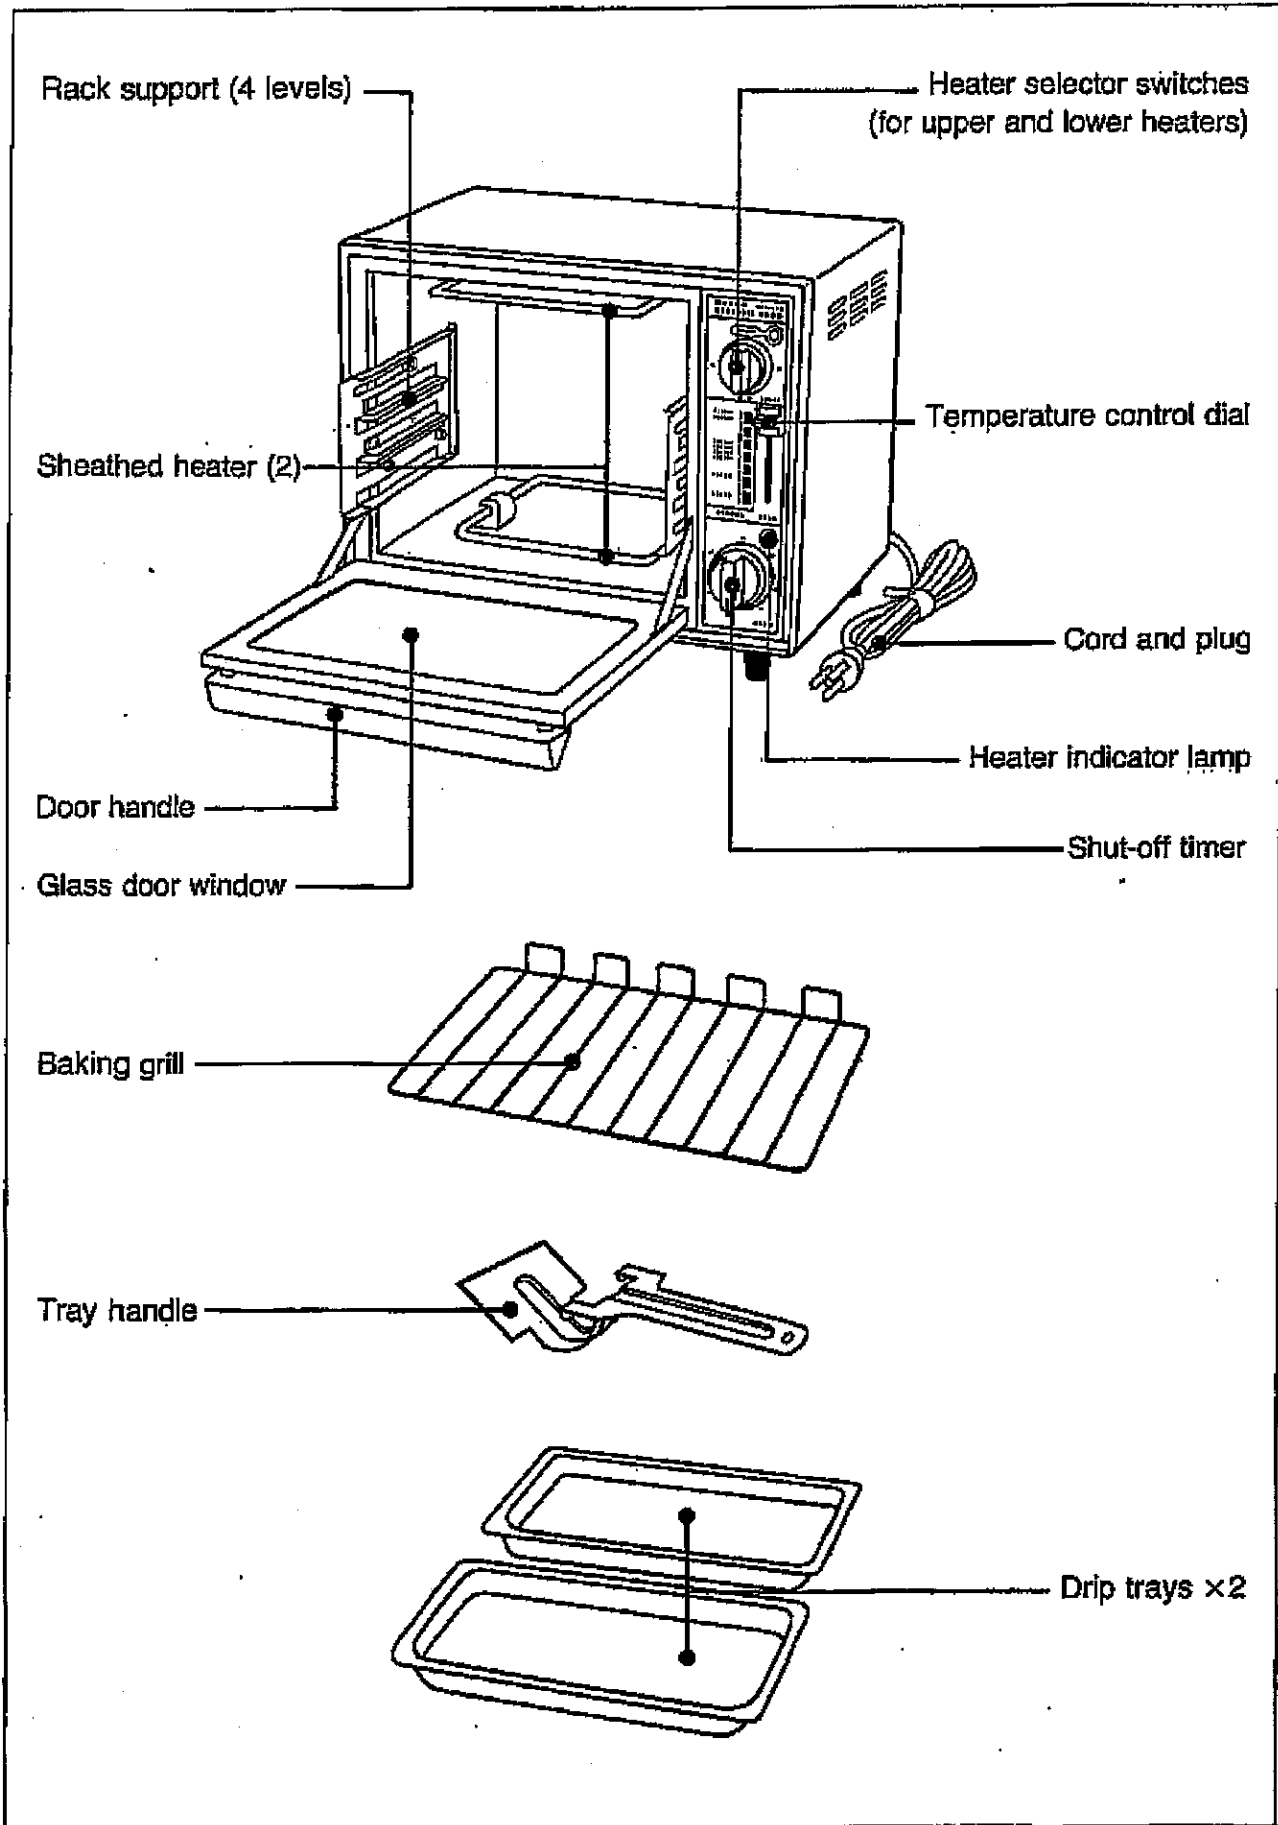 

## SPECIFICATIONS

---

Power source	AC: local voltage
Power consumption	1.2 kW
Timer	60-minute shut-off timer with chime
Temperature control range	100°C – 250°C
Heaters	Sheathed heaters Upper: 600 W Lower: 600 W
Dimensions	Outer: 315(H)×394(W)×300(D) mm Inner: 230(H)×278(W)×245(D) mm
Accessories	Drip tray×2, baking grill, tray handle



**SANYO**

SANYO ELECTRIC CO., LTD.  
OSAKA, JAPAN

Printed in Japan