


SANYO

2 Slice Cool Touch Toaster

Model no: SK-800

Power supply: 230-240 V AC 50Hz

Power: 800 watts

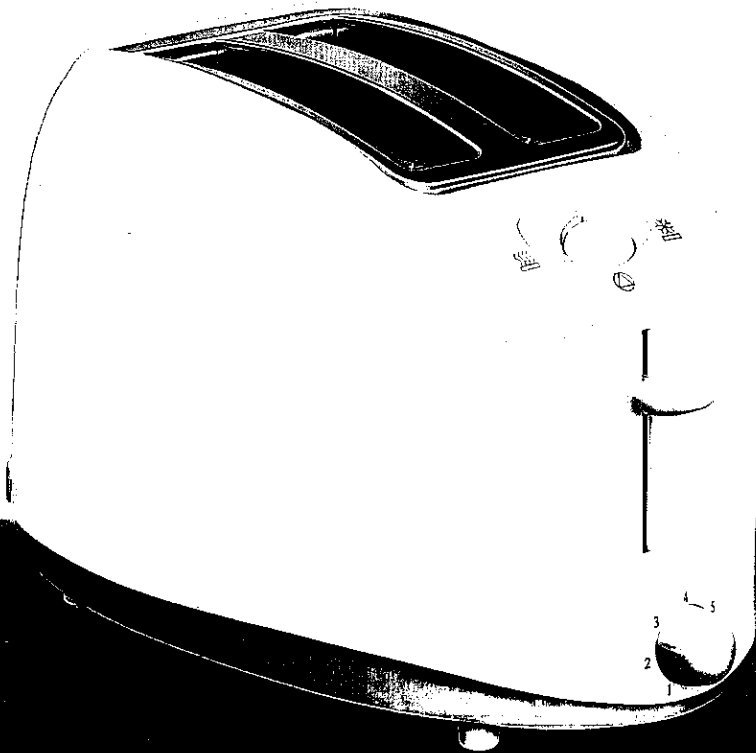

Instruction Manual *Save these instructions*



FOR YOUR SAFETY

- Carefully read these instructions before using your appliance.
- Do not immerse in water or other liquids. Ensure that the appliance does not get wet and do not use it with wet hands.
- Keep out of reach of children. This appliance is not intended for use by young children or infirm persons without supervision.
- Use this appliance only for its intended use. This appliance is intended for household use only and not for commercial or industrial use.

NO TOASTER SHOULD BE LEFT UNATTENDED WHEN IN USE.

- When the toaster is hot, carry it only by the outer cabinet. Do not touch any metal part during use as it may have reached a very high temperature.
- Never lift the toaster by placing your fingers inside or near the bread slot.
- Always ensure the toaster has completely cooled down before storing.

BREAD MAY BURN. THEREFORE TOASTER MUST NOT BE USED NEAR OR BELOW CURTAINS AND OTHER COMBUSTIBLE MATERIALS. DO NOT LEAVE UNATTENDED. THE TOASTER SHOULD NOT BE USED UNDER A CUPBOARD OR CLOSE TO A WALL AS SCORCHING OR FIRE MAY RESULT.

- Never attempt to remove bread which has jammed in the slots without first unplugging the toaster from the mains supply. Be careful not to damage the internal mechanism or heating elements when removing the bread.
- Disconnect the toaster from the mains supply when not in use.


ELECTRICAL SAFETY

- This appliance must be earthed.

- This appliance must be connected to a 230-240 V AC 50Hz mains supply.
- **NO TOASTER SHOULD BE LEFT UNATTENDED WHEN IN USE.**
- An appliance dropped or damaged should not be used until examined by a service engineer.
- Do not permit power cord to come in contact with hot objects. Please ask a service engineer to replace a worn or damaged power cord immediately with an approved lead of the same size and type.
- To prevent electric shock, disconnect from the mains before removing cover. Do not attempt to service this appliance yourself. Refer to qualified service personnel.


FEATURES

- 800 watts
- 7 toast settings
- Self centering
- Extra wide bread slots
- Defrost, reheat and cancel functions
- High lift function
- Non slip rubber feet
- Removable crumb tray

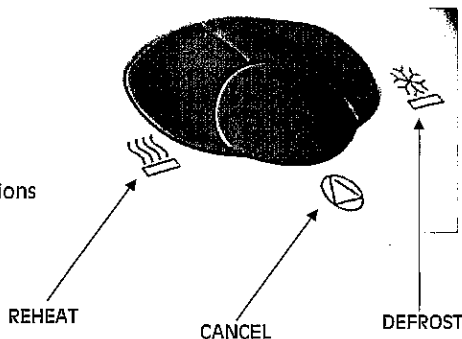

OPERATING INSTRUCTIONS

- Place the toaster on a firm, horizontal surface and kept away from other heat sources.
- Check that the loading handle is in the raised position, and the browning control set to approximately half way before connecting to the mains supply.
- Place bread in the bread slots, select the desired browning setting level and press the handle right down until it latches. The bread will be lowered into the toaster and toasting will begin.

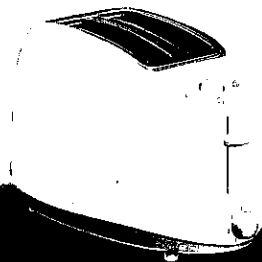

- Please note: The handle will not latch if the toaster is not connected to the mains supply, and may not latch if the browning control is set to the minimum position.
- When toasting frozen bread select defrost button and press down lever to start operation. Toaster will operate for an extended period to fully toast frozen bread.
- If you should find that the toast is not dark enough you may wish to toast the bread again. Remember to increase the browning control setting for subsequent operations. If the toast is too dark, reduce the browning control before toasting the next slice.
- When toasting has finished the handle will rapidly rise to the raised position.
- This toaster has a high lift function. If the toast is required to be raised higher than the standard position, manually raise the handle. The toasted bread can now be removed and the toaster is ready to recommence toasting.
- To warm toast insert toast, select reheat button and press down lever to start operation. Toaster will operate for a short period only.
- Please note: Dry or thin slices will toast more quickly than moist or thick slices requiring a lower browning control setting. When toasting more than one slice at the same time, use a similar size and consistency of bread to achieve equal browning. There should be a 3-minute break after 2 uses to allow the toaster to cool down.

MAINTENANCE AND CLEANING

- It is important that crumbs are not allowed to build up inside the base of the toaster. To remove crumbs from the inside of your toaster, **FIRST UNPLUG THE TOASTER**, and ensure the toaster has fully cooled before proceeding. Pull the crumb tray located on the bottom of the toaster out, discard the crumbs, and slide the crumb tray back into the toaster, locking into position. Never touch the internal parts of the toaster with a brush or any other implement. Do not operate the toaster without the crumb tray in place.
- To clean the outer surface of the toaster use a soft damp cloth and dry it afterwards with a dry towel. Clean only after unplugging the toaster from the mains supply.

