


# SANYO

---

INSTRUCTION MANUAL

SKSB2

CHROME TOASTER

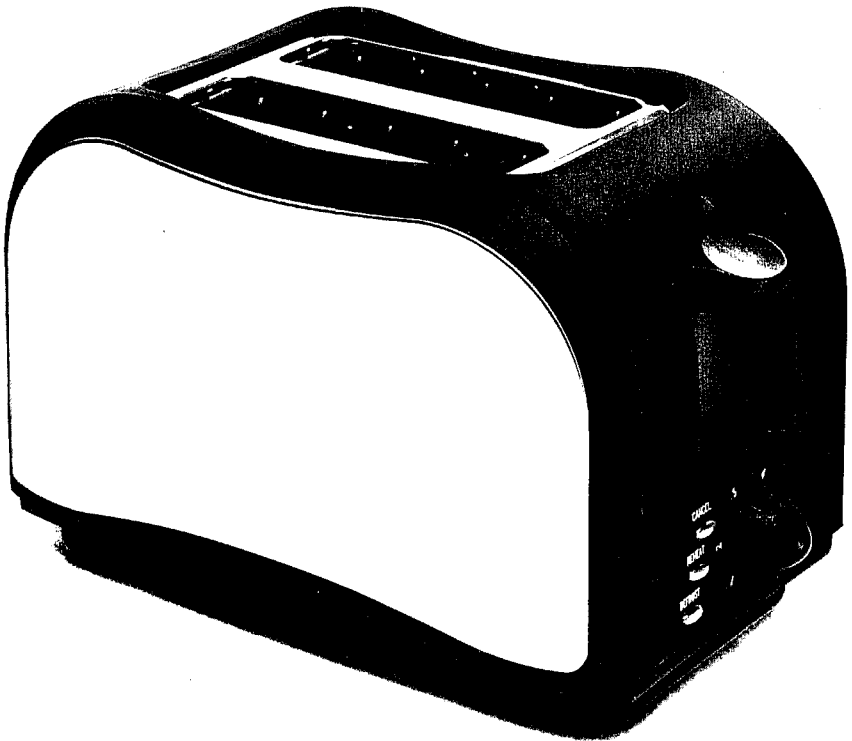




## **FOR SAFE AND EFFICIENT OPERATION**

**WARNING: BREAD MAY BURN. DO NOT USE NEAR CURTAINS OR OTHER COMBUSTIBLE MATERIALS. DO NOT LEAVE THIS APPLIANCE UNATTENDED WHILE IN USE.**

- Carefully read these instructions before using this appliance for the first time.
- Keep this appliance out of reach of young children. This appliance is not intended for use by young children or infirm persons without supervision. Young children must be supervised to ensure that they do not play with the appliance.
- Do not immerse appliance in water. Electrical shock or malfunction may result.
- Do not operate this toaster on an inclined surface. Do not move the toaster while it is switched on.
- Do not damage the mains lead. A damaged supply cord must be replaced by the manufacturer, its service agent or a suitably qualified person in order to avoid a hazard.
- Do not touch hot surfaces. Allow to cool completely before moving or storage.
- Unplug from the mains supply when not in use.
- A dropped or damaged appliance should not be used until examined by a service engineer.
- Do not let a supply cord hang over the edge of a table or counter.
- Do not leave this appliance connected to the mains supply when unattended. Bread may burn. Do not use near curtains, under cupboards or other combustible material.
- Use this appliance only for its intended use. This appliance is for household use only and not for commercial or industrial use.
- This appliance must be connected to a suitable 230-240 V ~ 50Hz earthed supply.
- Do not attempt to service this appliance yourself. Refer service to qualified service personnel.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any improper use or mishandling.
- Do not operate this toaster without crumb tray.

## PARTS IDENTIFICATION

1. Bread carriage knob and high lift lever.
2. Function controls.
3. Browning control.
4. Bread slots.
5. Cord storage.
6. Crumb tray

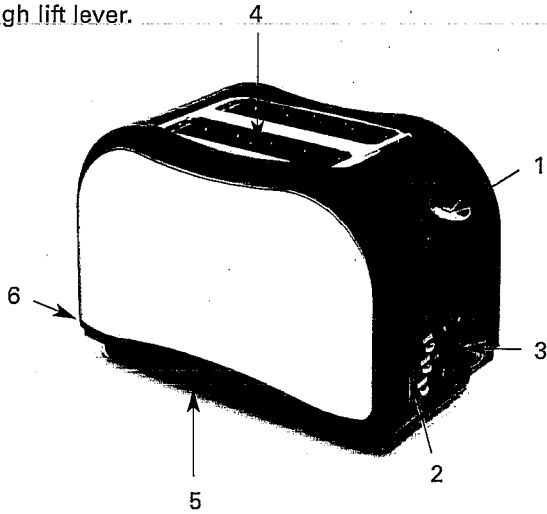

## PARTS SUPPLIED

Quantity	Description
1	Toaster
1	Instruction Manual

## BEFORE FIRST USE

Carefully unpack and check the appliance for damage. Confirm that all parts are received. If there is any damage to the appliance please return it to the retailer for replacement.

1. Wipe the exterior of the appliance with a damp cloth, dry it with a dry towel.

**WARNING: DO NOT RINSE THE TOASTER WITH WEAK ALKALINE DETERGENT.**

2. Ensure that the bread carriage knob can move freely upwards and downwards and that the self-centering bread support racks are operational.
3. Ensure that the crumb tray is fitted correctly.
4. For first time use follow the instructions under operation.

## OPERATION

1. Place the toaster on a stable level surface. Do not operate on an inclined surface. Bread may burn. Toasters must not be left unattended when in use.
2. Check that the bread carriage knob is in the raised position, and the browning control is set approximately half way before connecting to the mains supply.
3. Insert the supply plug into a suitable 230-240V AC power outlet socket.
4. Place bread in the bread slots and press the bread carriage knob down until it latches. The bread will be lowered into the toaster and toasting will begin. The self centering toast guides will close, ensuring the toast is in the center of the bread toasting slots. Note: The bread carriage knob will not latch if the toaster is not connected to the mains supply.
5. Cancel Function. The toaster can be stopped at any time by pressing the Cancel function button.
6. Reheat Function. To reheat cold toast, insert toast into bread slots and press down the bread carriage knob fully. Press the Reheat function button. Indicator lamp will glow to show Reheat function in operation. Toaster will operate for a short period only.
7. Defrost Function. When toasting frozen bread, insert toast into bread slots and press down the bread carriage knob fully. Press the Defrost function button. Indicator lamp will glow to show Defrost function in operation. Toaster will operate for an extended period.
8. When toasting has finished, the bread carriage knob will rapidly rise to the raised position and toast can be removed.
9. Hi Lift Function. This toaster has a high lift function. If the toast is required to be raised higher than the standard position, manually raise the knob to gain further access to the toast.

## MAINTENANCE AND CLEANING

1. Keep this appliance and all accessories in a dry place when not in use.
2. Disconnect from the power socket before carrying out any cleaning action. To clean the outer surface, wipe with a damp cloth. Dry with a dry towel. Do not immerse in water. Ensure that no liquid enters the appliance.
3. Do not use harsh abrasives or solvents to clean the plastic parts as they may damage the plastic. Do not leave in direct sunlight.
4. **WARNING:** It is important that breadcrumbs are not allowed to build up inside the base of the toaster. To remove breadcrumbs from the inside of your toaster, **FIRST UNPLUG THE TOASTER FROM THE POWER SUPPLY**, and ensure the toaster has fully cooled before proceeding. Pull the crumb tray located on the bottom rear of the toaster out, discard the crumbs, and slide the crumb tray back into the toaster fully. Never touch any internal parts with a brush or any other implement. Do not operate the toaster without the crumb tray in place.



**SANYO**

---

SANYO Electric Co., Ltd.