



Instruction Manual

SK-ST2

Stainless Steel Toaster



Carefully read these instructions before using your appliance.

FOR YOUR SAFETY

- **Do not** operate the toaster without the crumb tray in place.
- **Do not** immerse in water or other liquids. Ensure that the appliance does not get wet and do not use with wet hands.
- Keep out of reach of children. This appliance is not intended for use by young children or infirm persons without supervision. Young children must be supervised to ensure that they do not play with the appliance.
- Use this appliance only for its intended use. This appliance is intended for household use only and not for commercial or industrial use.
- No toaster should be left unattended when in use.
- When the toaster is hot, allow toaster to cool and carry it only by the outer casing. Do not touch any metal part as it may have reached a very high temperature. Always ensure the toaster has completely cooled down before cleaning or storing.
- Never lift the toaster by placing your fingers inside or near the bread slot.

- **BREAD MAY BURN. THEREFORE TOASTER MUST NOT BE USED NEAR OR BELOW CURTAINS AND OTHER COMBUSTIBLE MATERIALS. DO NOT LEAVE UNATTENDED. THE TOASTER SHOULD NOT BE USED UNDER A CUPBOARD OR CLOSE TO A WALL AS SCORCHING OR FIRE MAY RESULT.**

- Never attempt to remove bread which has jammed in the slots without first unplugging the toaster from the main supply. Be careful not to damage the internal mechanism or heating elements when removing the bread.
- This appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
- If the appliance is to be used by a third party, please supply the instruction with it.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use.

FOR ELECTRICAL SAFETY

- This appliance must be earthed.
- This appliance must be connected to a 220-240V – 50Hz mains supply.
- No toaster should be left unattended when in use.
- An appliance dropped or damaged should not be used until examined by a service engineer.
- Do not permit power cord to come in contact with hot objects. A damaged supply cord must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Do not attempt to service this appliance yourself. Refer to qualified service personnel.

FEATURES

800 – 950 Watts
6 toast settings
High lift function
Reheat function
Cancel function
Removable crumb tray

OPERATING INSTRUCTIONS

- After unpacking the toaster, remove any plastic bags, sticker or packing that may present a hazard to young children and destroy. Wipe the exterior of the toaster with a soft damp cloth or towel and dry with a dry towel. Do not immerse the toaster in any liquid.
- Place the toaster on a firm, horizontal surface and keep away from other heat sources.
- Check that the loading handle is in the raised position, and the browning control set to approximately half way before connecting to the mains supply.
- Place bread in the bread slots, select the desired browning setting level, and press the handle right down until it latches. The bread will be lowered into the toaster and toasting will begin.



- Please note: The handle will not latch if the toaster is not connected to the mains supply, and may not latch the browning control is set to the minimum position.
- If you should find that the toast is not dark enough you may wish to toast the bread again. Remember to increase the browning control setting for subsequent operations. If the toast is too dark, reduce the browning control before toasting the next slice.
- When toasting has finished the handle will rapidly rise to the raised position. Toaster may be stopped at any time by pressing the **STOP** button.
- **Reheat function.**
Simply place cold toast into toaster, press handle right down until it latches and press **REHEAT** button.
Toaster will operate for a short period only.
- **High lift function.**
If the toast is required to be raised higher than standard position, manually raise the handle and the toasted bread can now be removed and the toaster is ready to recommence toasting.
- **Please note:** Dry or thin slices will toast more quickly than moist or thick slices requiring a lower browning control setting. When toasting more than one slice at the same time, use a similar size and consistency of bread to achieve equal browning. There should be a 3-minute break after 2 uses to allow the toaster to cool down.

MAINTENANCE AND CLEANING

- It is important that crumbs are not allowed to build up inside the base of the toaster. To remove crumbs from inside of your toaster, **FIRST UNPLUG THE TOASTER**, and ensure the toaster is fully cooled before proceeding. Pull crumb tray located on the bottom of the toaster out, discard the crumbs, and slide the crumb tray back into the toaster, locking into position. Never touch the internal parts of the toaster with a brush or any other implement. Do not operate the toaster without the crumb tray in place.
- To clean the outer surface of the toaster, use a soft damp cloth and dry it afterwards with a dry towel. Clean and store only after unplugging the toaster from the mains supply.


 The logo for SANYO, featuring the word "SANYO" in a bold, black, sans-serif font. The letter "Y" is stylized with several vertical lines of varying lengths passing through it, creating a distinctive graphic element.

SANYO Electric Co., Ltd