

SANYO

INSTRUCTION MANUAL

SK-X100

Toaster



Important Safeguards

CONTENTS

Important Safeguards.....	1-2
Operation.....	.2
Technical Information.....	2
Toasting Tips.....	3
Cleaning Instructions.....	3

When using electrical appliance, basic safety precautions should always be followed including the following:

1. Read all instruction.
2. Do not touch hot surface.
3. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
4. Close supervision is necessary when it is used by or near children.
5. Unplug unit from outlet when not in use and before cleaning allow hot surface to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer or the near service anent or a qualified person.
7. Do not let the cord hang over edge of table or counter, or touch hot surface.
8. Do not place on or near a hot gas or electric burner, or in a heated oven.
9. Do not use the appliance for other than its intended use.
10. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
11. Oversize foods, metal foil packages or utensils must not be inserted in a toaster as they may cause fire or electric shock.
12. Do not attempt to dislodge food when toaster is in operation, wait for toast to pop up, make sure bread is fully raised before lodging.
13. Do not use toaster with a damaged outlet.
14. Any examination, repair, or adjustment for the appliance should be made by the authorized service agent.
15. Bread may burn; therefore toasters must not be used near or below curtains and other combustible materials they must be watched.

16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Operation

1. Plug the power cord into the AC outlet.
2. Set timer knob to level desired.
3. Be sure loading handle is in raised position, then insert bread or items to be toasted. Put bun or items on the bun warmer when it is in use.
4. Press carriage down gently until it latches, toasting will begin.
5. After working for a while preset adjustment, the toaster will auto working.

Technical Information

Input Voltage : 220-240V~ / 50Hz
Power : 800 W

Toasting Tips

1. Dry and thin slices will toast quicker than moist or thick slices.
2. If toast starts to smoke, stop the toasting cycle.
3. Do not heat toaster that has buttered or other spreads.

Caution:

1. Do not place foil wrapped articles in toaster.
2. Remove all protective wrapping prior to placing in toaster.
3. Avoid using items with extremely "runny" type frosting.

Cleaning Instructions

1. Disconnect from AC outlet.
2. Wipe outside with soft, dry cloth when toaster is cooled. Never use metal polish to wipe the outer body.
3. Slide out the crumb trap on bottom of toaster and brush out crumbs. If toaster is used frequently, accumulated breadcrumbs should be removed at least once a week, make sure the crumb tray is completely closed before using the toaster again.
4. Never attempt to remove bread, which has jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.

SANYO

SANYO Electric Co., Ltd.