


SANYO

Chrome Plated Blender

Model no.: SM150PS

Power supply: AC 230-240 V ~ 50Hz

Power: 450 watt

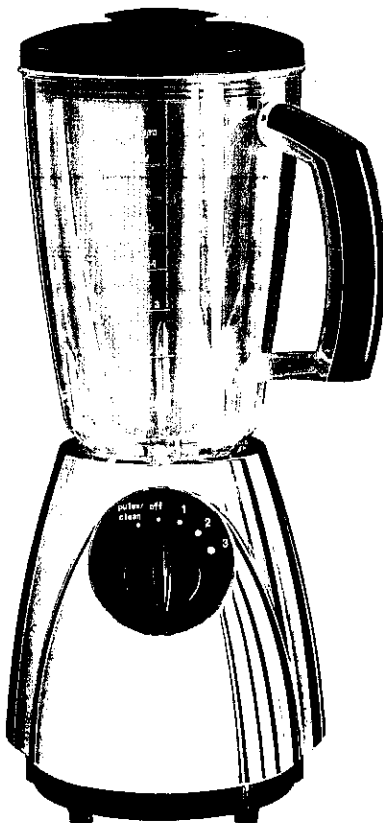

Instruction Manual *Save these instructions*



FOR YOUR SAFETY

- Carefully read these instructions before using your appliance.
- Do not immerse in water or other liquids. Ensure that the appliance does not get wet and do not use with wet hands.
- Keep out of reach of children. This appliance is not intended for use by young children or infirm persons without supervision. Young children must be supervised to ensure that they do not play with the appliance.
- Use this appliance only for its intended use. This appliance is intended for household use only and not for commercial or industrial use.
- No blender should be left unattended when in use.
- When connecting to the power supply, always ensure the main control switch is in the 'OFF' position.
- Never use the blender without ingredients or liquid in the blender jug.
- Never use blender with the lid off or the bowl incorrectly positioned.
- Warning: Avoid contact with all moving parts. The blades are sharp, handle with extreme care both in use and in cleaning.
- Use only genuine attachments supplied by an authorised Service-Dealer.
- This appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
- If the appliance is to be used by a third party, please supply the instructions with it.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use.

FOR ELECTRICAL SAFETY

- KB 3 Minutes: This appliance is designed for short period operation. Do not operate continuously for periods in excess of 3 minutes. If using for extended periods allow to cool for 1 minute after each 3 minute of operation.
- This appliance must be connected to a 230-240V ~ 50Hz mains supply.
- No blender should be left unattended when in use.
- An appliance dropped or damaged should not be used until examined by a service engineer.

- Do not permit power cord to come in contact with hot objects. A damaged supply cord must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Do not attempt to service this appliance yourself. Refer to qualified service personnel.

FEATURES

450 Watts

3 Speeds plus Pulse / Auto Clean function

1.5 L capacity mixing jug


Rubber sealing lid with filling hole

ASSEMBLY OF JUG AND BLADES

- Carefully place the blade assembly into the retaining ring. Handle with care, blades are sharp.
- Attach the blade assembly and retaining ring to the jug base.
- Check that there are no leaks. Add an amount of water to the jug. Discard this water after checking.

OPERATING INSTRUCTIONS

- Place the blender on a firm, horizontal non slippery surface.
- Place the jug onto the motor housing, with the jug handle facing slightly to the right. NOTE the jug will only attach in this position. The motor will not start with jug incorrectly fitted. Do not place jug onto motor housing with the switch in the ON position and power on.
- Open the lid and add the ingredients to the blender jug. Do not exceed the maximum capacity marked on the jug. Replace the lid securely.
- Plug the power cord into the mains outlet.

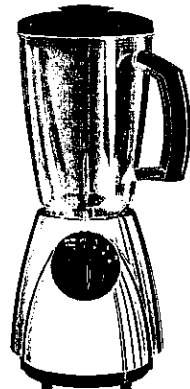



- Select desired speed setting (marked 1, 2, 3) on main control switch. It is advisable to start with a lower speed setting and then increase as desired. Blender may be used in short bursts, by using the PULSE setting.
- Always dice solid foods first. Never operate the blender without ingredients or liquid in the jug.
- Do not use the blender for meat preparation.
- Do not place hot liquids, over 60° into the jug.
- When the blending has completed, ensure that the appliance is switched off and that the motor has completely stopped before removing jug.
- Do not use the jug as a storage unit. Remove ingredients immediately after use.

MAINTENANCE AND CLEANING

- Always disconnect from the mains outlet before cleaning or storage.
- To clean the outer surface of the blender motor housing, use a soft damp cloth and dry it afterwards with a dry towel. Do not immerse blender motor housing in liquid.
- All removable parts of the blender should be detached and washed in warm soapy water. Dry with a dry towel before use.
- The blender has a pulse / clean function. This feature will allow the removal of easy to clean ingredients from the jug if you wish to add a second mix. Empty initial ingredients from the jug, fill jug with warm water and place on blender motor housing. Fit lid securely and select Pulse / Clean. Blender will operate in short bursts. Empty this water before adding further ingredients.