




SANYO

SW 9000P

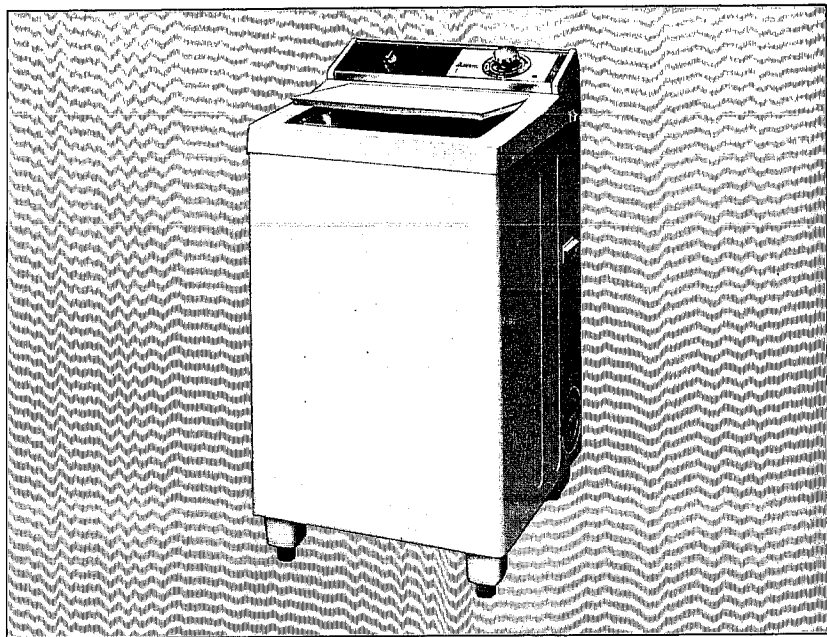

**SANYO FULLY
AUTOMATIC WASHER
OPERATING INSTRUCTIONS**


三洋全自動洗衣機使用說明書

Thank you for your purchase of the Sanyo Fully Automatic Washer.
Please read these instructions carefully before using.

深謝惠購三洋全自動洗衣機。

當要使用以前，請細讀此本小冊子以便掌握正確得宜的操作要領為荷。

NAME OF PARTS 各部位名種

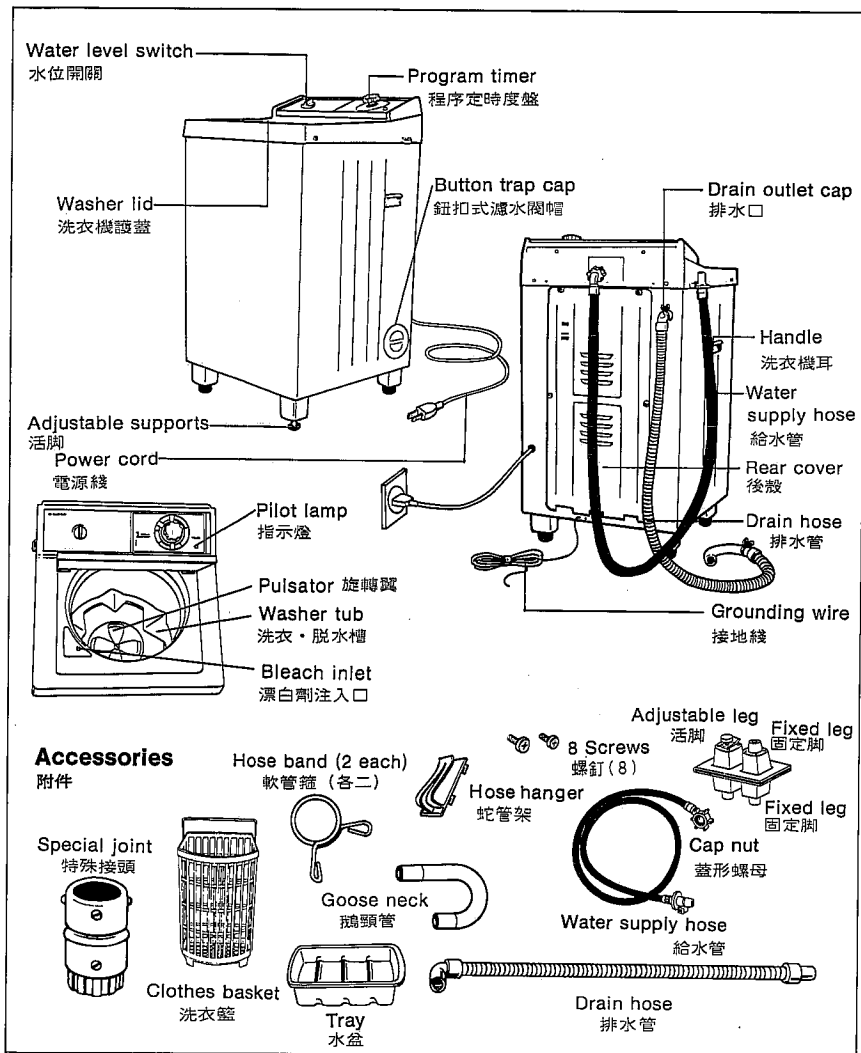




INSTALLATION (1)

1. legs

1. Remove accessories (4 legs, 8 installation screws)
2. Lay the unit on its side so that the front faces down. Install the adjustable leg on the front part of the unit and the fixed legs on the other three locations with a screwdriver (+).

Note: When laying the unit on its side, be careful to avoid scratching it. It is advisable to place some soft material or a rug under it to protect the surface.


3. Use 2 screws to attach each leg as shown in the Figure.
4. When the legs are secured, stand the washer up and install it in its proper place.

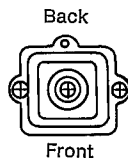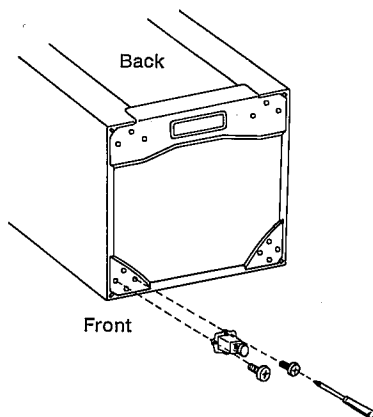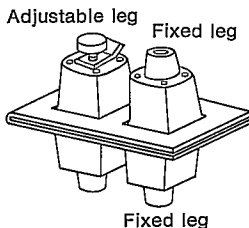

INSTALLATION (2)

2. Place

1. Make sure the place you select provides easy access to water, electrical power and drainage.
2. Choose a dry spot. Water damage can be diminished by putting a thick wooden base underneath the washer.
3. Do not install the washer outdoors in regions where the temperature drops below the freezing point. If this cannot be avoided, drain the washer completely after use.
4. Install the washer on a firm, level surface. Balance and secure it by:
 - a) turning the adjustable support, and
 - b) clamping it after adjustment.

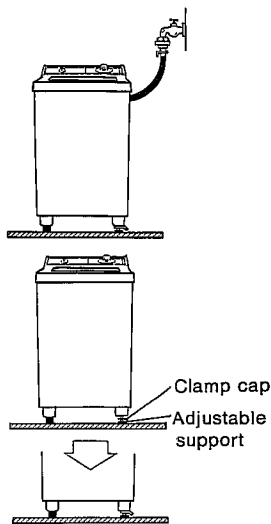


3. Water supply hose

1. Choose a faucet with a round opening. If a spare faucet is available, the hose can be connected semi-permanently for added convenience.




2. Loosen the screws of the special joint and make a clearance of about 3mm between sections A and B. Mount section A of the joint onto the faucet. Then push section B upward and, holding it in this position, tighten the screws with a screwdriver.

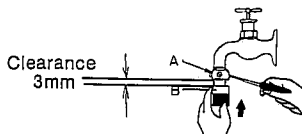


3. Turn section B clockwise as far as it will go. This will attach it securely to section A.



4. Section C, which is connected to the free end of the water supply hose, fits snugly into section B with a click. To disconnect, push the sleeve of section C upward and pull.

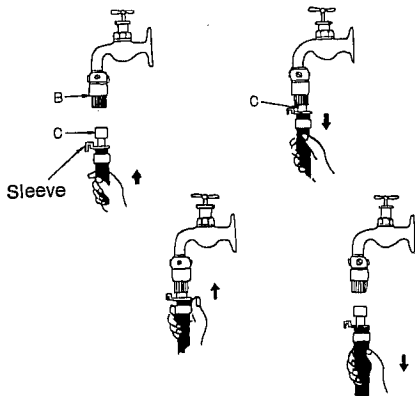


5. For attaching the other end of the hose to the washer, simply tighten the cap nut securely to the water supply valve.

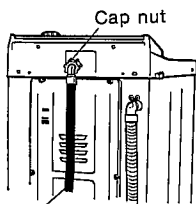

Water supply hose

4. Drain hose

1. Slip hose bands onto both ends of the drain hose.
2. Attach the goose neck to the free end of the drain hose and secure it with a hose band. (Hook it over a sink or tub for drainage).
3. Attach the other end to the drain outlet in the rear of the washer and secure it with a hose band.

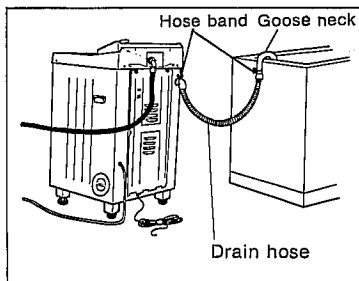


5. Power cord

1. This model is designed to operate on ordinary house current (local voltage). Plug the power cord into the nearest outlet.
2. Do not overload the outlet with more than one appliance.

6. Grounding

1. Connect the grounding wire to a water faucet if the pipe is made of metal.
2. For maximum security, attach the grounding wire to a copper plate or grounding rod and bury it at least 75cm in the ground. Make sure that the power cord is unplugged during grounding work.

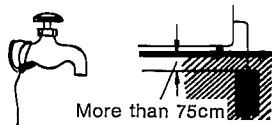


3. Never connect the grounding wire to a gas pipe.

Note: There is no need for a grounding wire when a 3-pin plug is attached to the power cord.

HOW TO USE (1)

1. Program Timer

- Pull the knob in the center of the timer dial and the washer will start operation. Push it to stop.
- The washing program for fully automatic operation is described in the table below:

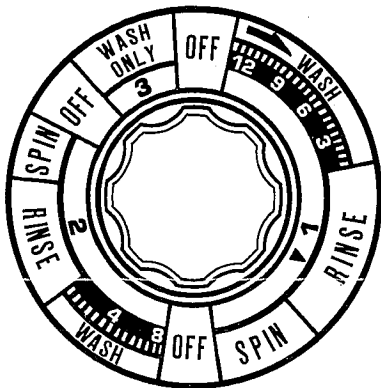

Cycle Fabrics	Normal cycle (1)	Economy cycle (2)
	Heavy to medium soilage	Light soilage (synthetic, fiber, wool)
Wash	6—12 min.	4—8 min.
Drain	2 min.	2 min.
Rinse (1)	4 min.	4 min.
Drain	2 min.	2 min.
Rinse (2)	2 min.	—
Drain	2 min.	—
Spin dry	6 min.	4 min.

- WASH.** Set the program timer according to the fabric and the degree of soilage. The time can be readjusted during operation.

Clothing	Washing time
Silk, wool, synthetic fiber	4—6 min.
Cotton, linen	6—10 min.
Heavily soiled cotton or linen	10—12 min.


d) **WASH ONLY.** This cycle is also automatic. Two loads of laundry can be washed without changing water and detergent. At the end of the first WASH ONLY cycle, take out the first load and put in the second load. Then advance the timer dial to the normal washing cycle and pull the knob.

e) **PRE-WASING.** For very heavily soiled laundry, use the WASH ONLY cycle which takes about

3 minutes. Then turn the knob until it points to the triangle "▽" mark in the center of the RINSE section to drain the water. Note that silk, wool, synthetic fibers and light clothing do not require pre-washing.

f) **DRAIN or SPIN DRY.** Turn the knob until it points to the SPIN section of the normal cycle.

2. Water Level Switch

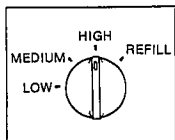

a) Choose the water level in accordance with the type of laundry and the amount. Use the following chart:

Clothing	Fabric	Low water level	Medium water level	High water level
Shirts	Cotton	6	8	11
Shirts	Synthetic	7	9	12
Children's wear	Cotton	16	20	27
Sheets	Cotton	3	4	5
Aprons	Cotton	5	6	8
Undershirts	Cotton	11	14	18
Pajamas (top and bottom)	Cotton	3	4	5
Winter shirts	Cotton	4	5	7

Note: This chart indicates standard washing capacities. For the best results, limit the load to about 80% of the figures given above.

HOW TO USE (2)

- b) Low is for a load capacity of up to 3.3 lbs. MEDIUM is for loads from 3.3 lbs. to 4.3 lbs. HIGH is for loads over 4.3 lbs.
- c) The water level switch can also be used to replenish water in the washer tub. Turn to REFILL and additional water will be supplied. Turn it back to its original position to stop water supply.

3. Amount of Detergent


It is necessary to adjust the amount of detergent in accordance with the water level, the program cycle and the type of detergent being used. Refer to the following chart only for general standards and adjust according to the above regarding the amount of detergent for the Normal Cycle and the Economy Cycle.

If the same amount of detergent for the Normal Cycle, or more, is used for the Economy Cycle, the effectiveness of rinsing is adversely affected.

Water level	Normal cycle	Economy cycle
	Detergent	Detergent
HIGH	40~50g	20~25g
MEDIUM	35~45g	17~22g
LOW	30~40g	15~20g

4. Bleach Inlet

- a) Pour bleach into the washer through the bleach inlet after it has been properly diluted. Use the following chart for proper quantities:

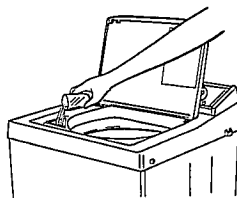

Water level switch	HIGH	MEDIUM	LOW
Bleach (undiluted)	70 cc	60 cc	50 cc

- b) Do not use bleach for coloured fabrics.
- c) Wash the bleach inlet with water after using it.
- d) Do not leave water with bleach in the washer tub for a long period of time. Drain after use.

WASHING

1. Before operation


- a) Check the water supply and drain hoses, power cord and grounding wire.
- b) Open the faucet that is connected to the water supply hose. (Hot water (30 to 40°C) can be used.) If the water level switch is set at LOW, 28 liters are required. MEDIUM takes 32 liters and HIGH takes 36 liters.
- c) Sort out the laundry according to fabric. Silk and other delicate fabrics should be placed in a nylon net for extra protection.
- d) Put in the proper amount of detergent. Apply it directly to collars, cuffs and other areas that are heavily soiled. Low-foam detergent is recommended.
- e) Adjust the water level switch.
- f) Set the program timer and pull the knob to begin operation.
- g) If bleach is to be used, pour in through the bleach inlet during operation.

2. After operation

- a) Push the program timer knob to turn off the washer. The washer can be turned off at any time during operation.
- b) Close the faucet and, if necessary, disconnect the water supply hose.
- c) Unplug the power cord.

SOME USEFUL INFORMATION

1. The washer will not operate until the water has risen to the pre-set level.

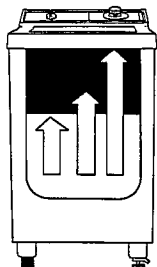


2. A built-in safety switch cuts off power and stops spin-drying if the drum begins to excessively vibrate. To correct this, open the washer lid, re-load the laundry evenly and then close the lid again. Spin-drying will continue.
3. Dirt or lint may collect underneath the pulsator. Clean out occasionally by:




- a) turning the pulsator screw counterclockwise with a screwdriver,
- b) lifting out the pulsator, and
- c) wiping clean the bottom of the wash tub.

4. If water supply pressure runs low, i.e., it takes more than 4 minutes to reach the LOW water level, disconnect the water supply hose. Then disassemble the strainer, ring and 2 washers in the water inlet. Reassemble them after cleaning or replacing the strainer, and re-attach the water supply hose. When the strainer is clean, water supply pressure increases by 20 to 30%.
5. The spin dryer does not rotate unless the lid is closed. To stop the drum, open the lid.
6. The built-in drain pump is capable of discharging water to a maximum height of 1.5 meters. If the drain hose is more than 7 meters long, the dischargeable height is reduced to 0.8 meters. Refer to the following diagram for proper drainage:

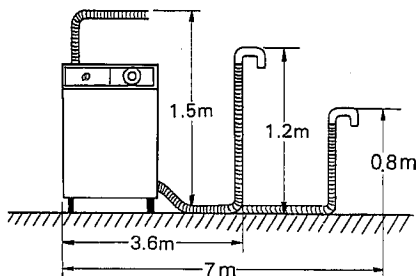

A FEW THINGS TO REMEMBER

1. Keep the washer lid closed during operation. If the lid is left open, the spin dryer drum will not rotate.
2. Never put your hand into the dryer drum until it has come to a complete stop.
3. Keep the water faucet open throughout the entire washing process.
4. Do not splash water on the switch panel.
5. Keep the washer away from heat sources. Do not put lit cigarettes or inflammable liquids on it.
6. To allow good air circulation, install the washer at least 5cm from the wall.
7. To prevent water from spouting out of the water supply hose when disconnecting it from the water faucet, turn the timer to WASH and pull the timer knob in for a few seconds. This will drain water from the hose.
8. If there is any danger of freezing:
 - a) Turn off faucet, set the program timer to WASH and pull out the knob. (When disconnecting the water supply hose to reduce water pressure be careful to avoid spouting.)
 - b) After disconnecting the water supply hose, turn it down and drain it completely. It will take about 1 minute to drain.
 - c) Set the program timer to the final SPIN in the normal cycle course, pull out the knob and drain the water completely from the tub.
 - d) Pull out the stopper of the drain outlet and drain any remaining water in the pump.
9. The button trap must be cleaned out occasionally.
 - a) First, place a pan with about a 2-liter capacity in front of the button trap cap.
 - b) Pull out the rubber cap and pre-drain.
 - c) Remove the entire button trap cap by turning it to the left.
 - d) Remove the filter and clean it.
 - e) Replace all parts.

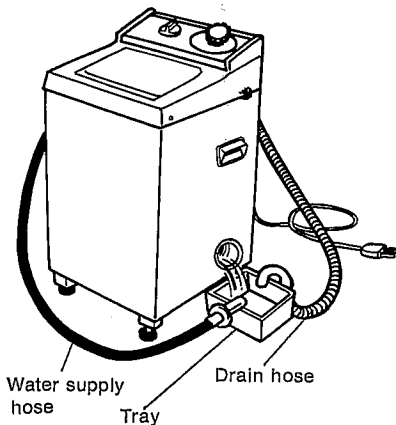



IN CASE OF TROUBLE

1. If the washer fails to operate properly after the completion of all necessary preparations, check the following:
 - A) When the washer does not operate at all, see if
 - 1) the knob of the program timer has been pulled out,
 - 2) the power cord is properly connected,
 - 3) a fuse is blown or a circuit breaker is open, or
 - 4) the washer lid is open (for spin-drying).
 - B) When the washer operates but no water is supplied, see if
 - 1) the faucet is open and water is flowing,
 - 2) water is frozen in the water supply hose,
 - 3) the strainer in the water supply valve is clogged, or
 - 4) the washer lid is open (for spin-drying).
2. If there is a power failure during the washing operation, leave the washer switched on. It will continue operation when power is restored.
3. If the water supply is cut off during the washing operation, switch off the power and disconnect the water supply hose from the faucet. When water supply is resumed, it is often dirty and rust-coloured. Run the water until it becomes clean again, and then re-connect the supply hose.
4. Switch off the power if there are noticeable fluctuations in voltage (e.g., fluorescent lights go on and off).
5. A decrease in water pressure will mean that the washing cycle time takes longer. This does not denote a malfunction.
6. Rusty water can stain the laundry. In some areas it is necessary to detach the water supply hose before operation and let the water run until it becomes clean.

If troubles other than those mentioned above occur, contact the store where you purchased your washer or a Sanyo Service Center in your area.

CARE AND MAINTENANCE

1. Wipe your washer clean and dry with a soft cloth. Do not use brushes or polishing powder.
2. If the temperature is likely to drop below the freezing point, detach the water supply hose and drain all water from the washer.
3. If water does freeze in the washer, pour hot water (about 60°C) into the tub until the pulsator is submerged. Do not switch on the power until the pulsator can be turned by hand.

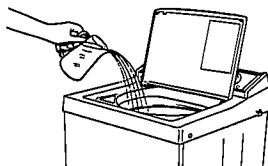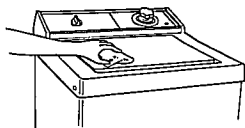

SPECIFICATIONS

Power source	AC: local voltage
Motors	Washing: 360W input
	Draining: 115W input
Water levels	LOW : 28 liters
	MEDIUM : 32 liters
	HIGH : 36 liters
Program timer	64-minute electric timer
Pulsator	730—760 rpm
Spin dryer	820—850 rpm
Spin drying method	Centrifugal spin drying
Service water pressure	Below 143 PSI
Dimensions	35-5/8" (H) x 20-1/4" (W) x 20-1/2" (D) (905 x 515 x 520mm)
Weight	66 lbs. (30 kg)

安裝要領 (1)

1. 支脚

- 1) 附有支脚連固定螺釘 (8支) 一共 4套。請取出之。
 - 2) 請橫放洗衣機。洗衣機之前面要朝下。用十字螺絲起子固定支脚，如下：即洗衣機之前面部位配以一個活脚，而其餘的三個部位均為固定脚。
- 請注意：**橫放洗衣機時，要鄭重其事地行之，以免損傷其外表之美觀。例如敷一層柔軟的單子才橫放在其上面是一個很好的辦法。
- 3) 各支脚均要用所附的螺釘兩支加以固定，如圖所示。
 - 4) 支脚固定了之後，就扶起洗衣機來安裝於適當的場所。

