 


CAUTION: Please check the Firm Ware version of your SET first as following STEP No. 10 ~ No. 13. If the FW Version is FD300*004*U-070819, please do not upgrade this FW with CD.



English

Method how to upgrade F/W

- 1 Power on.
- 2 Open the tray.
- 3 Put a F/W upgrade CD in the tray.
- 4 Close the tray.
- 5 Press [ENTER] after upgrade file is auto detected.




- 6 Remove the CD when the upgrade is finished.
(CAUTION : During upgrade, Don't turn off the power source.)

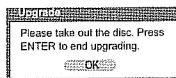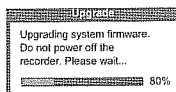


- 7 Pull out the AC Power plug.
- 8 Put in AC Power plug again.
- 9 Power on again.

- 10 Press [SETUP] button on remote control.
- 11 Move cursor to "System" Menu.
- 12 Select "System Info".

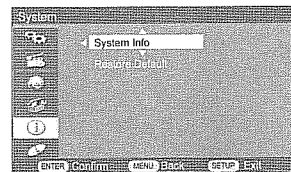

- 13 Check F/W Version : FD304*004*U-080103

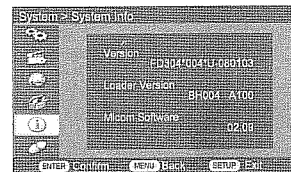

- 14 Select "Restore Default" & Press [ENTER].

