

SANYO

SANYO Australia Pty Ltd

CONSUMER ELECTRONICS DIVISION

TECHNICAL BULLETIN No. 47 DATE: 5/1/01

SUBJECT: DC-DA-100/150/300 NO CD PLAY


Fault: Does not play CD's.

Cause: Dust on the Laser Pick-up Lens and Mirror.


Remedy: Remove the Laser Pick-up Lens assembly and using clean cotton-buds, clean the Lens and the Mirror. Refer to the pictures below.



Remove these 3 Screws

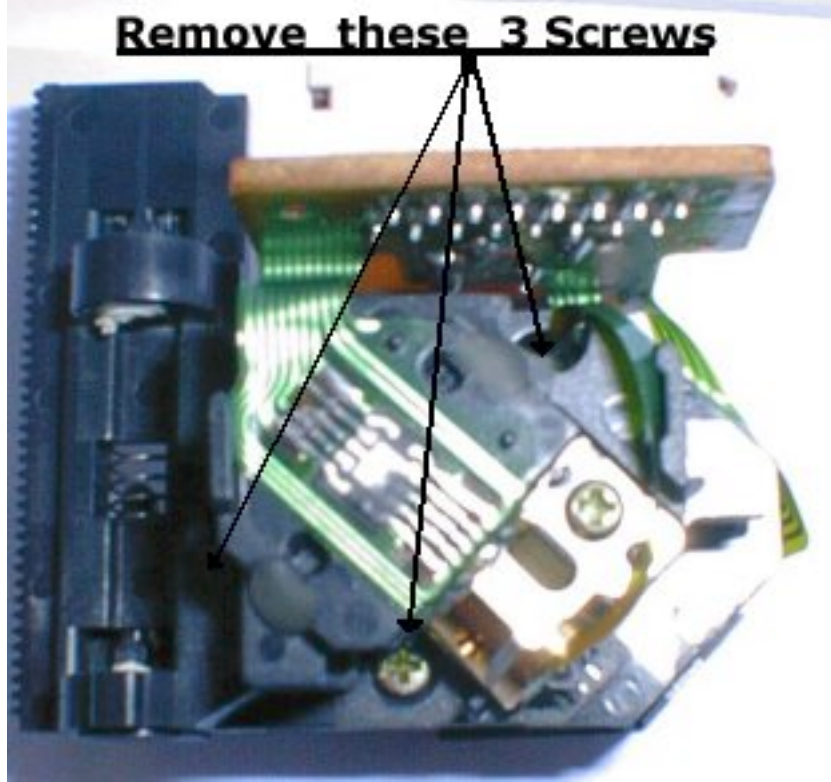

Clean the Lens Here

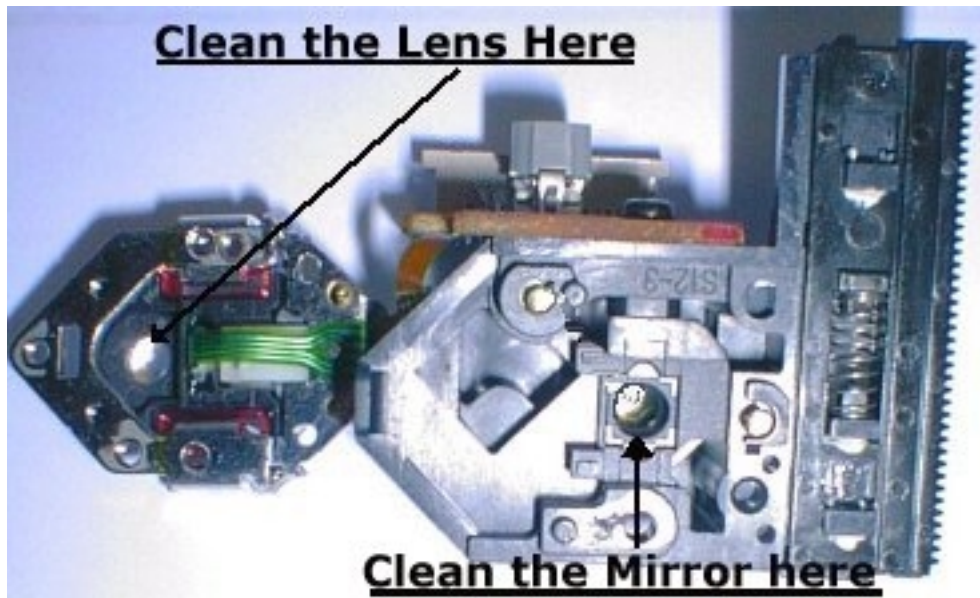

Clean the Mirror here