

SANYO

SANYO Australia Pty Ltd

CONSUMER ELECTRONICS DIVISION

TECHNICAL BULLETIN No. 57 DATE: 27/11/03

SUBJECT: DVD-SL20 MULTI-ZONE PROCEDURE

Method:

- Step 1.** Press the "Open"* button.
- Step 2.** Insert the Firmware Update CD-R into the Disc-Tray.
- Step 3.** Press the "Close"* button. (Display on Player and TV = "UP DATE")
- Step 4.** Wait until the Disc-Tray opens automatically.
- Step 5.** Wait until the set goes into "Stand By" (approx 20-30 seconds).
(Display on Player = "STANDBY")
- Step 6.** Remove the CD-R from the Disc-Tray. The firmware update is finished at this point.
- Step 7.** Switch the power OFF and ON at the power outlet.

Warning:

If the above procedure is not followed exactly or there is a power interruption during the upgrade process, the player will be damaged! The repair of this damage will be costly and NOT covered by warranty!

*Comment: The "Open" and "Close" buttons are the same button and marked as "Open/Close".