

SANYO

SANYO Australia Pty Ltd

CONSUMER ELECTRONICS DIVISION

TECHNICAL BULLETIN No. 73 DATE: 22/03/06

SUBJECT: DC-PT70 MULTI-ZONE PROCEDURE

Method:

- Step 1.** Turn the power on.
- Step 2.** Press the "Open/Close" corner of the CD/DVD lid to open it.
- Step 3.** Insert the Firmware Update CD-R onto the spindle
- Step 4.** Push down the CD/DVD lid to close it. (The display will show "READING" then "UPDATING")
- Step 5.** Wait until the set goes into "Stand By" (approx 20-30 seconds the display will show "GOOD-BYE" before it goes to stand by).
- Step 6.** Press the "Open/Close" corner of the CD/DVD lid to open it.
- Step 7.** Remove the CD-R from the unit and close the CD/DVD lid.

Warning:

If the above procedure is not followed exactly or there is a power interruption during the upgrade process, the player will be damaged! The repair of this damage will be costly and NOT covered by warranty!