 


SANYO

 
INSTRUCTION MANUAL

Colour Television

C25PG41
C25ZG45
C29PK81
C29PK86
C29ZK81
C29ZK86

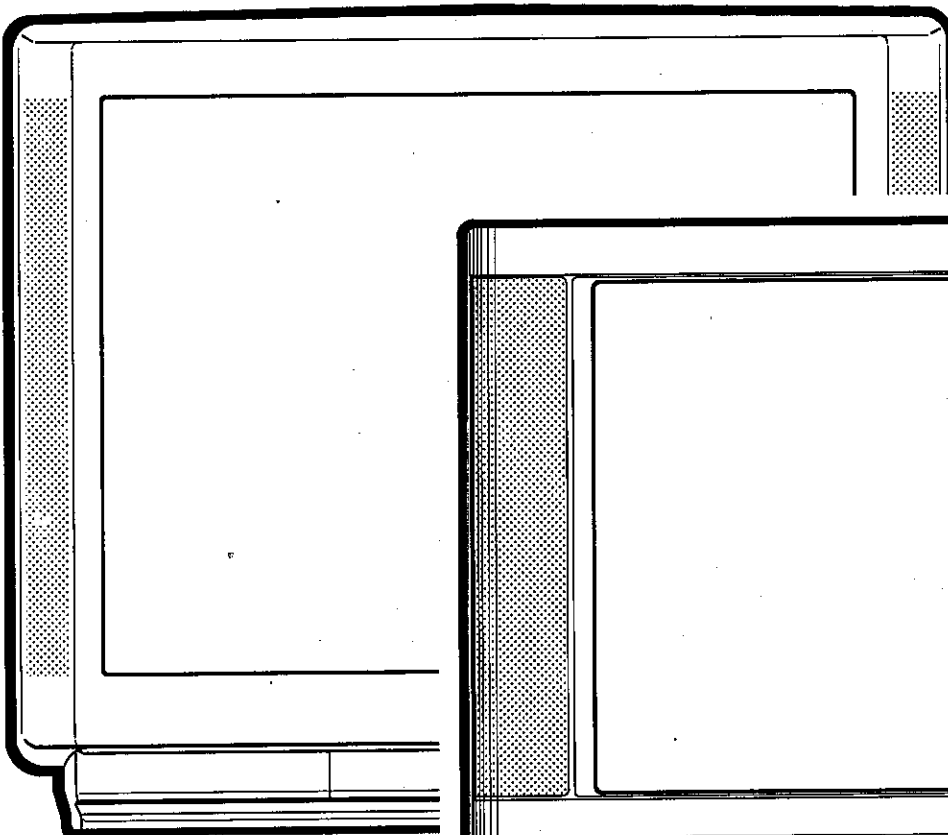

C29PK81/86, C29ZK81/86

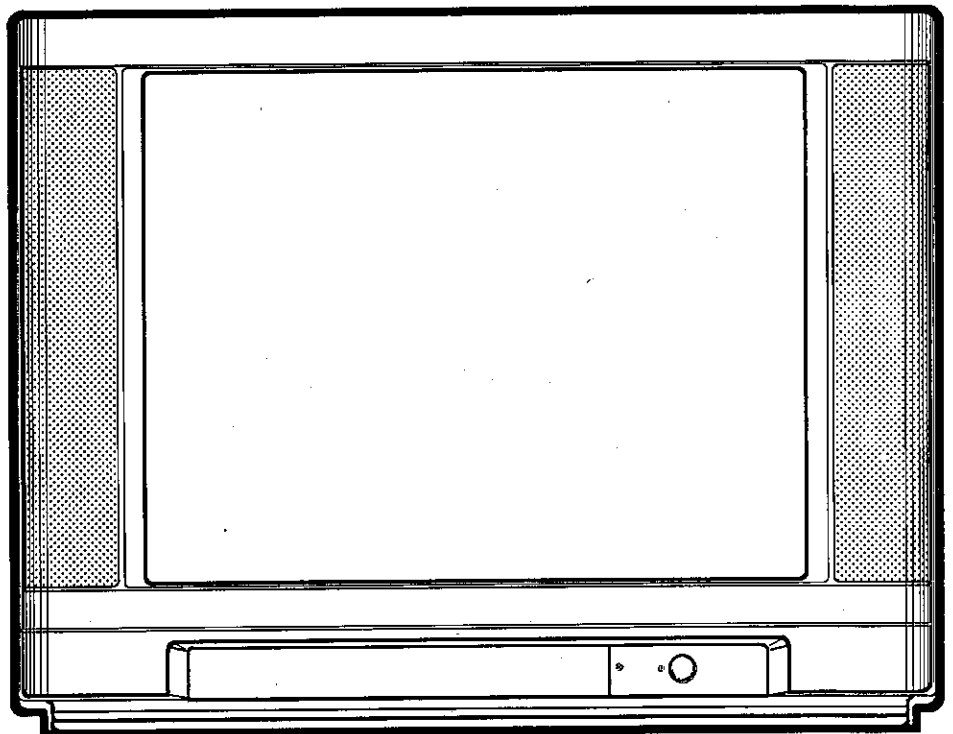

C25PG41, C25ZG45

STEREO
SURROUND
TELETEXT
VIDEO MULTI TERMINAL (PAL/NTSC/NTSC4.43)
BLUE BACK FUNCTION ON AV MODE

Model C25PG41, C29PK81, C29PK86 – Equipped with the West Germany Stereo Decoder.

Model C25ZG45, C29ZK81, C29ZK86 – Equipped with the West Germany Stereo Decoder and NICAM Digital Stereo Decoder.

Model C25PG41 – Teletext Decoder is an optional extra (Optional Teletext Decoder Type No. TX – 250).

Model C29PK81, C29ZK81 – Not equipped with the Teletext Decoder.


Contents

Electric Mains.....	2
Warnings and Cautions	3
Remote Control Transmitter (for Model C25PG41, C25ZG45, C29PK86, C29ZK86).....	4
Remote Control Transmitter (for Model C29PK81, C29ZK81)....	5
Front Controls	6
General Operation	
Power ON/OFF, Programme Selection(Direct Selection).....	7
Programme Selection(Programme UP and Down).....	8
Volume Control, Recall, Alternate.....	8
Bass Expander, Surround.....	9
Stereo and Bilingual Broadcast Receiving.....	9
NICAM Stereo and NICAM Bilingual Broadcast Receiving....	10
Sound Mute.....	10
OFF Timer, Memory, Normalization.....	11
Picture and Sound Adjustments.....	12
Tuning of the Channels	
Automatic Tuning, Channel Copy.....	13
Semi-Auto Tuning and Manual Tuning.....	14
Teletext Operation.....	15
Switching to the Teletext Mode, Page Selection.....	16
To Display the Index Page.....	16
Sub Coded Page Access	17
Viewing TV While Searching for a Page.....	17
Hold, Double Letter Height.....	18
Displaying Concealed Information, News Flash	18
Updated Page, Time	19
FLOF (Full Level One Feature), Non FLOF Service.....	20
Setting of the Private Position.....	21
Maximum volume level setting and suppression of channel tuning.....	22
Using the Remote Control VCR buttons.....	23
Connecting other Equipment	
Connecting to the AV1 Input Jacks.....	24
Connecting to the Front Panel AV2 Input Jacks.....	25
Connecting to the AV Output Jacks.....	25
To record a TV broadcast while watching the playback from a VCR.....	26
AV Connection to the Aerial Socket.....	27
Aerial Connection.....	28
Specifications.....	29

Electric Mains


AC 220 – 240 Volts, 50Hz.

 Warnings and Cautions

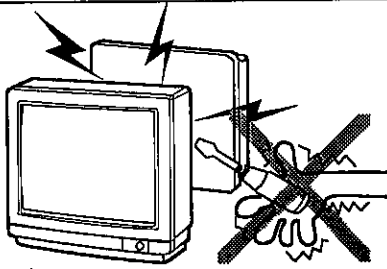


Warning

High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

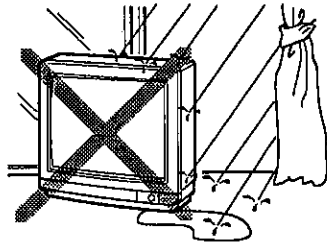


Warning

To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

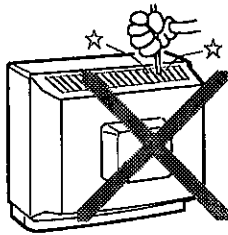


Warning

Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

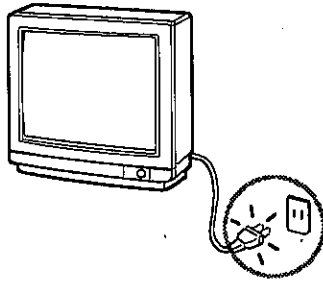


Caution

When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

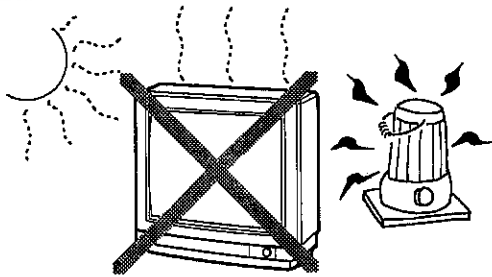


Caution

Avoid exposing the television receiver to direct sunlight and other source of heat. Do not stand the television receiver directly on other products which give off heat. E.g. video cassette players, audio amplifiers.

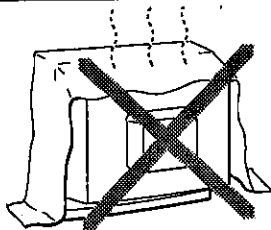

Caution


Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

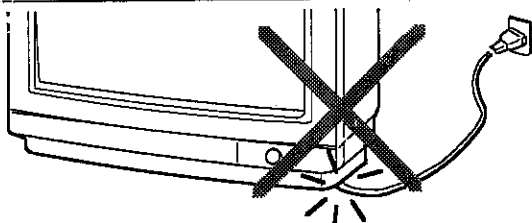

Caution

Do not squash power supply cord under the television receiver.

Remote Control Transmitter (for Model C25PG41, C25ZG45, C29PK86, C29ZK86)

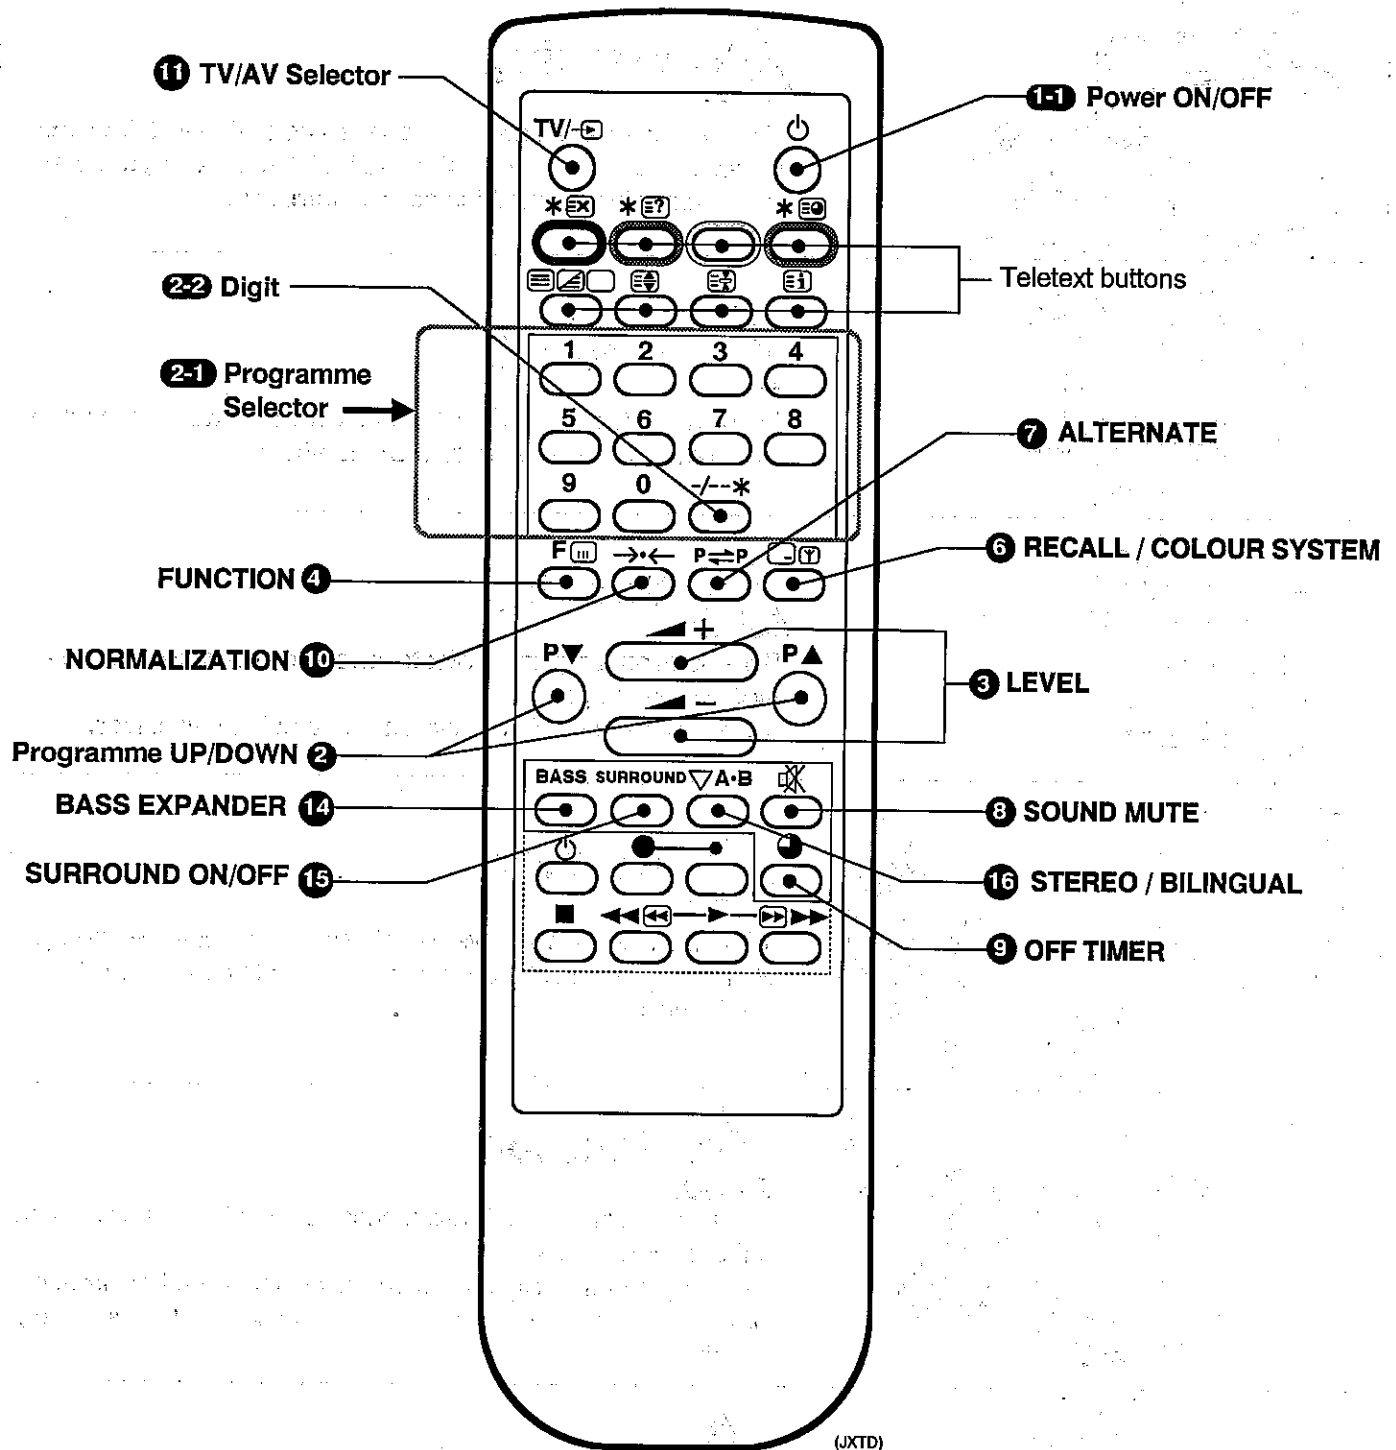


Battery installation of the Remote Control Transmitter

- 1** Remove the battery cover by sliding.
- 2** Install two "AA" 1.5 volt batteries so that the "+" and "-" marks on the batteries match the "+" and "-" marks inside the unit.
- 3** Close the battery cover.



Note: Replace the batteries when the TV set is showing the following symptoms:
 Operation is unsteady or erratic, sometimes the TV set does not work with transmitter.
 Discharged batteries may leak and damage the unit.
 The normal life of batteries should be from nine to ten months.

Remote Control Transmitter (for Model C29PK81, C29ZK81)


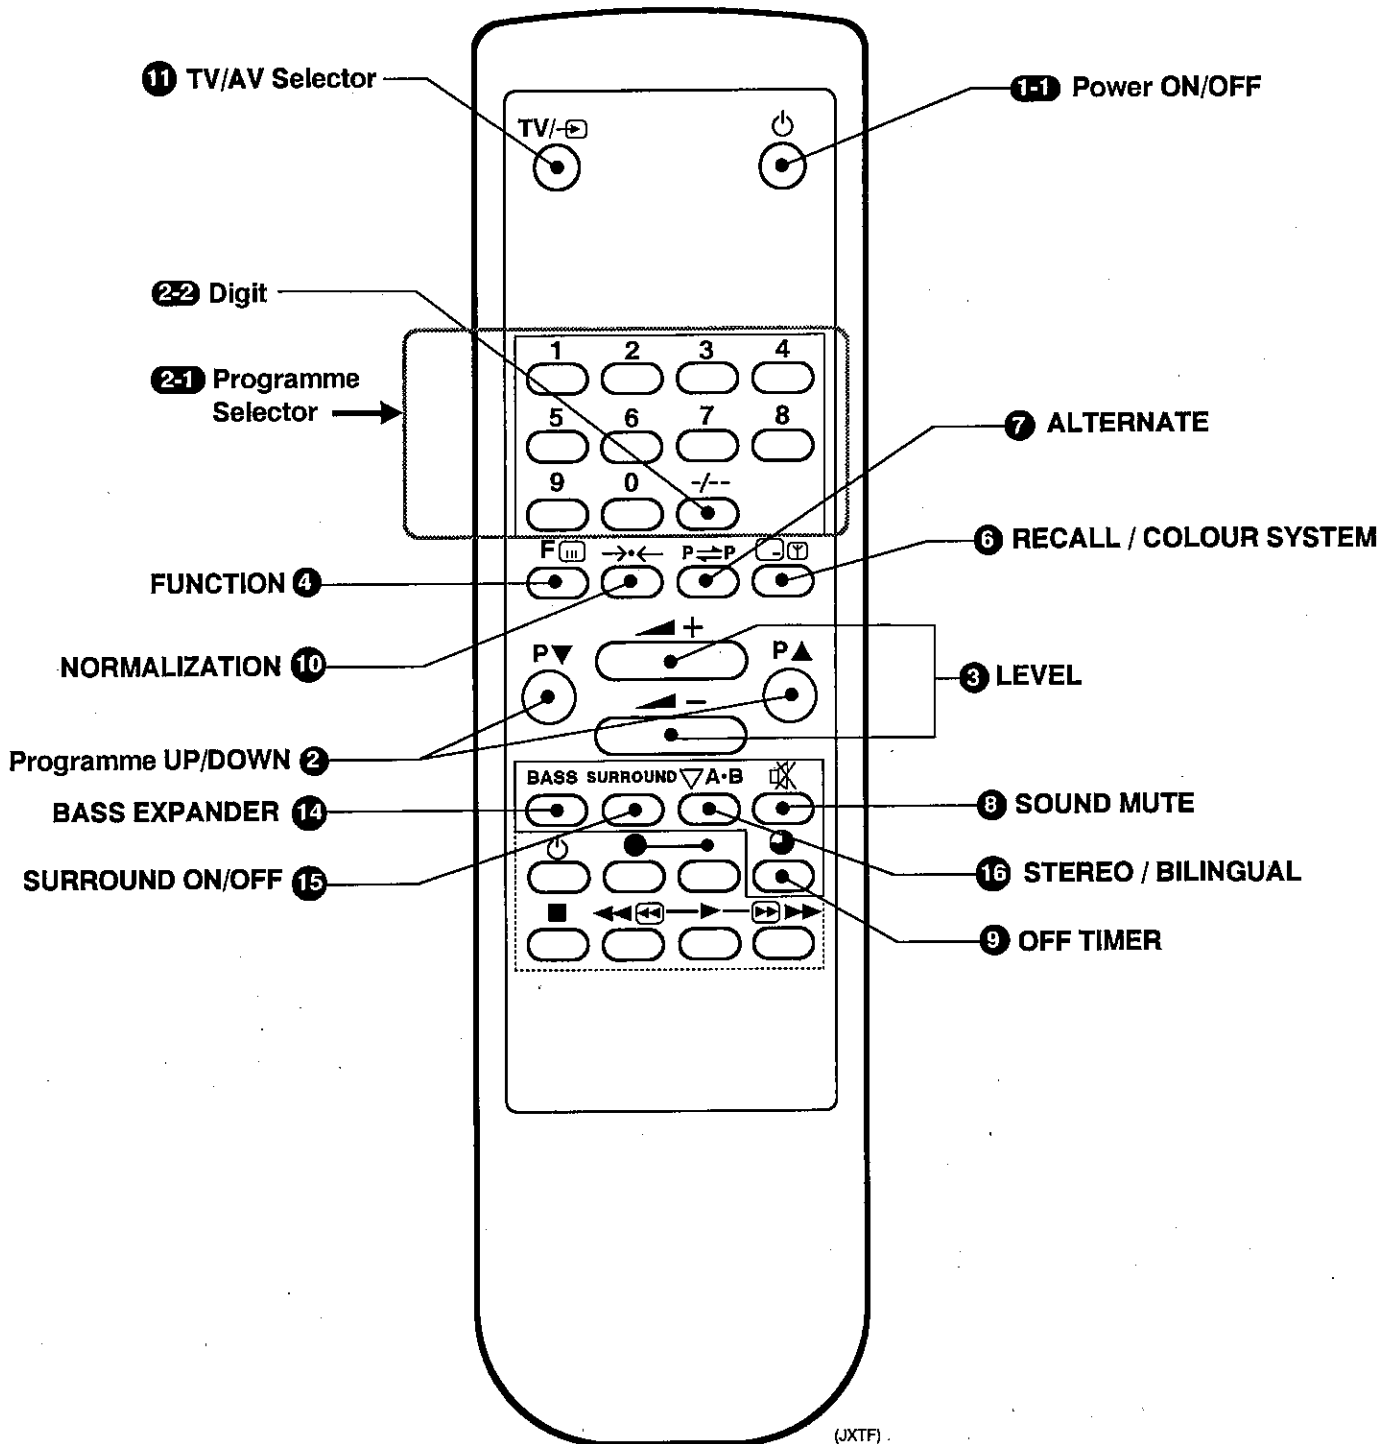


Front Controls

Model C25PG41
C25ZG45

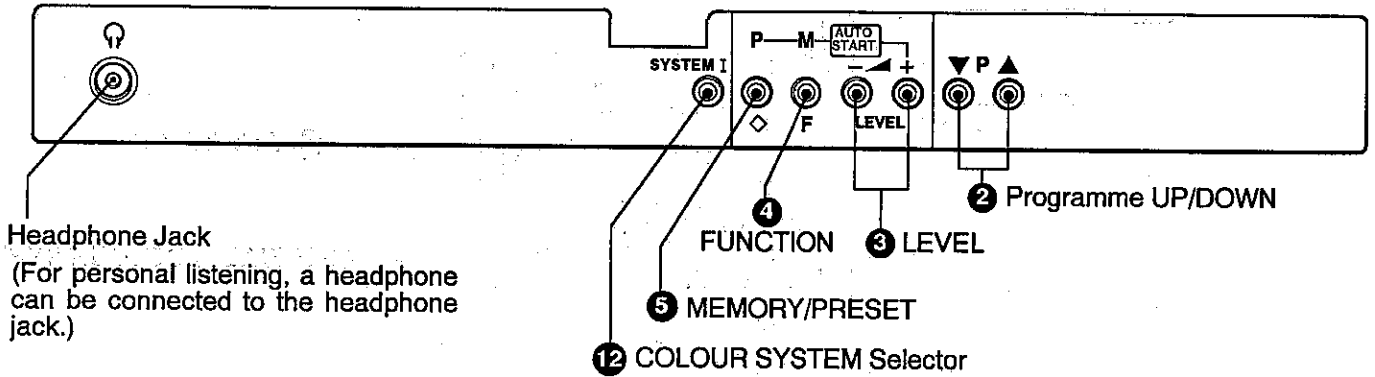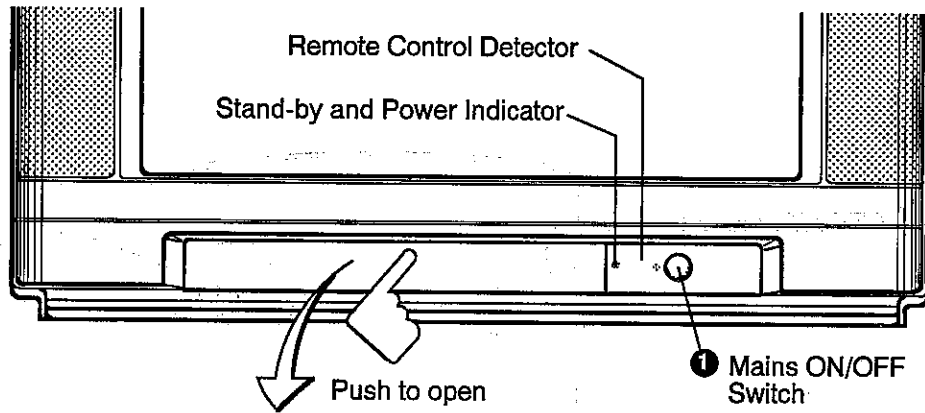

Model C29PK81
C29PK86
C29ZK81
C29ZK86

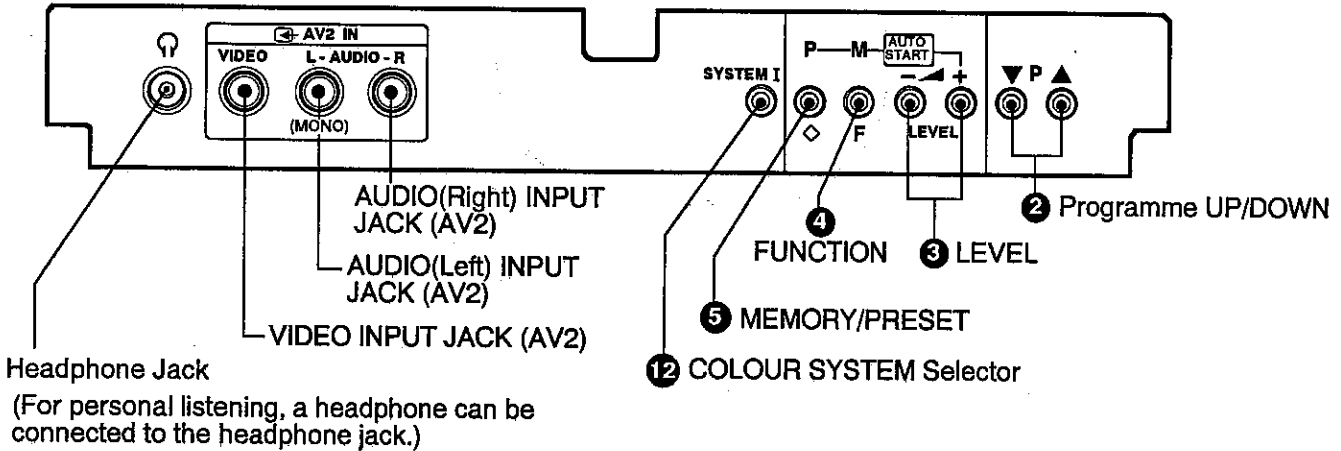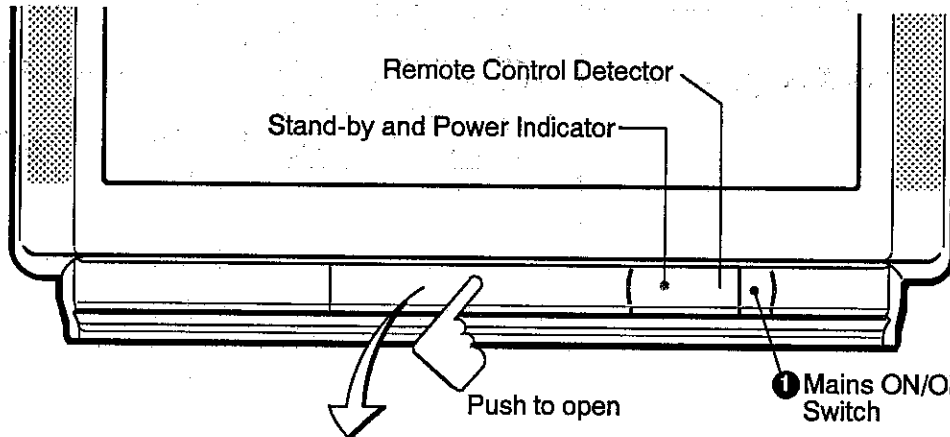  

General Operation


POWER ON/OFF

To switch on or off the TV;

Press the Mains ON/OFF button **1**


The power of the TV is turned on, or off completely.

To set the TV to standby mode;

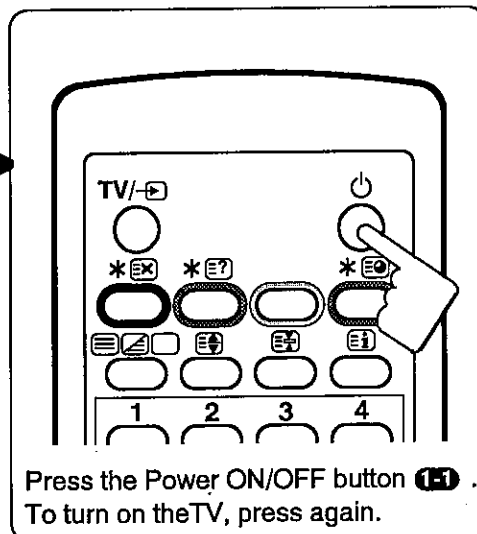


To turn on the TV from standby mode;

Press

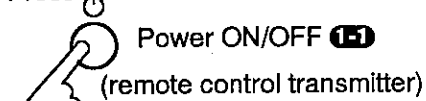


or

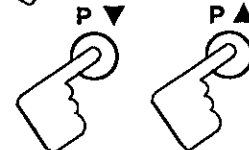


Programme UP/DOWN **2**
(remote control transmitter)

or 1 to 9, 0 Key

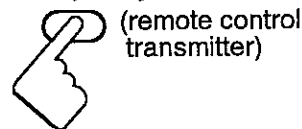

or

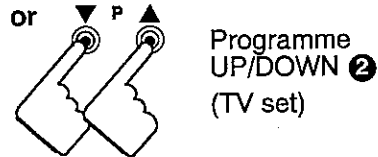

Important !


Be sure to set the Mains ON/OFF switch **1** to the off position, if the power failure occurs while viewing.

AUTO SHUT OFF

This TV set incorporates the AUTO SHUT OFF function.

Even if the TV is left on after you have gone to sleep, the TV set changes to the standby mode within 10 minutes after all broadcasts have ended.

Remaining time

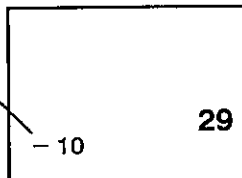


PROGRAMME SELECTION (Direct Selection)


To select a programme directly

For example



To select a programme 8

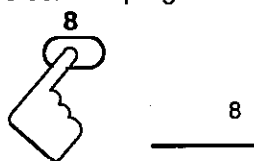

To select a programme 10

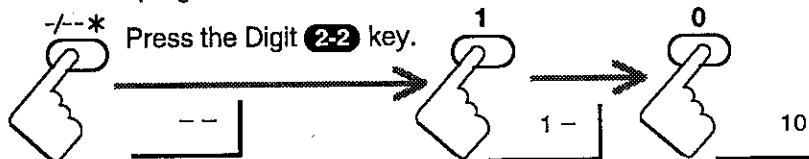


To select a programme 27

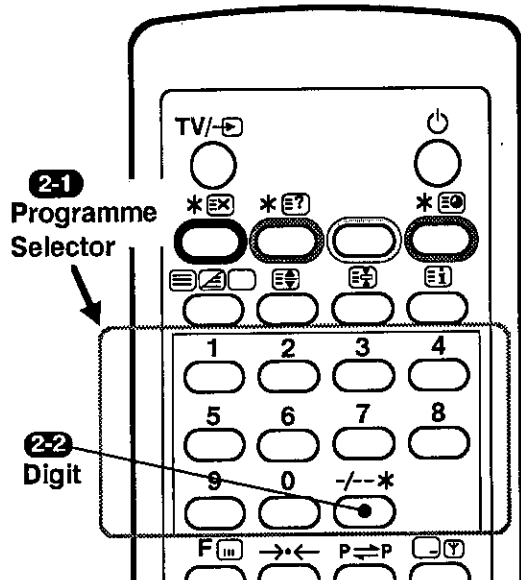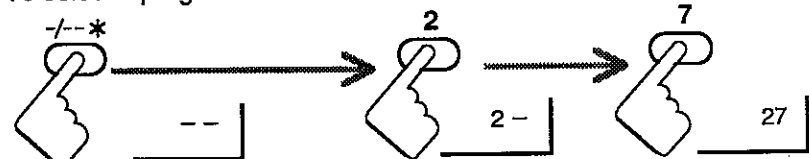 


General Operation

Programme Selection (Programme UP and Down)

To select a channel

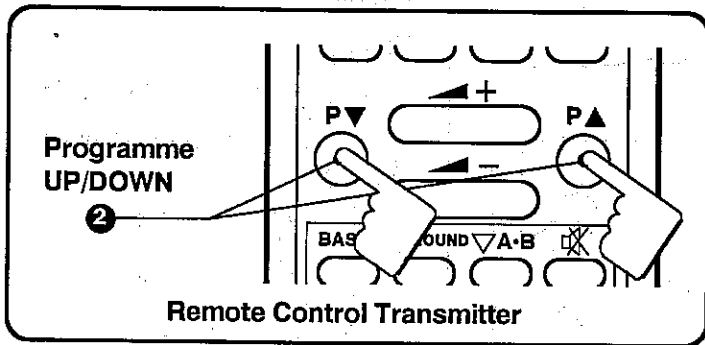


or


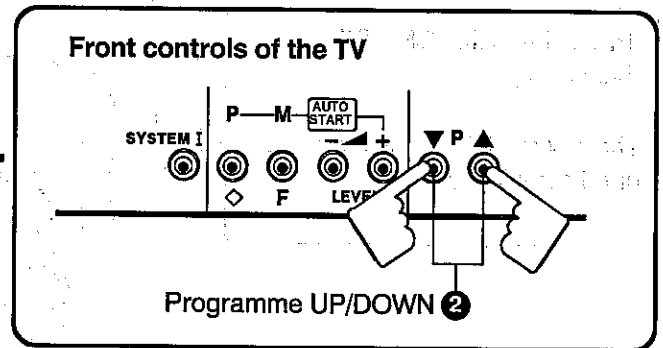


Volume Control

To adjust the sound volume


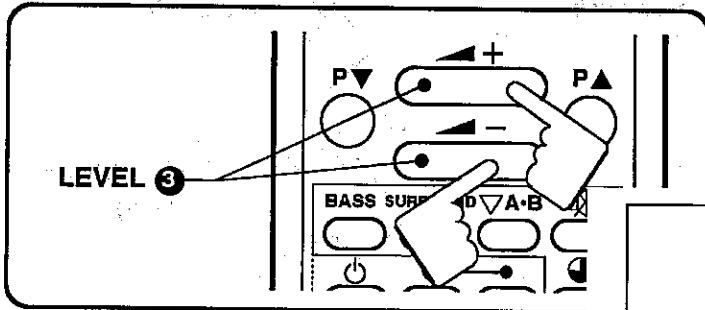


or

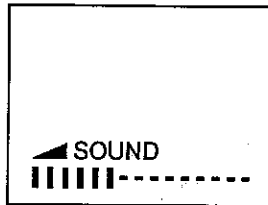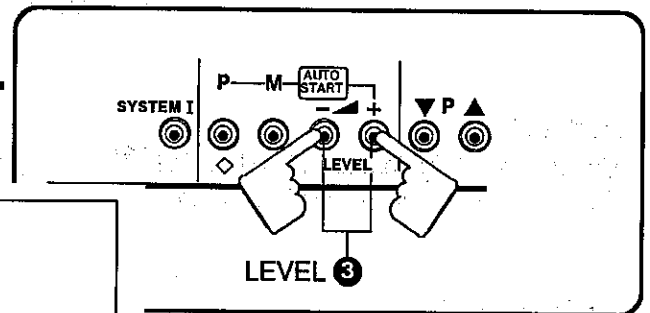

RECALL



To display the on screen indications, press the RECALL / COLOUR SYSTEM button.

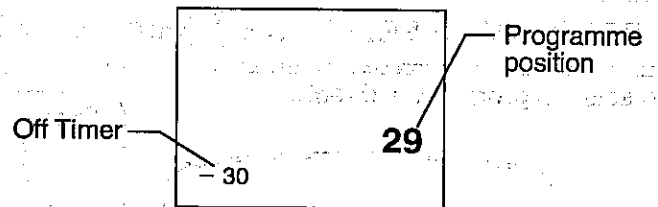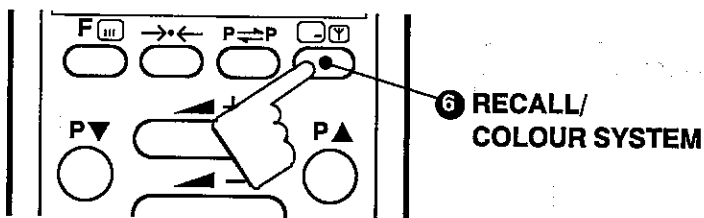

Screen display disappears after about 5 seconds.

ALTERNATE

Press the ALTERNATE (7) key, and the programme position will alternately select the previous position and the present position.

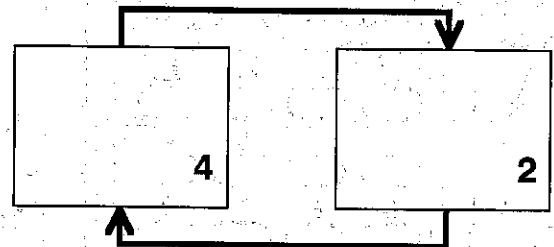
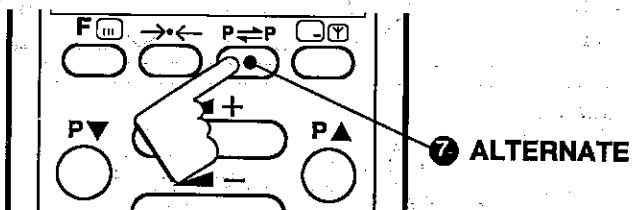


For example, now you are watching programme position "4" but you watched programme position "2" previously. If you press the ALTERNATE key, programme position "2" immediately appears.

General Operation

BASS EXPANDER



To get a emphasis bass sound, press the BASS EXPANDER 14 .

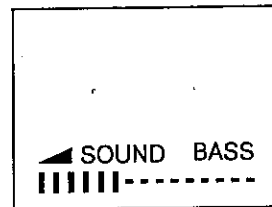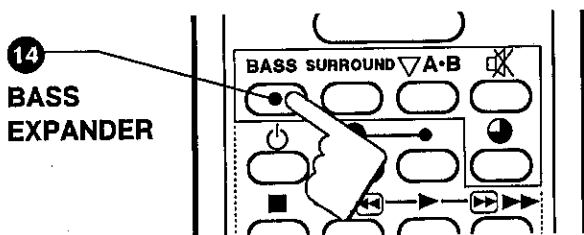

SURROUND

When the SURROUND ON/OFF 15 button is pressed with stereo broadcast receiving, you can enjoy the surround effect.


When the SURROUND ON/OFF 15 button is pressed with monaural broadcast receiving, you can enjoy the stereo effect.

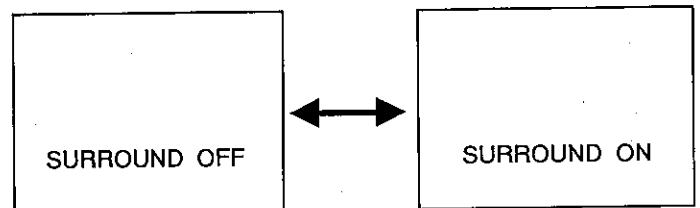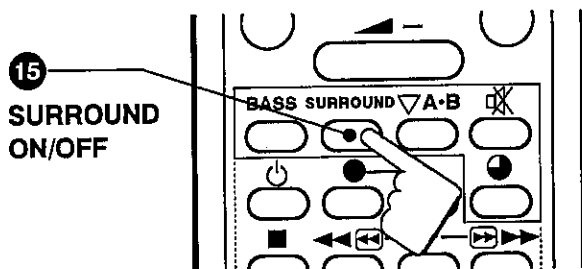

Stereo and Bilingual Broadcast Receiving


Stereo

When receiving the stereo broadcast, "STEREO" is displayed. You can select the stereo or monaural mode by pressing the STEREO / BILINGUAL button 16 and the display changes as illustrated.

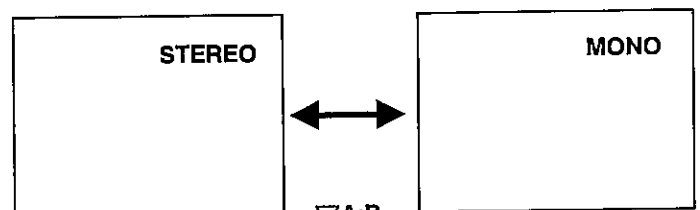

Bilingual

When receiving the bilingual broadcast, "A" is displayed. You can select the main (A) or sub (B) language by pressing the STEREO / BILINGUAL button 16 and the display changes as illustrated.


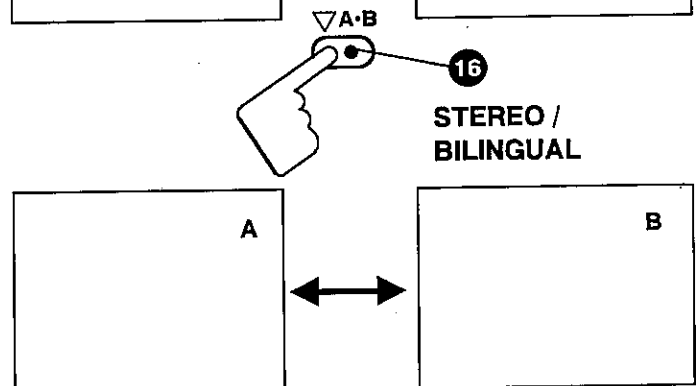


NICAM Stereo and NICAM Bilingual Broadcast Receiving

(Model C25ZG45, C29ZK81, C29ZK86 only)


NICAM Stereo

When receiving the NICAM stereo broadcast, "NICAM" is displayed. You can select the stereo or monaural mode by pressing the STEREO / BILINGUAL button **16** and the display changes as illustrated.

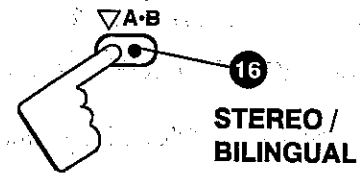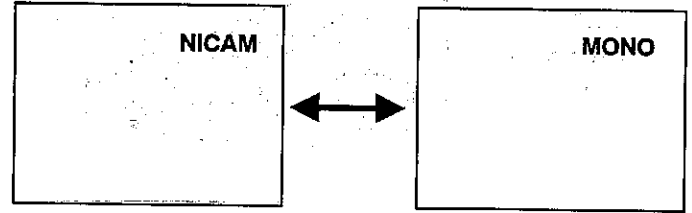



NICAM Bilingual

When receiving the NICAM Bilingual broadcast, "A" is displayed. You can select the main (A), sub (B) language or Mono by pressing the STEREO / BILINGUAL button **16**.

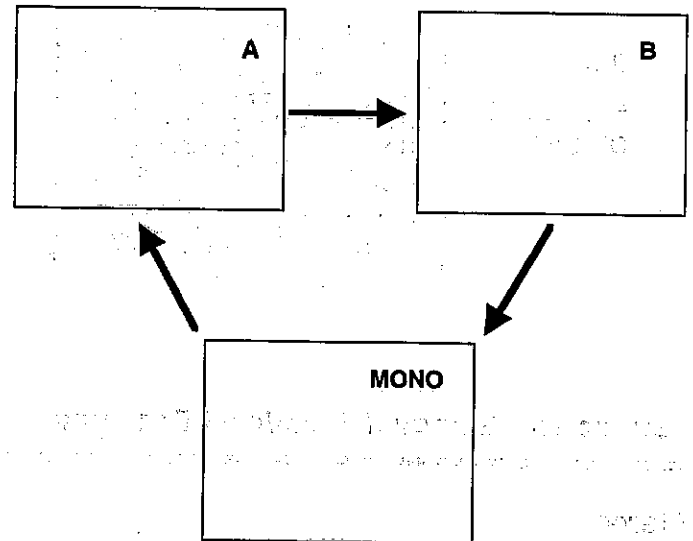

SOUND MUTE

Should you wish to mute the sound (e.g. While talking on the telephone), press the SOUND MUTE **8** key.

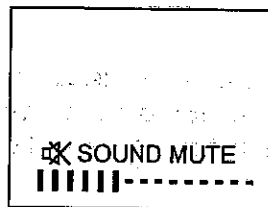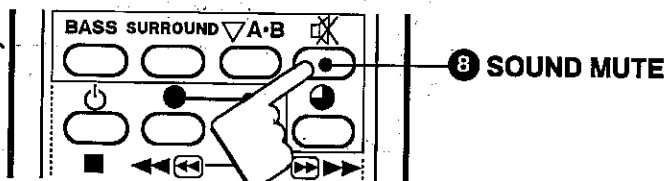



To switch the sound back on, press SOUND MUTE key again.

General Operation

OFF TIMER

The TV set will be turned off after about 30, 60, 90 or 120 minutes.


Press the OFF TIMER **9** key.

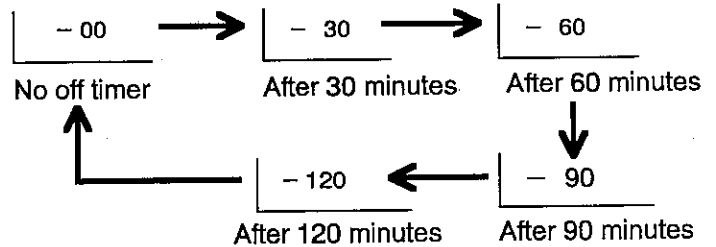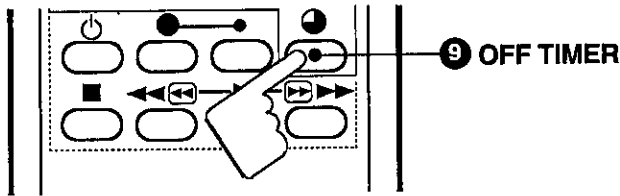

To cancel the OFF TIMER

Press the OFF TIMER key until " - 00 " appears.

Just one minute before switching off the TV, " - 01 " and channel number will be displayed on the screen.

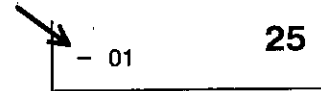


MEMORY


This function lets you store the settings (for colour, brightness, contrast, tint, sharpness, sound volume) in memory for both picture and the sound, and these setting levels can be recalled by pressing the NORMALIZATION **10** key of the remote control transmitter.

To store the picture and sound settings

(1) Set the picture and sound to the desired levels.

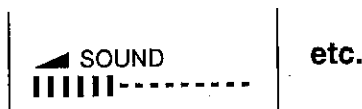


(2) Press the MEMORY/PRESET **5** button while the control function display is still visible on the screen.

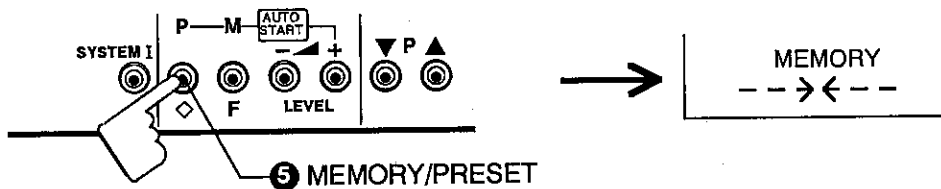


NOTE: The control settings will not be saved if the MEMORY button is pressed after the control function display has left the screen.

NORMALIZATION

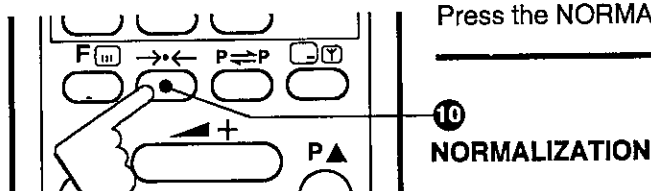

Press the NORMALIZATION **10** key.

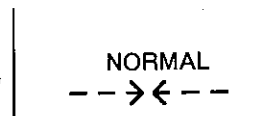



The colour, brightness, contrast, tint, sharpness and sound volume settings which you stored using the MEMORY button are recalled.

General Operation


Picture and Sound Adjustments

(1) Select the adjustment item using the **FUNCTION** **4** key.

 (2) Adjust using the **LEVEL** **3** + and - key.

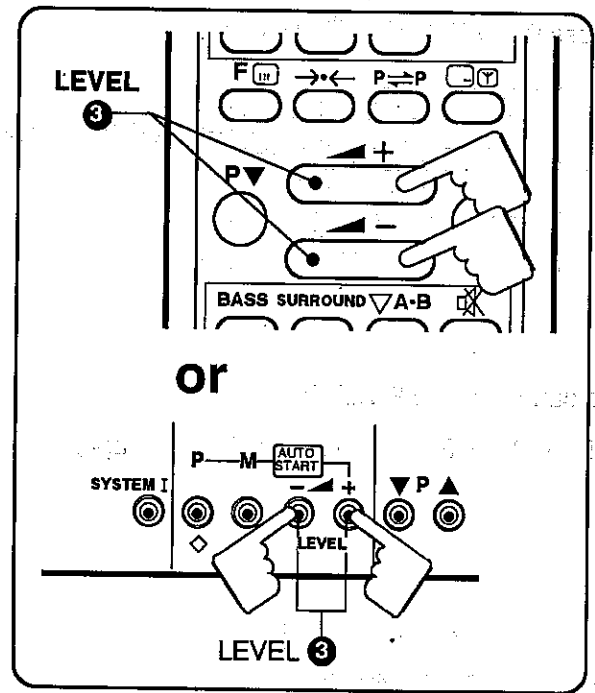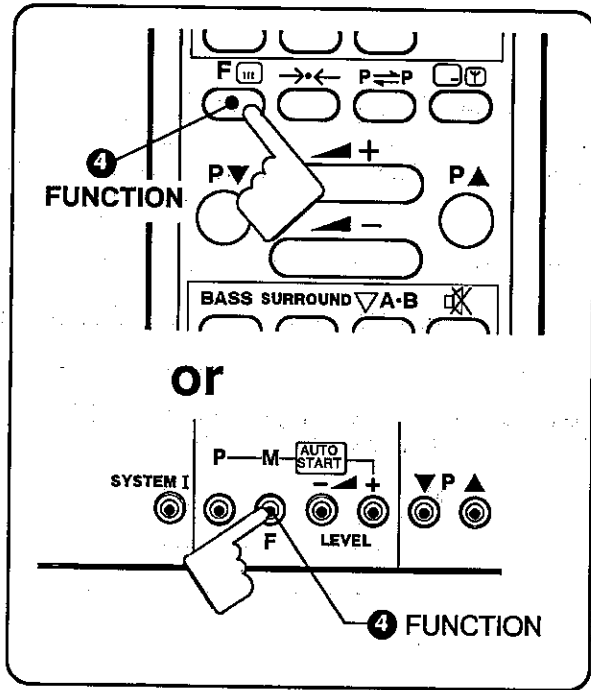

 Each time the **FUNCTION** key is pressed, function choice will change as follows;

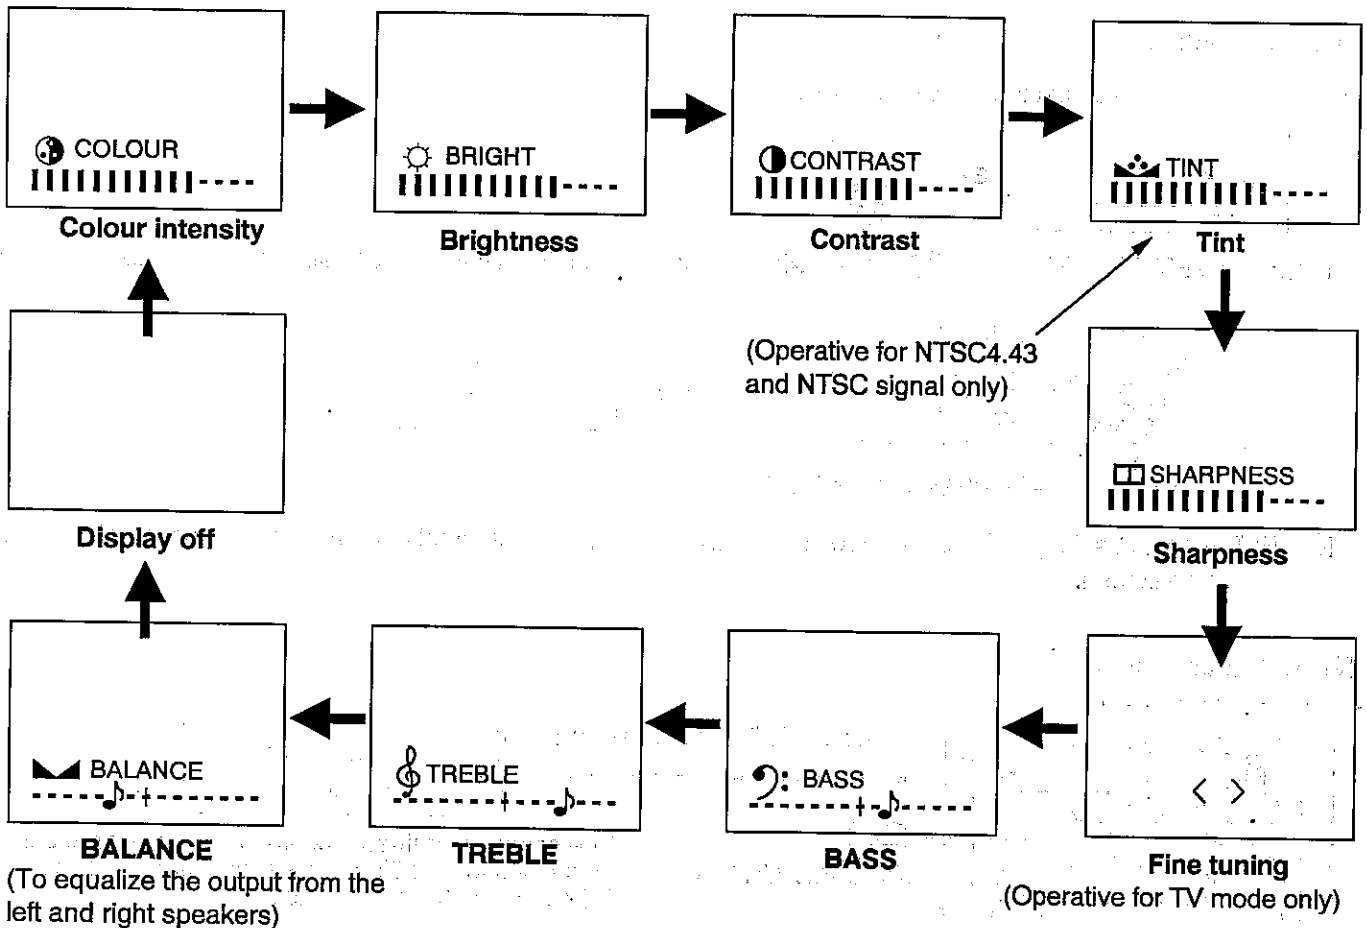

Tuning of the Channels

Model C25PG41, C25ZG45: Up to 30 broadcast stations can be stored in the memory.

Model C29PK81/86, C29ZK81/86: Up to 60 broadcast stations can be stored in the memory.

There are three ways of tuning as follows;

Automatic Tuning (the basic way)

All receivable channels are automatically tuned in and memorized in consecutive programme position.

Semi-Auto Tuning


Use to preset a receivable channel in any desired programme position, e.g. the position with the same number as the channel.

Manual Tuning


Manually tune a channel if it cannot be automatically tuned, such as when the signal is poor.

Automatic Tuning


(1) Press the MEMORY/PRESET button **5**.

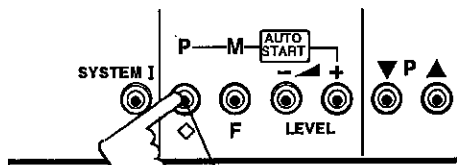


5 MEMORY/PRESET

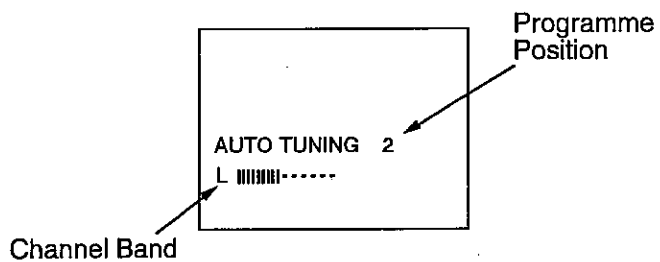

(2) Press the LEVEL (+) **3** button.

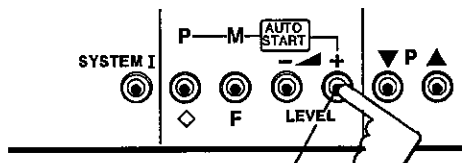


LEVEL (+) **3**

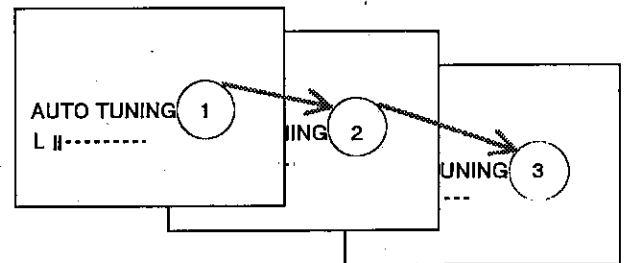

The channels are preset in consecutive positions beginning from the programme position "1".

After all available channels have been preset, the unit returns to the position "1".

Note: To cancel automatic tuning midway, press the MEMORY/PRESET **5** or Power ON/OFF **1-1** button.

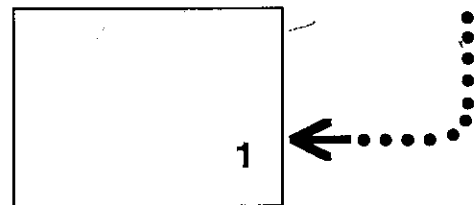


Channel Copy

Example: To copy the TV channel in the programme position 2 into the programme position 6


(1) Select programme position 2 using Programme selector **2-1**.



(2) Press the MEMORY/PRESET button **5** 3 times.

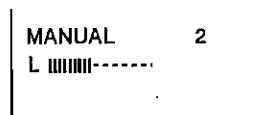


(3) Select the programme position 6 using Programme UP/DOWN **2** button of the TV set.

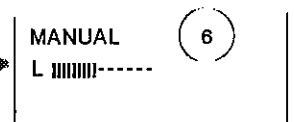

(4) Press FUNCTION button **4**.

(5) Press the MEMORY/PRESET button **5**.

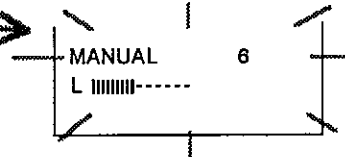

Tuning of the Channels

Semi-Auto Tuning & Manual Tuning

Example: To preset a channel in programme position 6



Semi-Auto Tuning

Manual Tuning

(1) Select programme position 6 using Programme selector **2-1**.

6


(2) Press the MEMORY/PRESET button **5** twice.

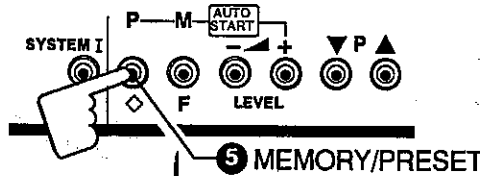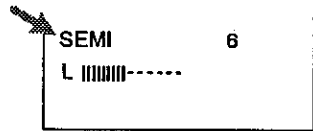


(2) Press the MEMORY/PRESET button **5** 3 times.

MANUAL 6
L

(3) Press the LEVEL(+) or (-) **3** button.

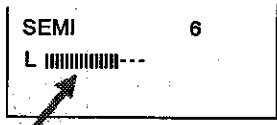



When a station is found, searching stops automatically.

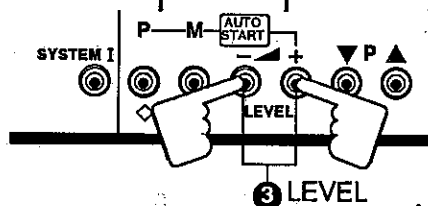

(3) Press and hold the LEVEL(+) or (-) **3** button until the desired station appears.

MANUAL 6
L

(4) Press FUNCTION button **4**.

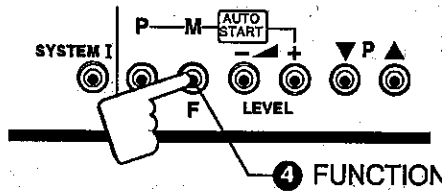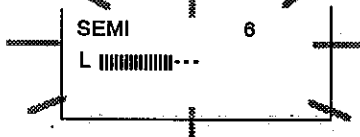


MANUAL 6
L

(5) Press the MEMORY/PRESET button **5** twice.

6

This completes the presetting.


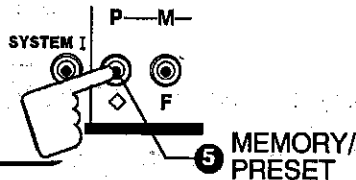


(5) Press the MEMORY/PRESET button **5**.

6

This completes the presetting.

  Teletext Operation

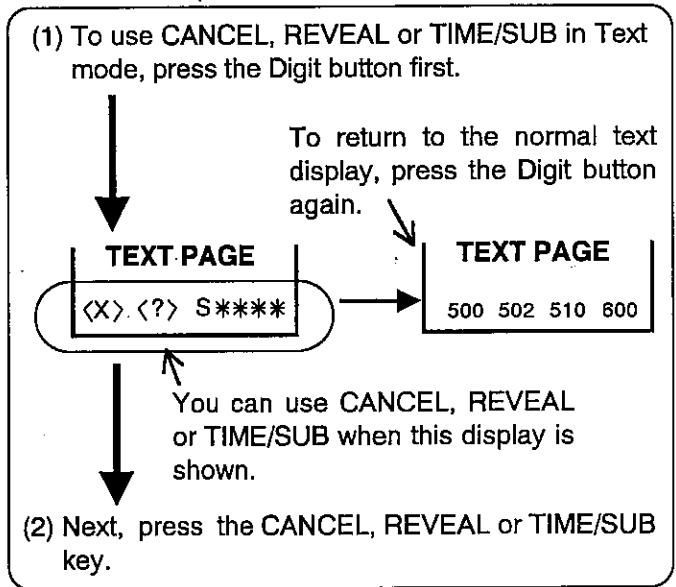
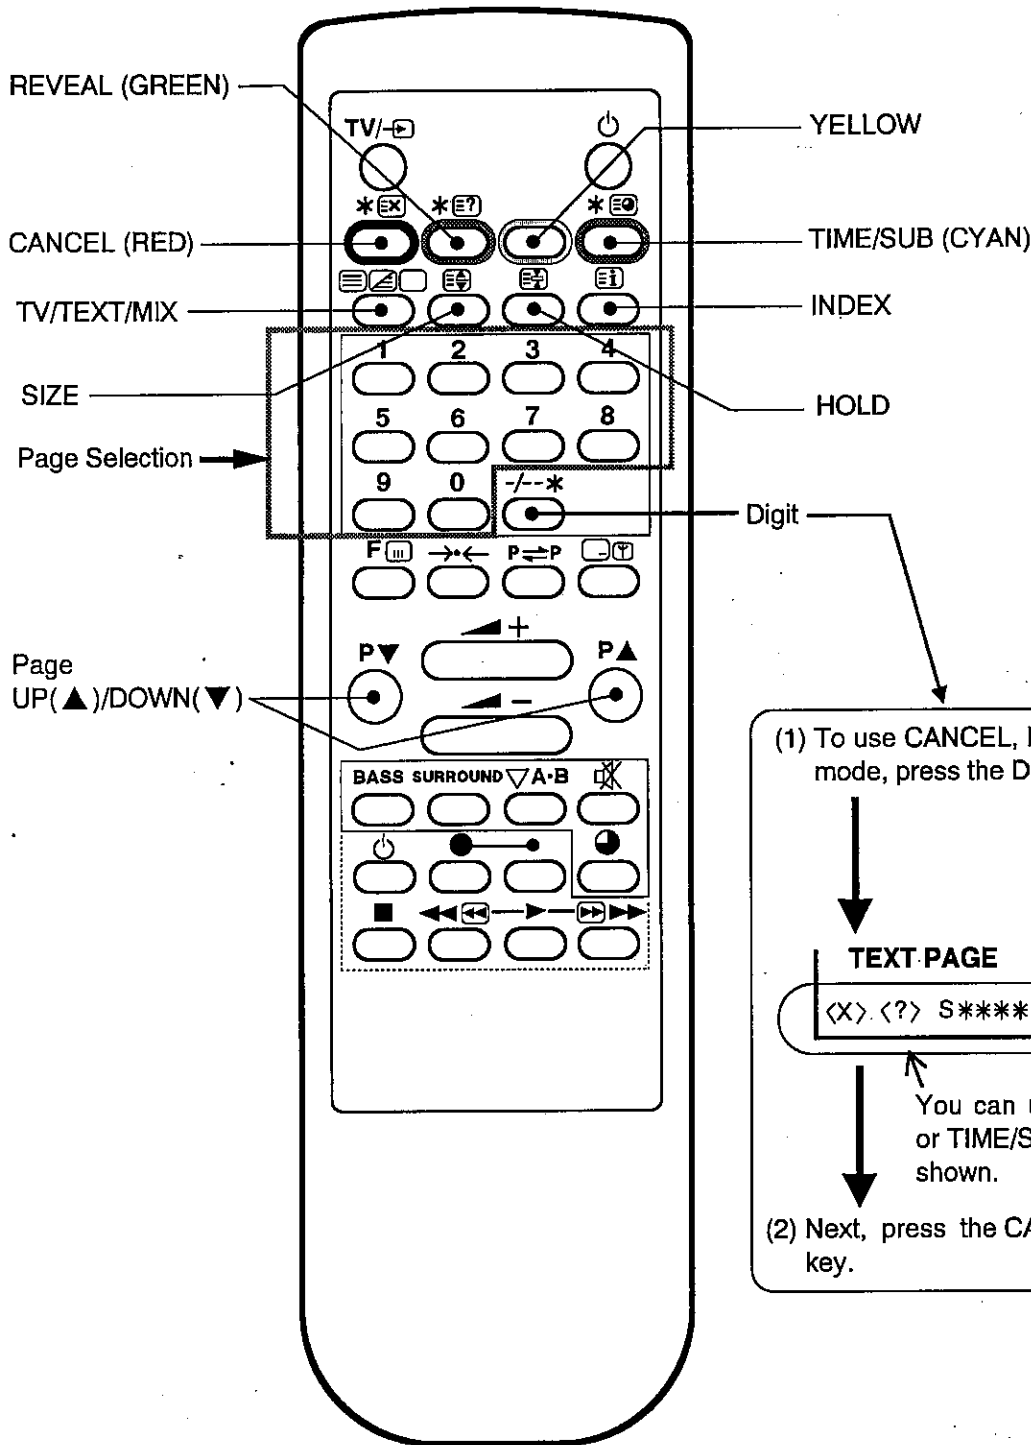


Note: Model C25PG41 – Teletext Decoder is an optional extra (Optional Teletext Decoder Type No. TX – 250).
 Model C29PK81, C29ZK81 – Not equipped with the Teletext Decoder.

Teletext Operation

Switching to the Teletext mode



Press the TV/TEXT/MIX button, and the screen changes as follows:

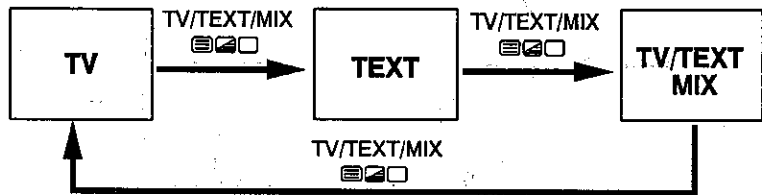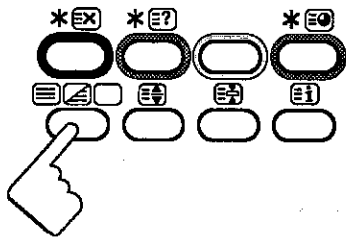

Page Selection

Direct Page Access


A Teletext page can be selected with the "0" to "9" buttons.

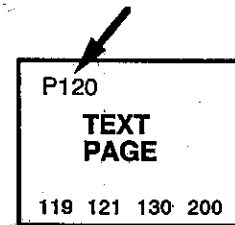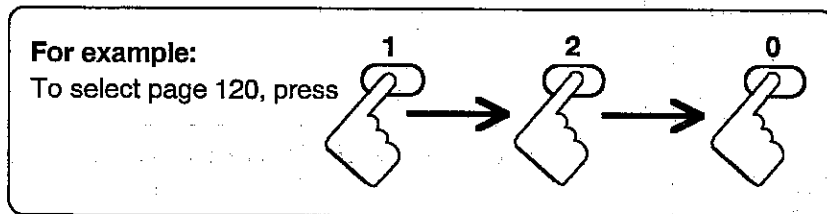

UP-DOWN Page Access


Press the Page UP(▲) button to step up to the next higher Teletext page.

Press the Page DOWN(▼) button to step down to the next lower Teletext page.

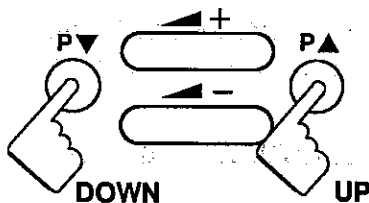

To display the Index Page

To return to the index page, press the INDEX button

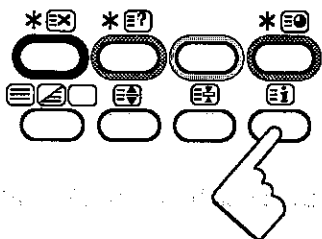


Teletext Operation

Sub-Coded Page Access


When a Teletext information page exceeds more than one screen of information, it may take some time for the automatic changing of the sub-pages to reach the sub-page you require.

It is possible to enter your required sub-page and continue watching the normal programme until the correct sub-page is found.

- (1) Select a text page which has sub pages.
- (2) Press the Digit button.

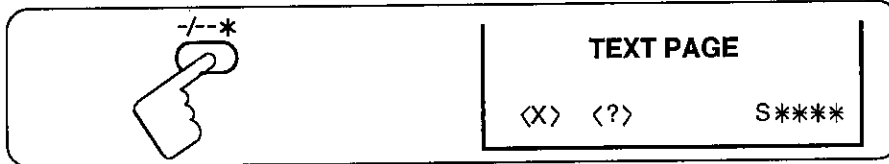


- (3) Press the TIME/SUB button.

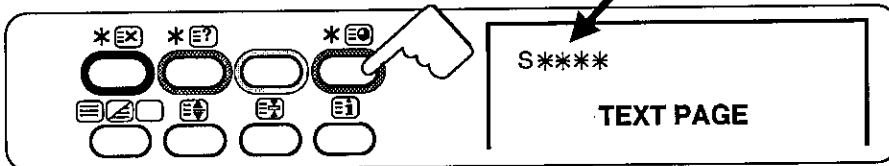


To go back to normal Teletext page entry mode, press the Digit button again.


- (4) Enter the desired sub-page.

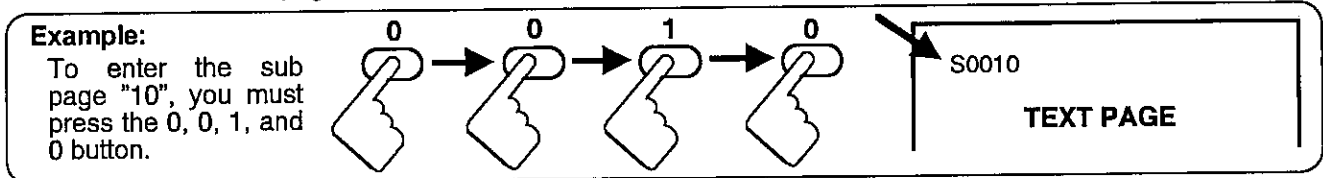

- (5) Press the CANCEL button.

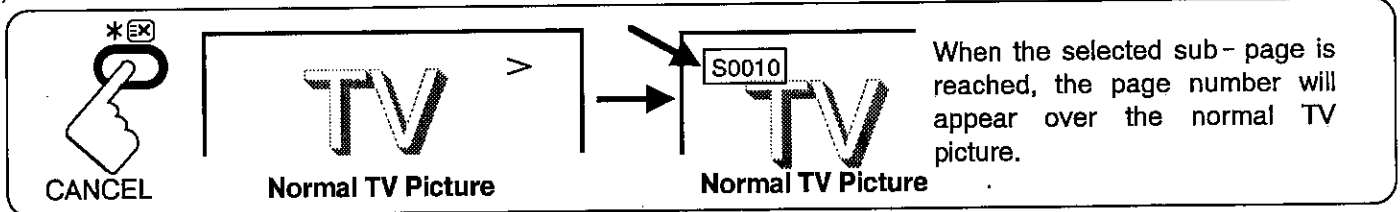

- (6) Press the TV/TEXT/MIX button to display the received sub-page.

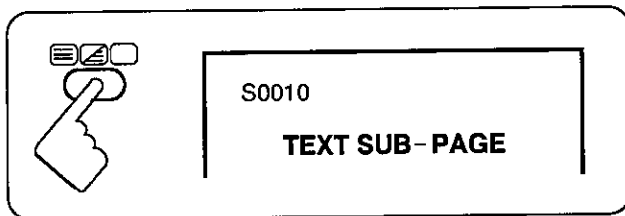


Note:

To clear the sub-coded page, enter a new page number.

It is not possible to select another television station during a sub-page access operation.

Viewing TV while searching for a page


In some cases it can take some time to look for a page. In the interval you can view the TV by pressing the Digit and CANCEL button.

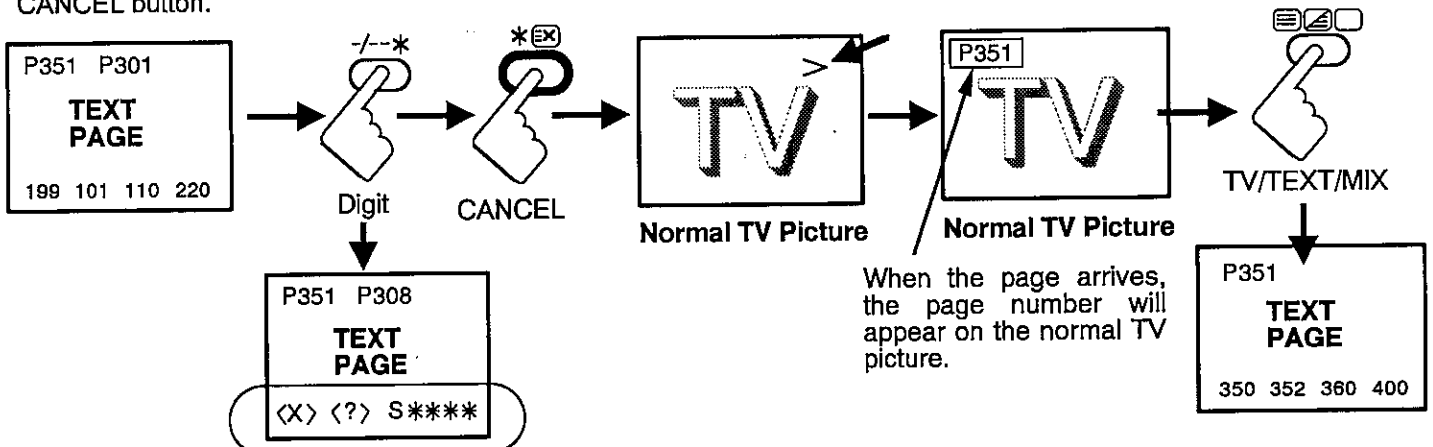

Teletext Operation


■ HOLD

When a text page has sub-pages, you can prevent the sub page being automatically changed by pressing the HOLD button. Press the HOLD button again to resume page change or enter a new page number.

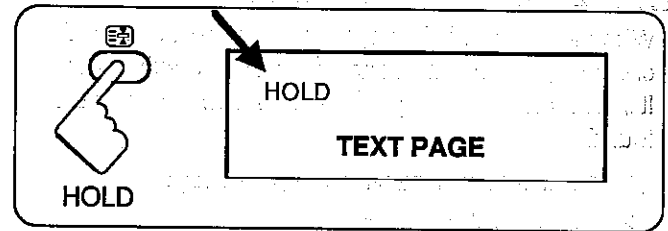


■ Double letter height

Either the top or bottom half of the display can be expanded by pressing the SIZE button.

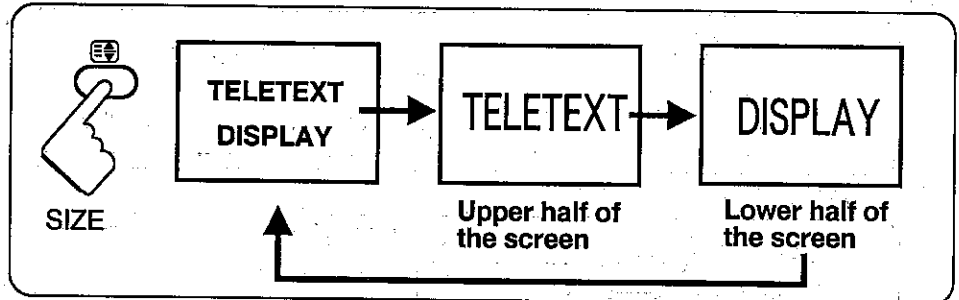


■ Displaying concealed information

Some of the text pages are in the form of a quiz or puzzle. The answer to these can be revealed by pressing the Digit and REVEAL button.

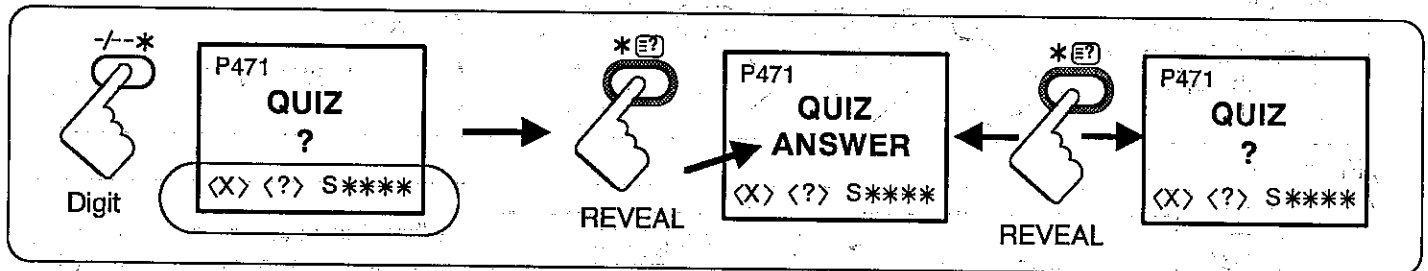


■ News flash

- (1) In the text mode, select a newflash page.
- (2) Press the Digit button.
- (3) Press the CANCEL button.
- (4) As soon as news comes in, the word "NEWS FLASH" and the news appears over the normal TV picture.

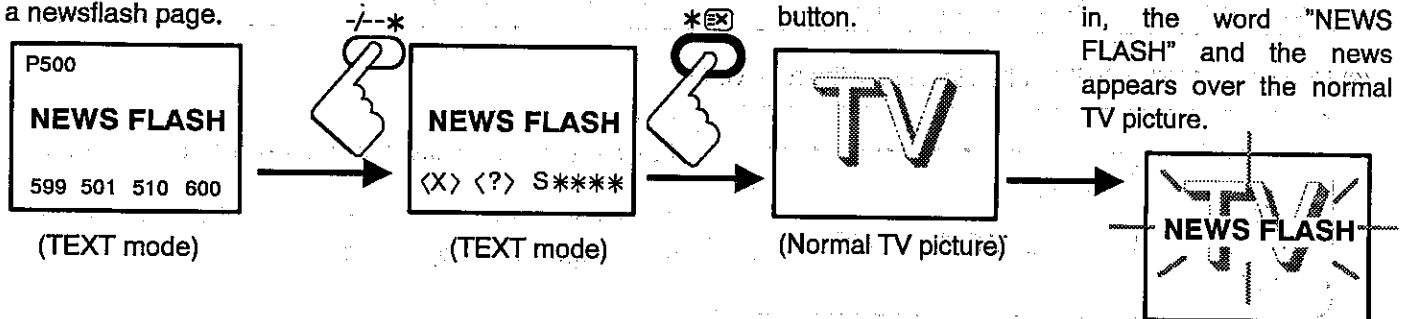

- (5) Press the TV/TEXT/MIX button.

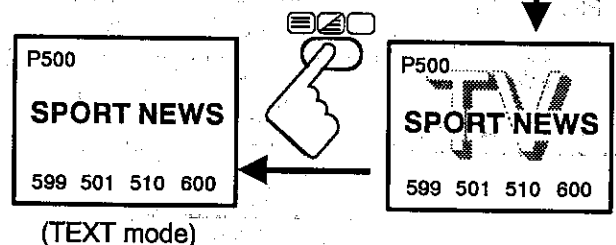


Note: It is not possible to select another TV station during a NEWS FLASH. You should first switch back to TV reception by pressing the TV/TEXT/MIX button.

Teletext Operation

■ Updated Page

 
There are pages which are updated as events progress, such as sports results, news reports and traffic information. If you have selected one of the above pages from the list of contents and you want to view television but still be kept informed about the other events;

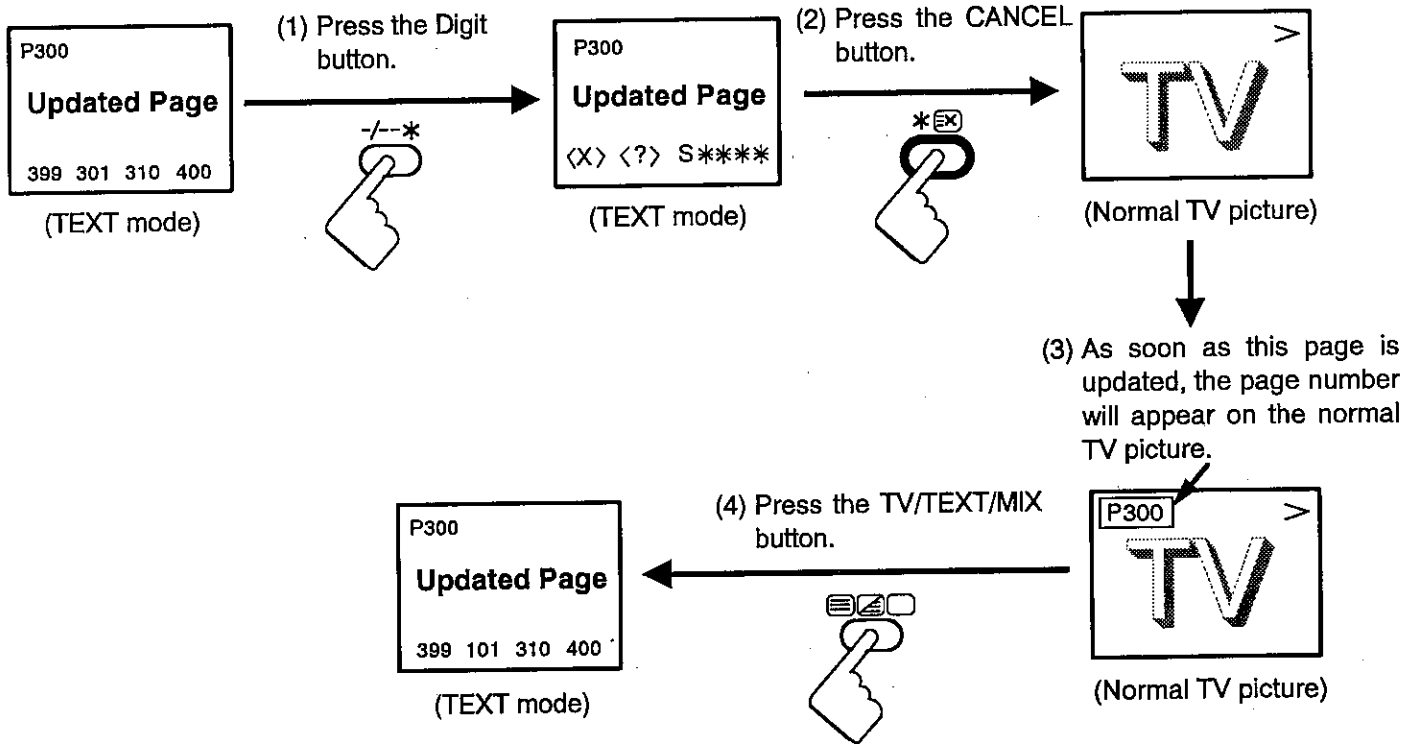

Note : It is not possible to select another TV station during an UP - DATE. You should first switch back to TV reception by pressing the TV/TEXT/MIX button.

■ TIME *E⓪

If the time is required while a programme is being viewed, press the TIME/SUB *E⓪ button. Providing that the channel being viewed is also transmitting teletext, the time will appear at the top righthand of the screen for five seconds. The digits displayed represent hours/minutes/seconds.

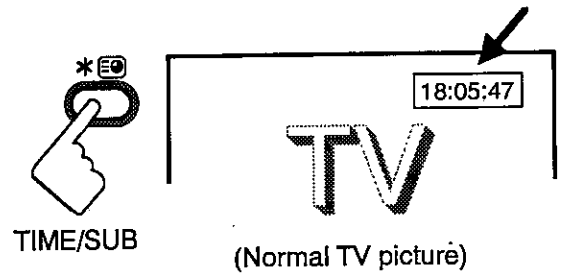

Teletext Operation


■ FLOF (FLOF: Full-level -one feature)

When a broadcasting station provides FLOF service, you can access the text pages you desire quickly and easily.

In the FLOF mode, four Fasttext topics are displayed at the bottom of the screen. These can be selected by pressing the corresponding coloured button (Red, Green, Yellow, Cyan) on the remote control transmitter. For example, when the Red button is pressed, the topic written in red is selected.

To get back to the initial index page, press the INDEX button.

(FLOF mode)

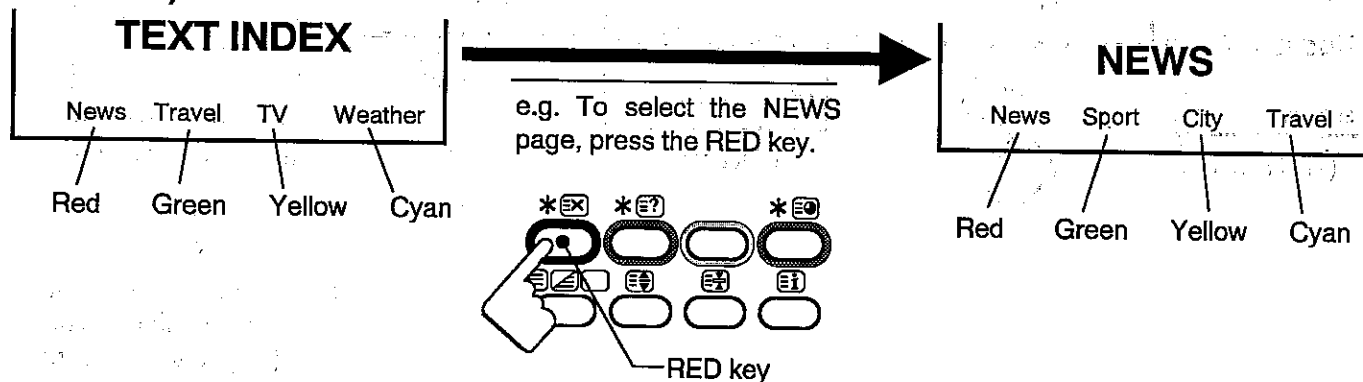


■ Non FLOF Service

When the station does not have FLOF service, the INDEX page (P100) is automatically displayed.

At the bottom of the screen, the four page numbers 199, 101, 110, 200 are also displayed. Then, when you select a random page number out of the displayed four pages by pressing a colour button, the text of that page is displayed.

Of course at any time you can select new pages by inputting new numbers.

 (Non FLOF mode)

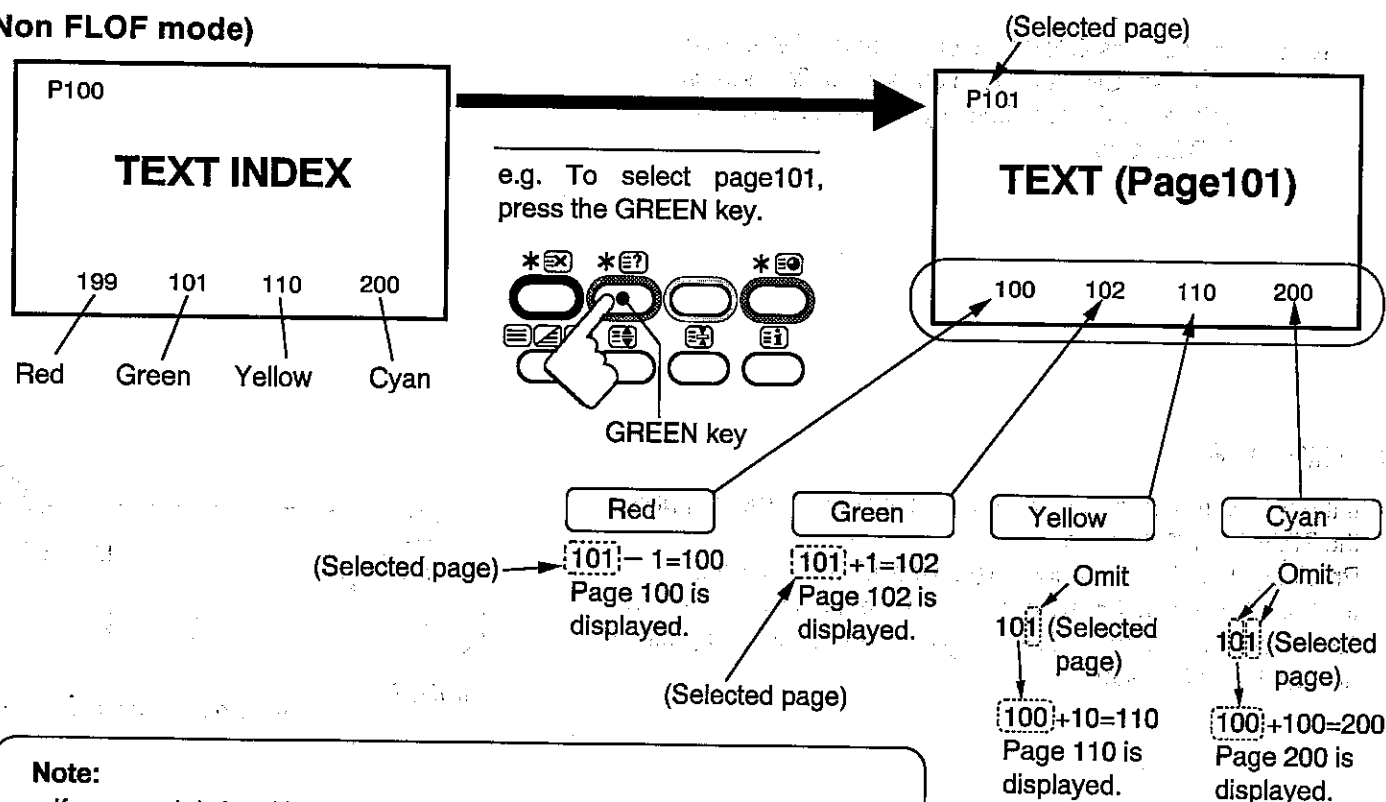

Note:

If your aerial signal is poor, the teletext reception may be poor.

Setting of the Private Position

Private position is used to restrict of programme positions that you do not want others to watch. Any positions can be set as the Private positions.



How to Set the Private Position

For example, to set the private position to the programme position "15".

- 1 Select the programme position "15".





- 2 Press and hold the RECALL/COLOUR SYSTEM **6** button for more than 2 seconds.

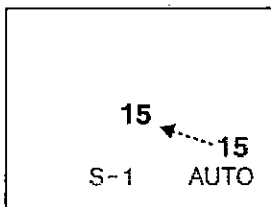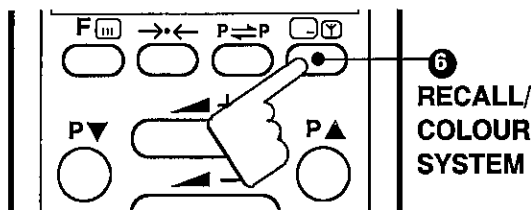

The programme number "15" will shift to center of the screen.

- 3 Press the FUNCTION **4** button.

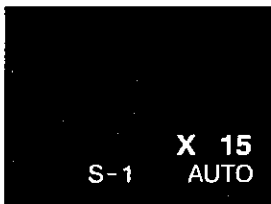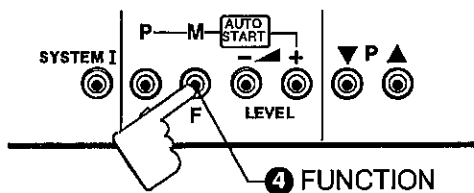


The picture will disappear, and "X 15" will be displayed on the screen.

The private position setting is now completed.



Watching a TV programme on the private position

To watch a TV programme on the private position.

- 1 Select private position (position "15").

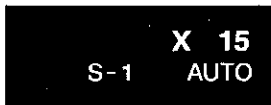


- 2 Press and hold the RECALL/COLOUR SYSTEM **6** button for more than 2 seconds.

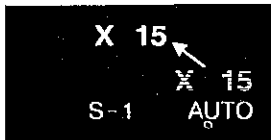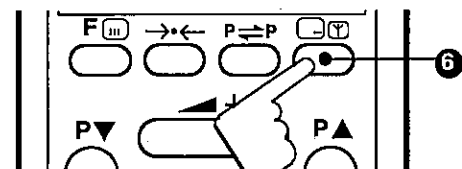

The programme number and "X" will shift to center of the screen. And the picture will appear.

- 3 Press the RECALL/COLOUR SYSTEM **6** button for watching a TV programme.

Note: The position "15" is still in the private position.

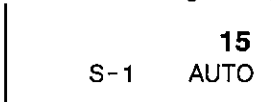

Cancelling of the Private Position

To cancel the private position.

- 1 Select the private position.
- 2 Press and hold the RECALL/COLOUR SYSTEM **6** button for more than 2 seconds. The programme number and "X" will shift to center of the screen. And the picture will appear.
- 3 Press the FUNCTION **4** button for cancelling the private position. The "X 15" will disappear.



The private position cancelling is completed.

Maximum volume level setting and suppression of channel tuning

It is possible to set the maximum sound volume at your preference and suppresses the the channel tuning function, so that even if the MEMORY/PRESET button is pressed, the channel tuning mode(preset mode) will remain inactive.


Setting procedure

- 1 Set the desirable volume level using the LEVEL **3** button.

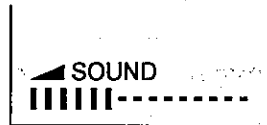
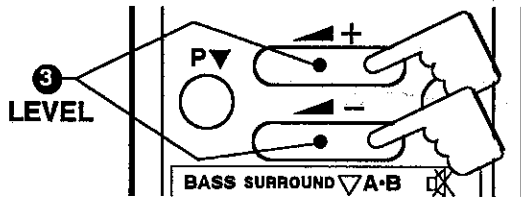


The volume level set in this procedure will be memorized as the maximum volume level.


- 2 Press and hold the FUNCTION **4** button on the front control panel of the TV set, then press the RECALL/COLOUR SYSTEM **6** button on the remote control transmitter.

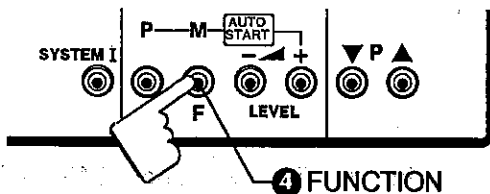

etc.

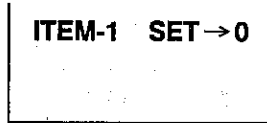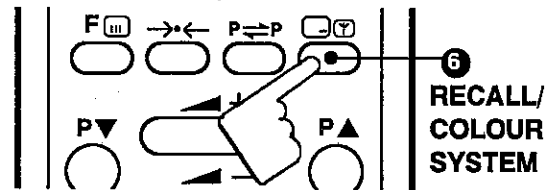


- 3 Select "1", by pressing LEVEL(+ or -) **3** button.

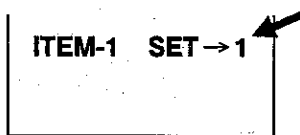


- 4 Press the RECALL/COLOUR SYSTEM **6** button to return to the normal TV mode.

Cancelling procedure

- 1 Press and hold the FUNCTION **4** button on the front control panel of the TV set, then press the RECALL/COLOUR SYSTEM **6** button on the remote control transmitter.

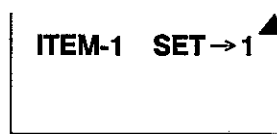


- 2 Select "0", by pressing LEVEL(+ or -) **3** button.

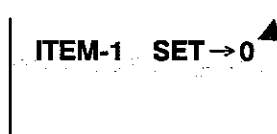

- 3 Press the RECALL/COLOUR SYSTEM **6** button to return to the normal TV mode.

Using the Remote Control VCR buttons


This remote control transmitter has been designed especially to be used in conjunction with selected SANYO VCR's. Some SANYO VCR's may have their own functions, so please refer to the individual instruction booklet when using this remote control with SANYO VCR's to ensure compatibility.

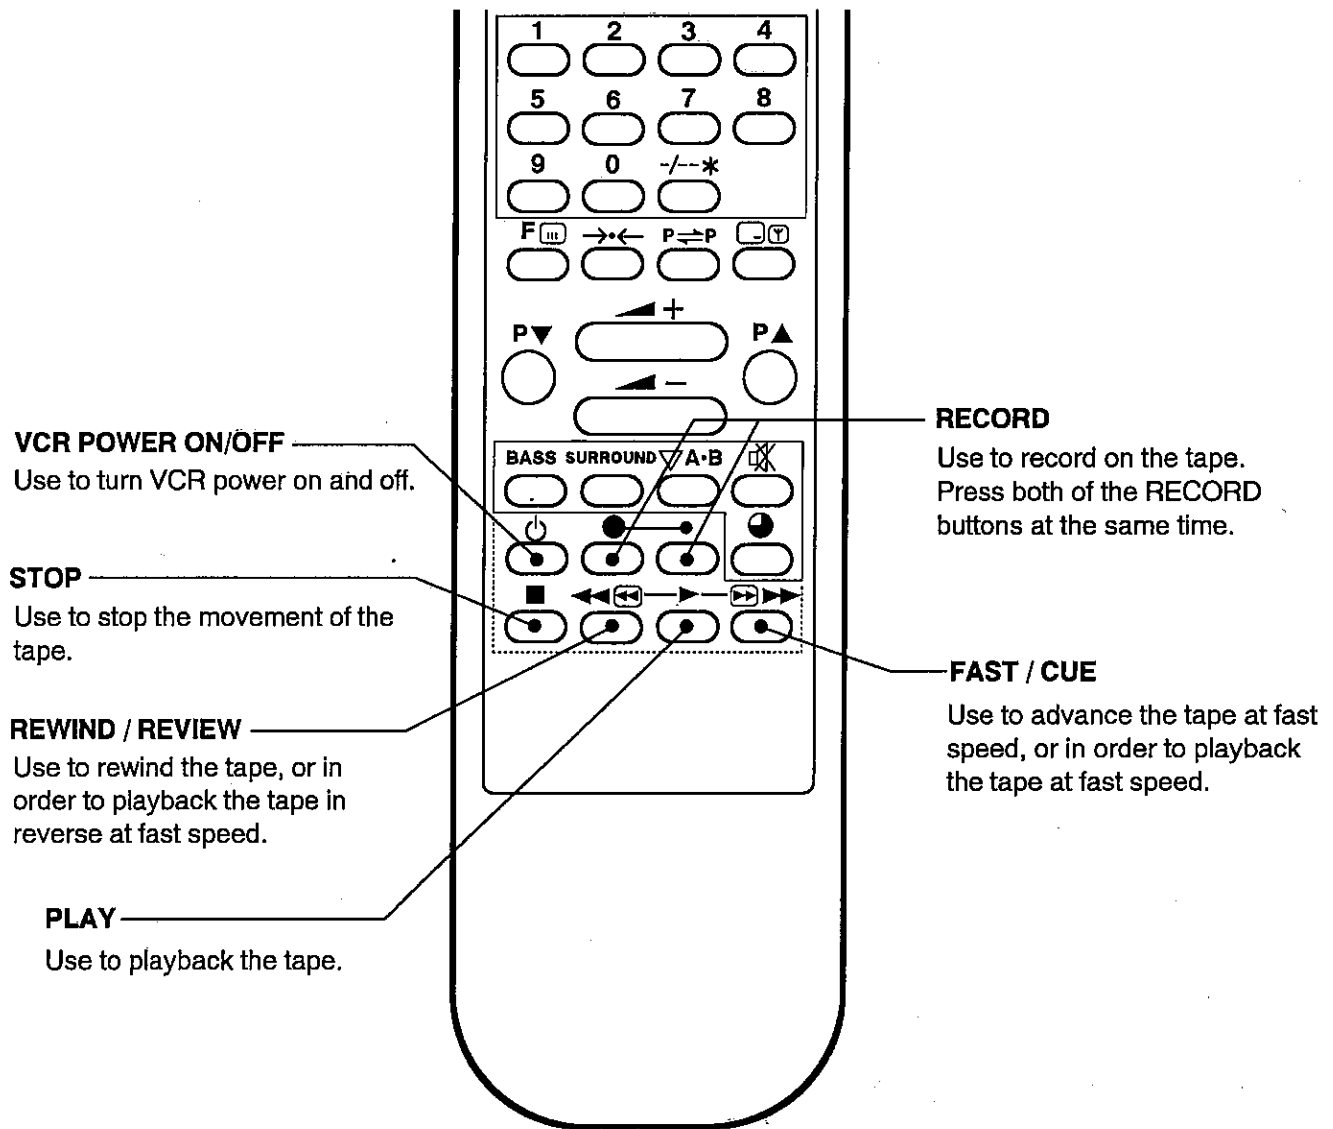

Connecting other Equipment

Connecting to the AV1 Input Jacks

Connect the video and audio outputs of a VCR, video disc player, etc. to the input jacks of this TV set. Tapes and discs can be played back.

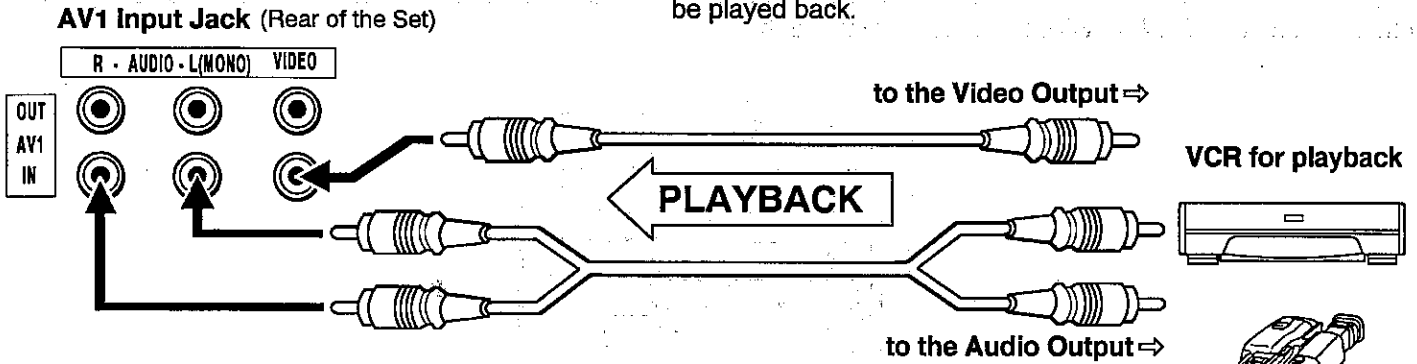


- If the audio signal from the VCR is stereo, be sure to connect the right and left channels to the respective right and left AUDIO-IN terminals.
- If the external audio signal is a monaural one, connect it to the left terminal of AUDIO IN. Then select the monaural mode of the audio channel in the TV set with the remote control STEREO/BILINGUAL **16** button.

To watch the video input picture


【 Model C25PG41, C25ZG45 】

- (1) Select the AV mode by pressing the TV/AV Selector **11**.

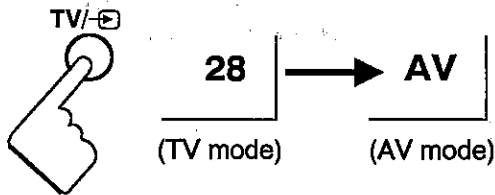


【 Model C29PK81, C29PK86, C29ZK81, C29ZK86 】

- (1) Select "AV1" position by pressing the TV/AV Selector **11**.

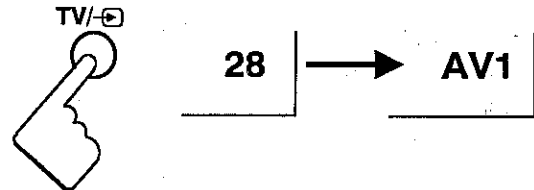


Each time the TV/AV Selector is pressed, AV position changes as follows;

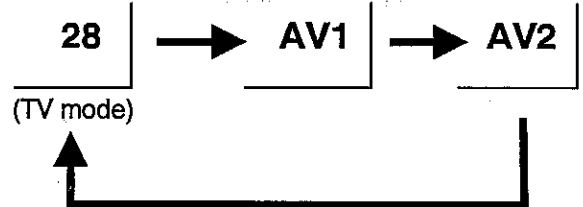

If necessary, select the colour system to match the appropriate AV equipment.

Each time the COLOUR SYSTEM **6** or **12** button is pressed, colour system changes as follows;

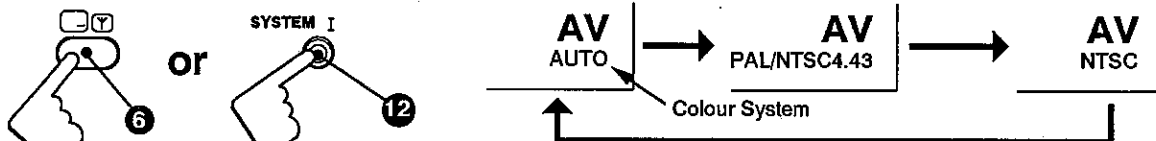

Colour system setting for AV mode is automatically stored in the memory.

- (2) Set the VCR to playback mode.

Connecting other Equipment

To return to the TV mode;

Press the TV/AV Selector again.

Note: Pressing either of the Programme UP/DOWN buttons on the remote control or the TV will return the TV to TV mode.

You can select a TV programme while watching a playback from a VCR

For example:


- To select the programme position "9" while watching a playback from external VCR, press "9" button of the remote control. The TV set return to the TV mode and programme "9" will be selected.
- To select the programme position "26", press "-- / -" button, "2" then "6" button. The TV set return to the TV mode and programme "26" will be selected.

Connecting to the Front Panel AV2 Input Jacks

(Model C29PK81, C29PK86, C29ZK81, C29ZK86 only)

It is convenient to use the AV2 input jack on the front panel for equipment that is often connected and disconnected.

FRONT PANEL

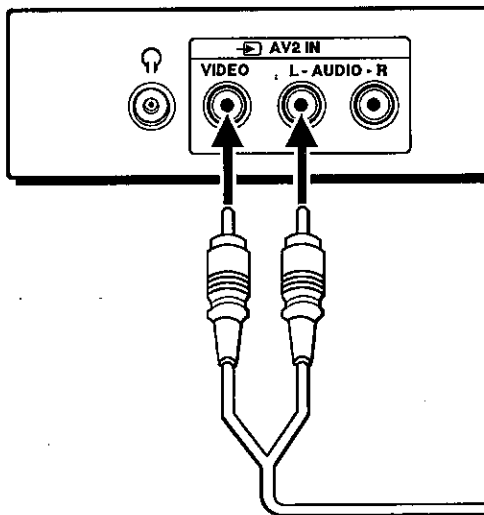


To watch the video input picture;

Select "AV2" position by pressing the TV/AV Selector **11**.

Connecting to the AV Output Jacks


(Rear of the TV Set)

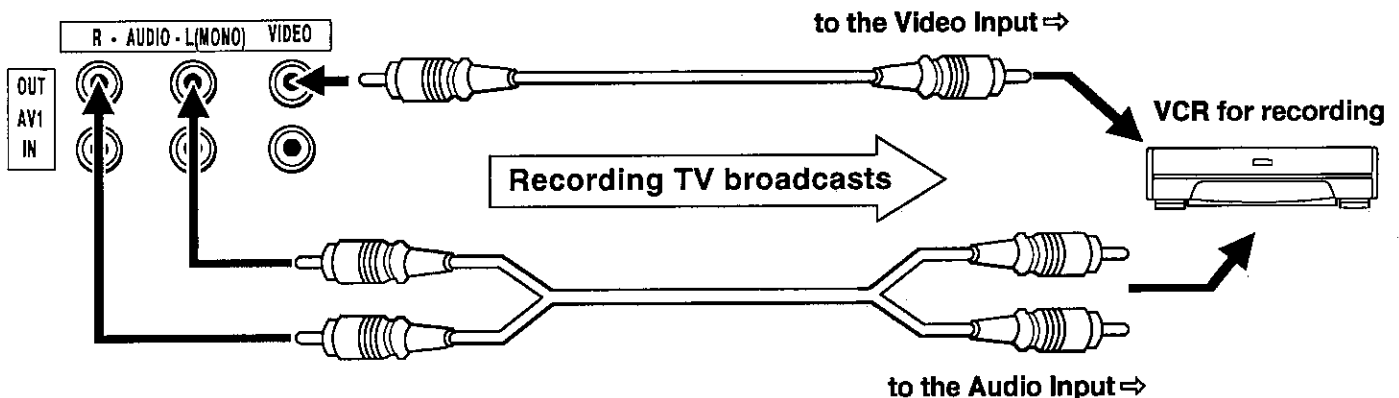

The AV output terminal provides audio and video output for TV broadcasts being received. They are used to record TV broadcasts.


Connecting other Equipment

 To record a TV broadcast while watching the playback from a VCR

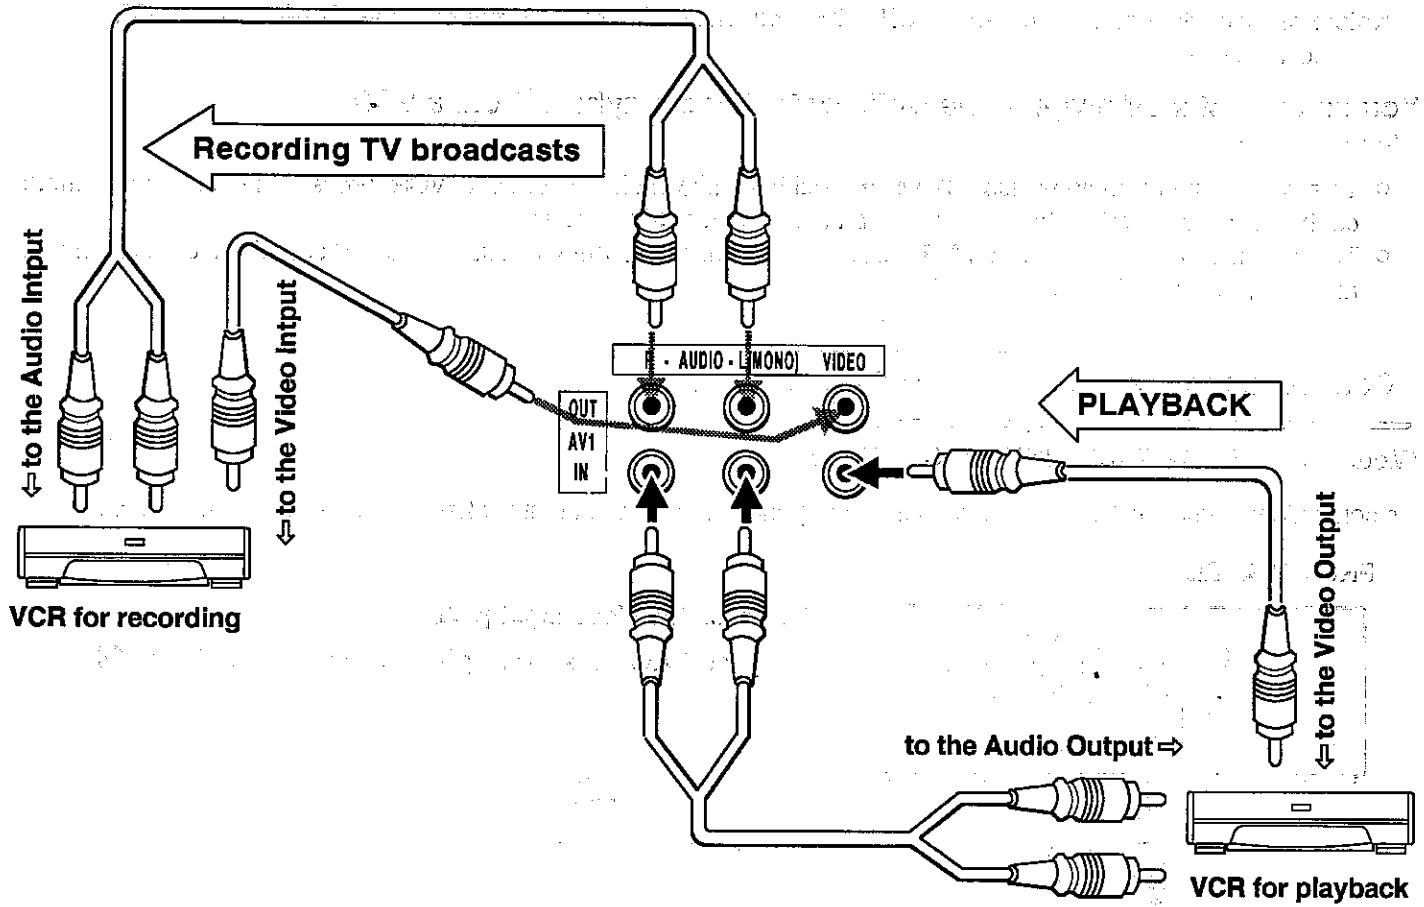

Example: To record a TV broadcast of the programme position "7" while watching the playback from a VCR,


- (1) Select the programme position "7".

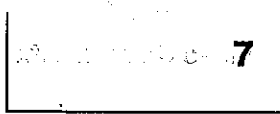

- (2) Set the TV receiver to the AV mode to watch the playback from a VCR.

Model C25PG41
C25ZG45

Model C29PK81, C29PK86
C29ZK81, C29ZK86

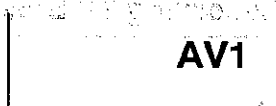

Select AV1 or AV2 position.

- (3) Set the VCR for recording to the recording mode.

Connecting other Equipment

AV Connection to the Aerial Socket



The AV apparatus can also be connected to the aerial socket of your TV receiver.

Presetting to watch the video input

- (1) Play back the VCR.
- (2) Tune a channel in programme position 0.
(See Semi-Auto tuning & Manual tuning on page 14).

Watching the video input


Select programme position 0.

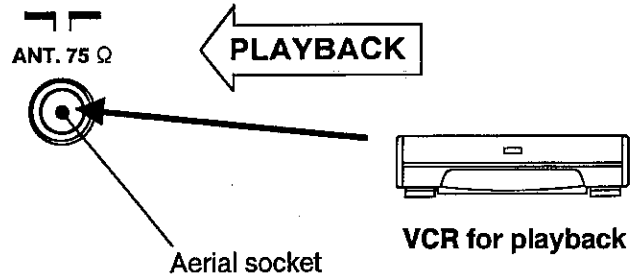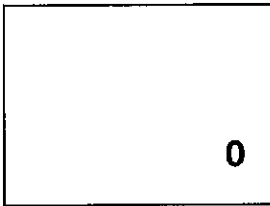


For further details concerning this connection and adjustment, refer to the operating instructions for the AV equipment.

Aerial Connection

Model C25PG41
C25ZG45

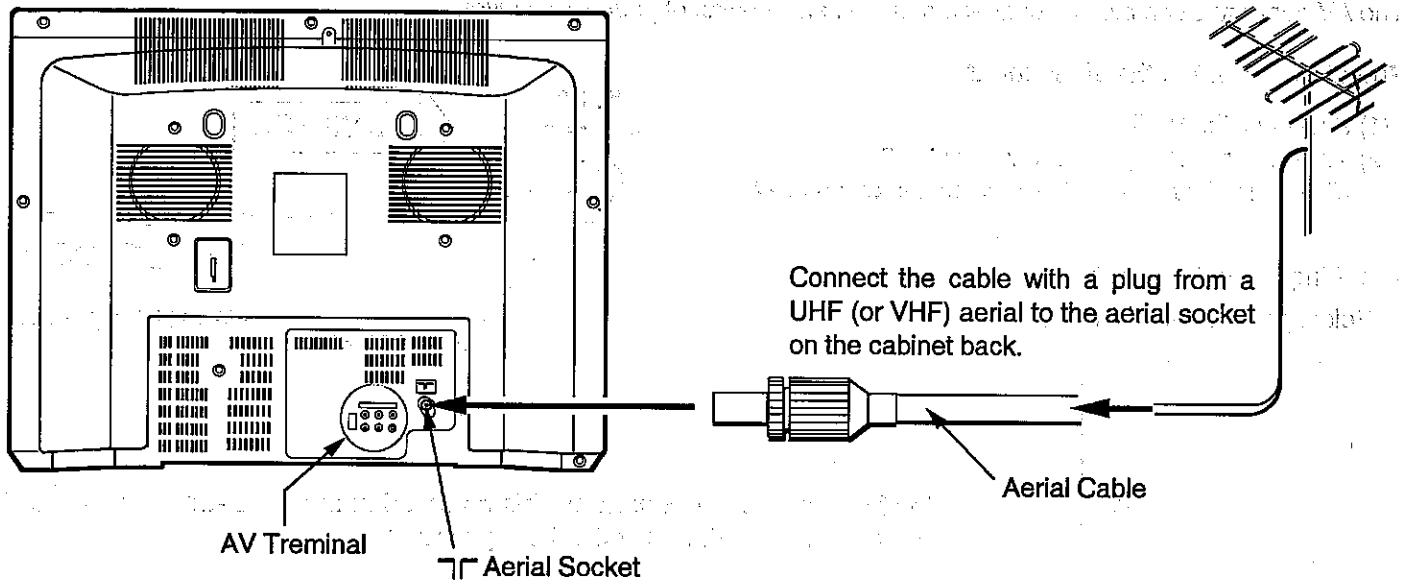

Model C29PK81, C29PK86
C29ZK81, C29ZK86

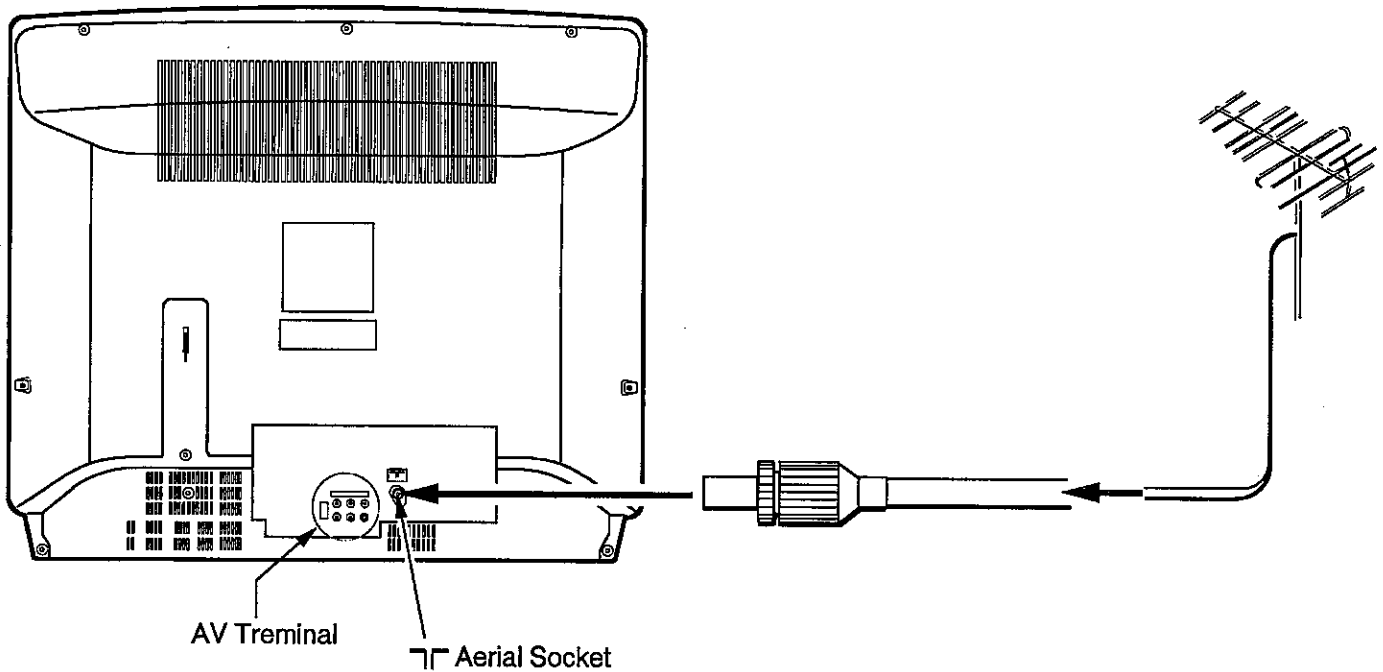

For all aerial circuit problems please consult your local dealer.

Specifications

Power source AC 220-240 Volts, 50Hz.

Receiving system PAL-B/G
(AV Input: PAL/NTSC/NTSC4.43)

Channel Coverage Model C25PG41, C29PK81, C29PK86
VHF: 0-5, 5A, 6-11
UHF: 28-69
Model C25ZG45, C29ZK81, C29ZK86
VHF: 1-11
UHF: 21-69

Aerial input impedance 75 Ω

Audio output 10 W + 10W (Music)

Speaker 6cm \times 12cm \times 2 Speakers

Ext. terminals Video Inputs :
Model C25PG41, C25ZG45
Phono Jack x 1
(1.0Vp-p, Impedance 75 Ω)
Model C29PK81, C29PK86, C29ZK81, C29ZK86
Phono Jack x 2
(1.0Vp-p, Impedance 75 Ω)
Audio Input
Model C25PG41, C25ZG45
Phono Jack(R/L) x 1
(436mVrms, Impedance more than 40K Ω)
Model C29PK81, C29PK86, C29ZK81, C29ZK86
Phono Jack(R/L) x 2
(436mVrms, Impedance more than 40K Ω)
Video Output :
Phono Jack x 1
(1.0Vp-p, Impedance 75 Ω)
Audio Output
Phono Jack(R/L) x 1
(436mVrms, Impedance less than 600 Ω)
Headphone Jack: Mini, stereo Jack x 1

Dimensions Model C25PG41, C25ZG45: 681(W) \times 521.5(H) \times 463(D)mm
Model C29PK81, C29PK86, C29ZK81, C29ZK86: 700(W) \times 601.5(H) \times 495(D)mm

Weight Model C25PG41, C25ZG45: approx. 28.0 Kg
Model C29PK81, C29PK86, C29ZK81, C29ZK86: approx. Kg

Specifications subject to change without notice.

Part No. 1AA6P1P0658 --- E8ZV (AA1-A)

SANYO

SANYO ELECTRIC Co., Ltd