

**SANYO**

---

**INSTRUCTION MANUAL**

**Colour Television**

**CA21KF2G**

**CA21AF1G**

**CA29AF2G**

**CP21AF1V(A)**

**CP29AF2X(A)**

**CA29KF2G**

***Flat Screen***

***Multi System***

***CATV Hyper Band***

***256 Programmes with Automatic Tuning***

***GAME***

***AV Stereo Sound System***

*(AV stereo sound system can reproduce a stereo sound only when a stereo signal is inputted from audio input jacks of the AV terminal.)*

# Contents

<b>Plug &amp; Play</b> .....	3
<b>Aerial Connection</b> .....	3
<b>Front Controls</b> .....	4-5
<b>Remote Control Transmitter</b> .....	6
Battery Installation of the Remote Control Transmitter . . .	6
<b>Warnings and Cautions</b> .....	7
<b>General Operation</b>	
Power ON/OFF .....	8
Auto Shut Off Function .....	8
Direct Programme Selection . . .	8
Programme UP and Down . . . . .	8
Channel Scanning .....	8
Volume Control .....	9
Recall .....	9
Sound Mute .....	9
Alternate .....	9
Quick Picture Controls .....	10
Bass Expander .....	10
Wofeer ON/OFF .....	10
Surround ON/OFF .....	10
Off Timer .....	11
On Timer .....	11
<b>Colour and Sound System</b>	
Setting of the Colour System . . . .	12
Setting of the Sound system . . . .	12
<b>Picture Adjustment</b> .....	13
<b>Audio Adjustment</b> .....	14
<b>Tuning of the Channels</b>	
Automatic Tuning .....	15
Semi-auto Tuning and Manual Tuning .	16
Channel Copy .....	17
Channel Swapping .....	17
Skip Channel Set and Cancel . . .	18
<b>Setting of the Private Position</b> .....	19
<b>Setting of the OSD Language</b> .....	20
<b>Game (Air Tennis)</b> .....	21
<b>Connecting other Equipment</b>	
Connecting to the Rear AV1 Input Jacks .	22
S-VHS VCR/DVD Player Connection . . .	23
Connecting to the Front AV2 Input Jacks .	24
Selecting the Colour System in AV mode .	24
Connecting to the Monitor Output Jacks .	25
AV Connection to the Aerial Socket . . .	25
<b>Care and Cleaning</b> .....	26
<b>Specifications</b> .....	27
<b>Helpful</b>	
<b>Hints-Problems/Solutions</b> . . .	Last Page

# Multi Personal Preference Level Function

**Note:** Model CP21AF1V(A) and CP29AF2X(A) are not equipped with the Multi Personal Preference Level Function.

For position 1 through to position 30, the picture settings (Colour, Brightness and Contrast) and the volume level that you choose can be stored separately in memory for each position. Thus you can enjoy watching TV channels with optimum picture and volume settings, even if you change from one channel to another.


# Plug & Play

## Automatic setting up channels

This TV set provides a self-automatic tuning and sorting system function called “**Plug & Play**”. It automatically begins searching and storing of all available channels when switching-on the TV set for the first time.

### Let's start !

- 1 Connect power cord of the TV set to a wall outlet, and turn on the TV set by pressing the **Mains ON/OFF** button. Self-automatic tuning system will be started as follows;

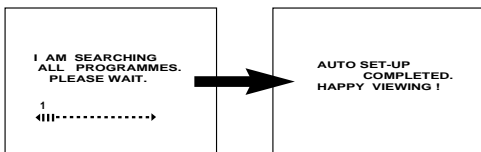

After completing this procedure, the programme position 1 is selected and the ending messages on the screen.

**Note:** The Plug & Play can be cancelled at any time by pressing the **MENU** button.

- 2 Press any of the control buttons to make the ending message disappear. (Or will automatically return to normal TV display after 10 seconds.)

✍ This procedure only appears at the first switch-on time.

- If no TV stations are found, the display shown below will appear. Please check if the antenna is connected properly.




If it isn't connected properly, connect antenna and Automatic Tuning will be reset.

# Aerial Connection

## Connecting Outdoor Aerial

Connect the cable with a plug from a UHF (or VHF) aerial to the aerial socket on the cabinet back.

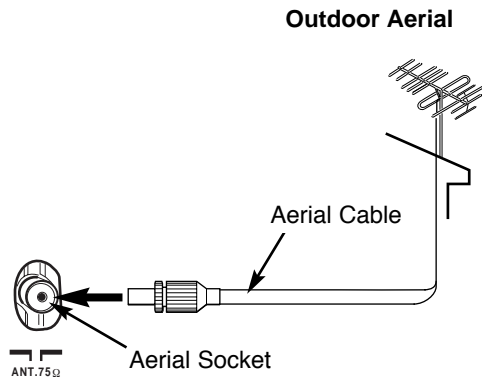


**For all aerial circuit problems please consult your local dealer.**


# Front Controls

Each button listed in this section has the same function as it's corresponding button on the remote control.

## Model CA21KF2G

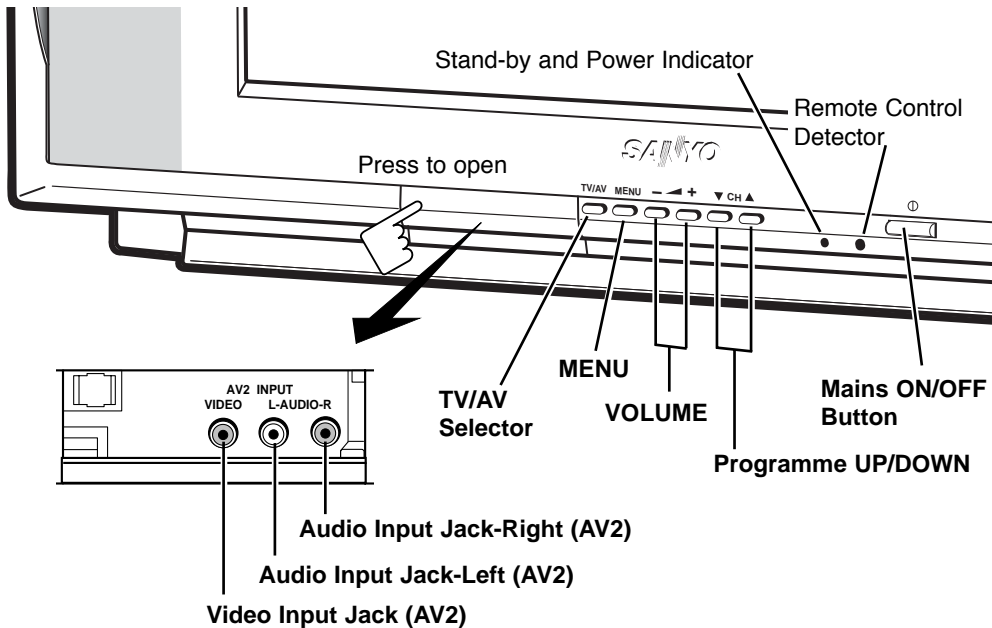


## Model CA21AF1G, CP21AF1V(A)

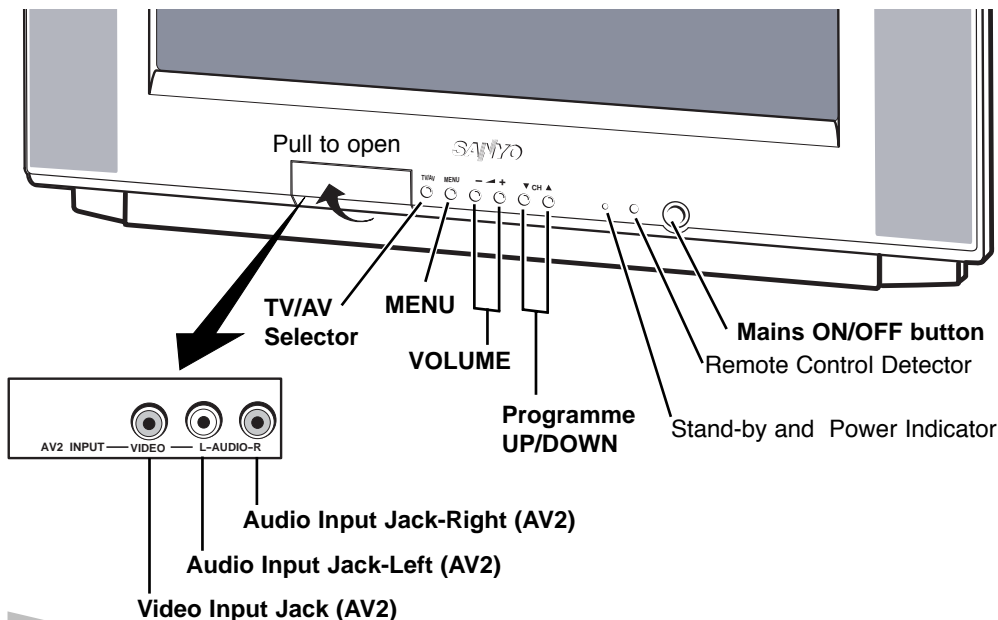

# Front Controls

Each button listed in this section has the same function as it's corresponding button on the remote control.


## Model CA29AF2G, CP29AF2X(A)

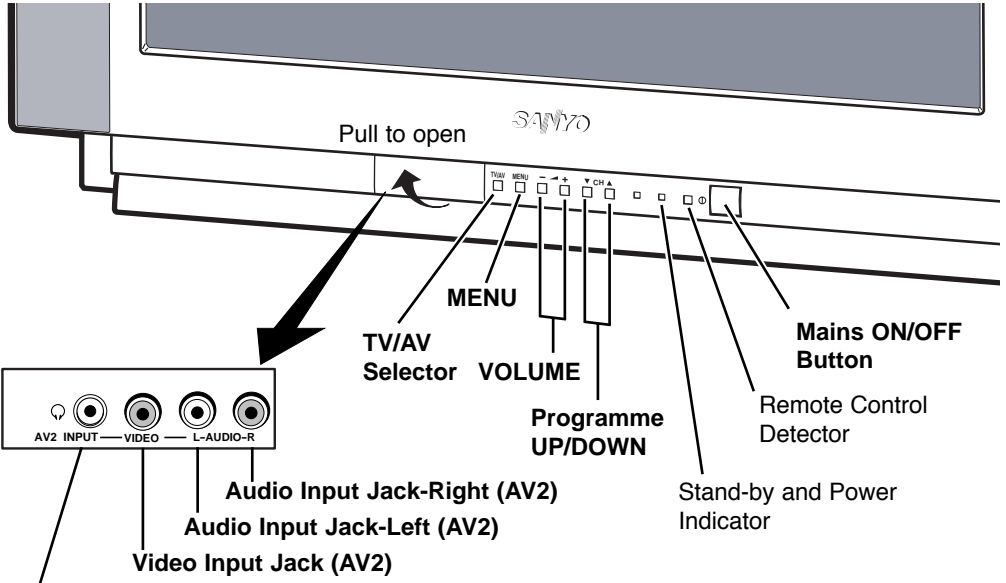

## Headphone Jack (Mini Stereo Jack)

(For personal listening, a headphone can be connected to the headphone jack)


## Model CA29KF2G

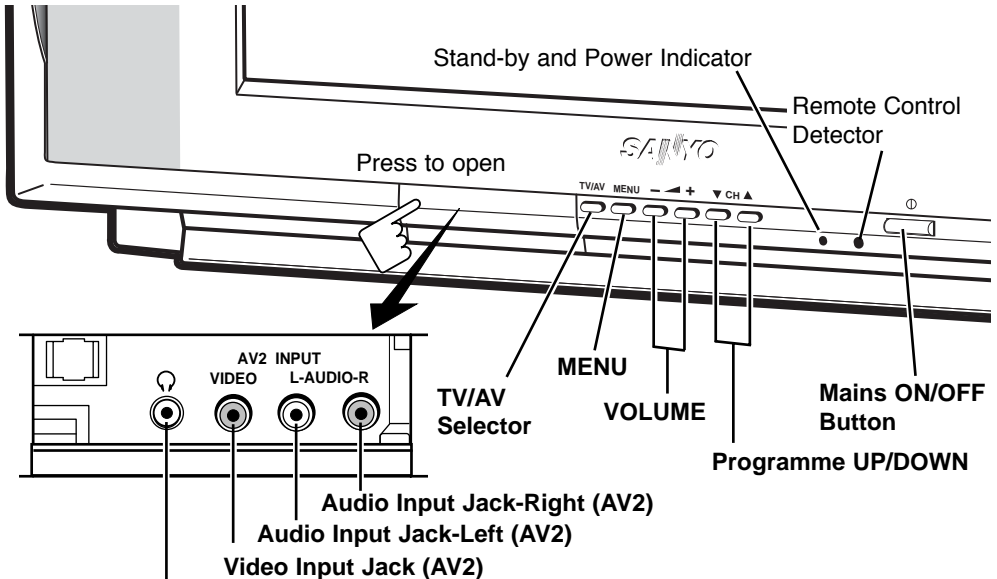

## Headphone Jack (Mini Stereo Jack)

(For personal listening, a headphone can be connected to the headphone jack)

# Remote Control Transmitter

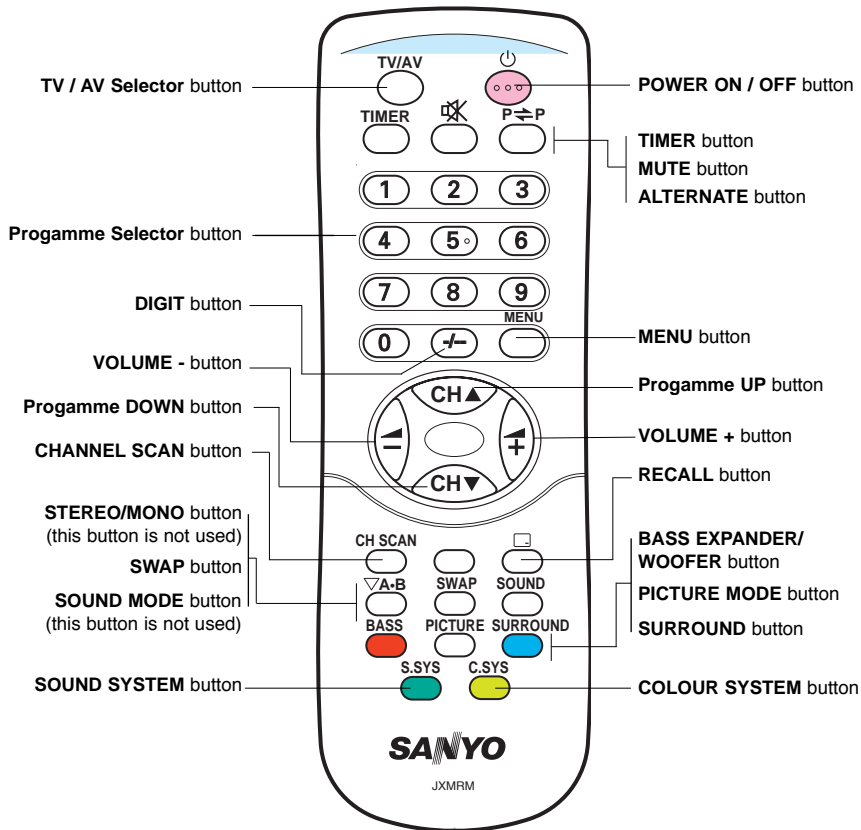


## Battery installation of the Remote Control Transmitter

1. Open the battery cover.
2. Install two "AA" 1.5 volt batteries so that the "+" and "-" marks on the batteries match the "+" and "-" marks inside the unit.
3. Close the battery cover.

Note: Replace the batteries when the TV set is showing the following symptoms:

Operation is unsteady or erratic, sometimes the TV set does not work with transmitter.

Discharged batteries may leak and damage the unit. The normal life of batteries should be from nine to ten months.

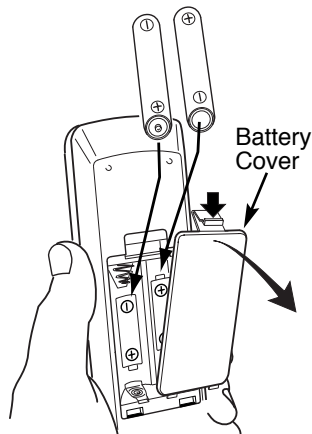

# Warnings and Cautions



High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.



When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.



Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.



Avoid exposing the television receiver to direct sunlight and other source of the heat. Do not stand the television receiver directly on other products which give off heat. E.g. video cassette players, audio amplifiers.



To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.



Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.




Never stand on, lean on or push suddenly the television or its stand. You should pay special attention to children. Serious injury may result if it should fall.



Do not squash power supply cord under the television receiver.



Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it should fall.

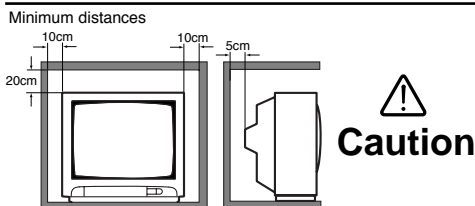

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.

# General Operation

## Power ON/OFF

To switch on or off the TV ;


Press the **Mains ON/OFF** button.

The power of the TV is turned on or off completely. If no picture appears but the Standby and Power indicator illuminates, press the **POWER ON/OFF** button of the remote control transmitter as the TV set is in standby mode.

To set the TV to standby mode;

Press the **POWER ON/OFF** button.

During Standby mode the Standby and Power indicator illuminates more brightly.

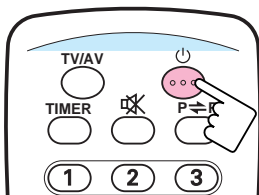

To turn on the TV from the standby mode, press any of the following button.


- **POWER ON/OFF** button of the remote control transmitter.
- **Programme UP/DOWN** of the remote control transmitter or the TV set.
- **1 to 9, 0** button on the remote control transmitter.

### Important !

Be sure to set the **Mains ON/OFF** switch to the off position, if the power failure occurs while viewing.

## Auto Shut Off Function

This TV set incorporates the AUTO SHUT OFF function. Even if the TV is left on after you have gone to sleep, the TV set changes to the standby mode within 10 minutes after all broadcasts have ended.

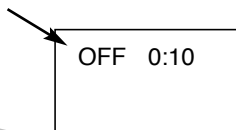


## Direct Programme Selection

### Example


To select programme position 8;

### Example

 
To select programme position 8;

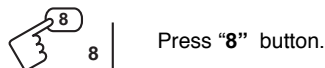


To select programme position 27;

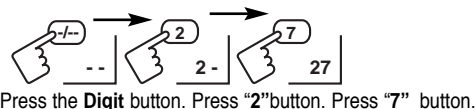 

To select programme position 125;

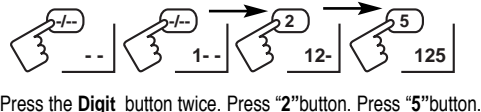 

To select programme position 255;

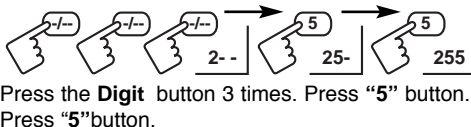


## Programme Up and Down

Press the **Programme UP** (CH▲) button to select the next programme position.

Press the **Programme DOWN** (CH▼) button to select the previous programme position.

## Channel Scanning

Press the **CHANNEL SCAN** button to search for a programme. The channel positions are automatically scanned, and the channel scanning will stop at the position where it began. To stop at the position you want, press this button again.

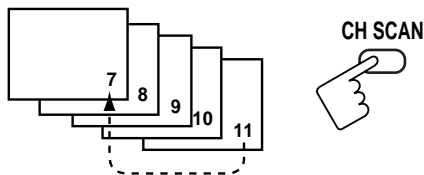






# General Operation

## Quick Picture Controls

Press the **PICTURE MODE** button to select the following picture modes; “**PERSONAL**”, “**DYNAMIC**”, “**NATURAL**”, “**ECO**” and “**GAME**”. Select picture modes to suit picture type you are watching.

Each time the **PICTURE MODE** button is pressed, picture settings changes as follows;

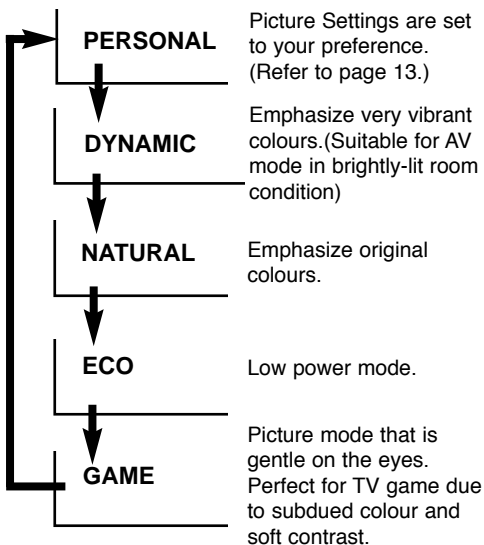

## Bass Expander

All Model except CA29KF2G

To get a emphasis bass sound, press the **BASS EXPANDER / WOOFER** button.



## Woofers ON/OFF

Model CA29KF2G




To get the sound effect of woofer, press the **BASS EXPANDER / WOOFER** button.

## Surround ON/OFF

Press the **SURROUND** button to enjoy Surround sound.



**Note:** When AV mode is selected, each time the surround button is pressed, the display of surround mode change as follows:

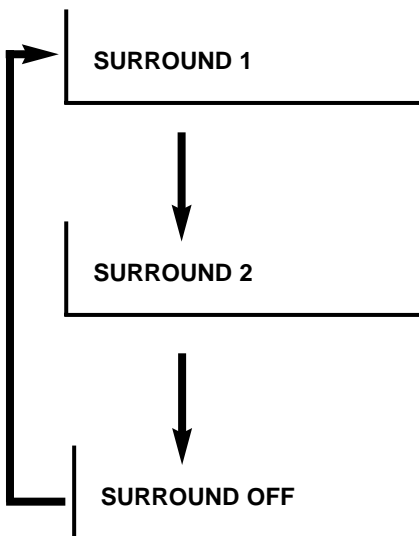

# General Operation


## OFF TIMER

The OFF TIMER will switch off the TV automatically after 30 minutes, 1 hour, 1 hour and 30 minutes, or 2 hours.

**1** Press the **TIMER** button.

**OFF 0:00** (OFF TIMER setting mode)

Each time the **TIMER** button is pressed, timer function is changed as follows;

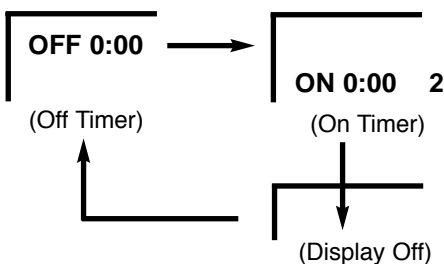

**2** Press the **VOLUME (+ or -)** button to select the time period.

- Just one minute before switching off the TV, "OFF 0:01" will be display on the screen.
- To cancel the OFF TIMER, select "OFF 0:00" by pressing the **VOLUME (+ or -)** button.
- The OFF TIMER cancels when the TV set is turned off or if a power failure occurs.

## ON TIMER

When the ON TIMER is set, TV will automatically be switched on to the selected programme position when the specified time has elapsed.

**1** Press the **TIMER** button twice.


**ON 0:00** **2** (ON TIMER setting mode)

Programme position for when TV is switched on by ON TIMER.


**2** Press the **VOLUME (+ or -)** button. The set time will be increased or decreased by 10 minutes each time the button is pressed ; the maximum time which can be set is 24 hours. When the ON-TIMER has been set, the colour of Standby and Power Indicator changes to yellow.

### Setting programme position for when TV is switched on by ON TIMER

 To set programme position to between 0 and 9, press the desired number button "0" - "9" while the ON TIMER screen is shown.

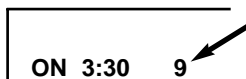


 For example, to set programme position 26, press the **Digit** button, "2" button then "6" button while the ON TIMER screen is shown.

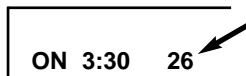

It is also possible to set the programme position by pressing the **Programme UP** or **DOWN** button.

 To set an AV position for when the TV is switched on by the ON TIMER, press the **TV/AV Selector** while the ON TIMER screen is shown to select position AV1 or AV2.

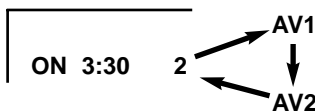


- If no operation is performed after the TV has been switched on by the ON TIMER, such as if you are not at home, the TV will be automatically switched off after approximately 2 hours.
- If the TV is already switched on when the time set for the ON TIMER has been reached, only the programme position will be changed to the set programme position.
- Cancelling ON TIMER. To cancel the ON TIMER, press the **VOLUME (+ or -)** button to set it to "ON 0:00" while the ON TIMER screen is shown. Switching off the TV by pressing the **Mains ON/OFF** button will also cancel the ON TIMER settings.

# Colour and Sound System

## Setting of the Colour System

Normally, set the colour system to "AUTO", if the clear picture cannot be obtained even when the broadcasting or AV signal is received, press the **RECALL** button or **COLOUR SYSTEM** button repeatedly until the optimum image can be produced. (Refer to **Broadcast Transmission System List** indicated by the last of this page in a setup of Colour System.)

Each time the **RECALL** button or **COLOUR SYSTEM** button is pressed, colour system changes as follows;

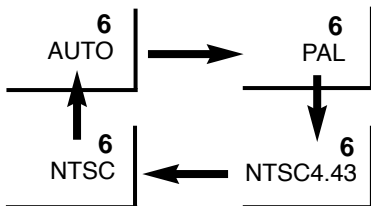

Note: A colour system entry to the memory cannot be made during TV mode, make it during Semi-auto or manual tuning mode. (Refer to page 16.)

## Setting of the Sound System

To set the sound system, make it during Semi-Auto Tuning or Manual Tuning mode. (For further details concerning this operation refer to page 16.)

When the sound is not clear or no sound is produced on a programme number position, select sound system repeatedly until the optimum sound is obtained. (Refer to **Broadcast Transmission System List** indicated by the last of this page in a setup of Sound System.)

 

### To select sound system:

- Press the **SOUND SYSTEM** button to select the sound system directly. The sound system will be memorized automatically.


or:

- 1) Select "SIF" with the **Programme UP** or **DOWN** button in the Semi-auto or Manual Tuning mode. Then press the **VOLUME (+ or -)** button to select a optimum sound system.

(Semi-Auto or Manual Tuning mode )

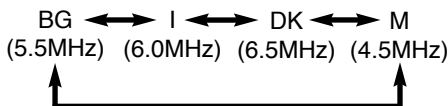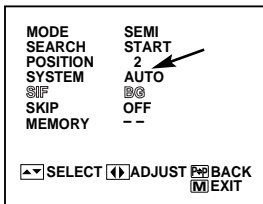

- 2) To enter a sound system selection into the memory, select "MEMORY" and press the **VOLUME +** or **-** button.

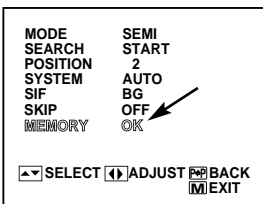


## Broadcast Transmission System List

Area	Country	Colour System	Sound System
Middle East	Union of Arab Emirates, Kuwait, Oman, Qatar, Yemen, Bahrain, etc.	PAL	B/G
	Indonesia, Malaysia, Singapore, Thailand, etc.		
Asia	China, etc.	PAL	D/K
	Hong kong	PAL	I
	Saudi Arabia, Iraq, Iran, Lebanon, etc.	SECAM	B/G
	Russian Federation, etc.	SECAM	D/K
	Myanmar, etc.	NTSC	M
Oceania	Australia, New Zealand, etc.	PAL	B/G

# Picture Adjustment

## Picture Adjustment Menu

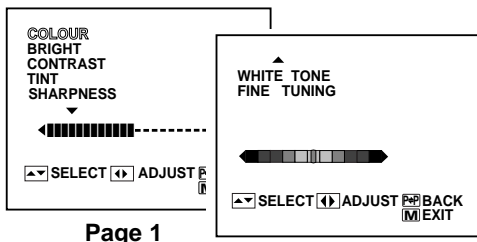

The 2nd page is not displayed when there is no TINT adjustment.

### Picture Adjustment Item

**COLOUR** : Adjusts colour intensity.

**BRIGHT** : Adjusts picture brightness.

**CONTRAST** : Adjusts picture contrast.

**TINT** : Adjust colour tints. (Displayed only on NTSC or NTSC4.43 system signal reception.)

**SHARPNESS** : Adjusts picture detail.

**WHITE TONE** : Adjusts white balance.

**FINE TUNING** : Fine tuning in case of weak broadcast signal or poor reception. Only displayed in TV mode. Will not be displayed in AV mode.


#### Note:

The picture adjustment data (Colour, Brightness, Contrast, Tint and Sharpness) is automatically stored in PERSONAL mode of the Quick Picture Controls (See page 10). These settings will be used when PERSONAL mode is selected.

### PERSONAL


## Basic Picture Adjustment Operation

- 1 Press the **MENU** button for MAIN menu display.

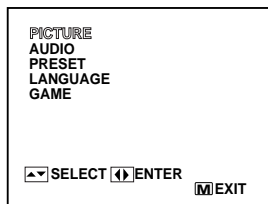


(MAIN MENU)

- 2 When "PICTURE" is not selected, select "PICTURE" with the **Programme UP** or **DOWN** button.

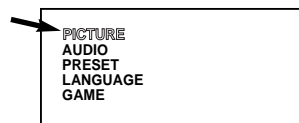


- 3 Press the **VOLUME +** or **-** button to display Picture Adjustment menu.

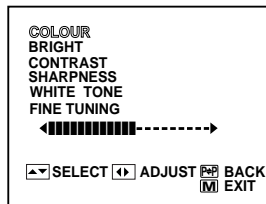


- To return to Main menu, press the **ALTERNATE** button.
- To return to the normal TV mode, press the **MENU** button. ( Or will automatically return to the normal TV mode after 20 seconds.)

- 4 Select desired control by pressing the **Programme UP** or **DOWN** button.

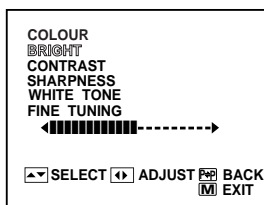


- 5 Press the **VOLUME +** or **-** button to alter settings.

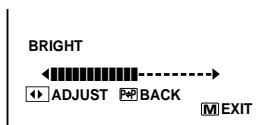


Approximately five seconds after you release the **VOLUME (+ / -)** button, the screen display switches from the adjustment screen to the normal TV screen. To return to the Picture adjustment menu, press the **ALTERNATE** button within five seconds of releasing the **VOLUME (+ / -)** button.

# Audio Adjustment

## Audio Adjustment Menu

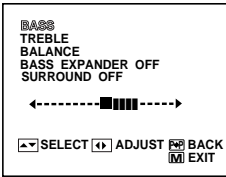


All Model except CA29KF2G

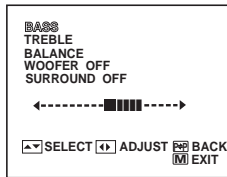


Model CA29KF2G only

- Press the **VOLUME +** or **-** button for Audio Adjustment menu display.

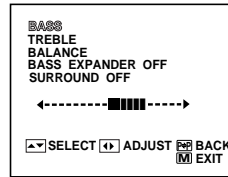

- To return to Main menu, press the **ALTERNATE** button.
- To return to normal TV mode, press the **MENU** button. (Or will automatically return to normal TV mode after 20 seconds.)

- Select desired control by pressing the **Programme UP** or **DOWN** button.

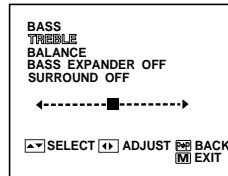

## Audio Adjustment Item

**BASS** : Bass Adjustment

**TREBLE** : Treble Adjustment

**BALANCE** : Left/right speaker volume balance adjustment

**BASS EXPANDER** : Operates BASS EXPANDER on and off (All Model except CA29KF2G).


**WOOFER** : To get the Sound effect of woofer (Model CA29KF2G only).

**SURROUND** : Operates SURROUND on and off.


**Note:** When the stereo signal is inputted from the right and left audio input terminals in the AV mode, surround mode is changed as follows; “**SURROUND 1**”, “**SURROUND 2**” and “**SURROUND OFF**”. “**SURROUND 1**” is normal surround mode. Selection of “**SURROUND 2**” obtains a deeper surround effect.

## Audio Adjustment Operation


- Press the **MENU** button for MAIN menu display.

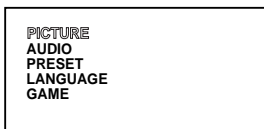

- Select “**AUDIO**” by pressing the **Programme UP** or **DOWN** button.

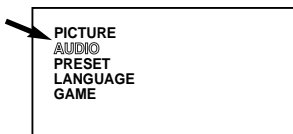

- Press the **VOLUME +** or **-** button to alter settings.

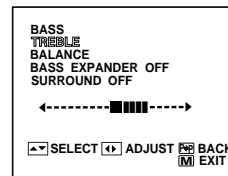

Approximately 20 seconds after you release the **VOLUME (+ / -)** button, the screen display switches from the adjustment screen to the normal TV screen.

To return to the MAIN menu, press the **ALTERNATE** button within 20 seconds of releasing the **VOLUME (+ / -)** button.

- When adjustment is completed, press the **MENU** button to return to normal TV display. (Or will automatically return to TV display after 20 seconds.)

# Tuning of the Channels

Up to 256 broadcast stations in your reception area can be stored in the electronic memory.

There are three ways of tuning as follows;

## 1. Automatic Tuning (the basic way):

All receivable channels are automatically tuned in and memorized in consecutive programme position.

## 2. Semi-Auto Tuning:


Use to preset a receivable channel in any desired programme position, e.g. the position with the same number as the channel.

## 3. Manual Tuning:


Manually tune a channel if it cannot be automatically tuned, such as when the signal is poor.

## Automatic Tuning


- 1 Press the **MENU** button for MAIN menu display.

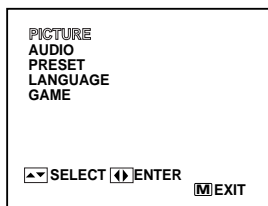

 - 2 Select "PRESET" by pressing the **Programme UP** or **DOWN** button.

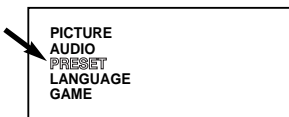

 
- 3 Press the **VOLUME +** or **-** button for PRESET menu display. On entering PRESET display, Automatic Tuning will be selected initially.

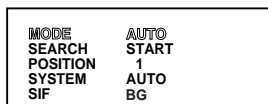

Normally, set the colour system to "AUTO", if the clear picture cannot be obtained, change the colour system until the optimum image can be produced.

## To select colour system


- 1) Select **SYSTEM** with the **Programme UP** or **DOWN** button.
- 2) Press the **VOLUME (+ or -)** button to select a optimum colour system.

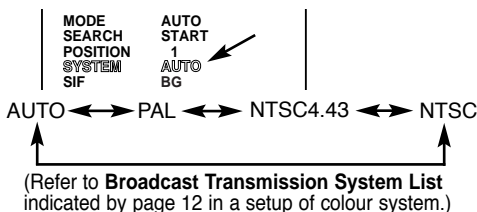


When the sound is not clear or no sound is produced on a programme number position, change the sound system.

## To select sound system


- 1) Select **SIF** with the **Programme UP** or **DOWN** button.
- 2) Press the **VOLUME (+ or -)** button to select an optimum sound system.

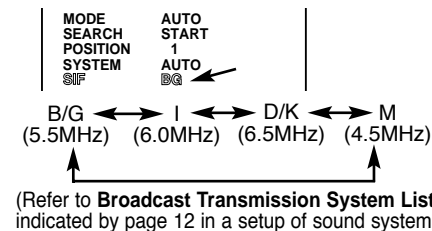

 - 4 Select "SEARCH" by pressing the **Programme UP** or **DOWN** button.

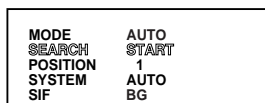

- 5 Press the **VOLUME (+)** button to start channel tuning.

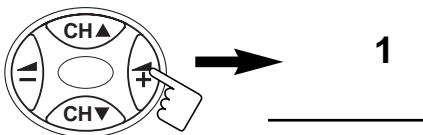

After all receivable channels have been found and stored, the TV set automatically returns to programme position "1".

- The Automatic Tuning operation can be cancelled at any time by pressing the **Programme UP** or **DOWN** button.

# Tuning of the Channels

## Semi-Auto Tuning and Manual Tuning

- 1 Press the **MENU** button for MAIN menu display.
- 2 Select "PRESET" by pressing the **Programme UP** or **DOWN** button.

PICTURE  
AUDIO  
PRESET  
LANGUAGE  
GAME

- 3 Press the **VOLUME +** or **-** button for PRESET menu display. On entering PRESET display, Automatic Tuning will be selected initially.
- 4 Select "SEMI" or "MANUAL" by pressing the **VOLUME +** or **-** button.

### Semi-Auto Tuning Mode

MODE  
SEARCH  
POSITION  
SYSTEM  
SIF  
SKIP  
MEMORY

SEMI  
START  
2  
AUTO  
BG  
OFF  
--

### Manual Tuning Mode

MODE  
SEARCH  
POSITION  
SYSTEM  
SIF  
SKIP  
MEMORY

MANUAL  
START  
2  
AUTO  
BG  
OFF  
--

If it is required, Change the colour and sound system. To enter the colour and sound system into memory, select "MEMORY" and press the **VOLUME +** or **-** button.

SKIP MEMORY OFF OK  
SELECT ADJUST BACK EXIT

- 5 For example, to pre-set a required channel onto Programme Position 6, select "POSITION" with the **Programme UP** or **DOWN** button and press remote control button number 6 and enter 6. (In this case, the channel being watched will change to channel 6.)

MODE  
SEARCH  
POSITION  
SYSTEM  
SIF  
SKIP  
MEMORY

SEMI  
START  
6  
AUTO  
BG  
OFF  
--

For example, to enter Programme Position 27, press the **Digit** button, press the remote control button 2 followed by 7. It is also possible to select the Programme position number by pressing either of the **VOLUME +** or **-** button. In this case, select "POSITION" with the **Programme UP OR DOWN** button first, then press the **VOLUME +** or **-** button. (Pressing the **VOLUME +** or **-** button will only alter the programme position number.)

- 6 Select "SEARCH" by pressing the **Programme UP** or **DOWN** button.

MODE  
SEARCH  
POSITION  
SYSTEM

SEMI  
START  
6  
AUTO

### Semi-Auto Tuning:

Press and release the **VOLUME +** or **-** button to search for required TV station. Once a station is located, tuning will automatically stop. Continue till desired channel is located.

MODE  
SEARCH  
POSITION  
SYSTEM

SEMI  
START  
6  
AUTO

### Manual Tuning :

Press and hold the **VOLUME +** or **-** button to search for required TV station.

MODE  
SEARCH  
POSITION  
SYSTEM

MANUAL  
START  
6  
AUTO

The **VOLUME +** button will move tuning toward the higher frequencies, and the **VOLUME -** button will move tuning toward the lower frequencies.

- 7 Once desired channel is located, select "MEMORY" by pressing the **Programme UP** or **DOWN** button.

- 8 Press the **VOLUME +** or **-** button to enter the desired channel into Programme Position 6.

SKIP MEMORY OFF OK

SELECT ADJUST BACK EXIT

To pre-set other Programme Positions, repeat steps 5-8.

- 9 Press the **MENU** button to return to normal TV display.



# Tuning of the Channels

## Channel Copy

This function can be utilized after Automatic Tuning.

For example, to copy a TV channel on programme position “2” onto programme position “6”;

- 1 Select programme position “2” .



- 2 Enter to SEMI-AUTO or MANUAL tuning mode. (Refer to page 16.)

- 3 Select “POSITION” with the Programme UP or DOWN button.

MODE	SEMI
SEARCH	START
POSITION	2
SYSTEM	AUTO
SIF	BG
SKIP	OFF
MEMORY	--

- 4 Select position “6” with the VOLUME + or – button.

MODE	SEMI
SEARCH	START
POSITION	6
SYSTEM	AUTO
SIF	BG
SKIP	OFF
MEMORY	--

- 5 Select “MEMORY” by pressing the Programme UP or DOWN button.

- 6 Press the VOLUME + or – button to memorize.

MODE	SEMI
SEARCH	START
POSITION	6
SYSTEM	AUTO
SIF	BG
SKIP	OFF
MEMORY	OK


SELECT ADJUST BACK EXIT

- 7 Press the MENU button to return to normal TV display.

## Channel Swapping

Use this channel swapping feature to swap the channels between two stored programme position. This feature is particularly useful after automatic tuning.

For example, to swap the channel between programme position “6” and programme position “12”.

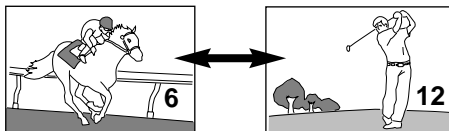

- 1 Select programme position “6” .



- 2 Press the SWAP button.




- 3 Press the DIGIT button, “ 1 “ button and then “ 2 ” button on the remote control to enter programme number 12. (For example, to enter programme number “ 3 “, press “ 3 “ button only. )



- 4 Press the SWAP button.



The two TV channels will now have changed places.

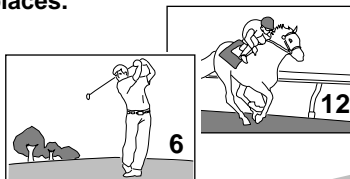

# Tuning of the Channels

## Skip Channel Set and Cancel

When there is a position you do not use, Position 4 for example, by setting the SKIP Channel function it is possible to jump over this position, when you are selecting a channel using the **Programme UP/DOWN** or **CHANNEL SCAN** button.



For example, to set programme position “4” as Skip channel ;

- 4 Select “SKIP” by pressing the **Programme UP** or **DOWN** button, then press the **VOLUME +** or **-** button to set SKIP to ON. To cancel Skip Channel function, set to OFF.

MODE	SEMI
SEARCH	START
POSITION	4
SYSTEM	AUTO
SIF	BG
SKIP	ON
MEMORY	--

SELECT ADJUST BACK EXIT

- 1 Enter to SEMI-AUTO or MANUAL tuning mode. (Refer to page 16.)

- 2 Select “POSITION” with the **Programme UP** or **DOWN** button.

MODE	SEMI
SEARCH	START
POSITION	6
SYSTEM	AUTO
SIF	BG
SKIP	OFF
MEMORY	--

SELECT ADJUST BACK EXIT

- 5 Select “MEMORY” by pressing the **Programme UP** or **DOWN** button, then press the **VOLUME +** or **-** button for memory.

MODE	SEMI
SEARCH	START
POSITION	4
SYSTEM	AUTO
SIF	BG
SKIP	ON
MEMORY	OK

SELECT ADJUST BACK EXIT

- 3 Press remote control “4” button to select Programme Position 4. Use the **DIGIT** button and **Programme Selector** (Number buttons) to enter Programme Number. Do not use the **VOLUME +** or **-** button to enter programme position in this settings.

MODE	SEMI
SEARCH	START
POSITION	4
SYSTEM	AUTO
SIF	BG
SKIP	OFF
MEMORY	--

SELECT ADJUST BACK EXIT

Any number of channels maybe set as Skip Channels.

- 6 Press the **MENU** button to return to normal TV display.

# Setting of the Private Position


Private position is used to restrict of programme positions that you do not want others to watch.

Any position can be set as the Private position.


## How to set the Private Position

For example, to set the programme position "15" as the private position.

- 1 Select programme position "15".

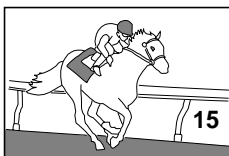

- 2 Press and hold the **RECALL** button for more than 2 seconds.

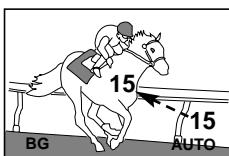

The programme number "15" will shift to centre of the screen.

- 3 Press the **MENU** button.



The picture will disappear, and "X 15" will be display on the screen.

The private position setting is now completed.

## To view a programme on Private Position

- 1 Select private position (In this case position "15").



- 2 Press and hold the **RECALL** button for more than 2 seconds.



- 3 Press the **RECALL** button for watching a TV programme.



**Note:** The position "15" is still in the private position.

## Cancelling of the private position

- 1 Select private position (position "15").



- 2 Press and hold the **RECALL** button for more than 2 seconds.



- 3 Press the **MENU** button .



The private position is now cancelled.

# Setting of the OSD (On Screen Display) Language

## ENGLISH

- 1 Press the **MENU** button for MAIN menu display.



PICTURE  
PRESET  
LANGUAGE  
GAME

- 2 Select “LANGUAGE “ by pressing the **Programme UP** or **DOWN** button.



PICTURE  
PRESET  
LANGUAGE  
GAME

- 3 Press the **VOLUME +** or **-** button for Language menu display.



ENGLISH  
العربية  
عربي  
РУССКИЙ  
FRANCAIS  
BAHASA INDONESIA

SELECT BACK EXIT

To sets **ENGLISH** language on screen :  
Select “**ENGLISH**” by pressing the **Programme UP** or **DOWN** button. To return to the normal TV mode, press the **MENU** button.

## THAILAND



ภาษาไทย  
العربية  
عربي  
РУССКИЙ  
FRANCAIS  
BAHASA INDONESIA

เลือกการตั้งค่า  
กลับไปหน้าจอหลัก  
เลือกการตั้งค่า

To sets **THAILAND** language on screen :  
Select “**ภาษาไทย**” by pressing the **Programme UP** or **DOWN** button. To return to the normal TV mode, press the **MENU** button.

## ARABIC



عربي  
РУССКИЙ  
FRANCAIS  
BAHASA INDONESIA

اختيار عودة  
خروج

To sets **ARABIC** language on screen :  
Select “**عربي**” by pressing the **Programme UP** or **DOWN** button. To return to the normal TV mode, press the **MENU** button.

## RUSSIA



РУССКИЙ  
FRANCAIS  
BAHASA INDONESIA

Выбрать назад  
выйти

To sets **RUSSIA** language on screen :  
Select “**РУССКИЙ**” by pressing the **Programme UP** or **DOWN** button. To return to the normal TV mode, press the **MENU** button.

## FRENCH



FRANCAIS  
BAHASA INDONESIA

CHOISISSEZ RETOUR  
QUITTEZ

To sets **FRENCH** language on screen :  
Select “**FRANCAIS**” by pressing the **Programme UP** or **DOWN** button. To return to the normal TV mode, press the **MENU** button.

## INDONESIAN



BAHASA INDONESIA


PILIH KEMBALI  
KELUAR

To sets **INDONESIAN** language on screen :  
Select “**BAHASA INDONESIA**” by pressing the **Programme UP** or **DOWN** button. To return to the normal TV mode, press the **MENU** button.


# GAME (Air Tennis)

## How to go into Game Mode

- 1 Press the **MENU** button for MAIN menu display.

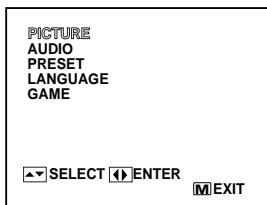

- 2 Select "GAME" by pressing the **Programme UP** or **DOWN** button, then press the **VOLUME +** or **-** button.

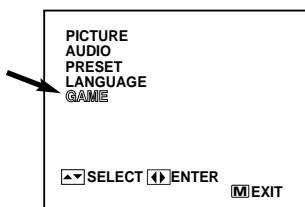

**Note:** When "GAME" is selected, the TV sound is still heard.

- 3 To return to the normal TV mode, press the **MENU** button.

## How to Play


When play starts the ball move from upside to downward. You have to reflect the ball to upside (enemy-side). If user miss, the enemy score 1 point.

**You get 5 points, the stage is clear.** Then game level will be increase ( Level 0 - 9). But when the **enemy score 5 points, the game is over.**



## Available Keys in the Game


- [VOLUME +] button : Right action
- [VOLUME -] button : Left action
- [MENU] button : Exit from the game
- [ALTERNATE] button : Restart from the game over

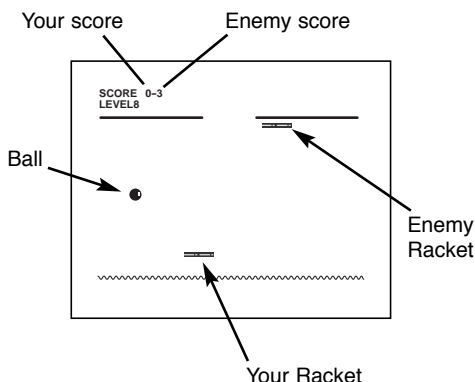

# Connecting other Equipment


## Connecting to the Rear AV1 Input Jacks

Connect the video and audio outputs of a VCR, video disc player, etc. to the input jacks of this TV set. Tapes and discs can be played back.

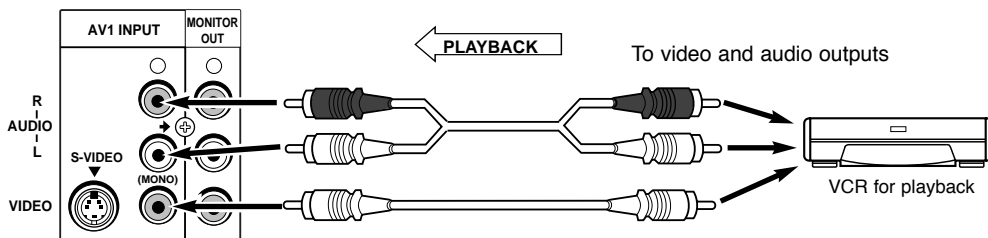

- If the audio signal from a VCR is stereo, be sure to connect the right and left channels to the respective right and left AUDIO-IN terminals.

When the stereo signal is inputted from the right and left audio input terminals, each time the **SURROUND** button is pressed (or selection of On-screen Menu), surround mode is changed as follows; “**SURROUND 1**”, “**SURROUND 2**” and “**SURROUND OFF**”.

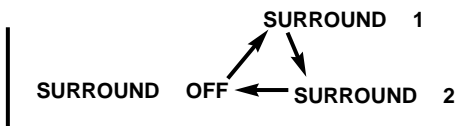


“**SURROUND 1**” is normal surround mode. Selection of “**SURROUND 2**” obtains a deeper surround effect.

- If the external equipment is a monaural one, connect it to the left terminal of AUDIO IN.  
**Note:** The effect of surround is not obtained although the switching of surround is displayed in this monaural connection.

**Note:** ▼A•B (STEREO/MONO) button of the remote control transmitter does not operate in this model.

- To watch the AV1 video input picture, select AV1 position by pressing the **TV/AV Selector**.

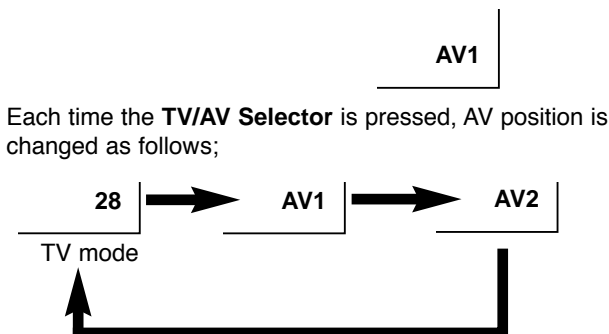

# Connecting other Equipment

## ■ You can select a TV programme while watching a playback from a VCR


For example:

- To select programme position “9” while watching a playback from external VCR, press “9” button of the remote control. The TV set returns to the TV mode and programme “9” will be selected.
- To select the programme position “26”, press **Digit** (--/-) button, “2” then “6” button. Then TV set returns to the TV mode and programme position “26” will be selected.

**Note:** Pressing either of the **Programme UP** or **DOWN** buttons of the remote control or the TV will return the TV to the TV mode.

## S-VHS VCR/DVD Player Connection

To display high grade picture S-VHS video, connect to S-VIDEO terminal. Using the S-VIDEO terminal to connect to a DVD player instead of the normal video input terminal provides a clearer video image.

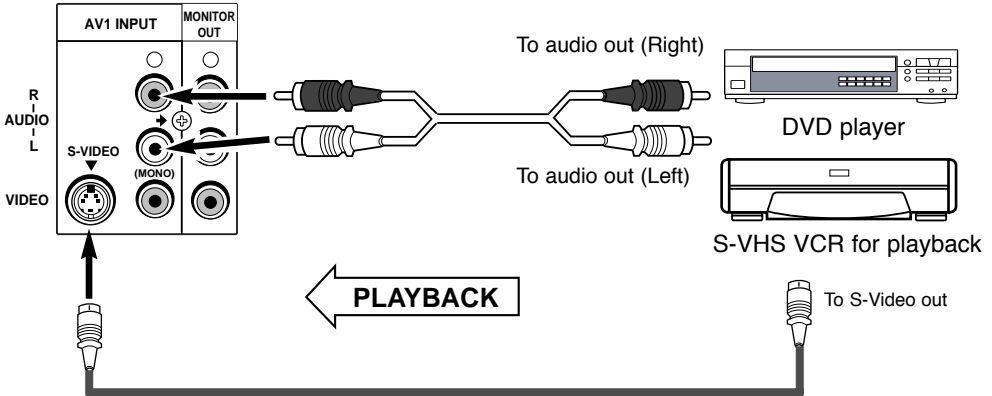

## ■ To watch S-VHS video, select AV1 position by pressing the **TV/AV Selector**.


AV1

**Note:** S-VIDEO terminal takes priority over AV1 input. While a S-VIDEO terminal is connected, the AV1 terminal for normal VCR input can not be used. To use the AV1 terminal for normal VCR input, disconnect the S-VIDEO terminal.

# Connecting other Equipment



## Connecting to the Front AV2 Input Jacks

It is convenient to use the AV2 input jack on the front panel for equipment that is often connected and disconnected.

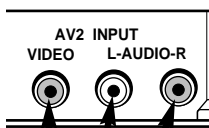

■ To watch the Front AV2 video input picture, select AV2 position by pressing the **TV/AV Selector**.


AV2

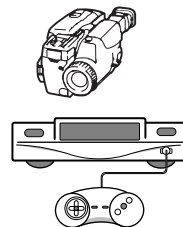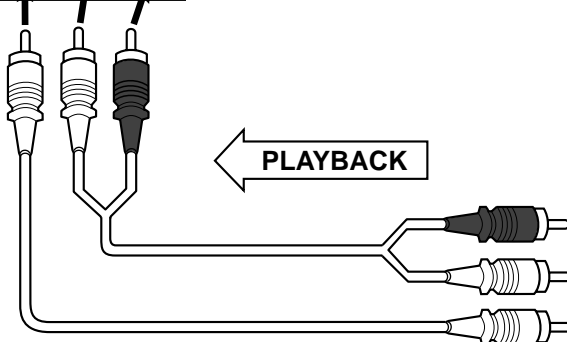

## Selecting the Colour System in AV Mode

Depending on the type of video tape or connected AV equipment being used, it may be necessary to select colour system. In this case, press the **RECALL** button or **COLOUR SYSTEM** button and select a suitable colour system.

Each time the **RECALL** button or **COLOUR SYSTEM** button is pressed, colour system is changed as follow;

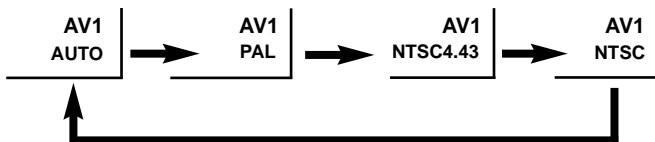


Colour system setting for AV position is automatically stored in the memory.



# Connecting other Equipment

## Connecting to the Monitor Output Jacks

The picture signal being displayed on the TV screen is output through the Monitor Output Jacks. Use these terminals to record TV broadcasts and for video dubbing from AV1 or AV2 input terminals.

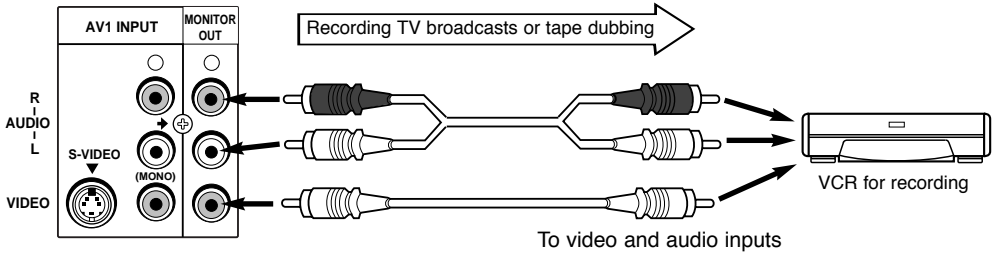

- To record TV programme, select TV mode by pressing the **TV/AV Selector** and record the desired programme.

**15** TV mode

- To dub video from the AV1 terminal input, select AV1 position by pressing the **TV/AV Selector**.


**AV1**

## AV Connection to the Aerial Socket

The AV apparatus can also be connected to the aerial socket of your TV receiver.

### Presetting to watch the video input

1. Playback the VCR .
2. Tune a VCR playback in programme position that you want. (See Semi-Auto Tuning and Manual Tuning on pages 16.)

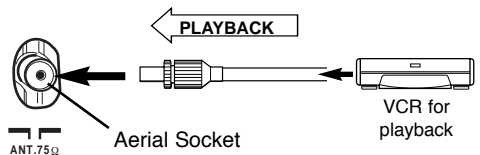

For further details concerning this connection and adjustment, refer to the operating instructions for the AV equipment.

# Care and Cleaning

---

The surface of the cabinet can be damaged if not properly maintained. Many common household aerosol sprays, cleaning agents, solvents and polishes will cause permanent damage to the fine surface.

- 1. Unplug the power cord before cleaning the Television.**
2. Clean the screen with a soft cloth dampened with glass cleaner or warm water.
3. Clean the cabinet with a soft cloth dampened with a mild household detergent and warm water. Dry thoroughly.

**Note:** *NEVER* spray liquids on the screen because they can run down and drip onto the chassis. This may cause component failure not covered under Warranty.

# Specifications

---

**Power Source** AC110-240 Volts, 50/60Hz

**Colour System** PAL/NTSC4.43/NTSC/PAL-60Hz

**Sound System** B/G, I, D/KK', M/M

## Channel Coverage

VHF: E2-E12, A2-A13, R1-R12, J1-J12, K1-K9

0-11, 5A (Australia), 1-11 (New Zealand)

UHF: 21-69, A14-A69, J13-J62,

28-69 (Australia)

CATV: S1-S41, X, Y, Z, Z+1, Z+2

**Aerial input impedance** 75  $\Omega$

## Audio output (RMS)

Model CA21KF2G, CA29AF2G: 10W + 10W

Model CA21AF1G, CP21AF1V(A), CP29AF2X(A): 5W + 5W

Model CA29KF2G : Main Speaker 5W + 5W, Woofer: 10W

## Speakers

Model CA21KF2G: 8 cm x 13 cm x 2 pcs.

Model CA21AF1G, CP21AF1V(A): 5 cm x 12 cm x 2 pcs.

Model CA29AF2G, CP29AF2X(A): 6 cm x 12 cm x 2 pcs.

Model CA29KF2G : Main Speaker 8 cm x 13 cm x 2 pcs, Woofer:  $\varnothing$ 10 cm x 1 pc.

## Ext. terminals

Model CA21KF2G, CA21AF1G, CP21AF1V(A):

Video Inputs: Phone Jack x 2 (1.0Vp-p, impedance 75  $\Omega$ )

S-Video Input: Din 4 pin x 1 (Separated Y/C Signals Input)

Audio inputs: Phone Jack (L/R) x 2 (436mVrms, impedance more than 40K $\Omega$ )

Video monitor outputs: Phone Jack x 1 (1.0Vp-p, impedance 75  $\Omega$ )

Audio monitor outputs: Phone Jack (L/R) x 1 (436mVrms, impedance less than 600 $\Omega$ )

Model CA29AF2G, CP29AF2X(A), CA29KF2G:

Video Inputs: Phone Jack x 2 (1.0Vp-p, impedance 75  $\Omega$ )

S-Video Input: Din 4 pin x 1 (Separated Y/C Signals Input)

Audio inputs: Phone Jack (L/R) x 2 (436mVrms, impedance more than 40K $\Omega$ )

Video monitor outputs: Phone Jack x 1 (1.0Vp-p, impedance 75  $\Omega$ )

Audio monitor outputs: Phone Jack (L/R) x 1 (436mVrms, impedance less than 600 $\Omega$ )

Headphone Jack: Mini Stereo Jack x 1

## Dimension

Model CA21KF2G: 652 (W) x 460 (H) x 490 (D)mm

Model CA21AF1G, CP21AF1V(A): 587 (W) x 457 (H) x 486 (D)mm

Model CA29AF2G, CP29AF2X(A): 750 (W) x 582 (H) x 503 (D)mm

Model CA29KF2G : 816 (W) x 583 (H) x 504 (D) mm.

## Weight

Model CA21KF2G: approx. 23.2 Kg

Model CA21AF1G, CP21AF1V(A): approx. 21.3 Kg

Model CA29AF2G, CP29AF2X(A): approx. 46.8 Kg

Model CA29KF2G : 46.7 Kg

*Specifications subject to change without notice.*

# Helpful Hints - Problems/Solutions

Before requesting service check the following chart.

Problem:	Check these Conditions / Try these solutions:
<b>No picture, no sound</b>	<ul style="list-style-type: none"> <li>● Check if TV is plugged in.</li> <li>● Try a different channel, if OK, probably station trouble.</li> </ul>
<b>Poor picture, sound OK</b>	<ul style="list-style-type: none"> <li>● Adjust Brightness or Contrast control.</li> <li>● Adjust Fine Tuning. (See page 13.) ● Check aerial connection.</li> </ul>
<b>No colour, Picture OK</b>	<ul style="list-style-type: none"> <li>● Adjust Colour or Tint control. ● Adjust Fine Tuning. (See page 13.)</li> <li>● Check aerial connection. ● Is the programme in colour ? Try a different channel.</li> <li>● Select other colour system. (See Setting of the Colour System on page 12.)</li> </ul>
<b>Weak picture</b>	<ul style="list-style-type: none"> <li>● Check aerial connection on back of TV set.</li> <li>● Check aerial for broken wires. ● Re-orient aerial.</li> </ul>
<b>No sound or poor sound.</b>	<ul style="list-style-type: none"> <li>● Sound Mute may be on. Press the <b>SOUND MUTE</b> button on the remote control.</li> <li>● Adjust Volume. ● May be station trouble. Try a different channel.</li> <li>● Select other sound system. (See Setting of the Sound System on page 12.)</li> </ul>
<b>Remote Control will not work.</b>	<ul style="list-style-type: none"> <li>● Check batteries. Replace batteries.</li> <li>● Check if TV set is plugged in. Aim remote control towards front of TV.</li> </ul>
<b>Cannot select or scan some channels.</b>	<ul style="list-style-type: none"> <li>● Channel may be removed from memory. Add channel to memory manually. (See "Skip Channel Set and Cancel" on page 18.) ● Check aerial connection.</li> </ul>
<b>Blue screen with AV1 or AV2 is displayed</b>	<ul style="list-style-type: none"> <li>● Check AV connection. Press the TV/AV Selection button.</li> <li>● Check external equipment. Switch on external equipment.</li> </ul>
<b>Black screen with X and programme position displayed.</b>	<ul style="list-style-type: none"> <li>● Check to see if channel is set as the Private Position. See "Setting of the Private Position" on page 19.</li> </ul>
<b>Cabinet makes popping sound.</b>	<ul style="list-style-type: none"> <li>● This is a normal condition during warm-up and cool down of the plastic cabinet parts.</li> </ul>

The following faults are not caused by the receiver:

## "GHOSTS"

Reflections of signals from mountains or high buildings will cause multiple images, called "Ghosts". These abnormal conditions can be reduced to minimum by repositioning aerial or by installing new one suited for your area.

## "INTERFERENCE"

Interference may be caused by electrical appliances, car ignition systems, etc. This should normally be a temporary condition, but should this interference persist, contact your dealer.

