

SANYO

INSTRUCTION MANUAL

Colour Television

**CP14G1(A)
CP21G1(A)
CP14SR1(A)
CP20SR1(A)
CP14SA1(A)
CP21SA1(A)**

***CATV Hyper Band
256 Programmes with Automatic Tuning
GAME***

Contents

Plug & Play	3	Connecting other Equipment	
Aerial Connection	3	Connecting to the AV Input Jacks	19
Front Controls	4-5	Selecting the Colour System in AV mode .	20
Warnings and Cautions	6	Connecting to the Monitor Output Jacks .	20
Remote Control Transmitter	7	AV Connection to the Aerial Socket	20
Battery Installation of		Care and Cleaning	21
the Remote Control Transmitter ...	7	Specifications	21
General Operation		Helpful Hints-Problems/Solutions ..	22
Power ON/OFF	8		
Auto Shut Off Function	8		
Direct Programme Selection	8		
Programme UP and Down	8		
Channel Scanning	8		
Volume Control	9		
Recall	9		
Sound Mute	9		
Alternate	9		
Quick Picture Controls	9		
Off Timer	10		
On Timer	10		
Picture Adjustment	11		
Tuning of the Channels			
Automatic Tuning	12		
Semi-auto Tuning and Manual Tuning .	13		
Channel Copy	14		
Channel Swapping	14		
Skip Channel Set and Cancel ...	15		
Setting of the Private Position	16		
Setting of the Language OSD			
English	17		
Arabic	17		
Thailand	17		
Russia	17		
French	17		
Indonesian	17		
Game (Air Tennis)			
How to play	18		
Available key in game	18		

 
Plug & Play

Automatic setting up channels

This TV set provides a self-automatic tuning and sorting system function called "**Plug & Play**". It automatically begins searching and storing of all available channels when switching-on the TV set for the first time.

Let's start !

- 1 Connect power cord of the TV set to a wall outlet, and turn on the TV set by pressing the **Mains ON/OFF** button. Self-automatic tuning system will be started as follows;

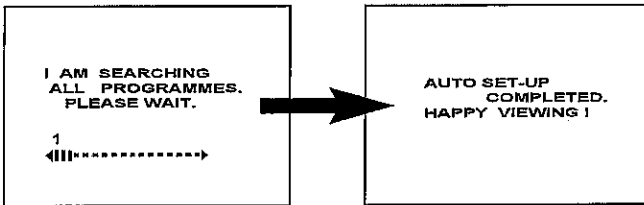


After completing this procedure, the programme position 1 is selected and the ending messages on the screen.

Note: The Plug & Play can be cancelled at any time by pressing the **MENU** button.

- 2 Press any of the control buttons to make the ending message disappear. (Or will automatically return to normal TV display after 10 seconds.)

✍ This procedure only appears at the first switch-on time.

 - If no TV stations are found, the display shown below will appear. Please check if the antenna is connected properly.

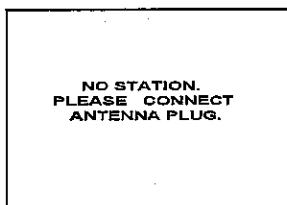


If it isn't connected properly, connect antenna and Automatic Tuning will be reset.

Aerial Connection

Connecting Outdoor Aerial

 
Connect the cable with a plug from a UHF (or VHF) aerial to the aerial socket on the cabinet back.

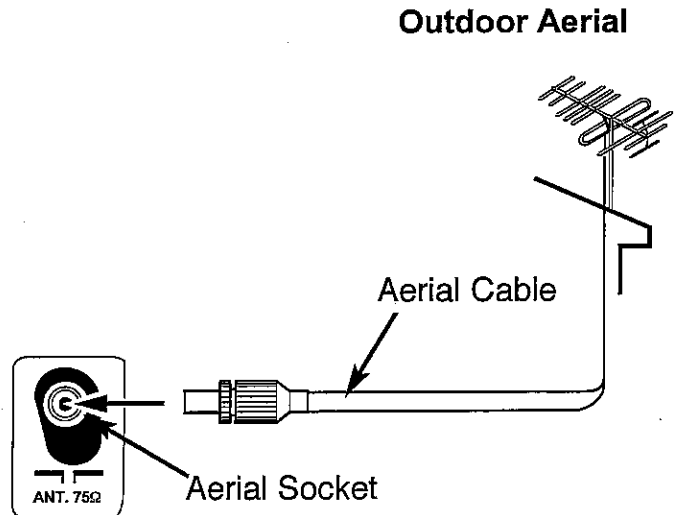

For all aerial circuit problems please consult your local dealer.

Mounting Telescopic Aerial

 
(Model CP14G1(A), CP14SR1(A), CP14SA1(A) Only)

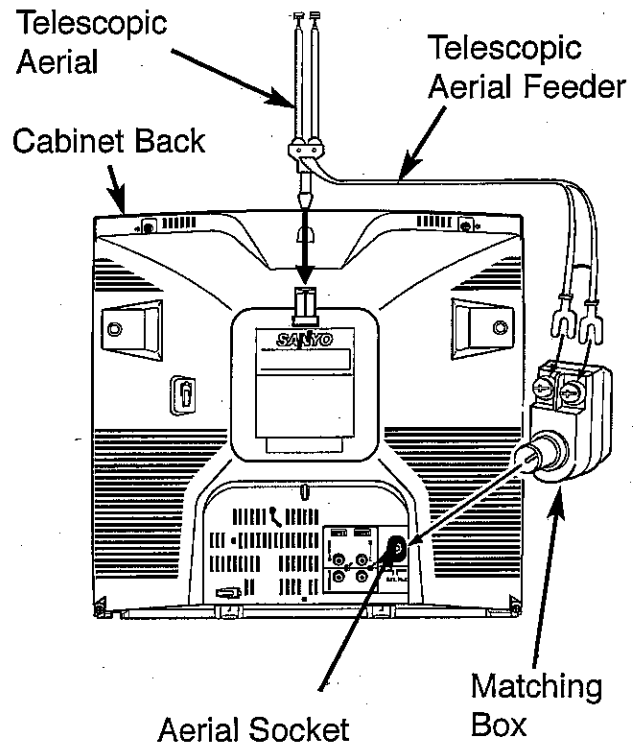


Front Controls

Each button listed in this section has the same function as it's corresponding button on the remote control.

 Model CP14G1(A)

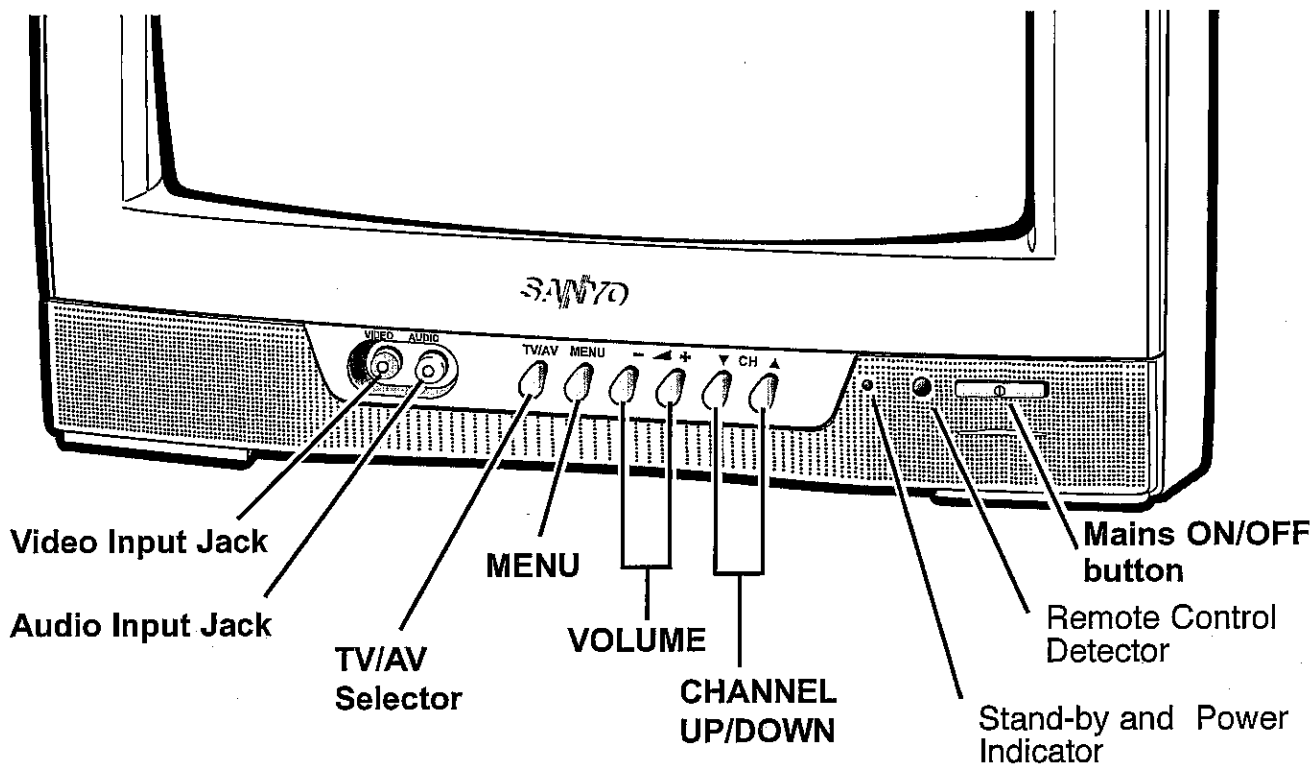


Model CP21G1(A)

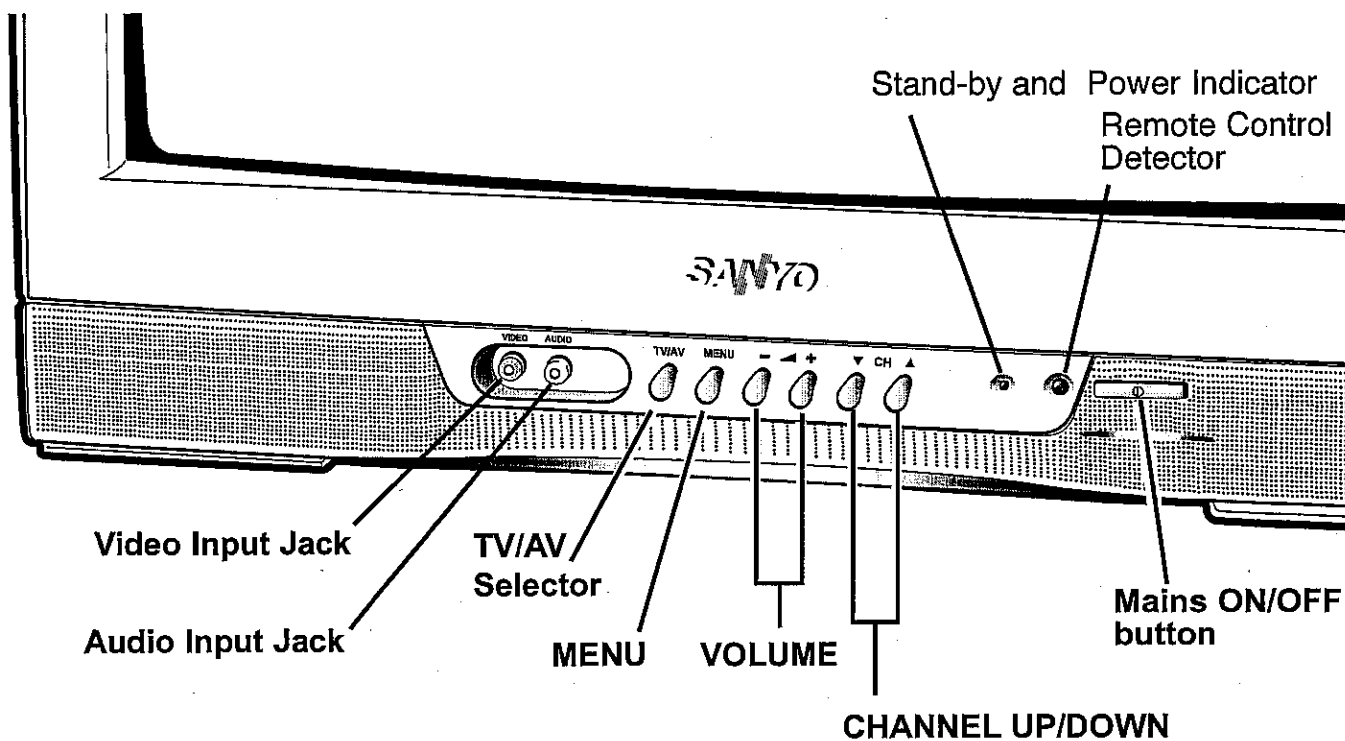 


Front Controls

Each button listed in this section has the same function as it's corresponding button on the remote control.

 Model CP14SR1 (A) / CP20SR1 (A)

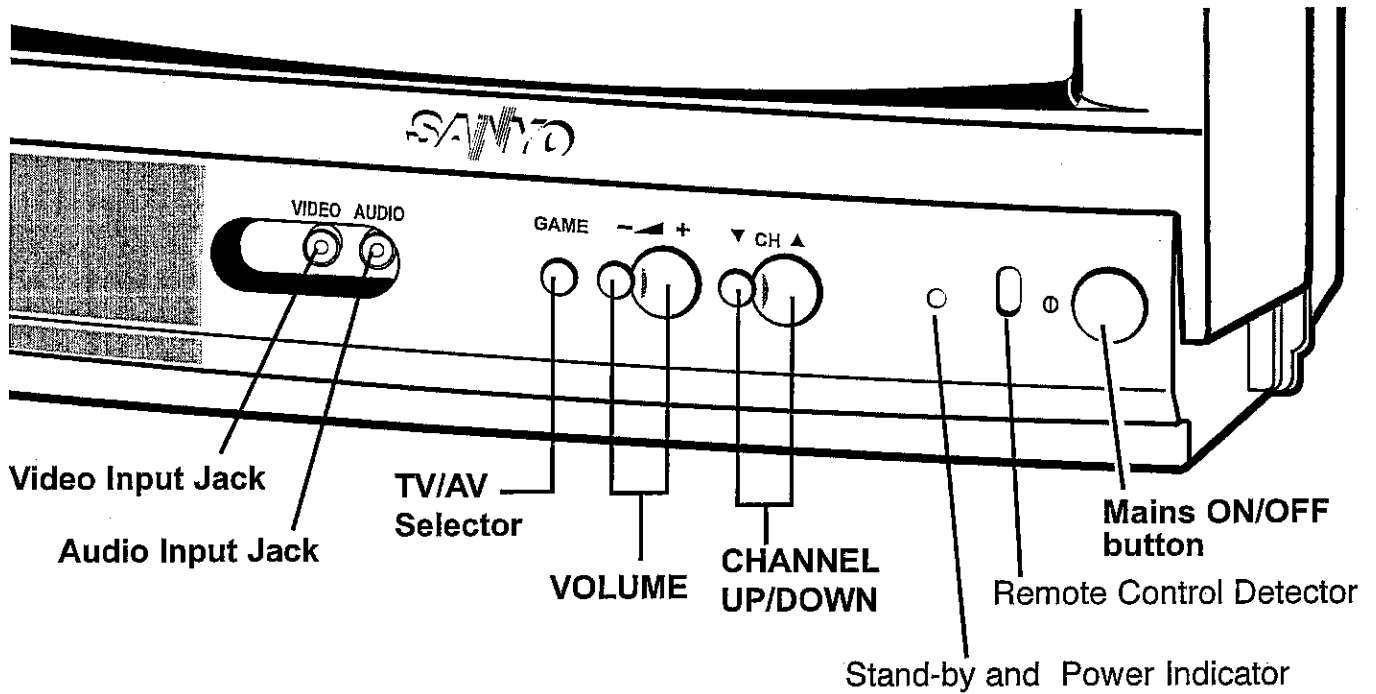

Model CP14SA1 (A) / CP21SA1 (A)

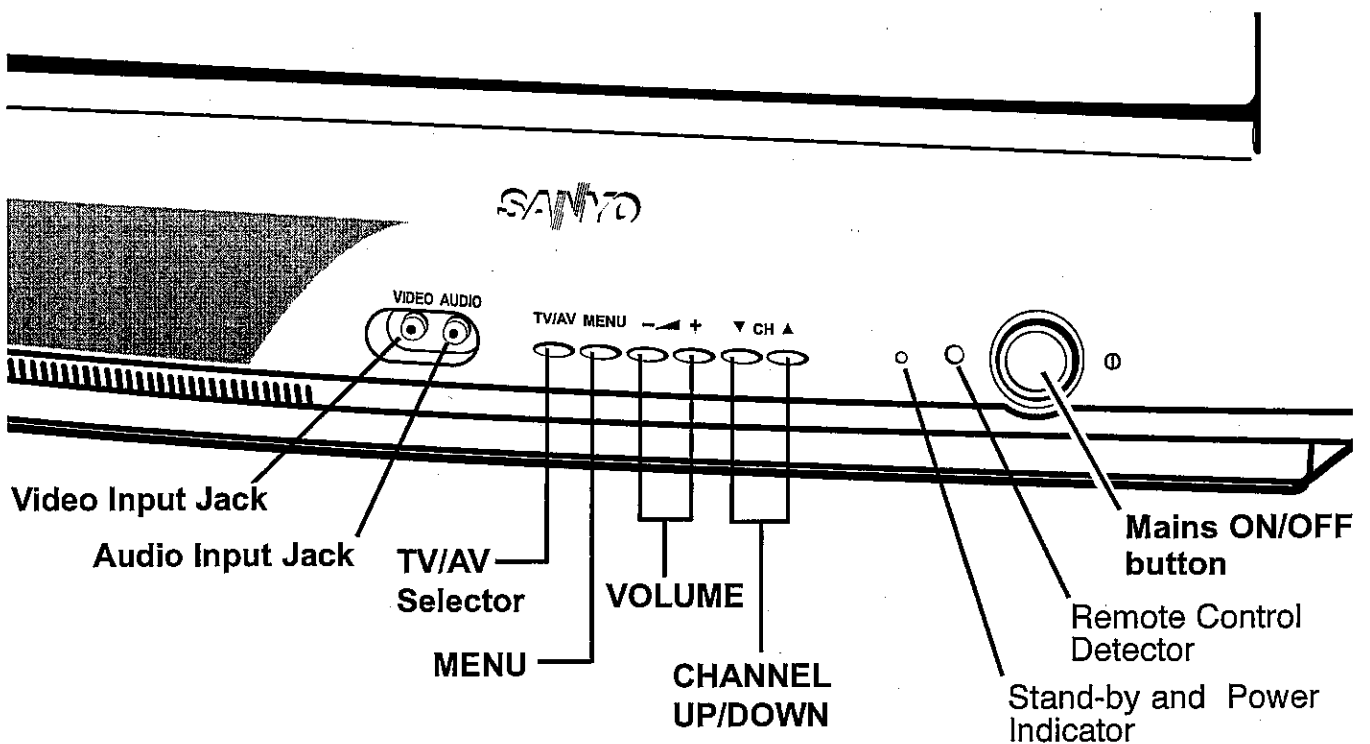 

Warnings and Cautions



Warning

High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.



Caution

When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.



Warning

Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.



Caution

Avoid exposing the television receiver to direct sunlight and other source of the heat. Do not stand the television receiver directly on other products which give off heat. E.g. video cassette players, audio amplifiers.



 
Warning

To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.



Caution

Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

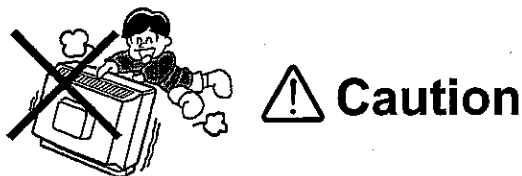


Caution

Never stand on, lean on or push suddenly the television or its stand. You should pay special attention to children. Serious injury may result if it should fall.



Caution

 
Do not squash power supply cord under the television receiver.

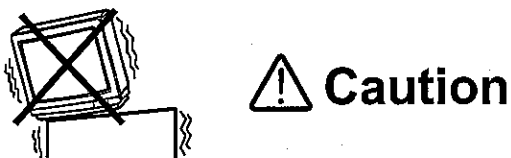

Caution

Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it should fall.

 
Minimum distances

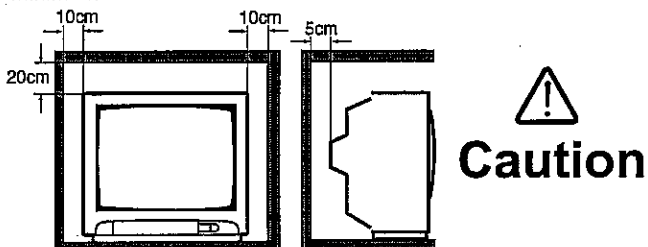

Caution

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.

 Remote Control Transmitter

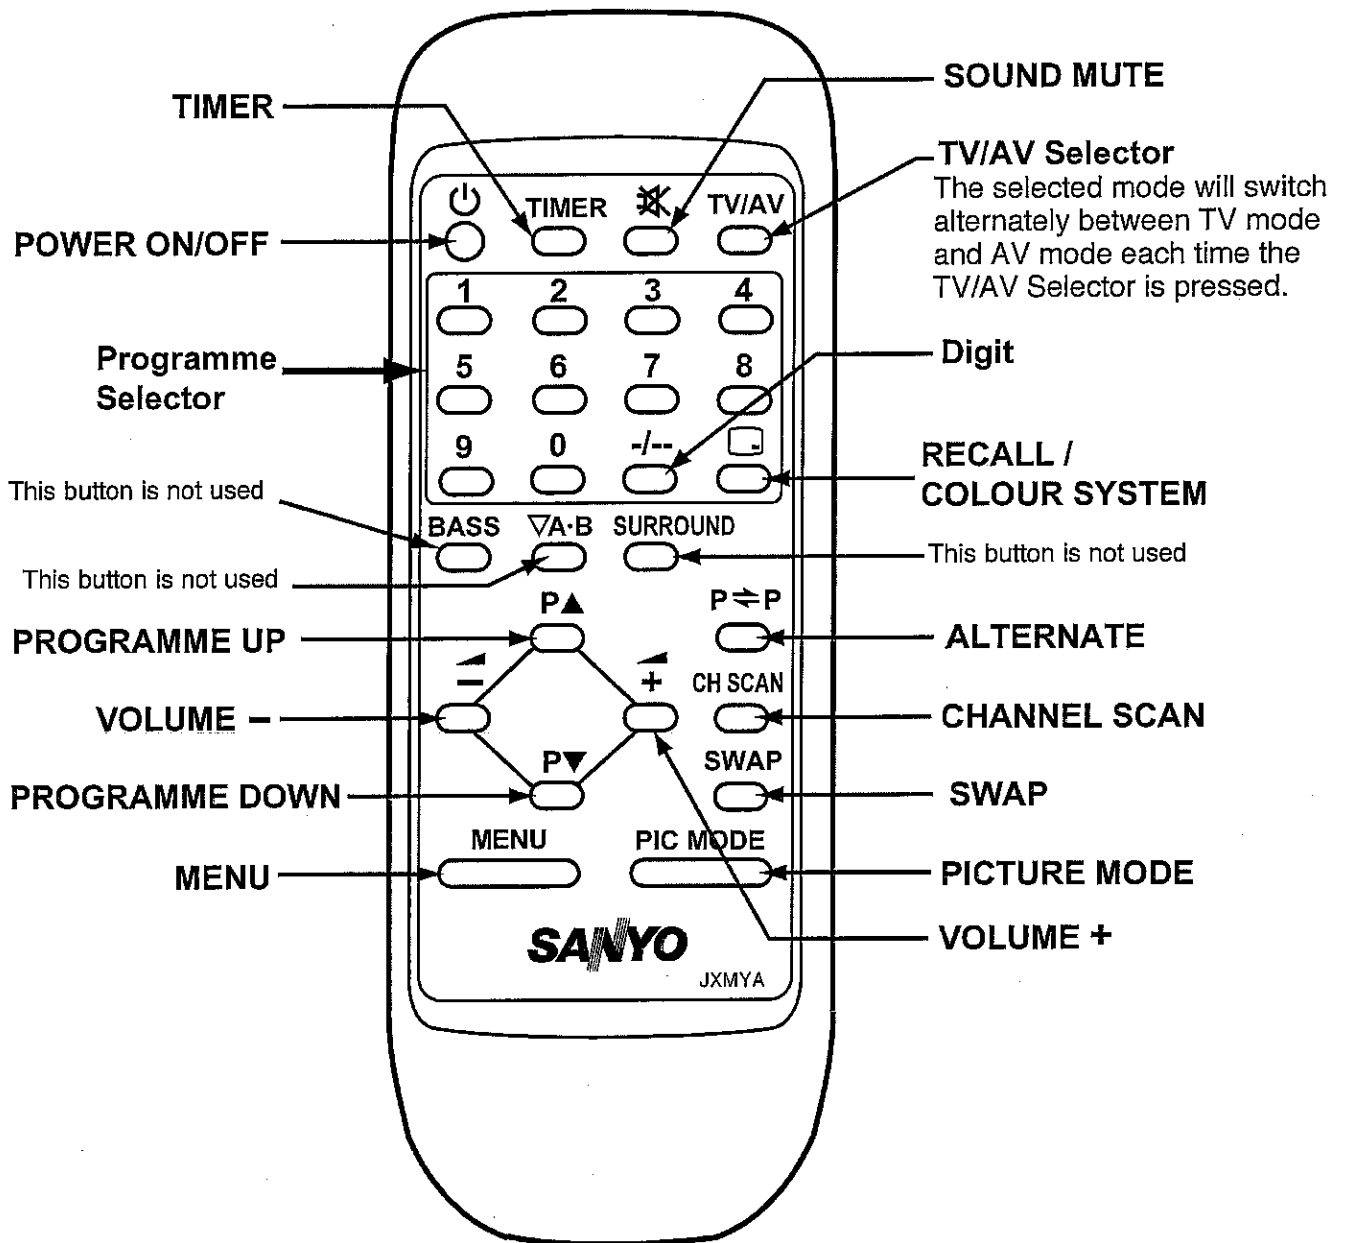


Battery installation of the Remote Control Transmitter

1. Open the battery cover.
2. Install two "AA" 1.5 volt batteries so that the "+" and "-" marks on the batteries match the "+" and "-" marks inside the unit.
3. Close the battery cover.

Note: Replace the batteries when the TV set is showing the following symptoms:

Operation is unsteady or erratic, sometimes the TV set does not work with transmitter.

 Discharged batteries may leak and damage the unit. The normal life of batteries should be from nine to ten months.

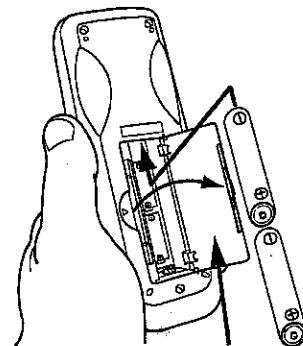

Battery Cover

General Operation

 
Power ON/OFF

To switch on or off the TV ;

Press the **Mains ON/OFF** button.
The power of the TV is turned on or off completely. If no picture appears but the Standby and Power indicator illuminates, press the **Power ON/OFF** button of the remote control transmitter as the TV set is in standby mode.

To set the TV to standby mode;

Press the **Power ON/OFF** button.
During Standby mode the Standby and Power indicator illuminates more brightly.

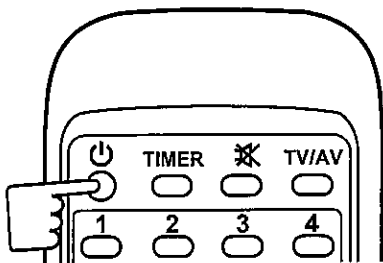

To turn on the TV from the standby mode, press any of the following button.

 
- **Power ON/OFF** button of the remote control transmitter.
- **Programme UP/DOWN** of the remote control transmitter or the TV set.
- **1 to 9, 0** button on the remote control transmitter.

Important !

Be sure to set the **Mains ON/OFF** switch to the off position, if the power failure occurs while viewing.

Auto Shut Off Function


This TV set incorporates the AUTO SHUT OFF function. Even if the TV is left on after you have gone to sleep, the TV set changes to the standby mode within 10 minutes after all broadcasts have ended.

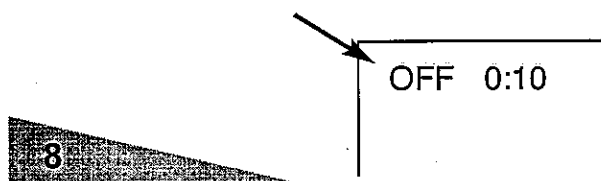


Direct Programme Selection

Example

 To select programme position 8;

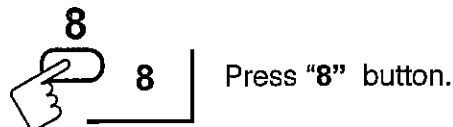


To select programme position 27;

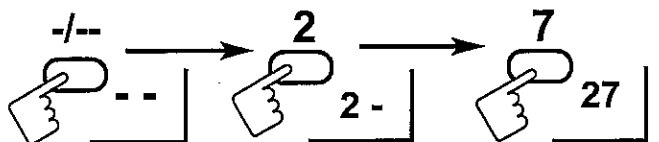 


Press the **Digit** button. Press "2" button. Press "7" button.

 To select programme position 125;

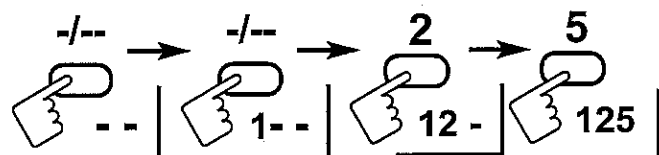

Press the **Digit** button twice. Press "2" button. Press "5" button.

 To select programme position 255;

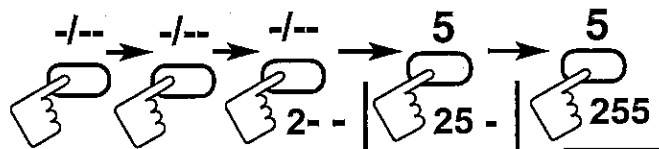


Press the **Digit** button 3 times. Press "5" button. Press "5" button.

Programme Up and Down

Press the **Programme UP** (P▲) button to select the next programme position.
Press the **Programme DOWN** (P▼) button to select the previous programme position.

Channel Scanning

 Press the **CHANNEL SCAN** button to search for a programme. The channel positions are automatically scanned, and the channel scanning will stop at the position where it began. To stop at the position you want, press this button again.

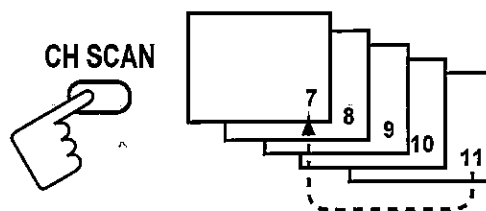

General Operation

 
Volume Control

Increase or decrease the sound volume level by pressing the **VOLUME (+ or -)** buttons.



RECALL

To display the on screen indications, press the **RECALL/COLOUR SYSTEM** button.

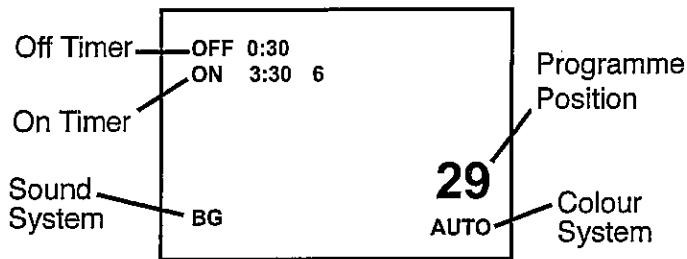


Screen display disappears after about 5 seconds.

Sound Mute


Should you wish to mute the sound (e.g. While talking on the telephone), press the **SOUND MUTE** button.

 To switch the sound back on, press the **SOUND MUTE** button again or **VOL +/-**.

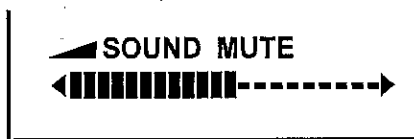

ALTERNATE

 
Press the **ALTERNATE** button, and the programme position will alternately select the previous position and the present position.

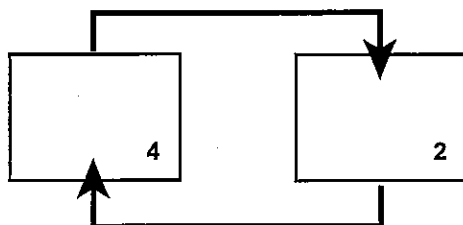

Quick Picture Controls

Press the **PICTURE MODE** button to select the following picture modes; "**PERSONAL**", "**DYNAMIC**", "**NATURAL**", "**ECO**" and "**GAME**". Select picture modes to suit picture type you are watching.

 Each time the **PICTURE MODE** button is pressed, picture settings changes as follows;

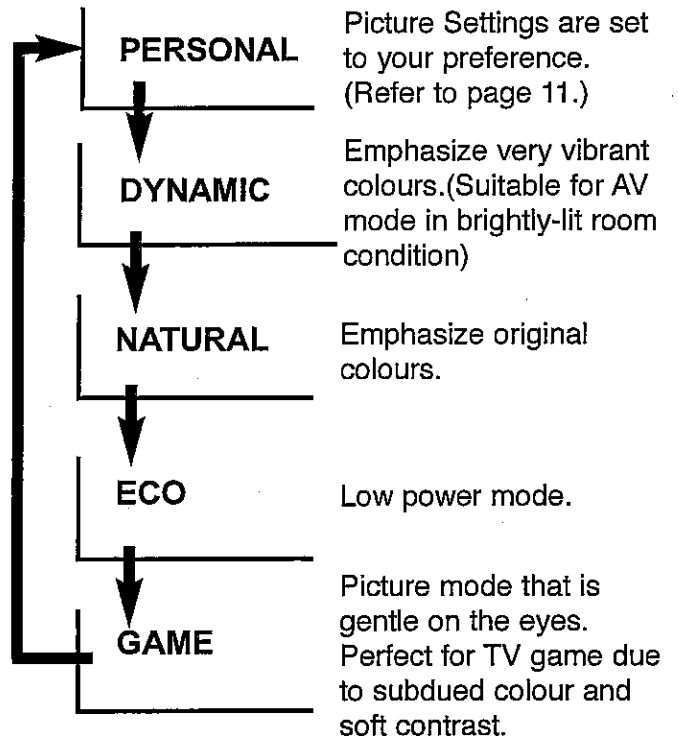


General Operation


OFF TIMER

The OFF TIMER will switch off the TV automatically after 30 minutes, 1 hour, 1 hour and 30 minutes, or 2 hours.

 1 Press the **TIMER** button.

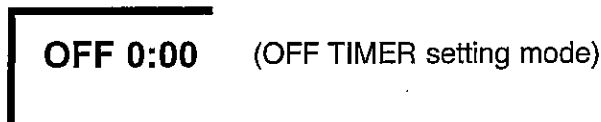

 Each time the **TIMER** button is pressed, timer function is changed as follows;

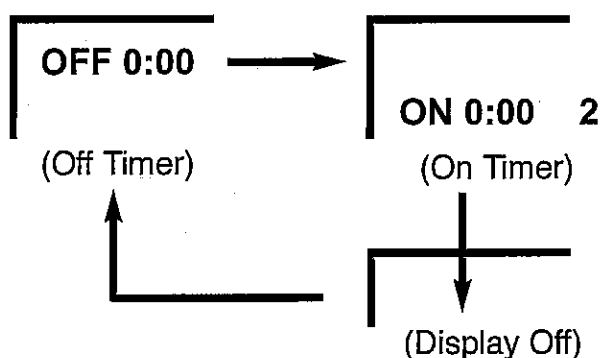


2 Press the **VOLUME (+ or -)** button to select the time period.

- Just one minute before switching off the TV, "OFF 0:01" will be display on the screen.
- To cancel the OFF TIMER, select "OFF 0:00" by pressing the **VOLUME (+ or -)** button.
- The OFF TIMER cancels when the TV set is turned off or if a power failure occurs.

ON TIMER

When the ON TIMER is set, TV will automatically be switched on to the selected programme position when the specified time has elapsed.

 
1 Press the **TIMER** button twice.

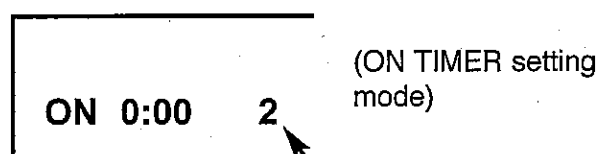


2 Press the **VOLUME (+ or -)** button. The set time will be increased or decreased by 10 minutes each time the button is pressed ; the maximum time which can be set is 24 hours.

Setting programme position for when TV is switched on by ON TIMER

 To set programme position to between 0 and 9, press the desired number button "0" - "9" while the ON TIMER screen is shown.



 For example, to set programme position 26, press the **Digit** button, "2" button then "6" button while the ON TIMER screen is shown.



It is also possible to set the programme position by pressing the **PROGRAMME UP** or **DOWN** button.

 
To set an AV position for when the TV is switched on by the ON TIMER, press the **TV/AV Selector** while the ON TIMER screen is shown to select position AV.



- If no operation is performed after the TV has been switched on by the ON TIMER, such as if you are not at home, the TV will be automatically switched off after approximately 2 hours.
- If the TV is already switched on when the time set for the ON TIMER has been reached, only the programme position will be changed to the set programme position.
- **Cancelling ON TIMER**
To cancel the ON TIMER, press the **VOLUME (+ or -)** button to set it to "ON 0:00" while the ON TIMER screen is shown. Switching off the TV by pressing the **Mains ON/OFF** button will also cancel the ON TIMER settings.

Picture Adjustment

Picture Adjustment Menu

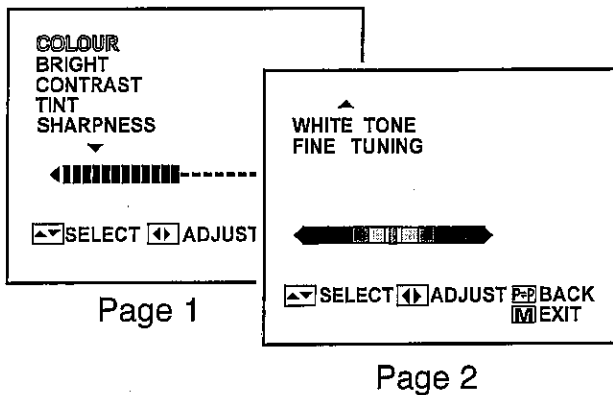

Note: The second page is not displayed when there is no TINT adjustment.

Picture Adjustment Item

- COLOUR** : Adjusts colour intensity.
- BRIGHT** : Adjusts picture brightness.
- CONTRAST** : Adjusts picture contrast.
- TINT** : Adjust colour tints. (Displayed only on NTSC or NTSC4.43 system signal reception.)
- WHITE TONE** : Adjusts white balance.
- SHARPNESS** : Adjusts picture detail.
- FINE TUNING** : Fine tuning in case of week broadcast signal or poor reception. Only displayed in TV mode. Will not be displayed in AV mode.

 
Note:

The picture adjustment data (Colour, Brightness, Contrast, Tint and Sharpness) is automatically stored in PERSONAL mode of the Quick Picture Controls (See page 9). These settings will be used when PERSONAL mode is selected.

PERSONAL


Basic picture adjustment operation

- 1** Press the **MENU** button for MAIN menu display.

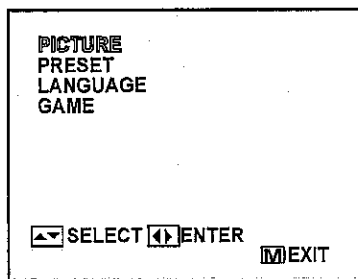


(MAIN MENU)

 - 2** When "PICTURE" is not selected, select "PICTURE" with the **Programme UP** or **DOWN** button.

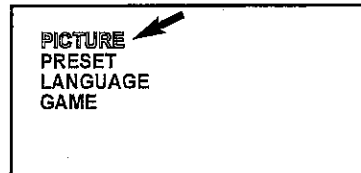


 - 3** Press the **VOLUME +** or **-** button to display Picture Adjustment menu.

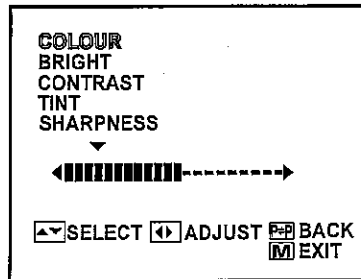


- To return to Main menu, press the **ALTERNATE** button.
- To return to the normal TV mode, press the **MENU** button. (Or will automatically return to the normal TV mode after 20 seconds.)

 - 4** Select desired control by pressing the **Programme UP** or **DOWN** button.

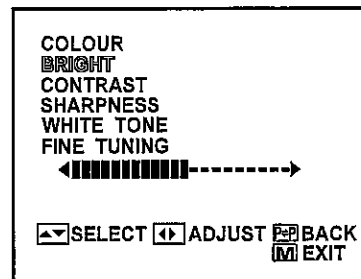

 - 5** Press the **VOLUME +** or **-** button to alter settings.

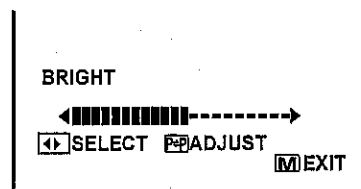

Approximately five seconds after you release the **VOLUME (+ / -)** button, the screen display switches from the adjustment screen to the normal TV screen. To return to the Picture adjustment menu, press the **ALTERNATE** button within five seconds of releasing the **VOLUME (+ / -)** button.

Tuning of the Channels

Up to 256 broadcast stations in your reception area can be stored in the electronic memory.

There are three ways of tuning as follows;

1. Automatic Tuning (the basic way):

All receivable channels are automatically tuned in and memorized in consecutive programme position.

2. Semi-Auto Tuning:

 
Use to preset a receivable channel in any desired programme position, e.g. the position with the same number as the channel.

3. Manual Tuning:


Manually tune a channel if it cannot be automatically tuned, such as when the signal is poor.

Automatic Tuning


- 1 Press the **MENU** button for MAIN menu display.

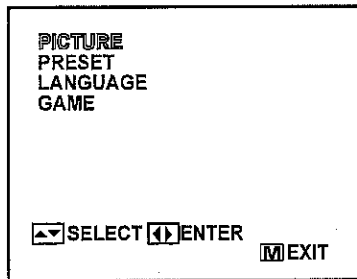

 
- 2 Select "PRESET" by pressing the **Programme UP** or **DOWN** button.

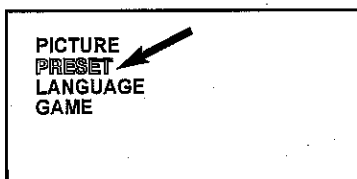

 
- 3 Press the **VOLUME +** or **-** button for PRESET menu display. On entering PRESET display, Automatic Tuning will be selected initially.

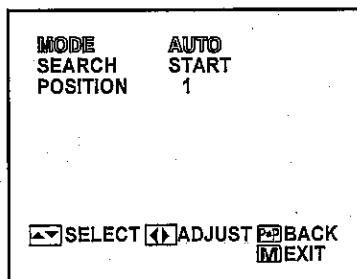

 - 4 Select "SEARCH" by pressing the **Programme UP** or **DOWN** button.

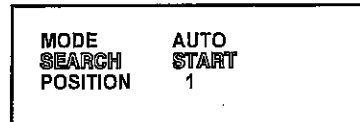

 - 5 Press the **VOLUME (+)** button to start channel tuning.

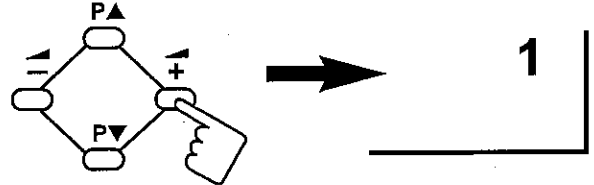


After all receivable channels have been found and stored, the TV set automatically returns to programme position "1".

- The Automatic Tuning operation can be cancelled at any time by pressing the **Programme UP** or **DOWN** button.

Tuning of the Channels

Semi-Auto Tuning and Manual Tuning

 - 1 Press the **MENU** button for MAIN menu display.
- 2 Select "PRESET" by pressing the **Programme UP** or **DOWN** button.

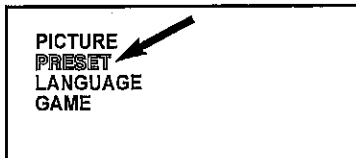


- 3 Press the **VOLUME +** or **-** button for PRESET menu display. On entering PRESET display, Automatic Tuning will be selected initially.
- 4 Select "SEMI" or "MANUAL" by pressing the **VOLUME +** or **-** button.


Semi-Auto Tuning Mode

Semi-Auto Tuning Mode		Manual Tuning Mode	
MODE	SEMI	MODE	MANUAL
SEARCH	START	SEARCH	START
POSITION	2	POSITION	2
SKIP	OFF	SKIP	OFF
MEMORY	--	MEMORY	--

 If it is required, Change the colour and sound system. To enter the colour and sound system into memory, select "MEMORY" and press the **VOLUME +** or **-** button.

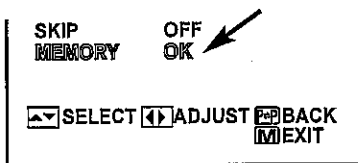


 - 5 For example, to pre-set a required channel onto Programme Position 6, select "POSITION" with the **Programme UP** or **DOWN** button and press remote control button number 6 and enter 6. (In this case, the channel being watched will change to channel 6.)

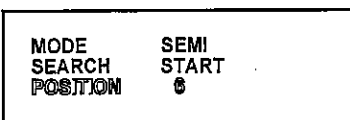


For example, to enter Programme Position 27, press the **Digit** button, press the remote control button **2** followed by **7**. It is also possible to select the Programme position number by pressing either of the **VOLUME +** or **-** button. In this case, select "POSITION" with the **Programme UP OR DOWN** button first, then press the **VOLUME +** or **-** button. (Pressing the **VOLUME +** or **-** button will only alter the programme position number.)

 - 6 Select "SEARCH" by pressing the **Programme UP** or **DOWN** button.




Semi-Auto Tuning:

 Press and release the **VOLUME +** or **-** button to search for required TV station. Once a station is located, tuning will automatically stop. Continue till desired channel is located.




Manual Tuning :

 Press and hold the **VOLUME +** or **-** button to search for required TV station.



The **VOLUME +** button will move tuning toward the higher frequencies, and the **VOLUME -** button will move tuning toward the lower frequencies.

 - 7 Once desired channel is located, select "MEMORY" by pressing the **Programme UP** or **DOWN** button.
- 8 Press the **VOLUME +** or **-** button to enter the desired channel into Programme Position 6.

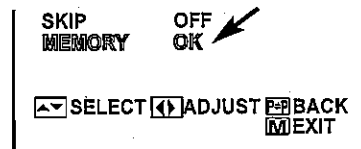

To pre-set other Programme Positions, repeat steps 5-8.

- 9 Press the **MENU** button to return to normal TV display.

Tuning of the Channels

Channel Copy

This function can be utilized after Automatic Tuning.

 
For example, to copy a TV channel on programme position "2" onto programme position "6";

- 1 Select programme position "2".




- 2 Enter to SEMI-AUTO or MANUAL tuning mode. (Refer to page 12.)

- 3 Select "POSITION" with the Programme UP or DOWN button.

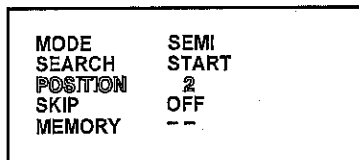


 - 4 Select position "6" with the VOLUME + or - button.

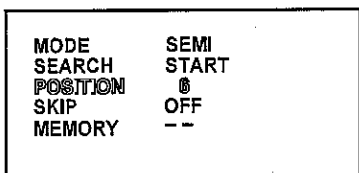

- 5 Select "MEMORY" by pressing the PROGRAMME UP or DOWN button.

 - 6 Press the VOLUME + or - button to memorize.

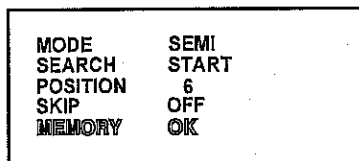


- 7 Press the MENU button to return to normal TV display.


Channel Swapping

Use this channel swapping feature to swap the channels between two stored programme position. This feature is particularly useful after automatic tuning.

 For example, to swap the channel between programme position "6" and programme position "12".

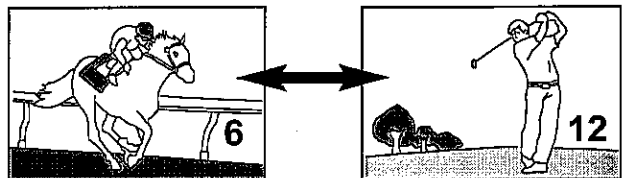

- 1 Select programme position "6".

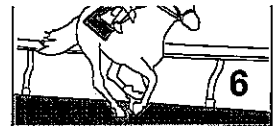 


- 2 Press the SWAP button.




- 3 Press the Digit button first, "1" button and then "2" button on the remote control to enter programme number 12. (For example, to enter programme number "3", press "3" button only.)



 - 4 Press the SWAP button.

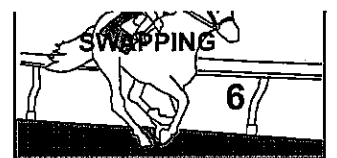

 
The two TV channels will now have changed places.

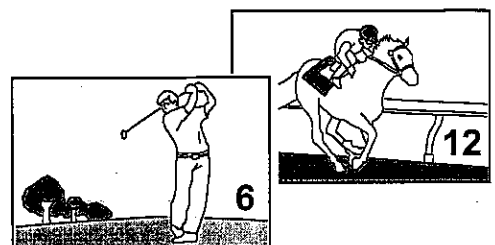

Tuning of the Channels


Skip Channel Set and Cancel

 When there is a position you do not use, Position 4 for example, by setting the SKIP Channel function it is possible to jump over this position, when you are selecting a channel using the **PROGRAMME UP/DOWN** or **CHANNEL SCAN** button.

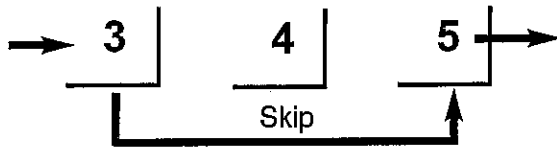


For example, to set programme position "4" as Skip channel ;

 
- 1 Enter to SEMI-AUTO or MANUAL tuning mode. (Refer to page 13.)
- 2 Select "POSITION" with the **PROGRAMME UP** or **DOWN** button.

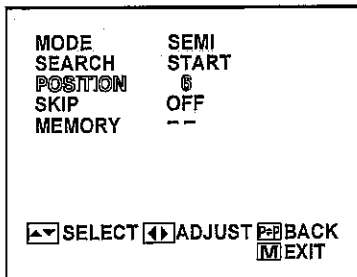

 
- 3 Press remote control "4" button to select Programme Position 4. Use the **Digit** button and **PROGRAMME SELECTOR** (Number buttons) to enter Programme Number. Do not use the **VOLUME +** or **-** button to enter programme position in this settings.

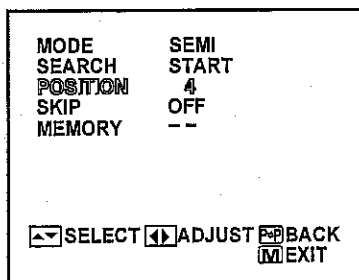

 - 4 Select "SKIP" by pressing the **PROGRAMME UP** or **DOWN** button, then press the **VOLUME +** or **-** button to set SKIP to ON. To cancel Skip Channel function, set to OFF.

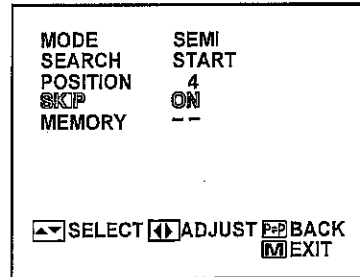

 - 5 Select "MEMORY" by pressing the **PROGRAMME UP** or **DOWN** button, then press the **VOLUME +** or **-** button for memory.

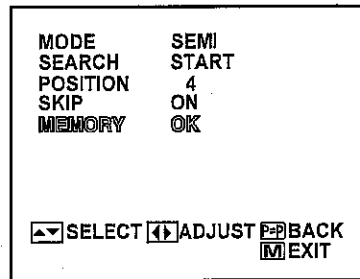

Any number of channels maybe set as Skip Channels.

- 6 Press the **MENU** button to return to normal TV display.

Setting of the Private Position

 
Private position is used to restrict of programme positions that you do not want others to watch.

Any position can be set as the Private position.


How to set the Private Position

For example, to set the programme position "15" as the private position.

- 1 Select programme position "15".

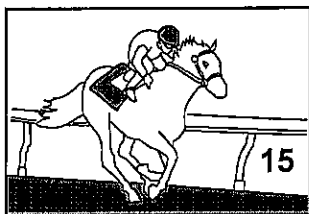

 - 2 Press and hold the **RECALL/COLOUR SYSTEM** button for more than 2 seconds.

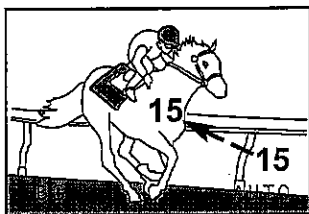

The programme number "15" will shift to centre of the screen.

- 3 Press the **MENU** button.



The picture will disappear, and "X 15" will be display on the screen.

 
The private position setting is now completed.

To view a programme on Private Position


- 1 Select private position (In this case position "15").



- 2 Press and hold the **RECALL/COLOUR SYSTEM** button for more than 2 seconds.

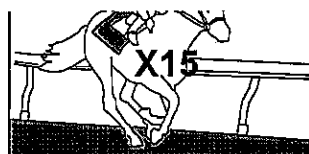

 - 3 Press the **RECALL/COLOUR** button for watching a TV programme.

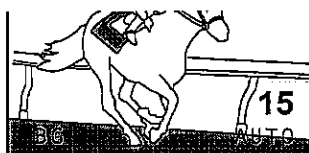


Note: The position "15" is still in the private position.

Cancelling of the private position


- 1 Select private position (position "15").



 - 2 Press and hold the **RECALL/COLOUR SYSTEM** button for more than 2 seconds.

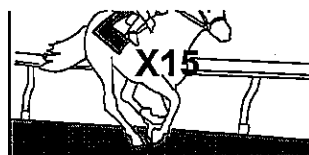

- 3 Press the **MENU** button .

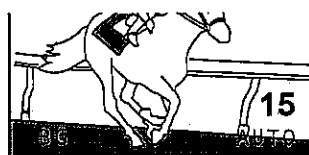 

The private position is now cancelled.

Setting of the language OSD (On Screen Display)

ENGLISH

- 1 Press the **MENU** button for MAIN menu display.



PICTURE
PRESET
LANGUAGE
GAME

- 2 Select "LANGUAGE" by pressing the Programme **UP** or **DOWN** button.



PICTURE
PRESET
LANGUAGE
GAME

- 3 Press the **VOLUME +** or **-** button for Language menu display.



ENGLISH
ภาษาไทย
عربي
РУССКИЙ
FRANCAIS
BAHASA INDONESIA

SELECT BACK EXIT

To sets **ENGLISH** language on screen :
Select "ENGLISH" by pressing the Programme **UP** or **DOWN** button. To return to the normal TV mode, press the **MENU** button.

THAILAND



ภาษาไทย
عربي
РУССКИЙ
FRANCAIS
BAHASA INDONESIA

เลือกรายการ
กดกลับ ข้ามรายการหลัก
ออกจากรายการ

To sets **THAILAND** language on screen :
Select "ภาษาไทย" by pressing the Programme **UP** or **DOWN** button. To return to the normal TV mode, press the **MENU** button.

ARABIC



عربي
РУССКИЙ
FRANCAIS
BAHASA INDONESIA

اختيار
خروج

To sets **ARABIC** language on screen :
Select "عربي" by pressing the Programme **UP** or **DOWN** button. To return to the normal TV mode, press the **MENU** button.

RUSSIA



РУССКИЙ
FRANCAIS
BAHASA INDONESIA

ВЫБРАТЬ НАЗАД
ВЫЙТИ

To sets **RUSSIA** language on screen :
Select "РУССКИЙ" by pressing the Programme **UP** or **DOWN** button. To return to the normal TV mode, press the **MENU** button.

FRENCH



FRANCAIS
BAHASA INDONESIA

CHOISISSEZ RETOUR
QUITTEZ

To sets **FRENCH** language on screen :
Select "FRANCAIS" by pressing the Programme **UP** or **DOWN** button. To return to the normal TV mode, press the **MENU** button.

INDONESIAN



 
BAHASA INDONESIA

PILIH KEMBALI
KELUAR


To sets **INDONESIAN** language on screen :
Select "BAHASA INDONESIA" by pressing the Programme **UP** or **DOWN** button. To return to the normal TV mode, press the **MENU** button.

GAME (Air Tennis)

- 1 Press the **MENU** button for MAIN menu display.

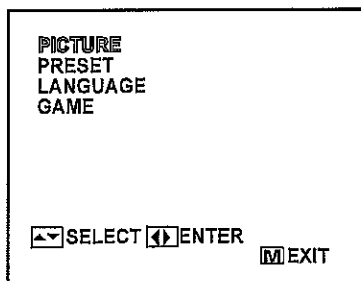

 - 2 Select "GAME" by pressing the **Programme UP** or **DOWN** button, then press the **VOLUME +** or **-** button.

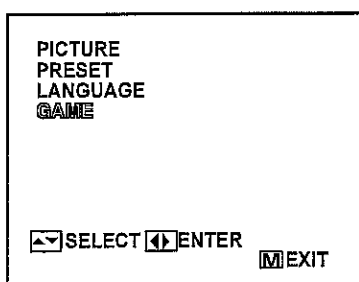

Note: When the Menu Game is selected, the TV sound is still heard.

- 3 To return to the normal TV mode, press the **MENU** button.

 
HOW TO PLAY

When play starts the ball move from upside to downside. User have to reflect the ball to upside (enemy-side). If user miss, the enemy score 1 point.

User get 5 points, the stage is clear.



Then Game level will be increase. (Level 0 - 9).

But when the **enemy score 5 points, the Game is over.**

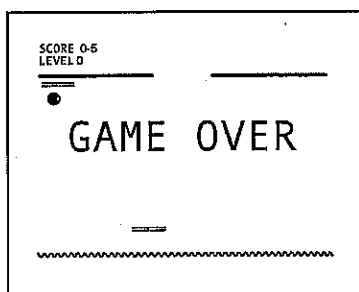

Available Key in Game

  [**VOLUME +/-**] button : Right/Left action
[**MENU**] button : Exit from Game
[**ALTERNATE**] button : Restart from Game over

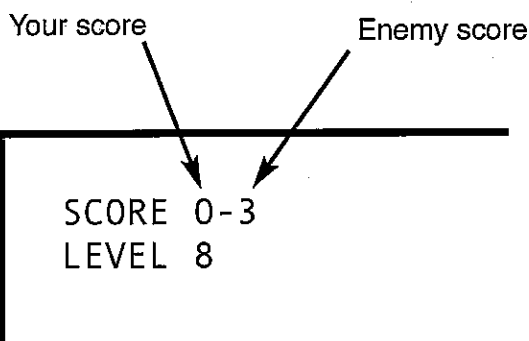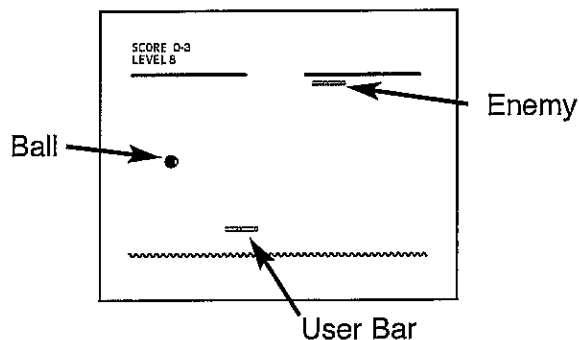

Note : Picture mode will become game mode automatically when Game menu is selected.

Connecting other Equipment

 
Connecting to the AV Input Jacks

Connect the video and audio outputs of a VCR, video disc player, etc. to the input jacks of this TV set. Tapes and discs can be played back.


Connecting to the Rear AV Input Jacks

Model CP14G1(A), CP21G1(A)

■ To watch video input picture, select AV position by pressing the **TV/AV Selector**.

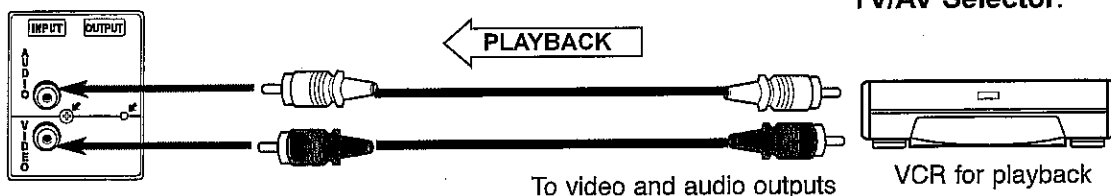


 Model CP14SR1(A), CP20SR1(A), CP14SA1(A), CP21SA1(A)

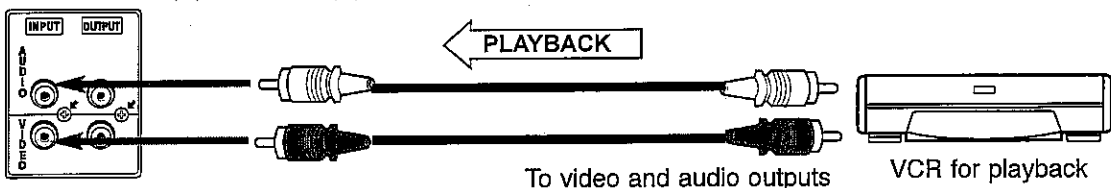

Connecting to the Front AV Input Jacks

 It is convenient to use the AV input jack on the front panel for equipment that is often connected and disconnected.

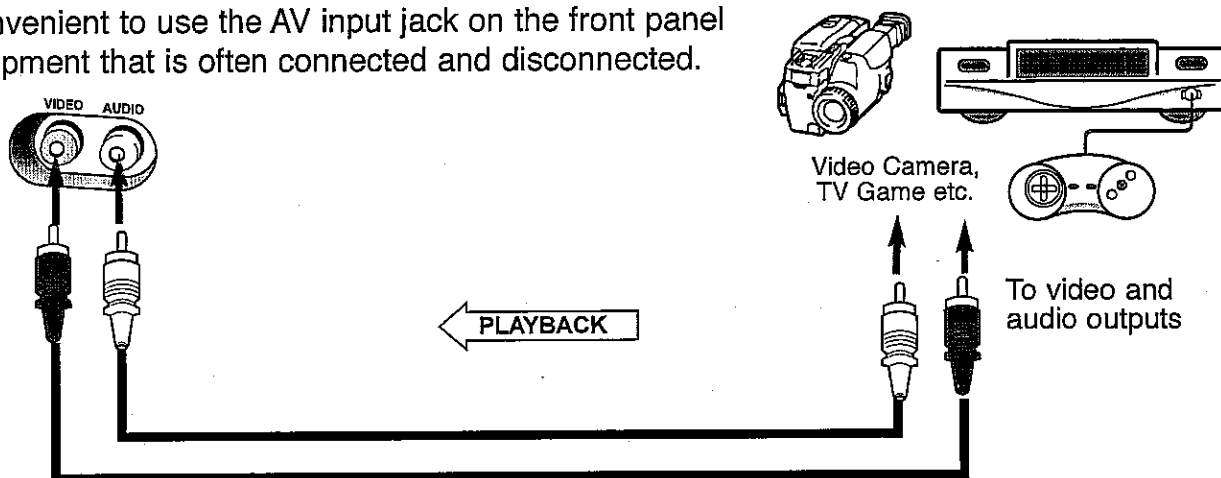

Note: Do not connect external equipment to both rear and front AV input jacks to avoid signal mix and distorted picture

■ You can select a TV programme while watching a playback from a VCR

For example:

- To select programme position "9" while watching a playback from external VCR, press "9" button of the remote control. The TV set returns to the TV mode and programme "9" will be selected.
- To select the programme position "26", press **Digit** (---) button, "2" then "6" button. Then TV set returns to the TV mode and programme position "26" will be selected.
- To select the programme position "256", press **Digit** (---) button twice, "5" then "6" button. Then TV set returns to the TV mode and programme position "256" will be selected.

 
Note: Pressing either of the **PROGRAMME UP** or **DOWN** buttons of the remote control or the TV will return the TV to the TV mode.

Connecting other Equipment

Selecting the Colour System in AV mode

Depending on the type of video tape or connected AV equipment being used, it may be necessary to select colour system. In this case, press the **RECALL/COLOUR SYSTEM** button and select a suitable colour system.

Each time the **RECALL/COLOUR SYSTEM** button is pressed, colour system is changed as follows;

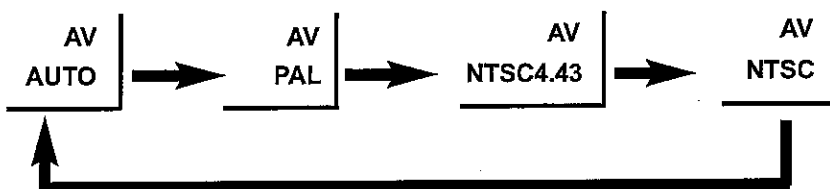


Colour system setting for AV position is automatically stored in the memory.

Connecting to the Monitor Output Jacks

Model (CP14SR1(A), CP20SR1(A), CP14SA1(A), CP21SA1(A))

The picture signal being displayed on the TV screen is output through the Monitor Output Jacks. Use these terminals to record TV broadcasts and for video dubbing from AV input terminals.

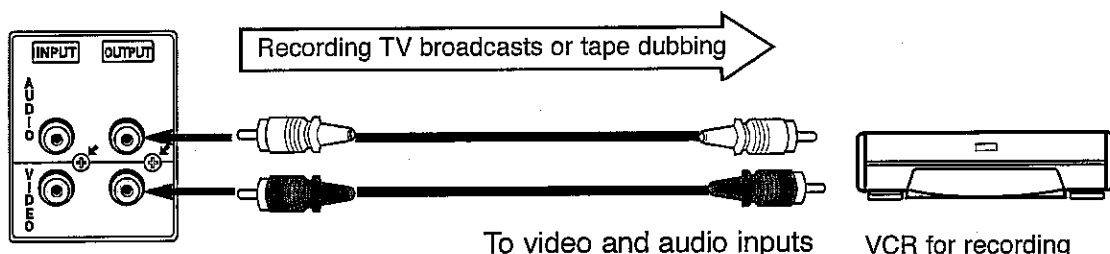 

■ To record TV programme, select TV mode by pressing the **TV/AV Selector** and record the desired programme.

15 TV mode

■ To dub video from the AV terminal input, select AV position by pressing the **TV/AV Selector**.

 
AV

AV Connection to the Aerial Socket

The AV apparatus can also be connected to the aerial socket of your TV receiver.

Presetting to watch the video input

1. Playback the VCR .
2. Tune a VCR playback in programme position that you want. (See Semi-Auto Tuning and Manual Tuning on page 13.)

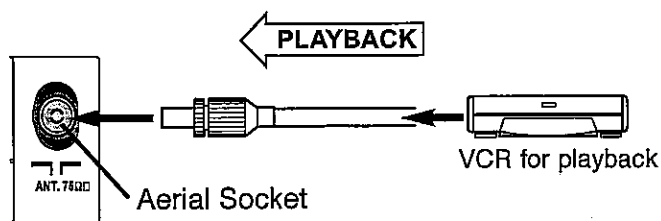

For further details concerning this connection and adjustment, refer to the operating instructions for the AV equipment.

Care and Cleaning

The surface of the cabinet can be damaged if not properly maintained. Many common household aerosol sprays, cleaning agents, solvents and polishes will cause permanent damage to the fine surface.

1. **Unplug the power cord before cleaning the Television.**
2. Clean the screen with a soft cloth dampened with glass cleaner or warm water.
3. Clean the cabinet with a soft cloth dampened with a mild household detergent and warm water. Dry thoroughly.

Note: *NEVER spray liquids on the screen because they can run down and drip onto the chassis. This may cause component failure not covered under Warranty.*

Specifications

Power Source AC220-240 Volts, 50/60Hz

Colour System

PAL (AV input: PAL/ NTSC4.43/NTSC/PAL-60Hz)

Sound System B/G

Channel Coverage

Australia

VHF: 0-11, 5A

UHF: 28-69

CATV: S1-S41, X, Y, Z, Z+1, Z+2

New Zealand

VHF: 0-11

UHF: 21-69

CATV: S1-S41, X, Y, Z, Z+1, Z+2

Aerial input impedance 75 Ω

Audio output (RMS)

Model CP14G1(A), CP21G1(A): 3 W

Model CP14SR1(A), CP20SR1(A),

CP14SA1(A), CP21SA1(A): 2 W

Speakers

Model CP14G1(A), CP14SA1(A), CP21SA1(A):
 \varnothing 8 cm x 1 pcs

Model CP21G1(A): \varnothing 4 cm x 2 pcs

Model CP14SR1(A), CP21SR1(A):
5 cm x 9 cm x 1 pcs

Ext. terminals

Note: Model CP14G1(A) and CP21G1(A), are not equipped with AV Outputs terminal.

Video inputs: Phone Jack x 2

(1.0Vp-p, impedance 75 Ω)

Audio inputs: Phone Jack x 2

(436mVrms, impedance more than 40K Ω)

Video monitor outputs: Phone Jack x 1

(1.0Vp-p, impedance 75 Ω)

Audio monitor outputs: Phone Jack x 1

(436mVrms, impedance less than 600 Ω)

Dimension

Model CP14G1(A): 370.8 (W) x 348.6 (H) x 384.4 (D) mm

Model CP21G1(A): 502 (W) x 461.6 (H) x 493.3 (D) mm

Model CP14SR1(A): 363 (W) x 346 (H) x 366 (D) mm

Model CP20SR1(A): 496 (W) x 446 (H) x 470 (D) mm

Model CP14SA1(A): 365 (W) x 362 (H) x 383 (D) mm

Model CP21SA1(A): 501 (W) x 476 (H) x 492 (D) mm

Weight

Model CP14G1(A): approx. 8.7 Kg

Model CP21G1(A): approx. 19.5 Kg

Model CP20SR1(A): approx. 17.2 Kg

Model CP21SA1(A): approx. 20.5 Kg

Model CP14SR1(A), CP14SA1(A) : approx. 8.6Kg

Specifications subject to change without notice.

Helpful Hints - Problems/Solutions

Before requesting service check the following chart.

Problem:	Check these Conditions / Try these solutions:
No picture, no sound	<ul style="list-style-type: none"> ● Check if TV is plugged in. ● Try a different channel, if OK, probably station trouble.
Poor picture, sound OK	<ul style="list-style-type: none"> ● Adjust Brightness or Contrast control. ● Adjust Fine Tuning. (See page 11.) ● Check aerial connection.
No colour, Picture OK	<ul style="list-style-type: none"> ● Adjust Colour or Tint control. ● Adjust Fine Tuning. (See page 11.) ● Check aerial connection. ● Is the programme in colour ? Try a different channel.
Weak picture	<ul style="list-style-type: none"> ● Check aerial connection on back of TV set. ● Check aerial for broken wires. ● Re-orient aerial.
No sound or poor sound.	<ul style="list-style-type: none"> ● Sound Mute may be on. Press the SOUND MUTE button on the remote control. ● Adjust Volume. ● May be station trouble. Try a different channel.
Remote Control will not work.	<ul style="list-style-type: none"> ● Check batteries. Replace batteries. ● Check if TV set is plugged in. Aim remote control towards front of TV.
Cannot select or scan some channels.	<ul style="list-style-type: none"> ● Channel may be removed from memory. Add channel to memory manually. (See "Skip Channel Set and Cancel" on page 15.) ● Check aerial connection.
Blue screen with AV is displayed	<ul style="list-style-type: none"> ● Check AV connection. Press the TV/AV Selection button. ● Check external equipment. Switch on external equipment.
Black screen with X and programme position displayed.	<ul style="list-style-type: none"> ● Check to see if channel is set as the Private Position. See "Setting of the Private Position" on page 16.
Cabinet makes popping sound.	<ul style="list-style-type: none"> ● This is a normal condition during warm-up and cool down of the plastic cabinet parts.

The following faults are not caused by the receiver:

"GHOSTS"

Reflections of signals from mountains or high buildings will cause multiple images, called "Ghosts". These abnormal conditions can be reduced to minimum by repositioning aerial or by installing new one suited for your area.

"INTERFERENCE"

Interference may be caused by electrical appliances, car ignition systems, etc. This should normally be a temporary condition, but should this interference persist, contact your dealer.

Part No. 1AA6P1P4350-A C4EV-A (AC5-G)

SANYO

SANYO ELECTRIC Co., Ltd.
Printed in Indonesia.