



**Instruction
Manual**


**Colour
Television**

**Model CAP3310TXN
CZP3310TX**

MESSAGE 

CALENDAR 

HELP MESSAGE 

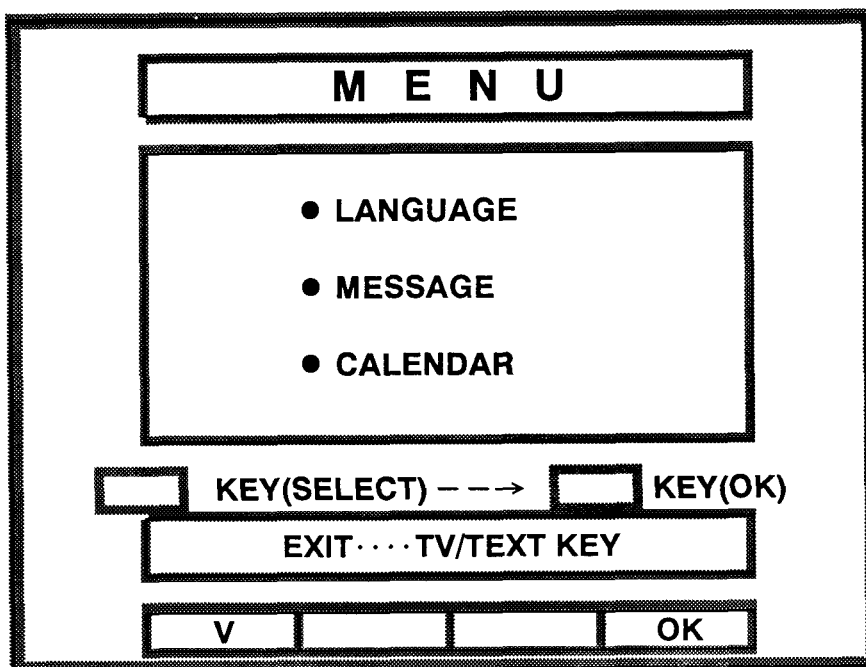


Introduction

In addition to standard TV functions, this set offers the convenience of **MESSAGE**, **CALENDAR** and **HELP MESSAGE** functions in 5 languages: English, German, French, Italian and Spanish.


■ MESSAGE

- This function offers 4 screen pages of memory space for leaving important messages (30 characters x 8 lines = 240 characters per screen; total: 960 characters).
- Once a message has been input, it can be recalled instantly simply by pressing the **CALL** key.
- You will, of course, find other uses (for example, as a handy phone list or appointment calendar).

 
Message

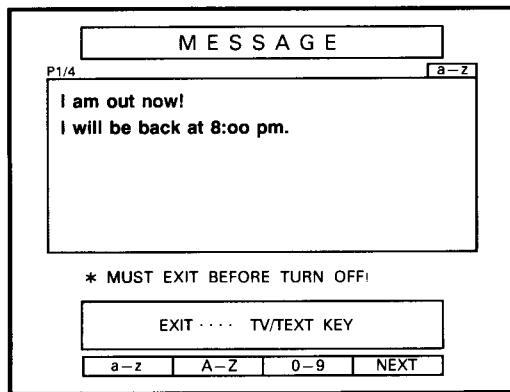

Phone List

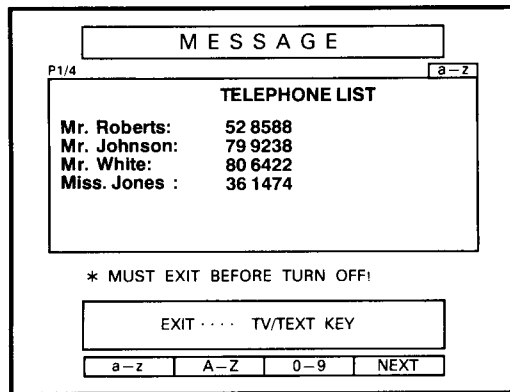


Appointment Calendar

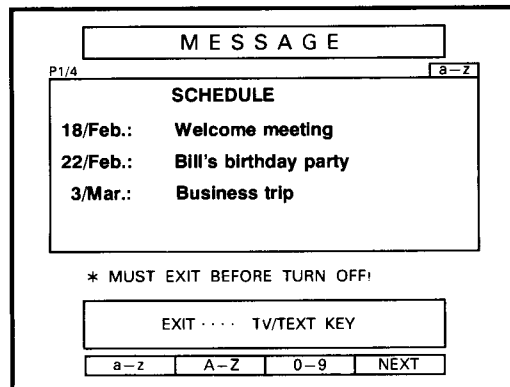


■ CALENDAR

- A convenient monthly calendar from 1900 to 2099.

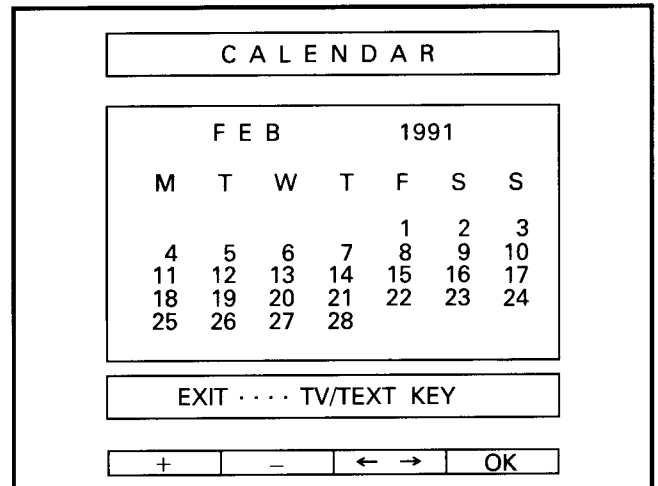

■ HELP MESSAGE

- Pressing the **HELP** key brings up easy to follow operating instructions for the **PRESET**, **SELF DEMO**, **LANGUAGE** set, **MESSAGE** and **CALENDAR** functions.

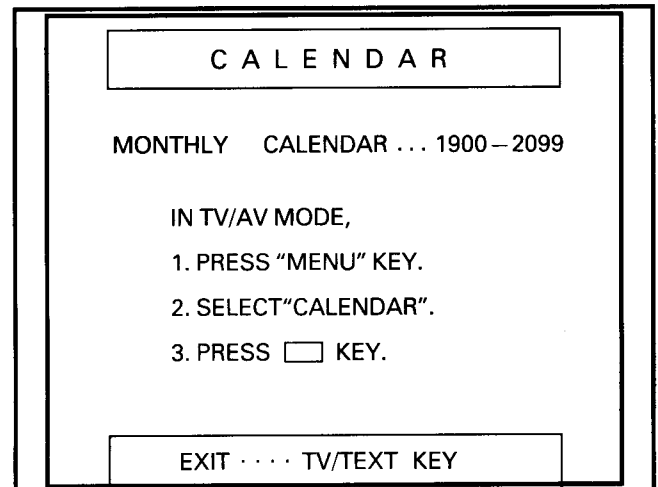


* All of these functions are operated via the Remote Control Transmitter.

Selection of the Language

The language can be selected from English, German, French, Italian and Spanish.

(3) Press the **RED key**, and select "Italiano"


◆ When the RED key is pressed, the cursor moves downward.

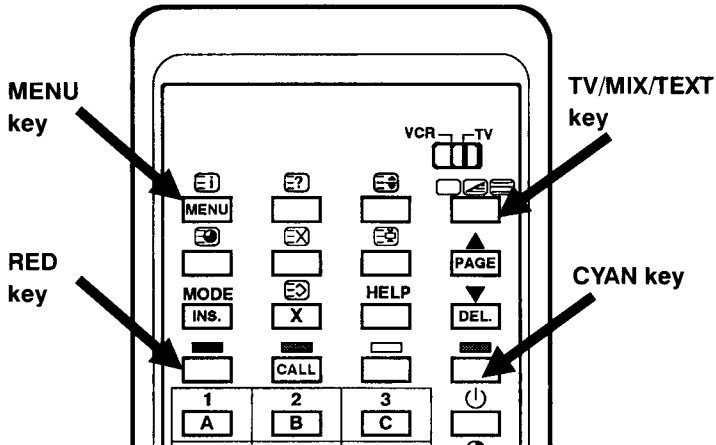

How to select the language.



For example, to select Italian.

(1) Press the **MENU key**, and the MENU display appears.

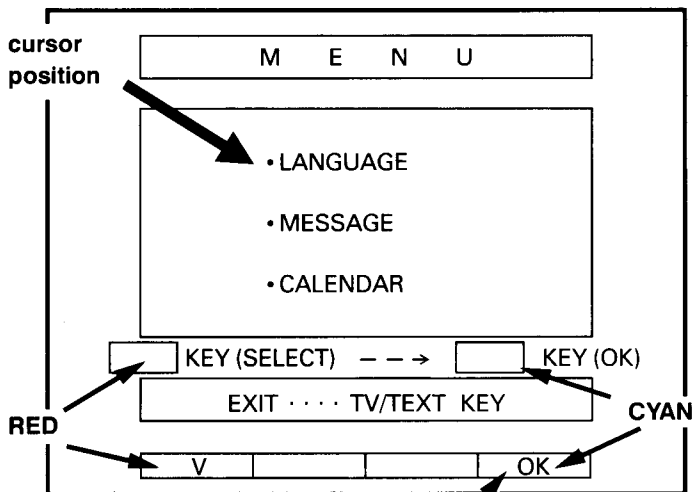


* Please refer to the operating instructions. This means press the CYAN key when it is OK. displayed at the bottom of the screen.

  (2) Press the **CYAN key**, and the LANGUAGE menu is displayed.

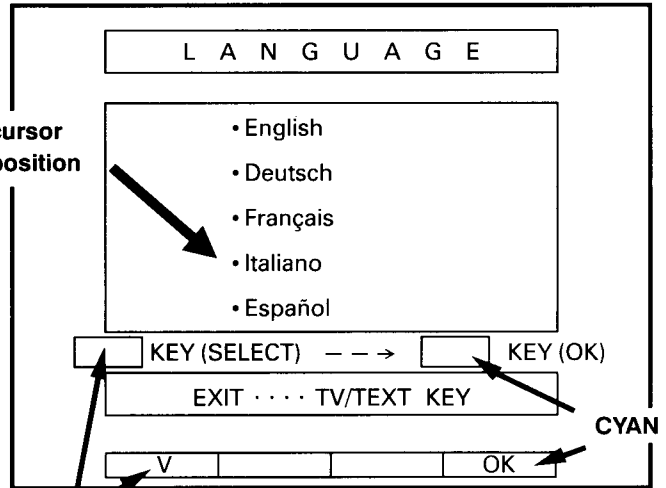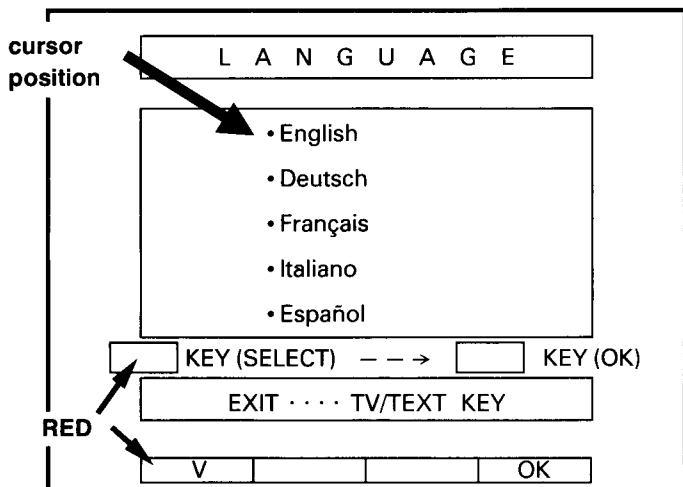

(4) Press the **CYAN key**.

MEMO is displayed for five seconds.

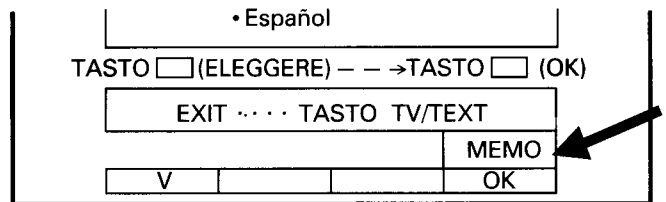

IMPORTANT!

Be sure to press the CYAN key to memorize the required language in the last step.

This completes language selection.

◆ To return to the MENU display, press the **MENU key** again.




◆ To return to normal TV or AV mode, press the **TV/MIX/TEXT key**.


Message (Inputting letters.)

How to input a message

- Select the desired language.
(See **Selection of the Language** on the page 2.)
- Press the **MENU** key, and the MENU display appears.

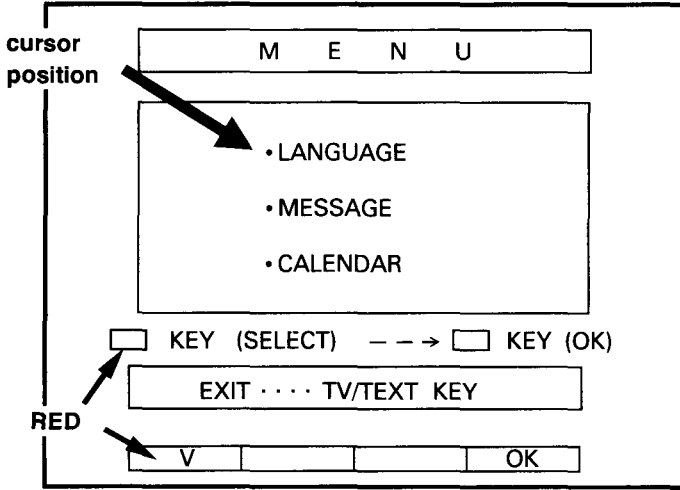


 - Press the **RED** key, and select **MESSAGE**.

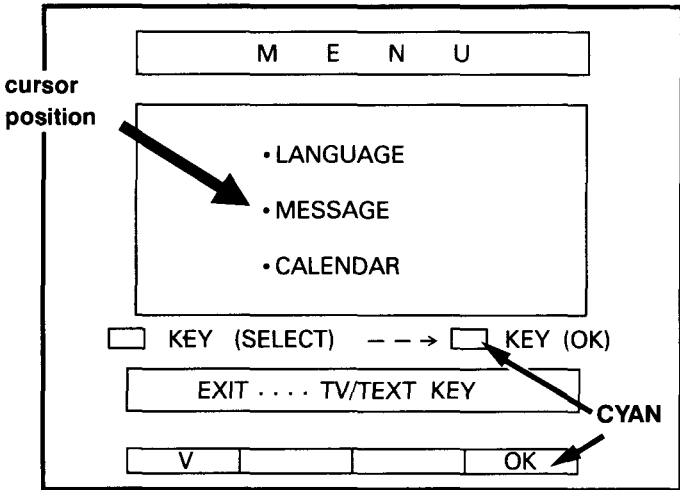


◆ When the RED key is pressed, the cursor moves downward.

 - Press the **CYAN** key, and the MESSAGE display appears.

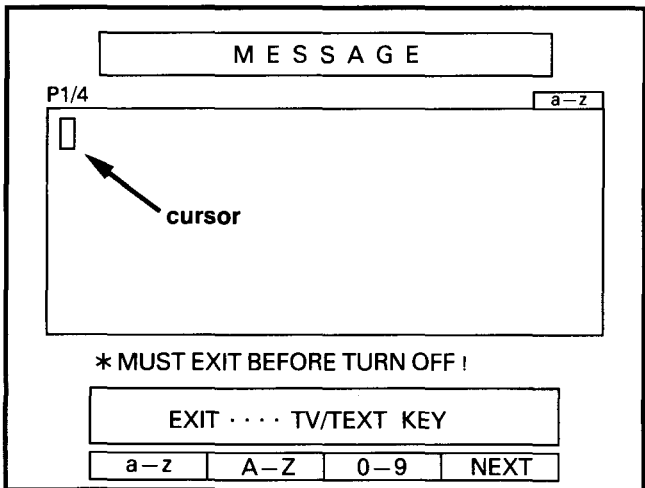


- To input letters the **A to Z** keys are used.

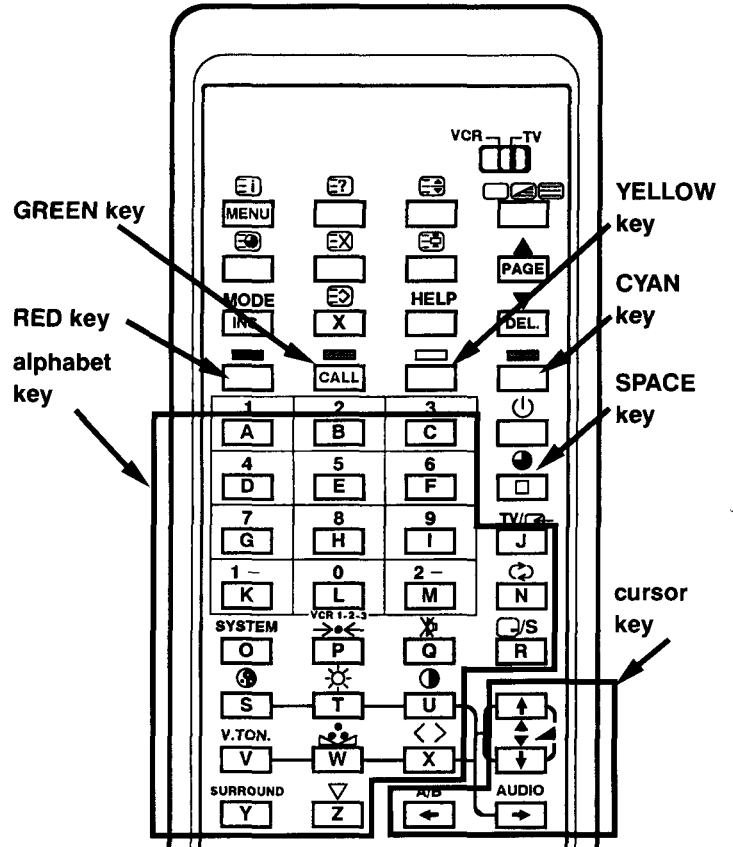

For example, to input "I am out now!"

 - Press the **GREEN** key, and the input mode changes to the capital letter mode.

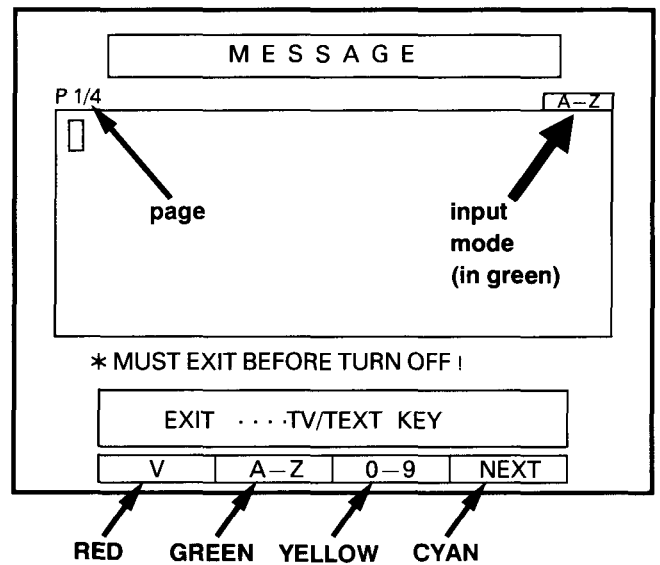

◆ When the colour key is pressed, the input mode changes as follows:

 
- RED** key → The input mode changes to the small letter mode.

Message (Inputting alphabet & special characters.)


- GREEN key** → The input mode changes to the capital letter mode.
- YELLOW key** → The input mode changes to the number input mode.
- CYAN key** → The input mode changes to the special character input mode.

- (b) Press the **RED** key, and the cursor moves downward.
- (c) Press the **YELLOW** key, and the cursor moves to the right side.
(Select “!” character.)
- (d) Press the **CYAN** key, and the “!” character is input.

- (b) Press “I” on the alphabet keypad.
- (c) Press → (cursor) key, and the cursor moves to the right.
- (d) Press the **RED** key, and the input mode changes to the small letter mode.
- (c) Press “A” on the alphabet keypad.
- (d) Press “M” on the alphabet keypad.
- (e) Press → (cursor) key, and the cursor moves to the right.
- (f) Press the “O”, “U” and “T” keys.
- (g) Press → (cursor) key.
- (h) Press the “N”, “O” and “W” keys.

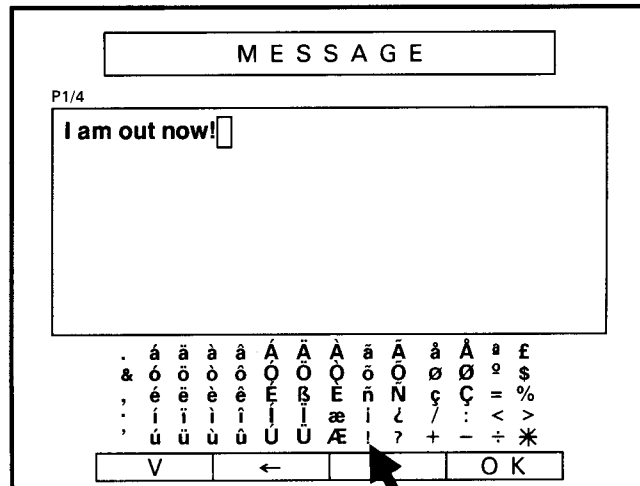

cursor position (in red)

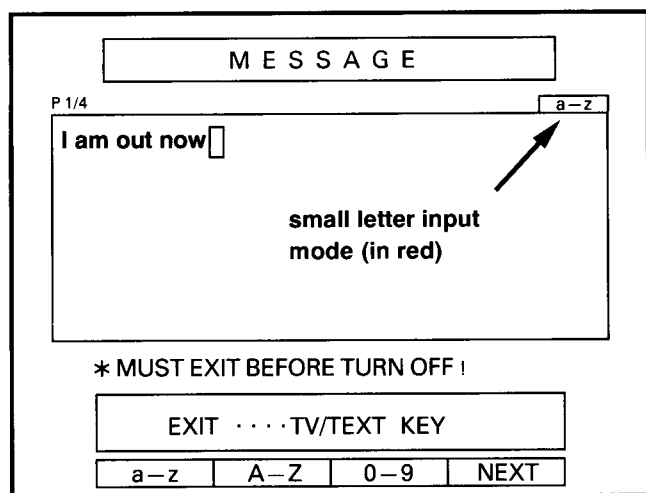


- ◆ When the colour key is pressed in the special characters mode, the cursor on the special characters moves as follows:
 - RED** key → The cursor moves downward.
 - GREEN** key → The cursor moves to the left
 - YELLOW** key → The cursor moves to the right.
 (When the **CYAN** key is pressed, a special character is input in the cursor position.)


(6) To input special characters.

- (a) Press the **CYAN** key, and the special characters are displayed.

- (7) To return to the alphabet input mode, press any letter key from **A** to **Z** or the **SPACE** key.

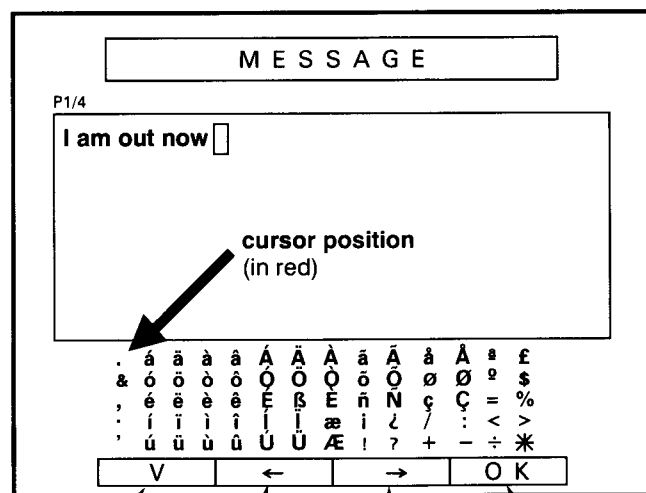

RED GREEN YELLOW CYAN

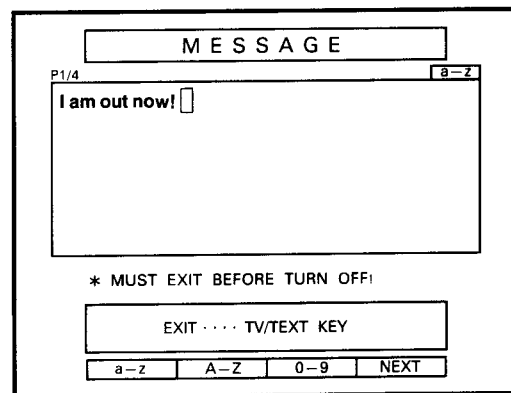

IMPORTANT!

When you turn off the TV power switch while using the MESSAGE screen, press **TV/MIX/TEXT** key to return the screen to normal TV mode. If you do not press this key before turning off the switch, the text input on the MESSAGE will not be saved in memory.


 
Message (Inputting numbers.)

(8) To input numbers:


(a) Press **YELLOW** key, and the input mode changes to the number input mode.

For example to input "8":

Press the **8** key.

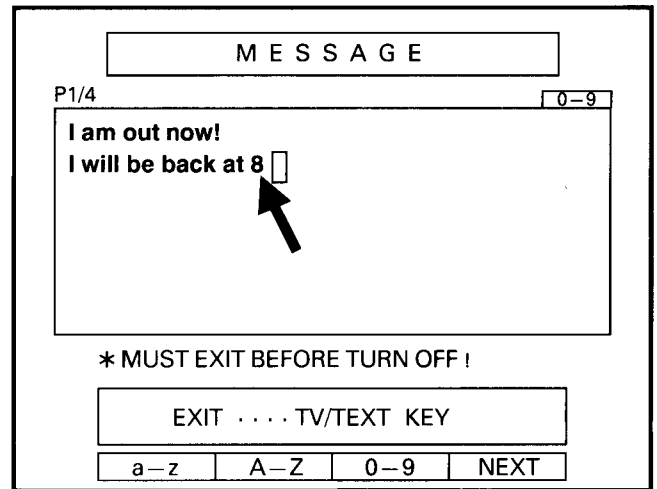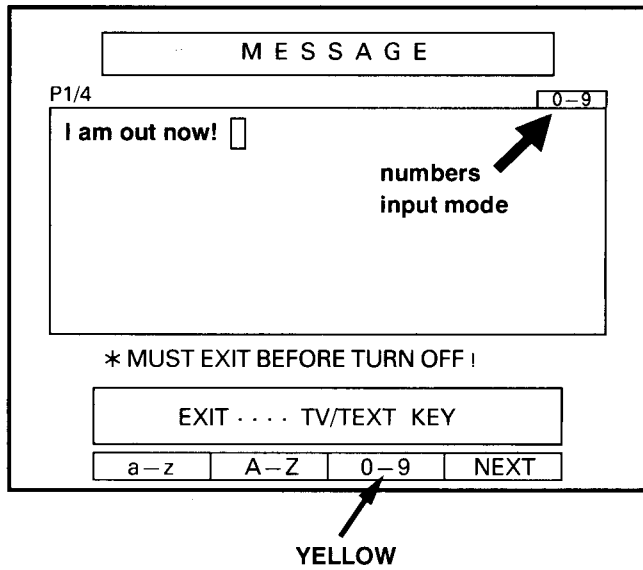


(b) Press the appropriate **NUMBERS** key (0 to 9).

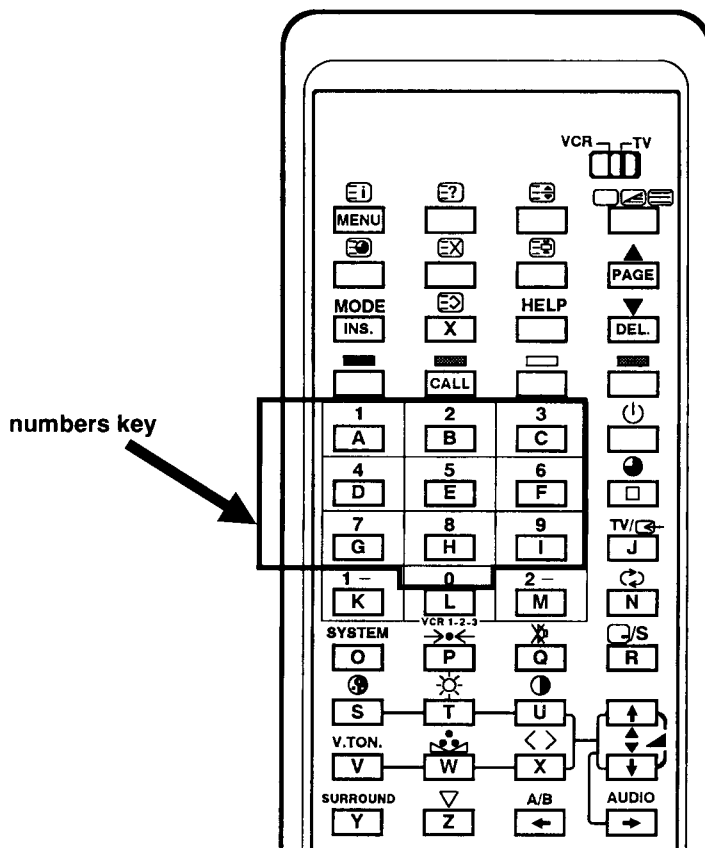


Message (Delete key / Insert key / Space key)


(9) DELETE, INSERT and SPACE keys.

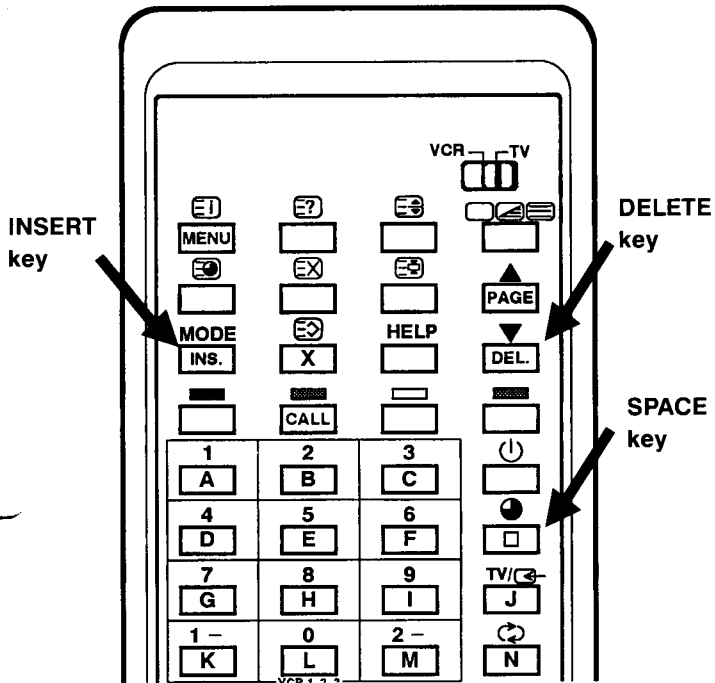

(b) When the **INSERT** key is pressed, it creates a blank, and the characters to the right of the cursor move toward the right. (The cursor does not move.)

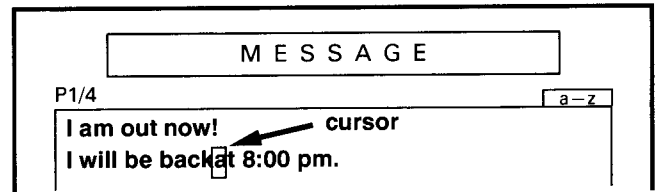


INSERT key
A character in the cursor position is not erased.


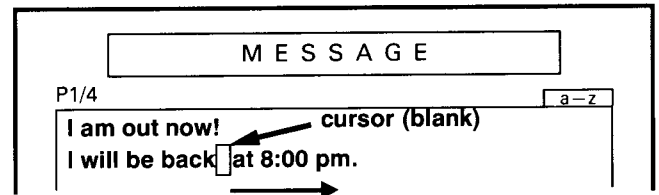


(c) When the **SPACE** key is pressed, the character at the cursor position is erased, and the cursor moves right.


(a) When the **DELETE** key is pressed, a character or a blank is deleted, and the characters to the right of the cursor move left one space. (The cursor does not move).

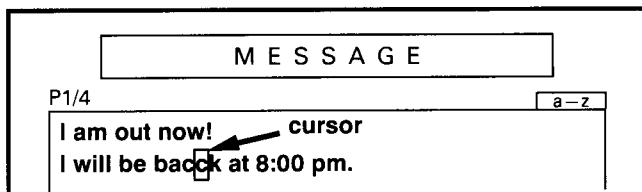


DELETE key

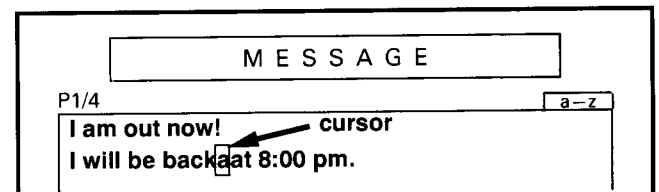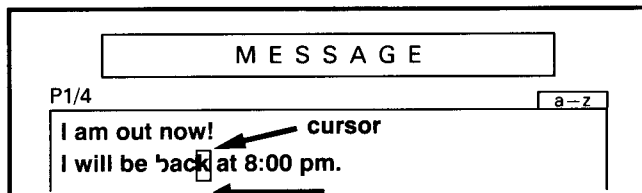

SPACE key

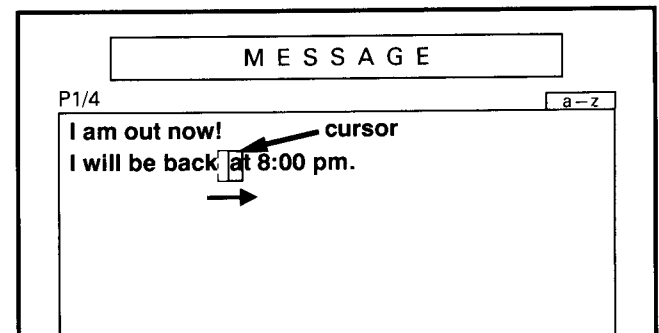



* MUST EXIT BEFORE TURN OFF !

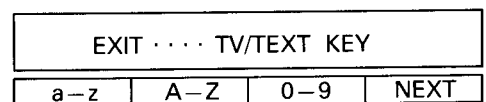

Message (Page key / Clear key)

(10) PAGE key

- In the MESSAGE input mode, each time the **PAGE** key is pressed, the MESSAGE page changes to the next page.

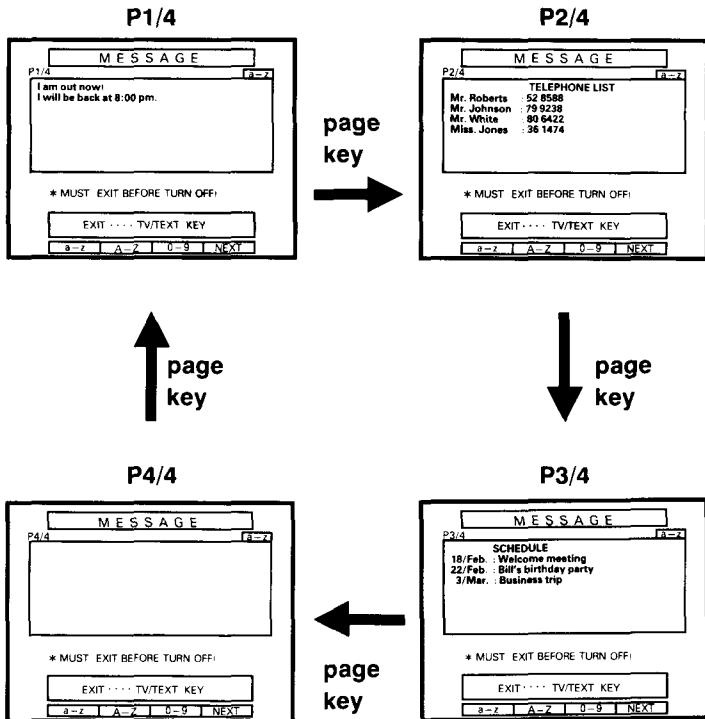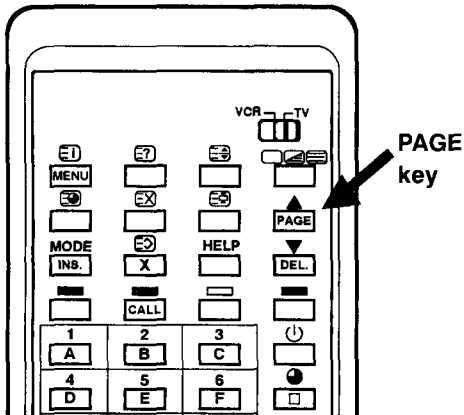

(11) CLEAR key


- When the **CLEAR** key is pressed, all the characters in the present display (one page) are erased.

To erase other pages:

Display each page by pressing the **PAGE** key.



Press the **CLEAR** key.

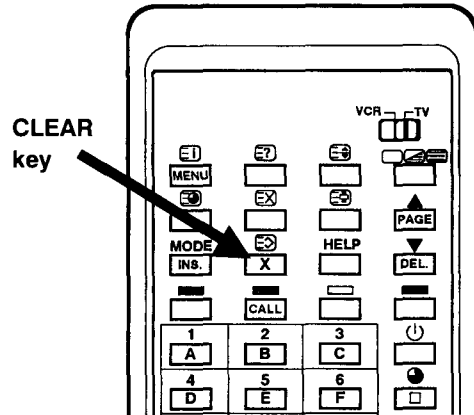

● IMPORTANT NOTE:


Once erased, characters deleted by pressing the CLEAR key cannot be recalled

Message (Memorizing Messages / Message call)

(12) Memorizing Messages



- To memorize the input characters, press the **TV/MIX/TEXT** key.

When the TV/MIX/TEXT key is pressed, the TV set return to the normal TV mode and the message is memorized.


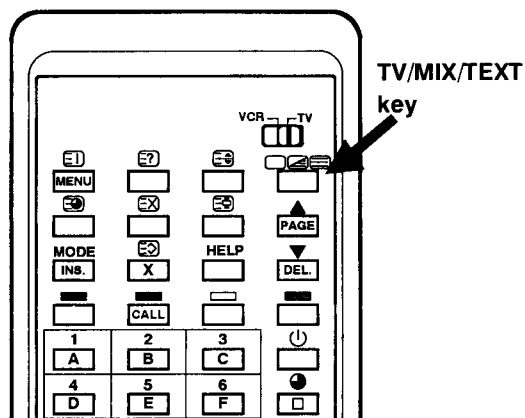


(13) Message Call


- To recall the Message display, press the **CALL** key in the normal TV or AV mode.

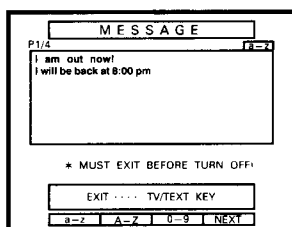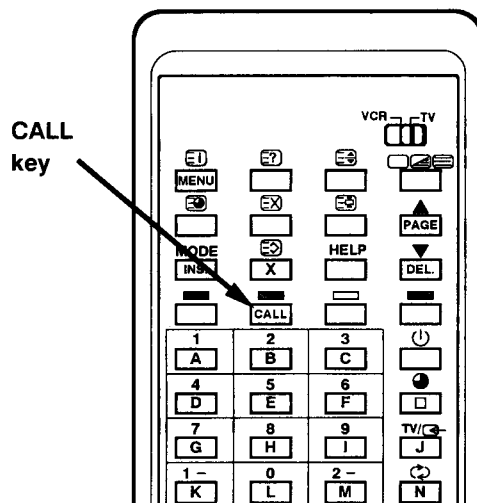

TV/MIX/TEXT key

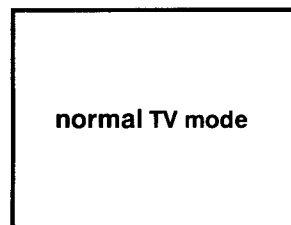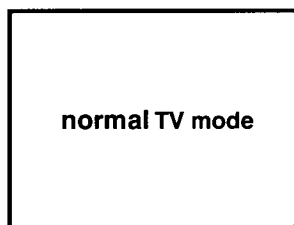

CALL key

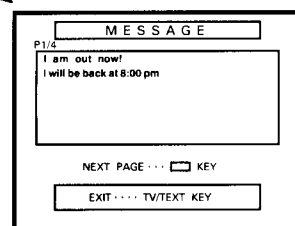

IMPORTANT!

Be sure to return to normal TV mode by pressing the **TV/MIX/TEXT** key before turning off the TV set.

If the TV set is turned off in the message input mode, the input characters will not be memorized.

 
- To call up the next message page, press the **CALL** key again.

- Characters cannot be input into the Message display called up by pressing the CALL key.

- To return to normal TV mode, press the **TV/MIX/TEXT** key.

Calendar


- (6) Press the **YELLOW** key, and the cursor moves to the year position.

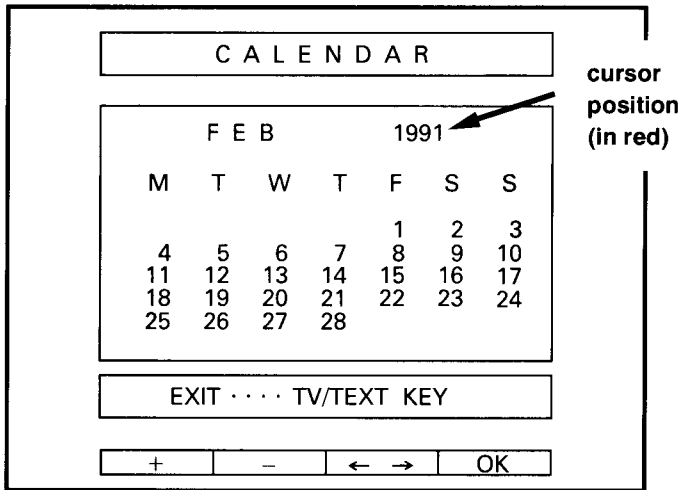

- ◆ When the **YELLOW** key is pressed, the cursor moves alternately between the month and year position.

- (7) Press the **RED** key, and the display changes to the next year (1992).

The monthly calendar for February, 1992 is displayed.

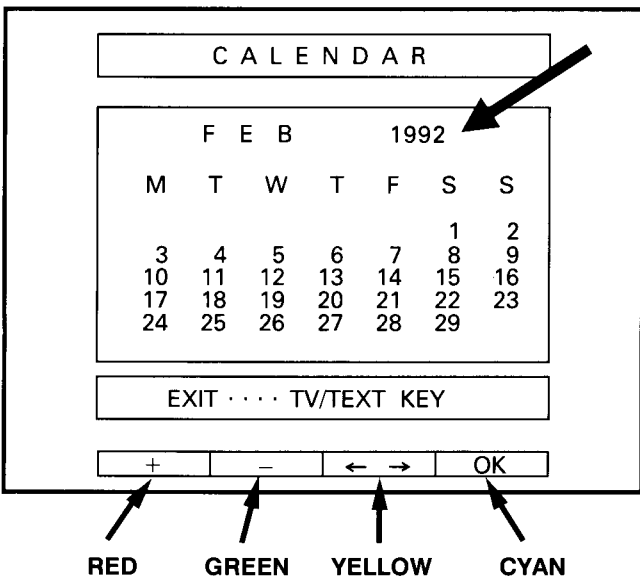


- ◆ When the **GREEN** key is pressed, the display changes to the previous year.
- ◆ When the **RED** key is pressed, the display changes to the next year.

- (8) Press the **CYAN** key, and "MEMO" is displayed for five seconds.

IMPORTANT!

Be sure to press the **CYAN** key to memorize the desired monthly calendar.

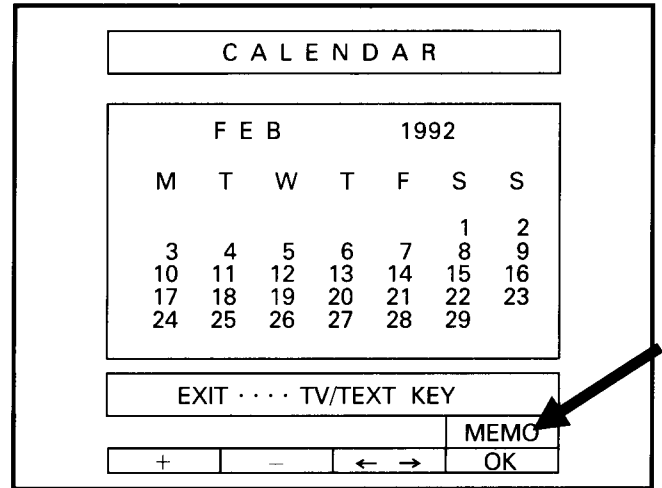


- To return to normal TV mode, press the **TV/MIX/TEXT** key.
- To return to the **MENU** display, press the **MENU** key.

■ To call up the memorized monthly calendar in normal TV or AV mode:


- (1) Press the **MENU** key.
- (2) Select **CALENDAR** by pressing the **RED** key.
- (3) Press the **CYAN** key.

Help Message

- Pressing the **HELP key** brings up easy to follow operating instructions for the PRESET, SELF DEMO, LANGUAGE selection, MESSAGE and CALENDAR functions.
- Five languages available (English, German, French, Italian or Spanish)

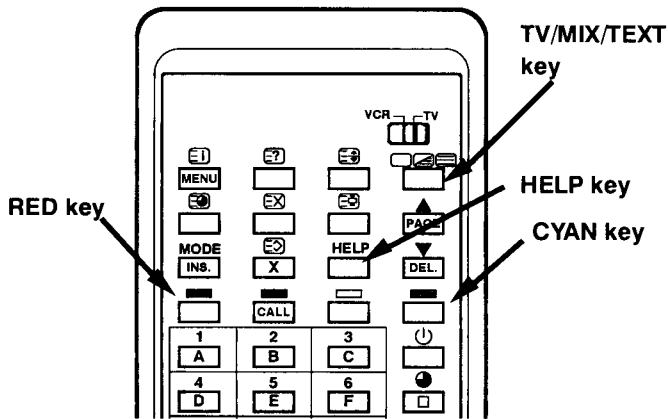

 - (2) Press the **RED key**, and select CALENDAR.
(When the RED key is pressed, the cursor moves downward.)

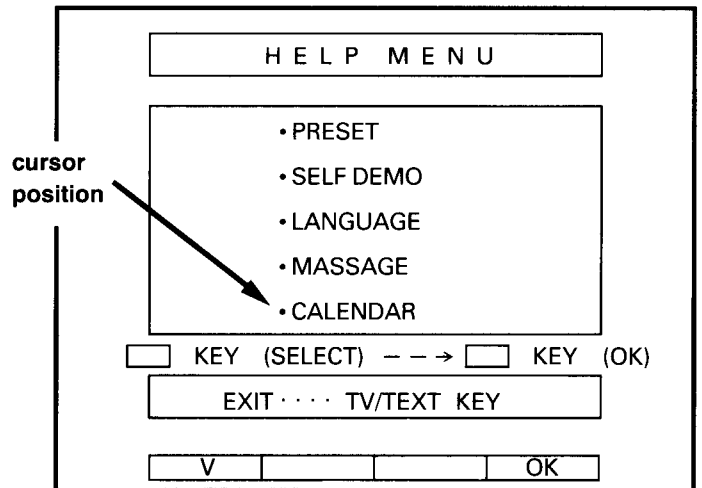


- (3) Press the **CYAN key**, and the HELP MESSAGE for the CALENDAR is displayed on the screen.




For example, to display the **HELP MESSAGE** for the **CALENDAR** function:

 - (1) Press the **HELP key**, and the HELP MENU is displayed.

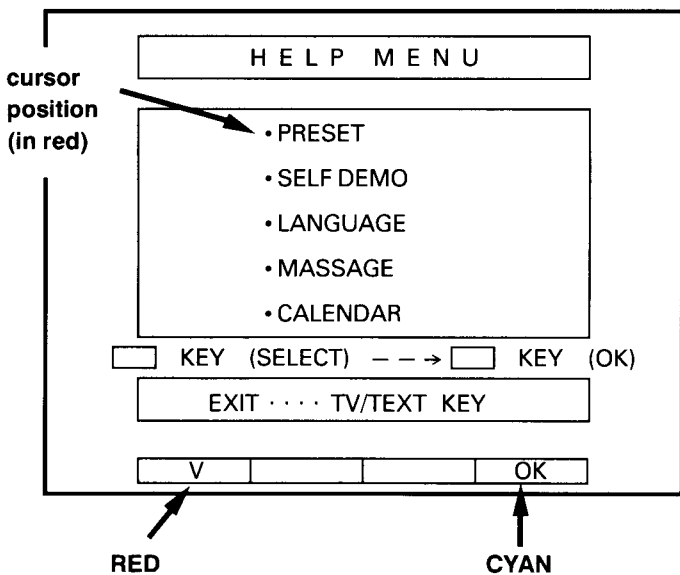

- ◆ To return to normal TV or AV mode, press the **TV/MIX/TEXT key**.

 - ◆ To return to the **HELP MENU** display, press the **HELP key** again.

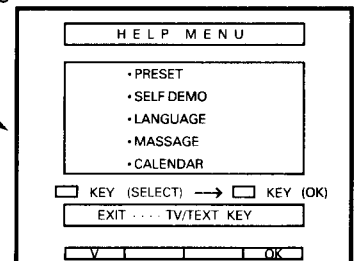

- The **HELP MESSAGE** for the **PRESET**, **SELF DEMO**, **LANGUAGE** and **MESSAGE** functions can be displayed in the same manner.

Part No. 4AA6P100664 -- E4GC2(A4-A)

SANYO

SANYO Electric Co., Ltd.