


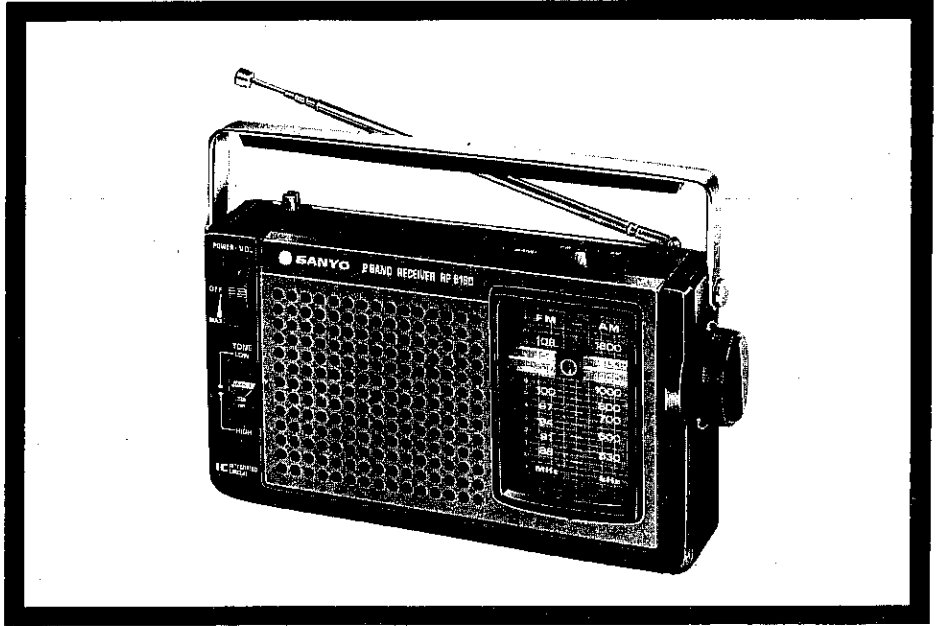

SANYO

RP 6160



SANYO AM/FM PORTABLE RADIO

OPERATING INSTRUCTIONS

For maximum usage and reliability, please read the following instruction manual carefully before operating your new radio.

IMPORTANT

- * If you plan not to use your radio for more than two or three weeks, or when operating it on AC power exclusively, please remove the batteries. Old batteries may leak and damage the radio.
- * If the sensitivity or sound quality deteriorates, replace all batteries with new ones as soon as possible.
- * Always turn off your radio when not in use. Leaving the radio on will shorten the service life of the batteries.
- * Keep the radio away from extremely high temperatures or excessive moisture.
- * Never use solvents containing benzol or petroleum for cleaning the cabinet. Wipe off dust and stains with a soft damp cloth.
- * When operating on the batteries, always remove the power cord from both AC input socket on radio and wall outlet.

TO INSTALL THE BATTERIES

1. Open the battery compartment lid by pulling the knob in the direction of the arrow.
2. Insert four "AA" size penlight batteries into the battery compartment. Batteries must be installed in position with polarities as indicated.
3. Close the battery compartment lid.


AC POWER OPERATION

Before attempting to operate the radio for the first time in a new area, please check the position of the voltage selector switch which is located on the back of the radio.

The voltage selector switch should be set to 120, 200 or 240 volt position according to your local voltage with a screw-driver (—). Otherwise, serious damage to the radio may be caused.

Connect one end of the power cord to the socket on this radio and the other end to an AC wall outlet. When the power cord is plugged into the radio's AC socket, the batteries are automatically disconnected. To revert on battery operation, simply disconnect the power cord from the radio. It is recommended to remove the power cord from the wall outlet for safety.

CONTROLS

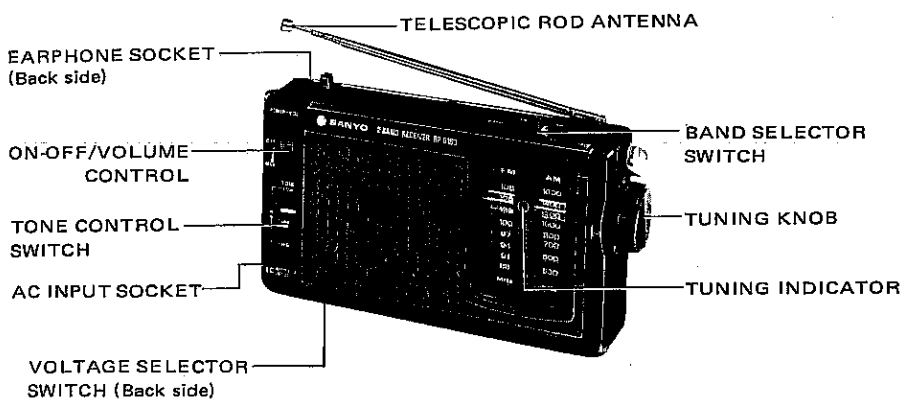

ON-OFF/VOLUME CONTROL KNOB

To turn the radio on, turn the ON-OFF/VOLUME control knob downward until a slight click is heard. To increase the sound volume, rotate this knob further downward. To turn the radio off, rotate this knob upward until a slight click is heard.

BAND SELECTOR SWITCH

Set the BAND SELECTOR switch to your desired band. The radio frequency ranges are as follows:

AM 530 – 1605 kHz

FM 87.5 – 108 MHz

TUNING KNOB

Turn the TUNING knob in either direction to tune in your desired station. The tuning indicator will light when a station is accurately tuned in.

NOTES: 1. On FM band, if stations are in the vicinity of your house or when receiving a strong station signal, the tuning indicator always remain lit. Therefore retract telescopic antenna to its smallest size.

2. The tuning indicator won't light when a distant station signal or very weak station signal is tuned in.

TONE CONTROL SWITCH

Set the TONE control switch for desired sound quality, to HIGH for treble and to LOW for less treble.

AERIAL (ANTENNA)

This radio is equipped with a built-in ferrite bar aerial for AM band and a telescopic rod aerial for FM band reception. As the ferrite bar aerial is directional, rotate the radio slowly either to the right or left to find the position that gives optimum AM reception quality.

On FM band, extend the telescopic rod aerial to its full length. Then adjust it to the direction that gives maximum sound volume and clearest sound.

EARPHONE SOCKET

For private listening, connect an earphone plug (optional extra) to this socket. The internal speaker is automatically disconnected when earphone is plugged in.

SANYO ELECTRIC CO., LTD.
SANYO ELECTRIC TRADING CO., LTD.
OSAKA, JAPAN