 





Xacti QUICK GUIDE

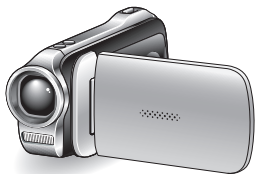

STEP 2 CAPTURE A STILL IMAGE

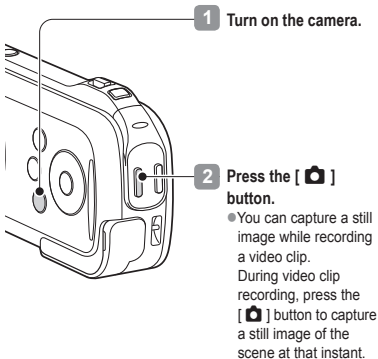


STEP 1 RECORD A VIDEO CLIP

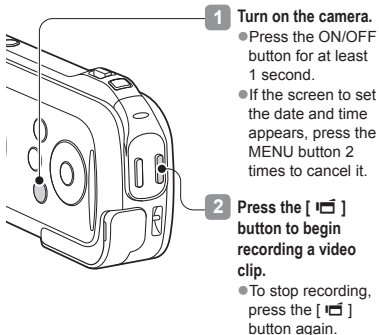


If the image is not captured...
Is there enough power left in the battery? Recharge the battery pack.
(See "Charge the battery pack" on the reverse side.)

STEP 3 VIEWING IMAGES

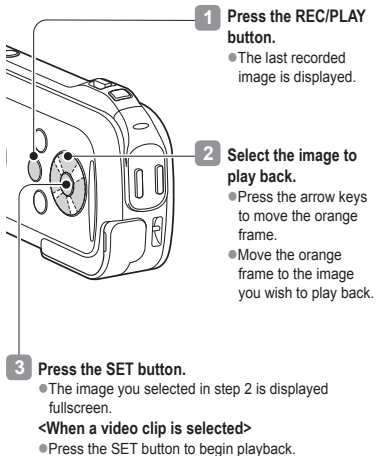

STEP 4 DELETING IMAGES

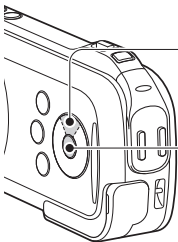


- 1 Display the file that you want to delete.
- 2 Press [▲].
 - The Confirm Delete Screen appears.
- 3 Select "DELETE", and press the SET button.
 - The current image is deleted.
 - To return to the Playback Screen, select "EXIT", and press the SET button.

Did your photos turn out the way you hoped? Even if you make a mistake, it's easy to delete the pictures you aren't satisfied with. Unlike film cameras, with a dual camera you can take all the photos you want, keep the ones you like and delete the rest.

PREPARE THE BATTERY PACK

Charge the battery pack


Use the supplied charger to charge the battery pack.

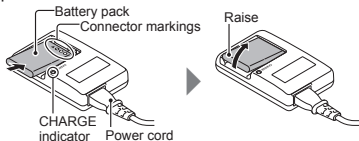

The CHARGE indicator shows the battery pack charge status.

- Lights red during recharging.
- Turns off when battery pack is fully charged.
- The charging time is approx. 120 minutes.

Insert the battery pack

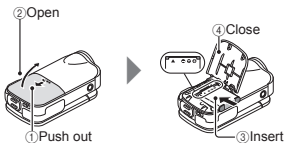

COPYING FILES TO A COMPUTER

- 1 Start your computer, and use the supplied USB interface cable to connect your camera to the computer.
 - Connect the camera's USB/AV terminal to the computer's USB connector.
 - The USB Connection Screen appears on the camera's monitor.
- 2 Select "COMPUTER", and press the SET button.
 - The screen to select the connection mode appears.
- 3 Select "CARD READER", and press the SET button.
- 4 Select an action.
 - Select the desired procedure.
- 5 Copy the desired camera file(s) to the computer.

CAUTION

To access the data in the camera's internal memory...

- Remove the card from the camera.

INSERT THE CARD

- A card is not included with your camera. Please purchase a commercially sold card.

