 



**SANYO**

Digital Camera  
**VPC-S60EX**  
**VPC-S60**


# Xacti

## QUICK GUIDE

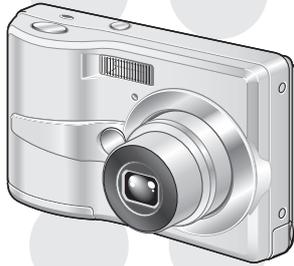

Printed in Indonesia  
 1AG6P1P3034-- SX81R/EX, U (0206CR-ID)



### STEP 1 CAPTURE A STILL IMAGE

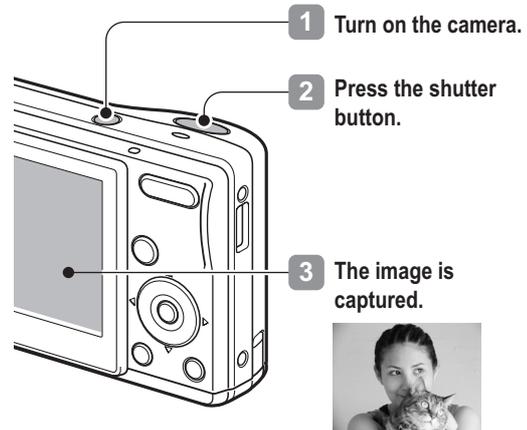

If the image is not captured...

Is there enough power left in the batteries? Install new batteries in the camera.


### STEP 2 RECORD A VIDEO CLIP

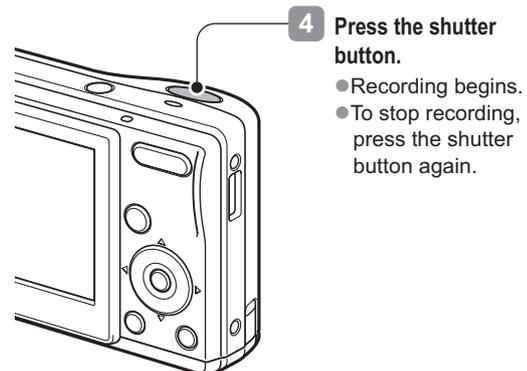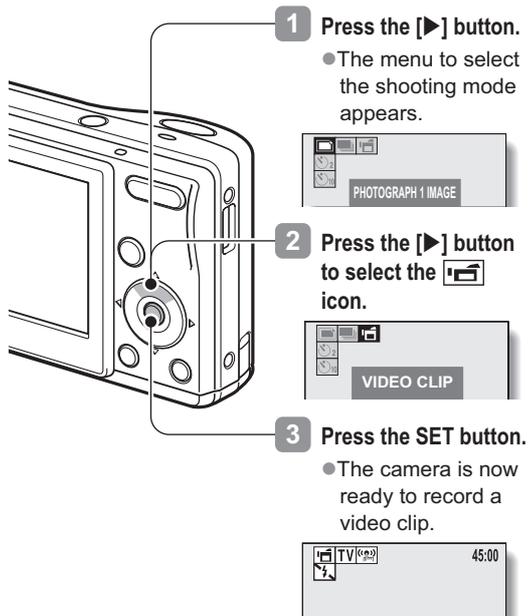

#### To switch to the still image (single shot) mode

- ① Press the [▶] button.
  - The menu to select the shooting mode appears.
- ② Press the [▶] button to select the [video icon] icon, and press the SET button.
  - The camera is now ready to capture a single still image.


### STEP 3 VIEWING IMAGES

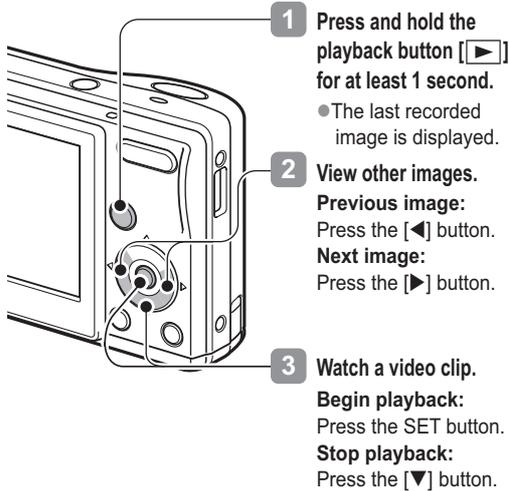

To switch to the Shooting Screen, press the playback button [▶].

Press the playback button [▶] to switch between the Shooting Screen and the Playback Screen.

### STEP 4 ERASING FILES

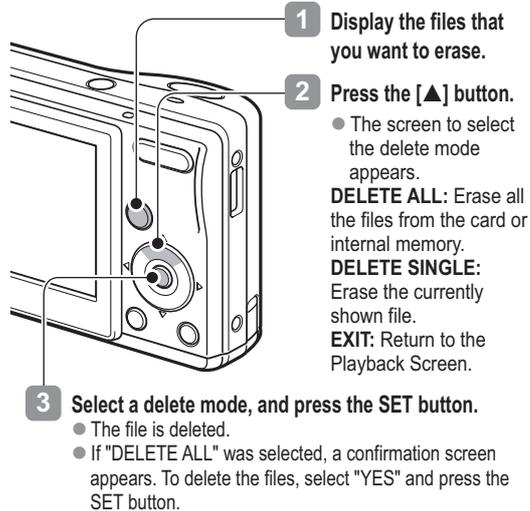

#### Did your photos turn out the way you hoped?


Even if you make a mistake, it's easy to erase the pictures you aren't satisfied with. Unlike film cameras, with a digital camera you can take all the photos you want, keep the ones you like and delete the rest.

## CAMERA SHORTCUTS

Some of the camera functions can be accessed using the following shortcuts, as well as from the Setting Screen menus.

#### ■ Shooting mode

- Switch the display mode
  - Turn the guide display on or off.
- Change the flash mode (single shot mode only)
  - Change the way the flash operates.
- Change the shooting mode, or set the self-timer
  - Select the single shot shooting mode, sequential shots shooting mode, or video clip recording mode.
  - The self-timer can be used in the single-shot shooting mode.
- Change the focus range
  - Select the autofocus, macro or manual focus mode.

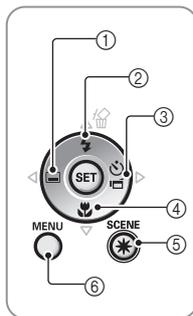

- Scene select setting
  - The screen to set the scene select function appears.
- Recording Menu display
  - Access the Recording Menu.
  - If you press and hold the button for at least one second, the screen to change the monitor brightness appears.

#### ■ Playback mode

- File delete
  - Delete the image or audio file that is currently displayed.
- File information display
  - Display the Playback Menu.
  - Press the button for at least 1 second to show the settings for the image or audio file that is currently displayed.

