


## INSTRUCTION MANUAL

# SFT-Z85

## Plain Paper Copy Machine


### CONTENTS

■ Feature .....	1
■ Installation location .....	2 - 3
■ Important safeguards .....	4 - 5
■ Name and function of parts .....	6 - 9
■ How to open/close the unit .....	10
■ Power switch on and off .....	11
■ How to make a copy .....	12 - 18
• Tray feeding .....	12 - 14
• Multifeeder feeding .....	15
• How to make a double-side copy .....	16
• How to make a multi-color copy ..	17 - 18
■ Useful functions .....	19 - 21
■ Troubleshooting guide .....	22 - 25
■ Supply of parts/replacement .....	26 - 30
■ Daily care .....	31
■ Storage of supplies .....	33
■ How to use cassette feeder (optional) .....	34
■ After sale service .....	36
■ Specifications .....	37

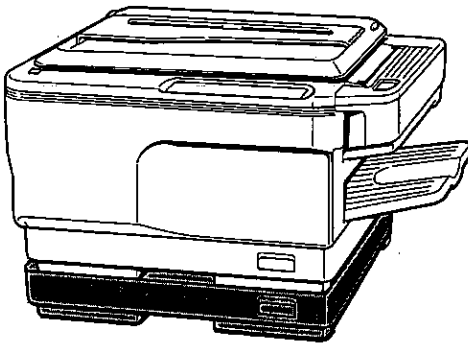


- This manual also provides the operating instructions, for the cassette feeder.

## Power Plug

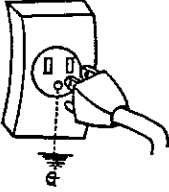

Your copier comes with power plug, be certain to insert the plug into a grounded-outlet.

## Space requirement

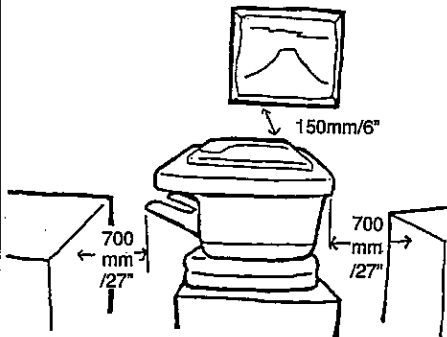

• **Please note:** The installation of the copier must be performed by a qualified technician only. If someone other than a qualified technician installs the copier, your warranty may be void.


# IMPORTANT SAFEGUARDS

## ■ Power supply from receptacle

Power source Local voltage.




Do not plug other electrical equipment into the same outlet.

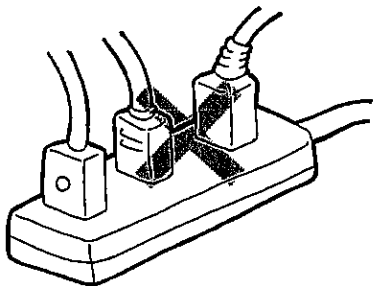

## ■ During operation/after operation


Be careful from section which are generating heat

Some section will remain hot even after the power switch is turned off.

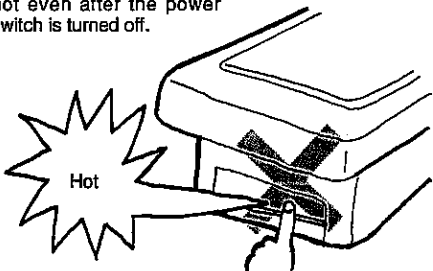


Ventilate the room from time to time

Although ozone is generated during operation of the copy machine, the amount is too small to be harmful to human health. However, operation the copier for an extended time when making a large number of copies, a poorly ventilated room sometimes will be filled with an unpleasant smell. For a comfortable operating environment, it is recommended to ventilate the room.

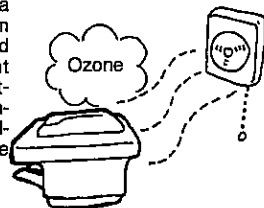

Pull out the AC power cord when checking or cleaning

Please protect against prevent receiving an electric shock.

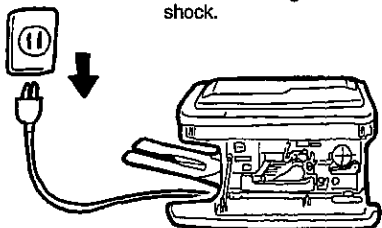


Be careful not to touch or scratch on the photo-conductor drum inside the unit

The photo-conductor drum is one of the most important parts. Please be extra careful when removing the paper stuck inside the unit.

**Treat platen glass carefully.**

Don't slam or let platen fall on glass.

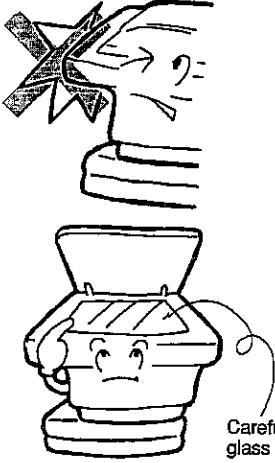


Carefully for glass

**Treat the AC power cord carefully**

Do not make a knot in a cord



Hold the plug to unplug the AC cord. Do not pull on the cord.

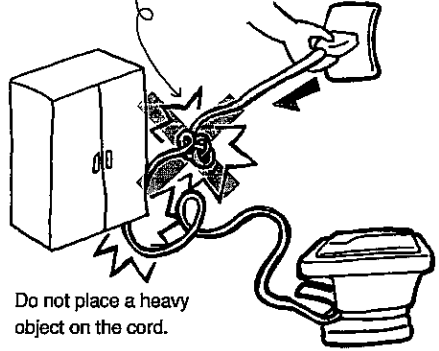

Do not place a heavy object on the cord.

# NAME AND FUNCTION OF EACH PART

## Appearance

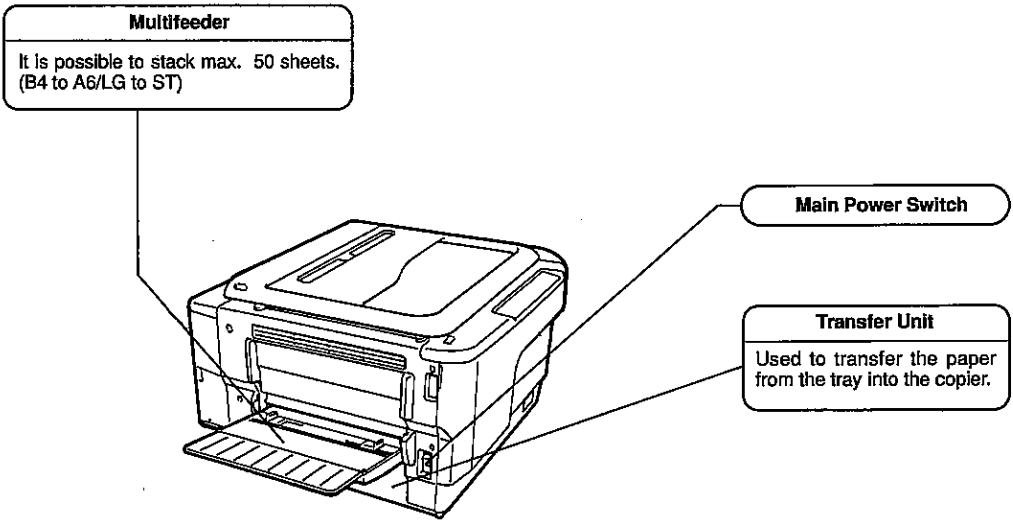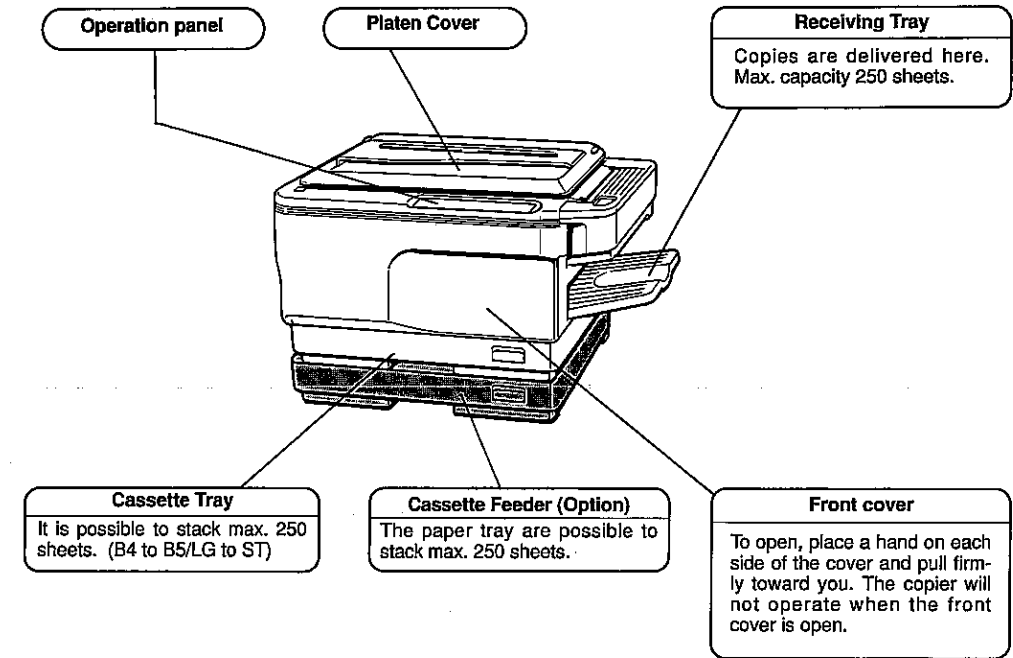

**Toner hopper**

**Drum Cartridge**

Only to be removed by a serviceman.

**Counter**

Used to count the number of copies the copier makes.

**Dehumidifier Switch (Optional)**

Should be turned on during humid weather, to prevent condensation in the copier.

**Unit Lever**

When removing the paper jam cleaning inside of this machine by moving this lever.

**CC Corona**


**TC Corona**

**Development Fixing Unit Lever**

To remove the Development Unit, move this lever to the right and pull out the Development Unit.

**Manual paper feed knob**

When paper has stopped in this area of the copier, turning the knob clockwise will move the paper out from between the rollers to the left for easy removal.

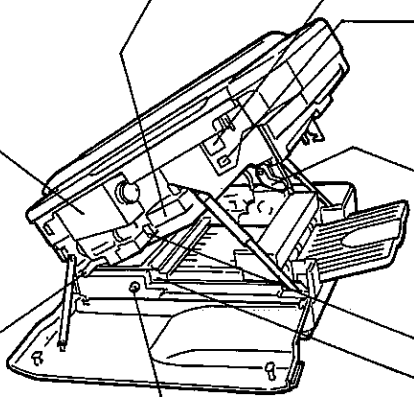

# DISPLAY INDICATORS

## Magnification Indicator Lights

When the Fixed Magnification Selection Key is used to select a specific magnification percentage, the indicator light next to the percentage will turn on.

## Cassette Selection Indicator

Advises the user which paper source is being used, either the standard paper cassette, or the Multi Feeder.

## Add Toner Light


When the Toner Cartridge is empty, the Add Toner Light will turn on. Remove the empty cartridge and replace with a full one. After the Add Toner Light has come on and the copy run has been completed, copies cannot be made until the empty cartridge has been replaced.

## Drum Cartridge Replacement Light

When the Replacement Light will blink, the total number of copies made is to 29,500. When the Replacement Light will turn on, the total number of copies made is close to 30,000 also the copier will stop. If the total number of copies reaches 30,000. The drum must be replaced, contact your Sanyo service representative.

## ID Light

ID Light will turn off and the machine is ready for operation when the pass word is inputted from the Copy Quantity selection key. (For details ask your serviceman.)

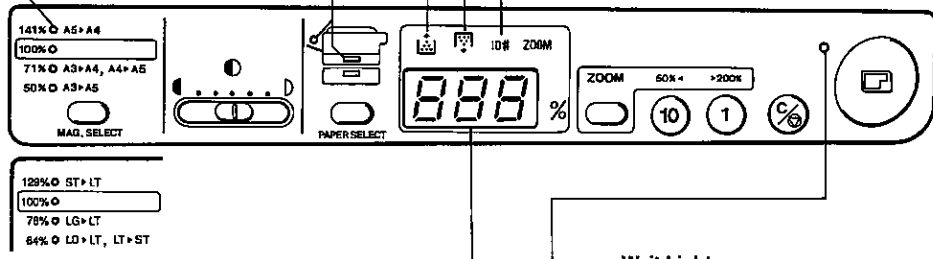


## Copy Quantity/Magnification Display Window

The selected number of copies to be made appears in this window. As copies are made, the quantity will count down. After a copy run has been completed, the selected number will reappear in the window. If no other functions are selected within 60 seconds, the quantity will return to 1. If a magnification percentage is selected, the percentage will appear in the window, prompting the quantity selected.

## Wait Light

When the copier is first turned on, the indicator light will blink until the copier is warmed up. When the copier is warmed up and ready to operate, the light will turn on. If the light is flashing green, it indicates that copying will start automatically as soon as the copier is warmed up.

# OPERATION CONTROLS

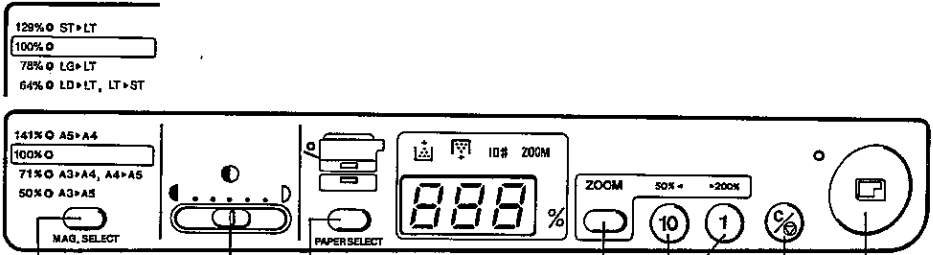

## Paper Selection Key

Used to select paper from the tray or the Multi Feeder.

## Exposure Control Slide

Used it to control the copy quality. Slide to the left for a darker copy, to the right for a lighter copy.

## Fixed Magnification Selection Key

Used to select the correct magnification percentage. Each time this key is pressed, the indicator light next to the percentage will turn on.

## Copy Key

Press this key to start the copying process. If the key is pressed while in the Wait Mode (when the light is blinking), the copier will make the copy automatically as soon as it is ready (warmed up).

## Clear/Stop Key

Pressing this key clears all functions. If this key is pressed while copying is in progress, the copier will stop after the next copy has been made.

## Copy Quantity Selection/Zoom Key

These keys are used to select the number of copies to be made, or to select a magnification ratio when the magnification percentage is selected.

① Used to select a single digit number of copies or used to increase the percentage.

② Used to select the first digit of a double digit number of copies or used to decrease the percentage.

## Copy Magnification Check Key


Used to verify the fixed magnification ratio.




# HOW TO OPEN/CLOSE THE UNIT

- Open the upper unit for cleaning and removing of misfeeds.


## 1. Open the Front Cover

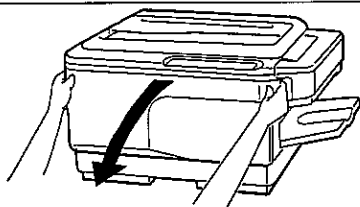


## 2. Turn the unit fixing lever counter clockwise

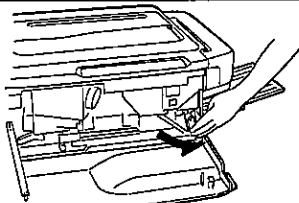

## 3. Lift up the unit

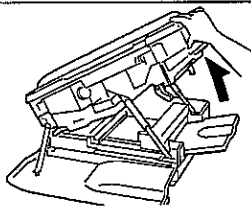

## 4. Close the Unit and Front Cover

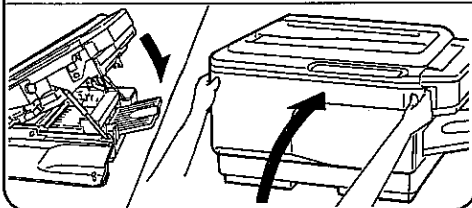

Lower the upper unit until it latches.  
Be careful not to pinch your fingers between the unit.

### CAUTION

 

When "CL" is displayed at the copy quantity window make sure the front cover is not fully closed. In such case be sure it securely closed.

# POWER ON/OFF

## ■ POWER ON

- Make sure the power cord is connected.


### Turn on the Main Power Switch

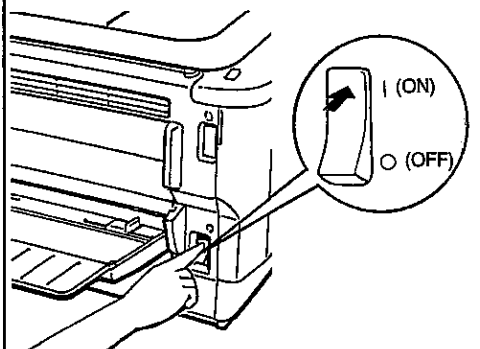

- The wait indicator Light will blink at approx, after 80 second (at room temperature of 20°C) the copier will be warmed up and ready to operate. When the copier is in a ready status mode, the indicator light turns on.

## ■ POWER OFF

### Turn off the Main Power Switch

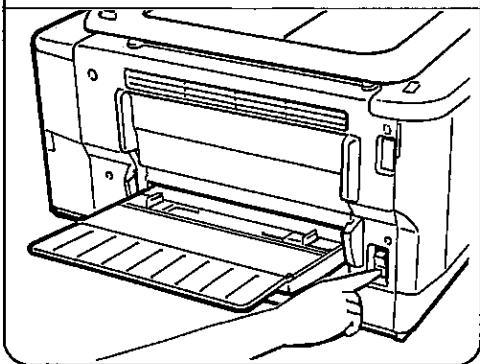


- Do not turn off the power before finishing the copying as this may cause paper misfeeds.

# HOW TO MAKE A COPY

## ■ Making copies using the tray


### 1. Set the paper into the tray

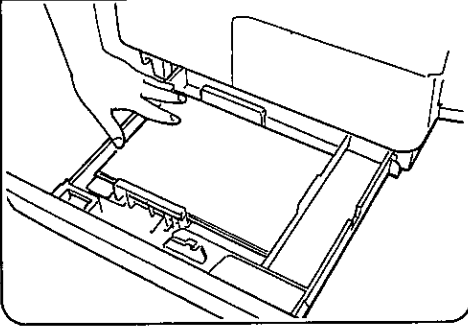

- "PE" is displayed in the copy quantity window, make sure there is paper in the tray and the tray is inserted into the machine properly.


- For setting of paper, refer to Page-26

### 2. Place the original on the platen glass

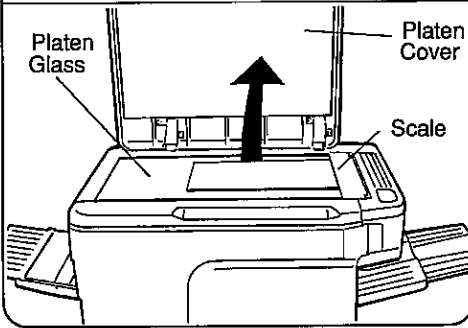


- Place the original face down matching it to the scale on the side of the platen glass. Then lower the platen cover.

### 3. Select the paper source

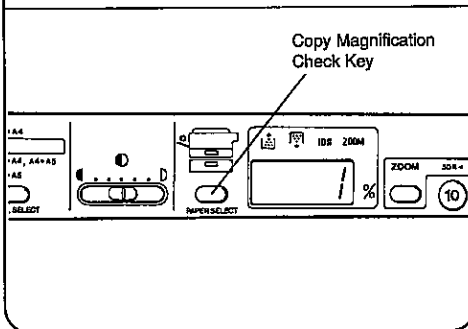


#### 4. Adjust copy density

 Exposure control slide



#### 5. Select the magnification ratio

 
- Same size copy




Copy Magnification check key

- Zoom copy

Fixed magnification selection key

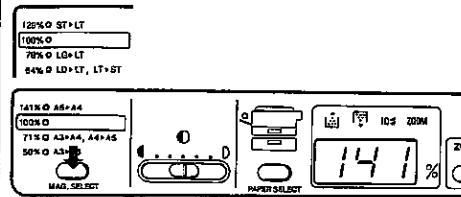

Zoom key

 


Copy Quantity/Magnification Display Window

Standard copy density occurs when the slide control is set in the center of the range.

- In the case of same size copy
  - When the size of original is equal to that of paper selected, make sure that "100%" is displayed at the "Copy Quantity Display Window". If no problem is found in this case, proceed to the succeeding operation.
  - In case "100%" is not displayed at the "Copy Quantity Display Window"; depress the "Fixed magnification selection key". "100%".
  - Reduced or enlarged copy
  - Copy magnification can be selected between the range of 50% to 200% in 1% increments.
  - Keep in mind that the copier returns to the default setting of 100% automatically unless the COPY key is pressed within 60 sec, after setting the copy magnification.
- (1) Selection of fixed percentage for copy magnification  
Press the magnification select key until the light next to the appropriate setting is turned on.
  - (2) Zoom magnification

It is possible to select a magnification setting other than fixed ratios by using the copy quantity selection/zoom key when pressed the copy magnification check key. The zoom key select magnification range is from 50% to 200%. The magnification is increased 1% each time the zoom key "①" is pressed, and decreased 1% each time the zoom key "②" is pressed. The magnification percentage is display in the copy quantity window for verification.

## 6. Set the number of copies desired

 


Copy Quantity Selection/Zoom key

Select the number of copies/select the magnification ratio

- If a single digit number of copies is to be made, press the **1** Key until the desired number appears in the Copy Quantity Window.
- If a double digit number of copies is to be made, first press the **1** Key to set the second digit, then press the **10** Key to set the first digit.
- Keep in mind that the copy quantity will return to 1 automatically unless the Copy Key is pressed within 60 seconds after selecting the copy quantity.
- The copy quantity can be set up to a maximum of 99.
- Copy quantity selection/zoom key will be change to magnification ratio key when pressed the copy magnification check key is pressed. You can select magnification ratio (50%-200%) with using these key.

## 7. Press the Copy Key

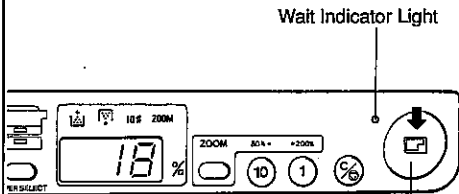

Copy Key


- The copier is ready to make a copy when the Wait Indicator Light is green.
- When the Wait Indicator Light is blinking, either the copier is not warmed up, the tray is not inserted properly, or a pre-existing misfeed is present.
- If the copier is not warmed-up (Light is blinking), place the original on the platen glass and press the Copy Key. The Indicator Light will turn to flashing green. Copying will be started automatically when the copier is warmed up.

**NOTE:** After copying is completed, the copy quantity will return to the selected number automatically.

## ■ Making copies using the multiffeeder

The Multiffeeder is used to make single or multiple copies. Insert the paper firmly until it makes contact. It is possible to insert up to 50 sheets of 64g/m<sup>2</sup>/20 lbs, bond or up to 20 "post card" thick paper. For other types of paper, feed one sheet at a time.

### 1. Open the Multiffeeder

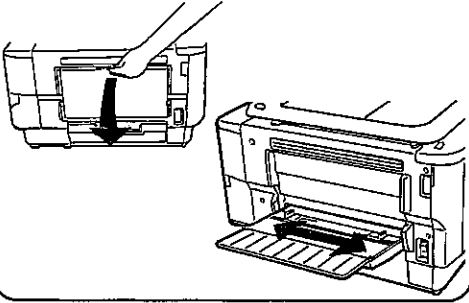


Adjust the paper guides on the multiffeeder to conform to the size of the paper.

#### CAUTION

When using the following types of paper, feed manually. (Misfeeding may result if the paper tray is used.)


- Non-standard sized paper.
- Paper that is thinner or thicker than specified (52g/m<sup>2</sup> to 157g/m<sup>2</sup> / 14lbs to 40lbs)
- Paper smaller than 5" x 7" can not be used.
- When making copies on 5" x 7" insert the paper lengthwise.

### 2. Place the original on the platen glass

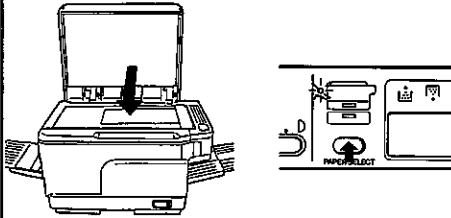

- Adjust the magnification ratio and the exposure. (Refer to page 13 and 14)

### 3. Insert the paper into the Multiffeeder

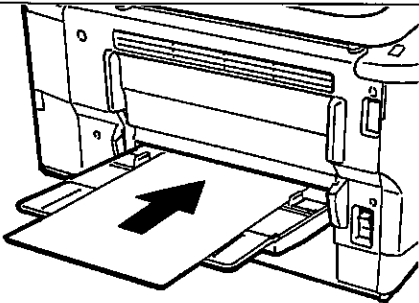


Carefully insert the paper into the multiffeeder.


- Insert the paper with the side to be copied on face up.
- Do not insert paper that is curled or wrinkled into the multiffeeder, as this may cause paper misfeeds.

### 4. Press the Copy Key


■ To make a copy on both sides of paper (two-sided copy)

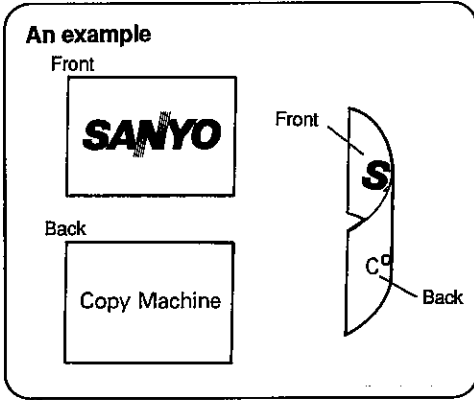

- When inserting paper, be careful that the ends do not curl.

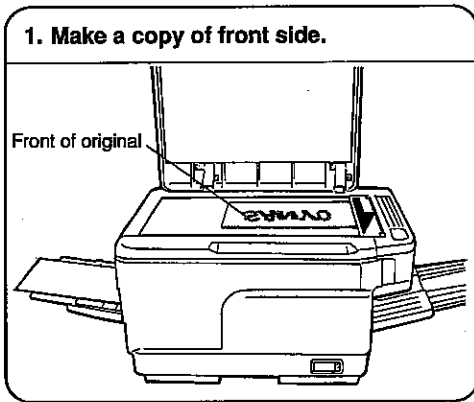


- Make a copy of the front of the original following the instructions as outlined on page 12.
- Remove the first original and place the second original on the platen.

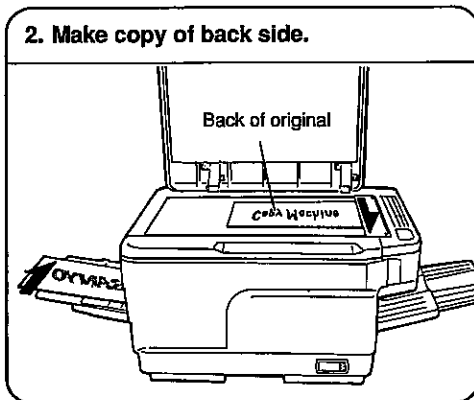


Turn over the copy and insert it.  
The copy should enter the part the different way as the original was placed on the platen (the leading edge of the second side should be the trailing edge of the front side.)

## ■ How to make a multi-color copy

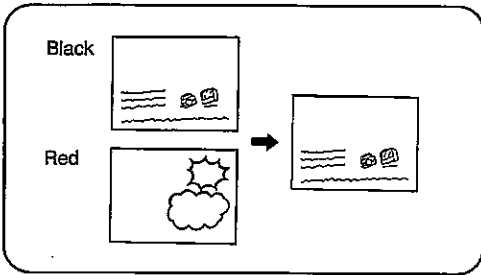


Prepare originals for dual color respectively as shown.


### 1. Make copy of original for first color.

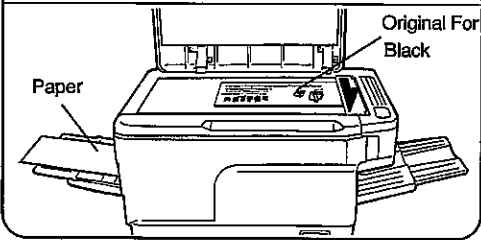

### 2. Replace the development cartridge with second color choice.

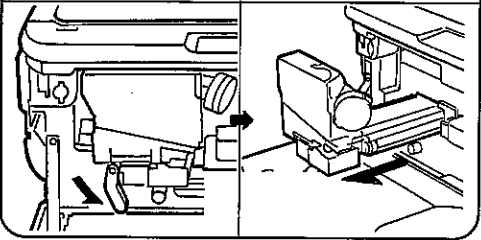

### 3. Make copy of original for second color.

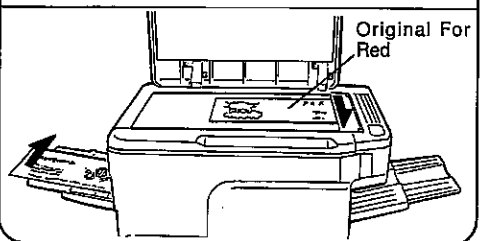

- It is possible to make a multi-color copy by using the optional red/blue development unit.

- When inserting the paper, be careful that the ends do not curl.

- Please be aware that if color toner is used to make a copy onto transparency for projection, it will project the image in black. Also be aware that traces of the first color toner may appear on the copy when using the second color. (When making a copy on which three colors will appear)(feeding it through the copier three separate times), the copy may become slightly wrinkled.

Check that the development unit for the first color choice is in place.

Place original that is to be copied in first color choice on platen and make copy.

#### CAUTION

- When replacing the development unit, consult your serviceman, for the initial adjustment.
- Refer to page-18, how to replace the development unit.


The multi-color copy(black, red) is made with the above steps.



## ■ Replacing the development unit.

Replace the development units for red, blue and brown respectively.


### 1. Open the Front Cover

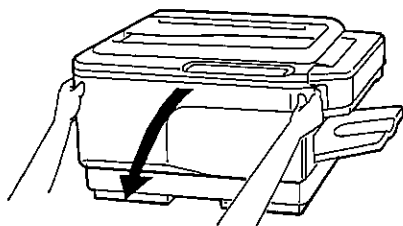

### CAUTION


- When replacing the development unit, consult your serviceman, for the initial adjustment.

### 2. Pull out the Development Unit currently there

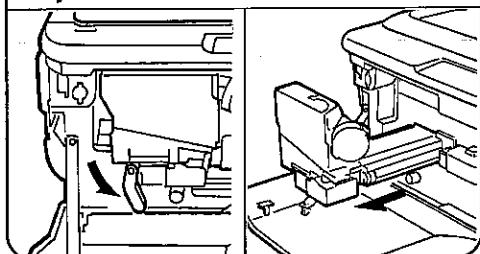


- Use the specified development unit.
- Be careful about storing the development unit after removing it as the toner may leak.

### 3. Place in the desired color Development Unit

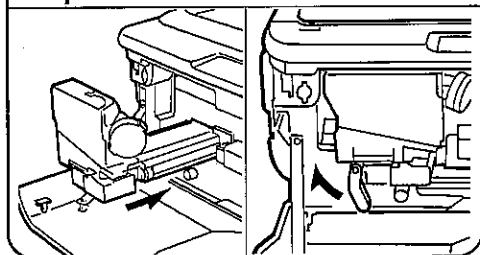

- Turn the development lever in the direction marked with an arrow to secure the development unit properly as not doing so may result in poor copy quality.


### 4. Close the Front Cover

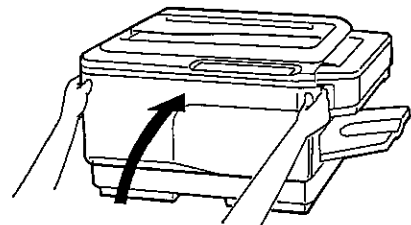

# USEFUL FUNCTIONS


## Make waiting time useful (Copy automatically after warm-up)

Copy lamp  
flashes.

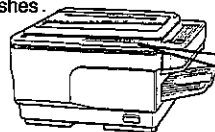

"Stand-by" flashes  
in green


Copy Start

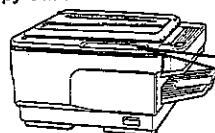

Illuminates in green  
after 80 seconds

Usually the copier takes about 80 seconds to warm up (20°C) and be ready. Press the copy button when it is ready, and the copier automatically starts making copies after warm-up is completed. Waiting time can be used for some practical purpose.

## To stop making copies while copying in progress (Clear/stop key)

 

- This key is used to reset the copy quantity, cancel the stand-by copy, and stop the copying in progress.
- If the key is pressed during the copying in progress, the copier stops after completing the copy in progress.


## Auto repeat function (saving electricity)

Usually this function is not operating. Consult your serviceman about the function. This function is useful for reducing electric power consumption, since when the function is set, the temperature of the fixing roller is automatically kept low if copies are not made for a certain period (It is possible to set from 1 min. to 32 mins.). When the function is set all the indicating lamps will go off except the wait indication lamp (green) which remains on. Press any key to restore the default settings. After 40 seconds, copies can be made.

# USEFUL FUNCTIONS

## Memory Usage Function

How to set the memory usage function

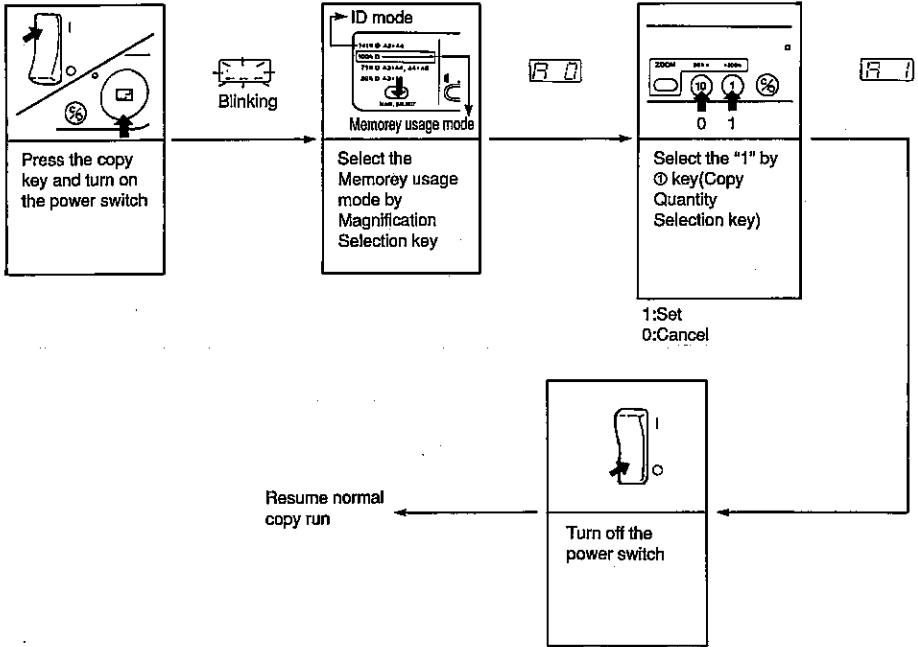


When the memory usage mode is set, the machine will choose the most used function [magnification, paper size (tray or multifeeder)] and automatically will change to those function after the end of each copy run.


# USEFUL FUNCTIONS

## ID Function

### How to set the ID function

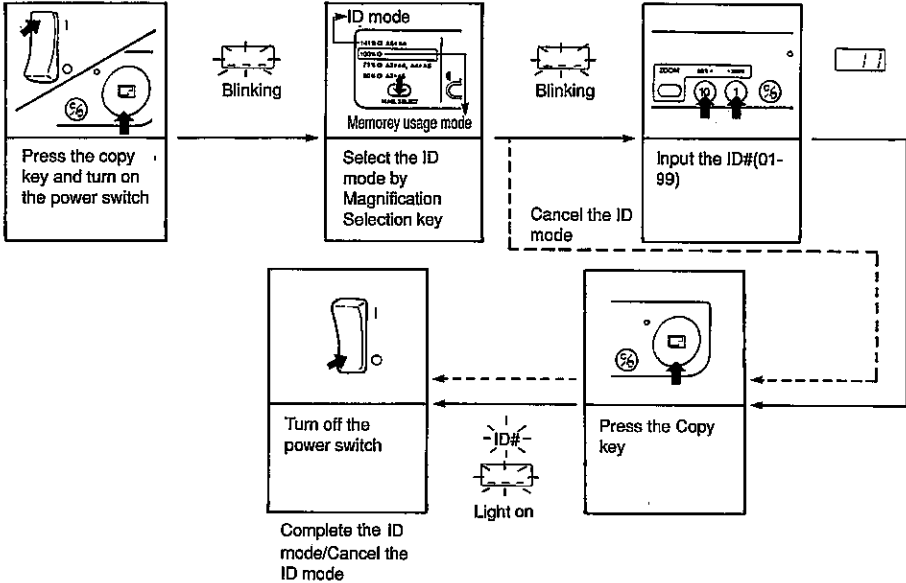


### How to use the ID mode

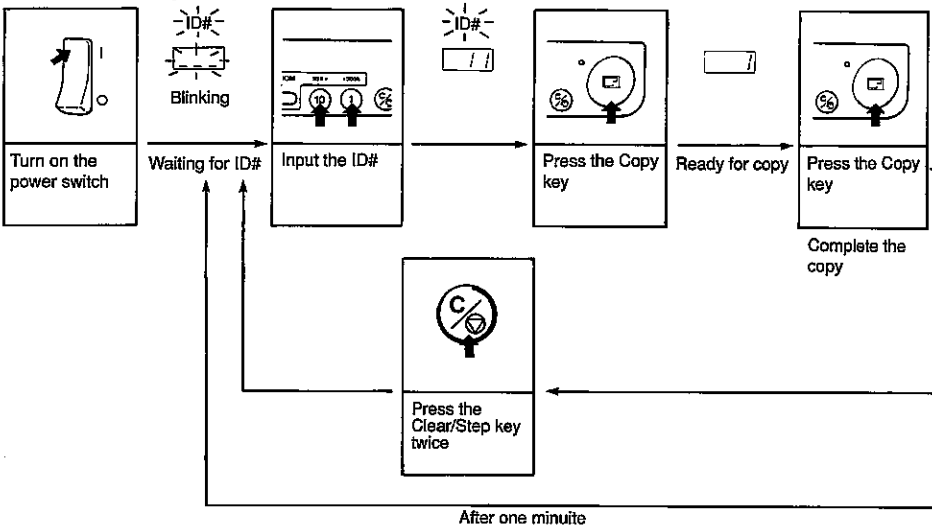

When ID function is set, the copier could only be used.  
 When the ID # which is register is inputted.  
 This function will control the usage of the copier.


# TROUBLE-SHOOTING GUIDE

## ■ No Power

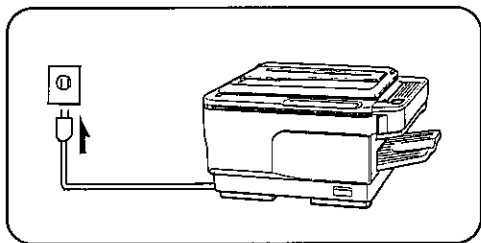


- Make sure the plug is connected at the wall.

## ■ When "CL" is displayed

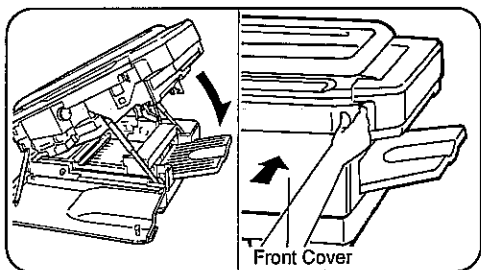


- When "CL" is displayed at the copy No./copy magnification unit, it indicates that the transfer unit and front cover and fuser unit cover are not fully closed. In such cases, be sure to close them securely.

## ■ The copies are too dark or too light

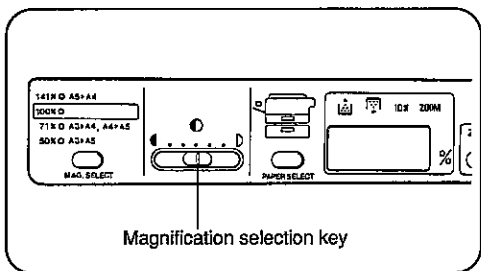

- Make sure the exposure control is adjusted properly.
- Make sure that the paper hasn't absorbed excess moisture.  
—Use new paper.

## ■ Copies look messy

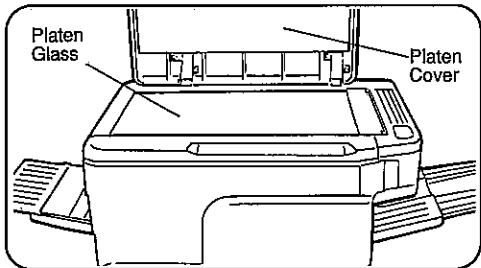

- Make sure that the platen glass or the platen cover are not dirty.
- Make sure that the exposure control is adjusted properly.


## ■ Copier does not work

When " **PE** " is displayed

When " **P-1** " is displayed


When " **U-0** " is displayed

**Make sure the paper is not stuck in the transfer unit**

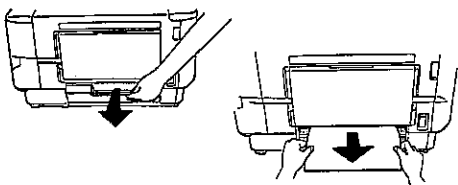


When " **U-1** " is displayed

**When paper has stopped in the Paper Feed Unit**

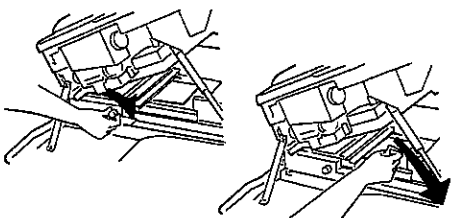

When " **U-3** " is displayed

**The paper is stopped in the Fuser Unit**

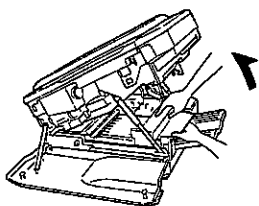

The paper tray is empty. Please adding paper.

- There is no paper in the multiffeeder.
- Check if the paper is properly loaded in the multiffeeder.
- Paper may be stuck in the multiffeeder.

1. Open the transfer unit.
2. Remove the paper stuck inside the copier.  
(Pull the paper tray out and check if the paper is properly loaded in the tray.)

Open the unit and remove the stuck paper.

**If paper has stopped in the Paper Feed Unit, turn the green registration roller knob counterclockwise to the left to move the paper out from between the rollers for easy removal.**


Use care not to touch or in any way make contact with the drum.

Open the unit and lift up the fuser unit and then pull out the stuck paper slowly.

### CAUTION

- Do not pull the stuck paper toward either the paper tray side or the fuser unit side as this may make the first copy dirty. (This is because unfixed toner may stick to the paper feed roller or the fuser roller.)
- Be careful when you remove the stuck paper, for the fuser unit is heated.

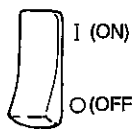

When **H1** **H3** **H6** **H7** **H8** **HA** **BA** are displayed.




Turn the power switch on and off.




If the problem is not solved by the suggestions above, unplug the AC cord and contact your serviceman.

■ When “” or “” appears

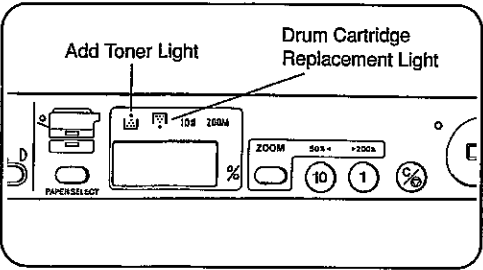


When the “” Light is blinking or turns on.

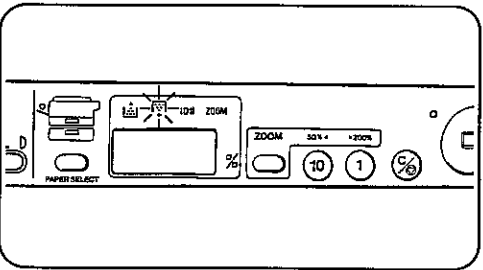


When the drum cartridge replacement light blink, the total number of copies 29,500. When the drum cartridge replacement light turn on, that 30,000 copies have been made. After making 30,000 copies, the drum cartridge need to be replace. Phone your Sanyo service representative.

When “” and Wait Light are blinking.

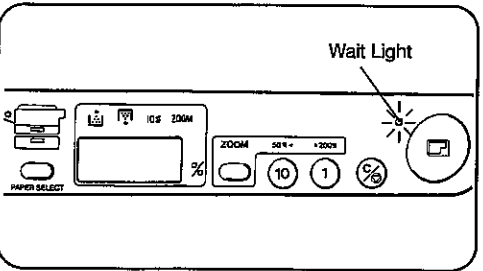

When the toner cartridge is empty, the Add Toner Indicator Light will flash. A feature called Automatic Supplement Mode will turn on. Automatic Supplement is a process which ensures that all toner from the toner hopper has, in fact, been depleted. During this process the copier will become inoperative. After the Automatic Supplement process has been completed, if the Add Toner Light turns off, copying may be resumed. (There was some toner left in the toner hopper.)

When “” Light turns on.

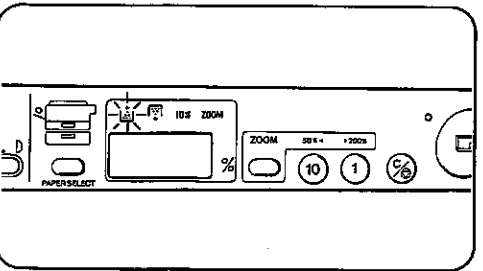


If the Add Toner Light turns on, replace the toner cartridge with a new one. (There was no toner left in the toner hopper.)




# CONSUMABLE SUPPLIES

## ■ Adding paper


### 1. Fan the paper thoroughly

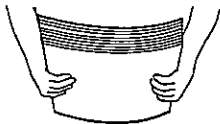


### 2. Pull out the Paper Tray

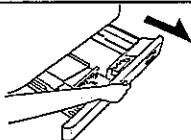


### 3. Adjust the paper guides

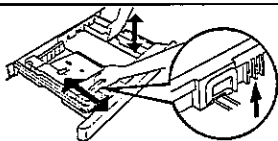

### 4. Push down the knock up plate

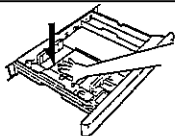

### 5. Set the paper to the tray

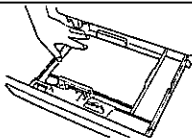

### CAUTION


Keep in mind the following remarks in order to prevent a paper jam and to protect against copy quality deterioration.

- Do not additionally feed copy paper in the paper tray in which there is some remaining.
- Do not put paper which is curled or folded into the paper tray.
- Fan the stack of paper two or three times in each direction lengthwise and crosswise.
- Put paper, the front side of the paper down in the tray.
- Make sure both tabs are positioned over the next paper.
- The copy paper should be under the tabs as this may cause a paper misfeed.
- A maximum of 250 sheets of paper can be loaded in the tray. Do not load paper higher than the red marked line.

Adjust the paper guides to the size of the paper. The paper guide has an insert setting (lengthways) and a slide setting (sideways). Slide the paper guide (sideways) while lifting the lever to set the guide to the desired position.


Push down the knock up plate to the bottom surface of the tray securely.

## 6. Close the paper Tray

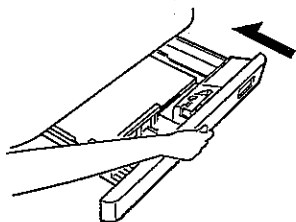

Close the tray slowly and securely.

## 7. Set the block

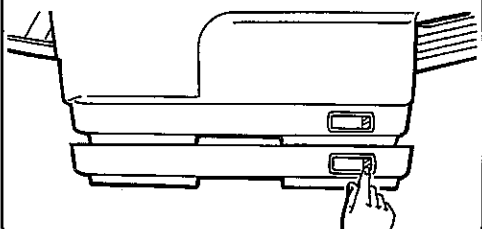

Set the block to selected paper size.

### CAUTION

If the copier will not be used for a long period of time, take the paper out of the copier and store it separately to prevent the paper from absorbing moisture and later causing paper misfeeds.

## ■ Weights of paper and the correct feeding source


This table should be used as only an approximate measure, as there will be a difference depending on the quality and thickness of the paper being used.

Type of Paper	Tray	Manual Feeding
Standard Copy Paper 65 to 75gr/m <sup>2</sup> / 16 to 20 lbs	Yes	Yes
Other types of Paper 52 to 157gr/m <sup>2</sup> / 14 to 40 lbs	No	Yes


## ■ Adding Toner

- Be sure to use Sanyo Brand Toner, number SFT-TN19.
- Keep in mind that using other than Sanyo toner may result in operational problems with the copier, poor copy quality, and may invalidate your warranty and service agreement.
- When the toner is empty, the Add Toner Indicator Light will flash. A feature called Automatic Supplement Mode will turn on. Automatic Supplement is a process which ensures that all toner from the toner hopper has, in fact, been depleted. During this process the copier will become inoperative. After the Automatic Supplement process has been completed, if the Add Toner Light turns off, copying may be resumed. (There was some toner left in the toner hopper.) If the Add Toner Light turns on, add the toner with a new one. (There was no toner left in the toner hopper.)

### 1. Open the Front Cover

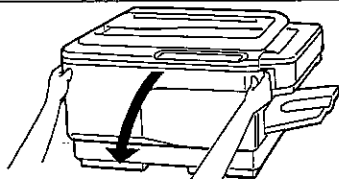


### 2. Pull the toner hopper unit towards the front side then open the toner hopper cap

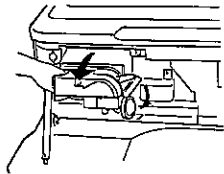

### 3. Gently shake the new toner bottle several times and then remove the cap and seal




### 4. Attach the toner bottle to the toner hopper

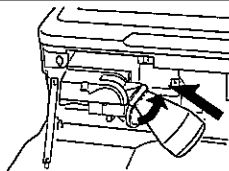


Turn the toner bottle clockwise to the right, while pushing it into the toner hopper.

**5. Slide the toner bottle to the upper side**

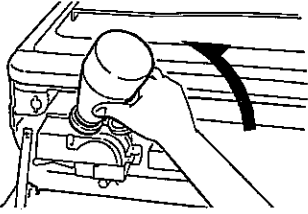


Slide the toner bottle with add toner port to the upper side until stop.

**6. Gently knock the bottom of toner bottle several times**

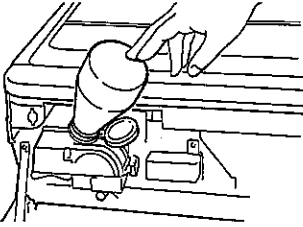

Adding toner completely.

**7. Return the toner bottle to the upright position, and gently knock the bottom of toner bottle.**

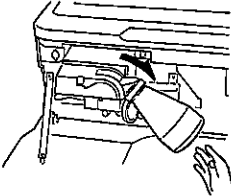


- Gently knock the bottom of the toner bottle will prevent the toner from spilling out when the toner bottle is removed.

**8. Remove the toner bottle and close the toner hopper cap**

- Turn the toner bottle counterclockwise to the left and then remove it.
- Close the toner hopper cap and remove toner bottle.

**9. Push the toner hopper until back to the setting position and close the front cover**

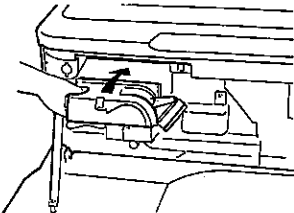


---

## ■ Replacement of drum cartridge

When the drum cartridge replacement light is turned on, the total number of copies made is 30,000 and copier will stop. After making 30,000 copiers, the drum cartridge need to be replace. When the drum cartridge replacement light is turned on, contact your copier serviceman.

# CARE AND MAINTENANCE

## ■ Cleaning the Platen and Platen Cover

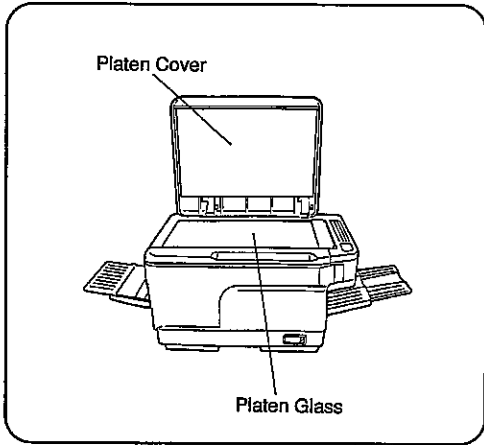


Dirt on the platen glass or platen cover may show up on copies, so it is important to keep both of these items clean.

- Wipe the platen glass and the platen cover clean, with a clean soft cloth.
- When dirt cannot be easily removed, use a cloth soaked in alcohol.

# CARE AND MAINTENANCE

## ■ Cleaning the CC corona and TC corona


When black or white lines appear on copies. To prevent accidental electrical shock, be sure to turn off the power switch before cleaning the corona:

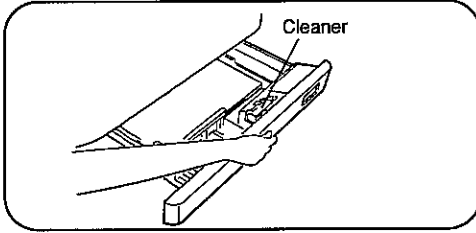

Cleaner of the corona in the tray.

### 1. Open the unit and Pull out the CC corona.

### 2. Clean the corona wire surface with the cleaner slowly

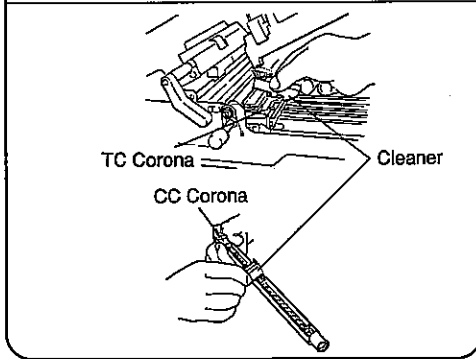

Clean the corona wire surface with the auxiliary cleaner slowly make sure not to break the wire. Clean off the toner adhered inside the shield case and grid with the cotton stick.

#### CAUTION

- Be sure not to break the corona wire.
- Be sure to insert the coronas along the grooves all the way into the copy machine after cleaning. If it is not pushed in all the way in, it might cause paper jamming and/or copying failure.
- Be careful not to scratch drum when re-inserting.


# STORAGE OF SUPPLIES

---

## ■ Paper


Do not store paper in areas that are overly damp or humid or subject to radical temperature changes, since the paper can cause copy quality to deteriorate or lead to excessive paper misfeeds if it absorbs moisture.

Keep the paper sealed in the package.

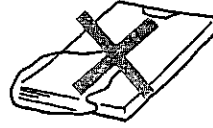

## ■ Developer/toner cartridge


- Store the toner in the package and keep it in a cool, dark, dry place.
- Store the developer and toner cartridge away from children.

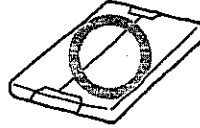



# HOW TO USE CASSETTE FEEDER(optional)

## 1. Fan the paper thoroughly

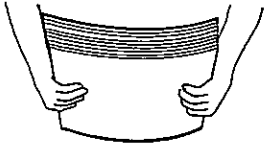


### CAUTION


Keep in mind the following remarks in order to prevent a paper jam and to protect against copy quality deterioration.

- Do not additionally feed copy paper in the paper tray in which there is some remaining.
- Do not put paper which is curled or folded into the paper cassette.
- Fan the stack of paper two or three times in each direction lengthwise and crosswise.
- Put paper, the front side of the paper down in the tray.
- Make sure both tabs are positioned over the next paper.
- The copy paper should be under the tabs as this may cause a paper misfeed.
- A maximum of 250 sheets of paper can be loaded in the tray. Do not load paper higher than the red marked line.

## 2. Pull out the Cassette Tray

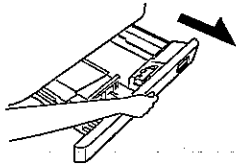


## 3. Adjust the paper guides

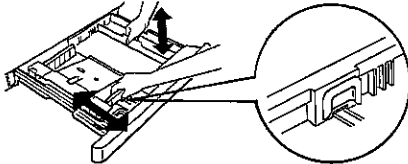


Adjust the paper guides to the size of the paper.

## 4. Push down the knock up plate

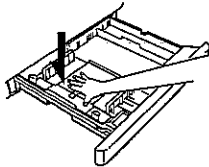


Push down the knock up plate to the bottom surface of the tray securely

## 5. Set the paper to the tray

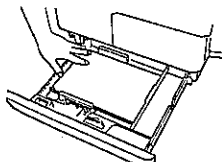


## 6. Close the Cassette Tray

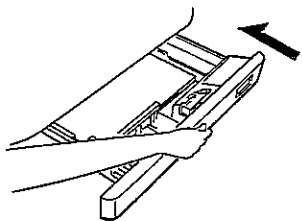

Close the tray slowly and securely.

## 7. Set the block

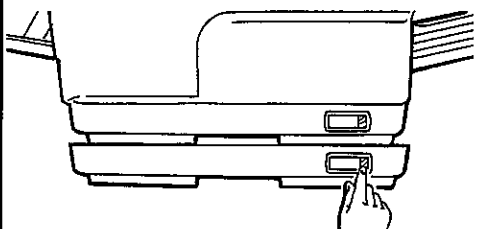

Set the block to selected paper size.

### CAUTION

If the copier will not be used for a long period of time, take the paper out of the copier and store it separately to prevent the paper from absorbing moisture and later causing paper misfeeds.

# AFTER SALES SERVICE

---

## ■ If Operation is Abnormal:

Use the trouble-shooting guide on page22 ~ 25 of this manual to determine and correct the problem. If you cannot solve the problem using this guide, pull the plug out of the electric socket and do not use the copier until has been checked by your Sanyo service representative.

# SPECIFICATIONS

Type:	Desk-top with stationary platen
Copying system:	Dry Electrostatic Transfer
Originals:	Books, Sheets, 3-Dimensional objects
Maximum original size:	A3 (297 x 420 mm)/LD (11" x 17")
Maximum copy size:	B4 (257 x 364mm)/LG (8-1/2" x 14")
Copy speed (Max.):	15 cpm/A4/LT
First copy speed:	9 seconds/A4/LT
Magnification ratio:	Same size 100% Manual magnification ratio – 50% ~ 200% in 1% increments
Paper supply:	Tray 250 sheets (64g/m <sup>2</sup> )/200 sheets (20 lbs) Multifeeder 50 sheets (64g/m <sup>2</sup> /20lbs)
Multiple copying:	Up to 99 copies (Receiving tray capacity : Max. 250 sheets)
Warm-up time:	Approximately 80 seconds
Power consumption:	1200W (Max.) Stand-By (Heater "ON" 850W, Heater "OFF" 50W)
Power source:	AC Local Voltage and Frequency
Dimensions:	636(W) x 546(D) x 353(H) mm
Weight:	40 kg/88.2 lbs
Acceptable copy size:	Tray – B5, A4, A4-R, B4/ST, LT, LT-R, LG By pass – B6 to B4/5-1/2" x 7" to 11" x 17"
Acceptable copy paper weight:	Tray – 64g/m <sup>2</sup> to 75g/m <sup>2</sup> /16 lbs to 20 lbs
Accessories:	Receiving Tray Instruction Manual Cleaner (stored in the paper tray)
Optional:	<ul style="list-style-type: none"><li>• Stand SFT-D80</li><li>• Developer unit SFT-DM19</li><li>• Developer SFT-DV19</li><li>• Copy kit SFT-CK19 (K)</li><li>• Toner cartridge SFT-TN19</li></ul>

Specification are subject to change without notice.

# NOTE

---

**SANYO**

**SANYO ELECTRIC CO., LTD.  
OSAKA, JAPAN**